

# IRON BALTIC

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/mFUkfj0r](https://code.ironbaltic.com/u/mFUkfj0r)

## ALUMINIUM SKID PLATE

# CAN AM

## G2 Outlander MAX 650/850/1000

Code 02.19200

Version 11092023





**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


# SPECIFICATION

Pos.	Nimetus	Kood	Kogus
1	Middle protection	02.10001	1
2	Front protection	02.8402K	1
3	Rear protection	02.8203K	1
4	Right side part	02.10002	1
5	Left side part	02.10003	1
6	Front right A-arm protection	02.8204	1
7	Front left A-arm protection	02.8205	1
8	Rear right trailing arm protection	02.18801	1
9	Rear left trailing arm protection	02.18802	1
10	Bracket	03.3502	4
11	Bracket	03.1502	2
12	Plate	02.2305	1
13	Plate	02.5006	10
14	Plate for front part	02.10004	1
15	Bush for front part	02.10005	2
16	Connecting plate (40)	02.10006	2
17	Connecting plate (30)	02.10007	2
18	Clamp for front arm protection	02.8210	4
19	Clamp for rear arm protection	02.18803	2
20	Bracket	02.18804	2
21	Bracket	02.18805	2
22	Bracket	02.18806	2
23	Bolt M6x12 DIN 933	OT.02.02.030	10
24	Bolt M6x16 DIN 933	OT.02.02.050	4
25	Bolt M6x20 DIN 933	OT.02.02.060	2
26	Bolt M6x35 DIN 933	OT.02.02.090	2
27	Bolt M6x50 DIN 933	OT.02.02.120	4
28	Bolt M8x16 DIN 933	OT.02.02.170	12
29	Bolt M8x30 DIN 933	OT.02.02.200	1
30	Bolt M10x30 DIN 933	OT.02.02.320	2
31	Bolt M6x16 DIN 7991	OT.02.04.020	20
32	Bolt M6x25 DIN 7991	OT.02.04.040	3
33	Bolt M8x50 DIN 7991	OT.02.04.200	2
34	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
35	Washer Ø6/15 SFS 3738	OT.04.03.020	31
36	Washer Ø8/20 SFS 3738	OT.04.03.030	12
37	Washer Ø10/20 DIN 125	OT.04.01.040	4
38	Dished washer	14.503	31
39	Conical washer Ø6	14.502	23
40	Conical washer Ø8	14.501	2
41	Nyloc nut M6 DIN 985	OT.03.02.030	9
42	Nyloc nut M8 DIN 985	OT.03.02.040	10
43	Nyloc nut M10 DIN 985	OT.03.02.050	2

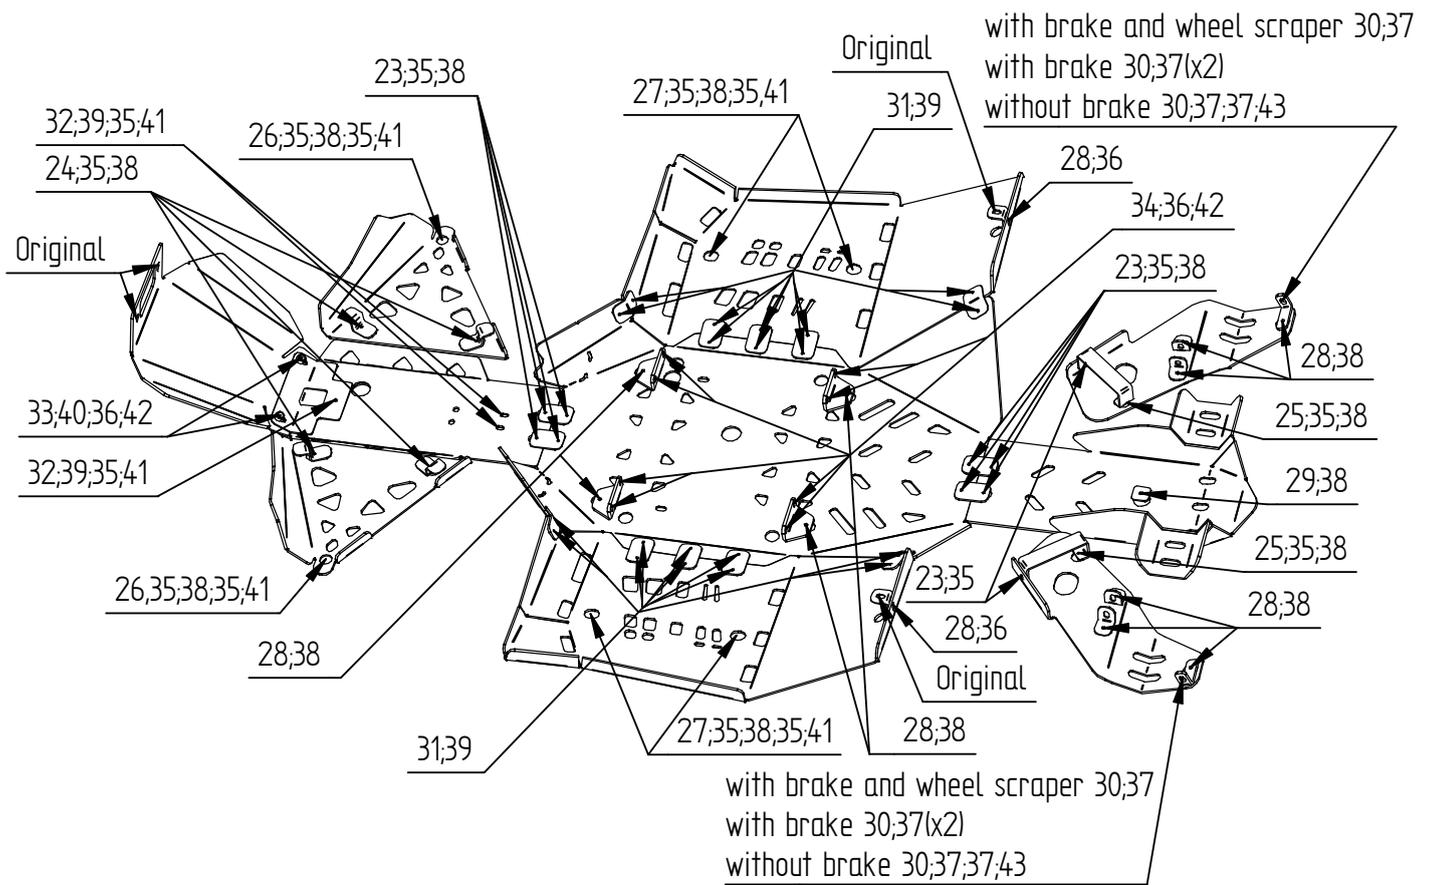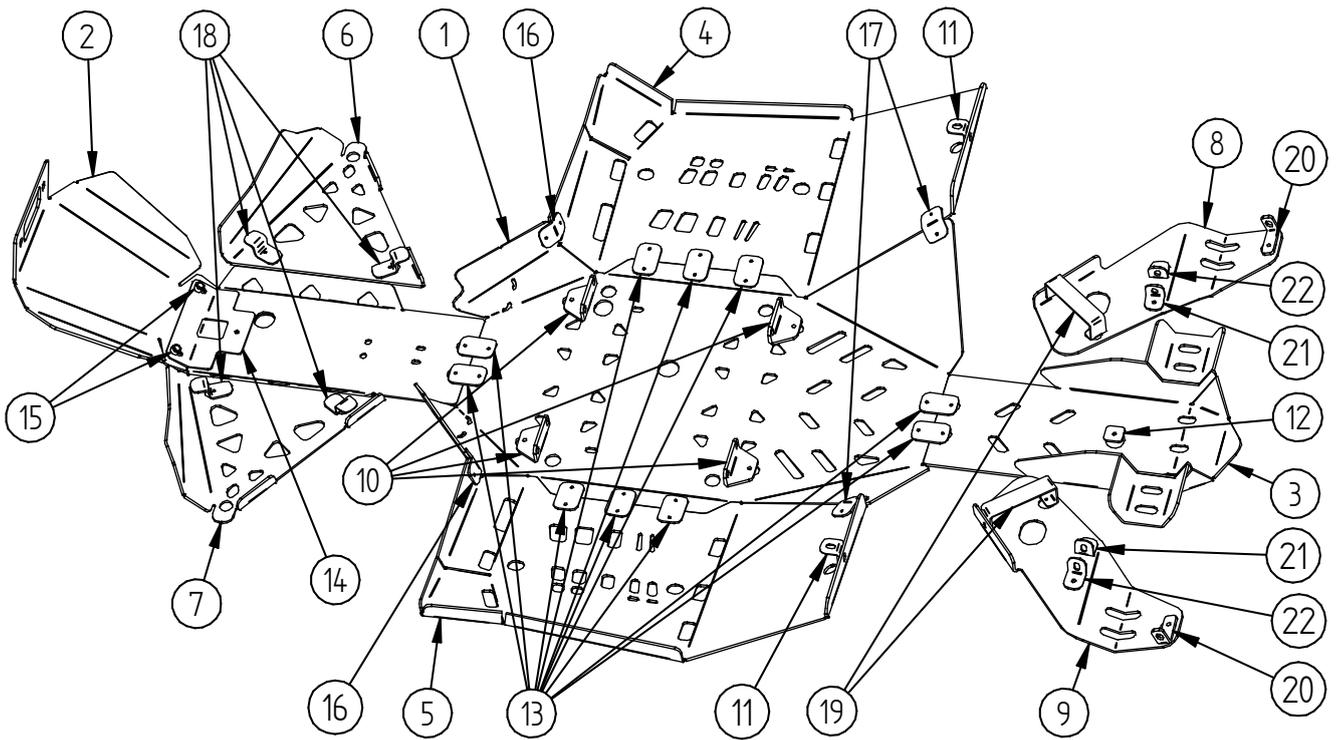


# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic covers and winch fairlead.

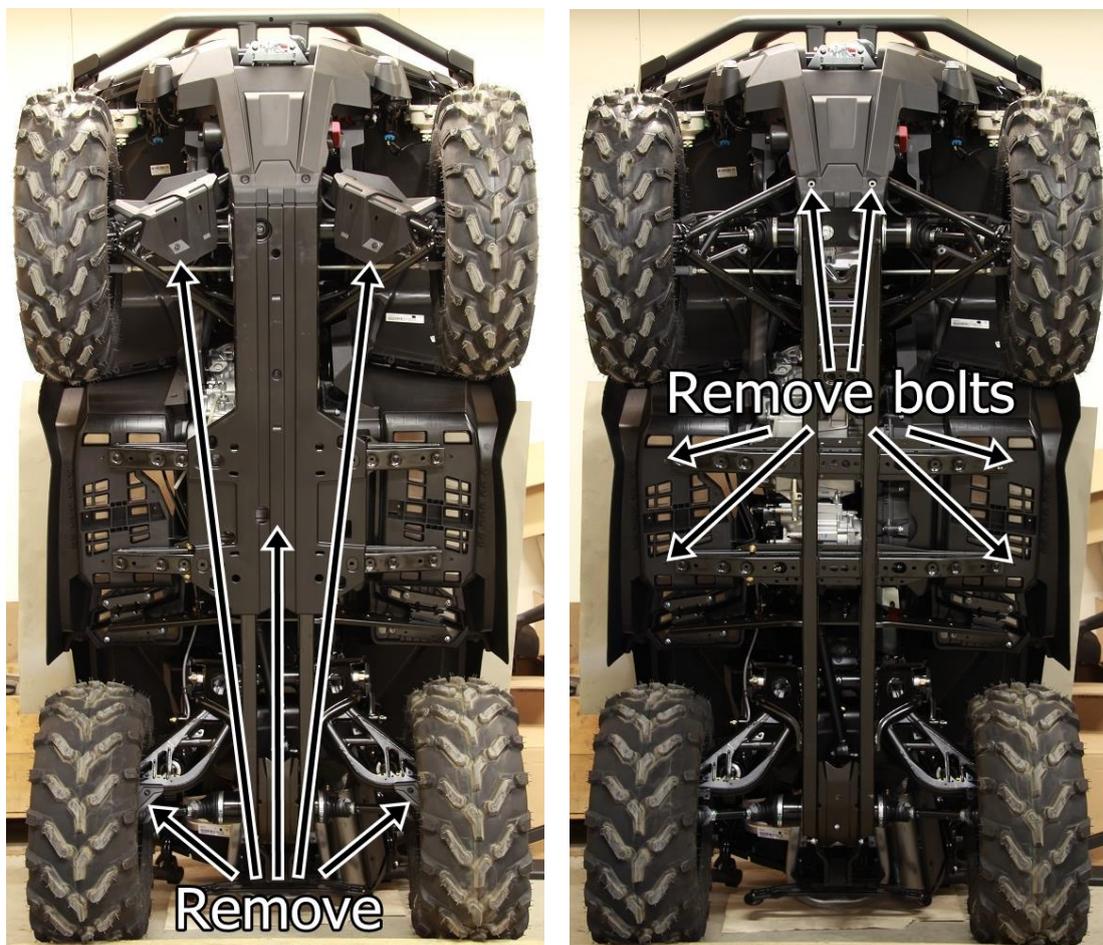



**Step 2** Install brackets 03.3502 and 03.1502. Place brackets same plane as frame.

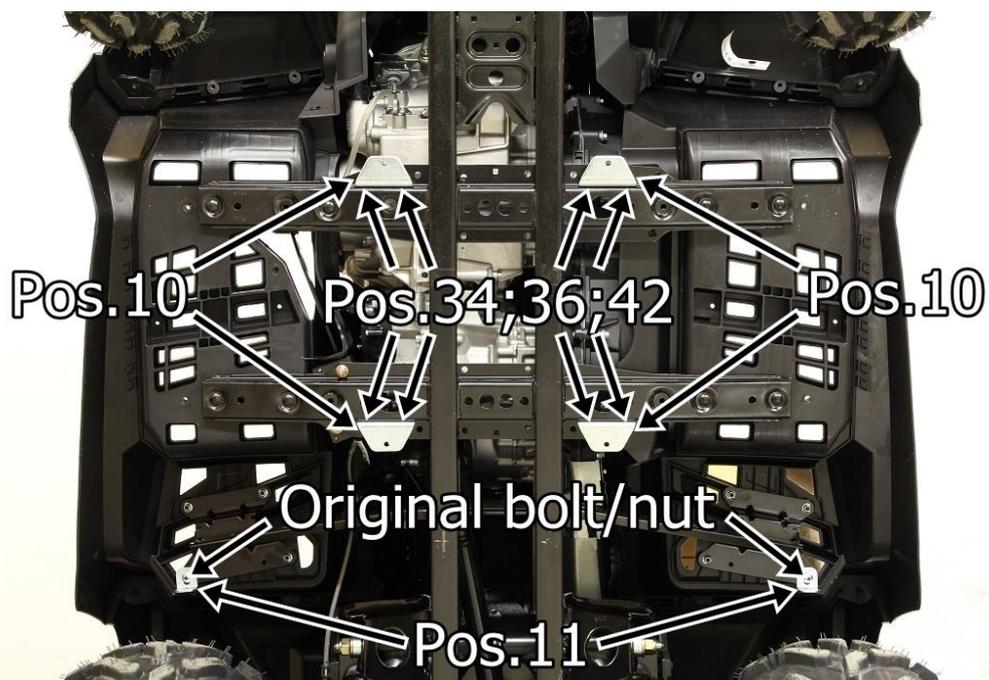


**Step 3** Install middle protection 02.10001.

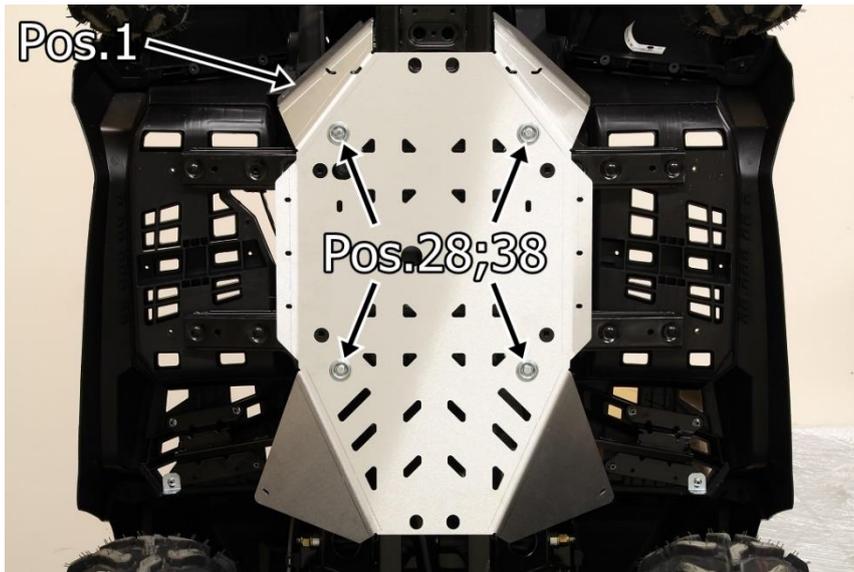





**Step 4** Install plates 02.5006, 02.10006, 02.10007.

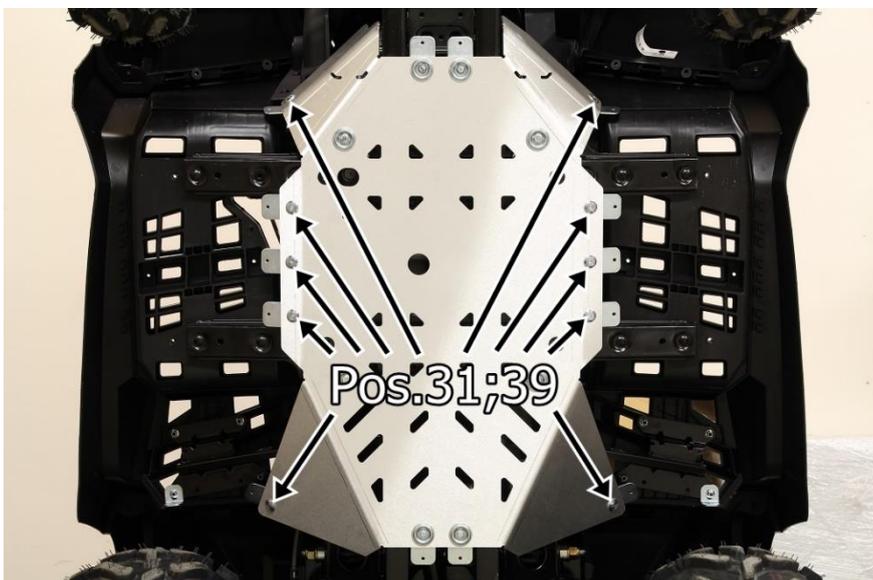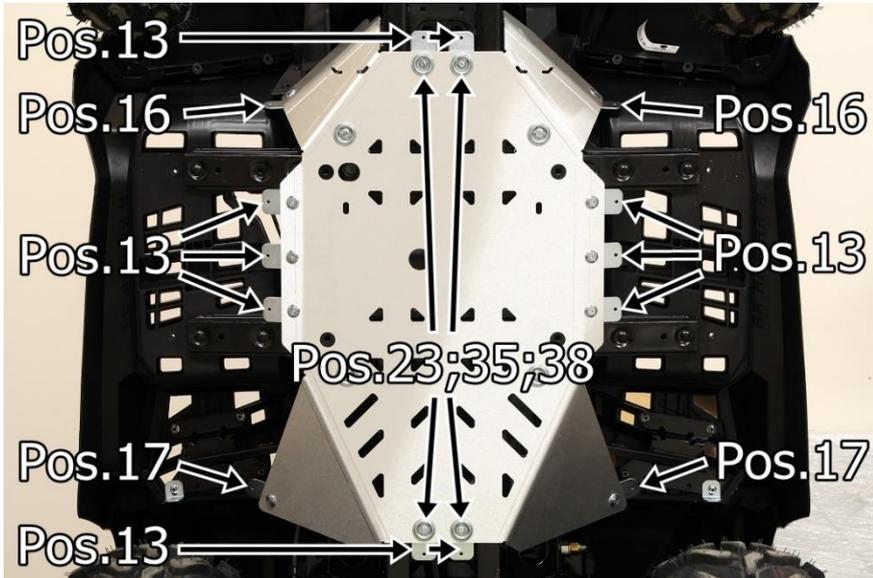


**Step 5** Install right side protection 02.10002 and left side protection 02.10003.

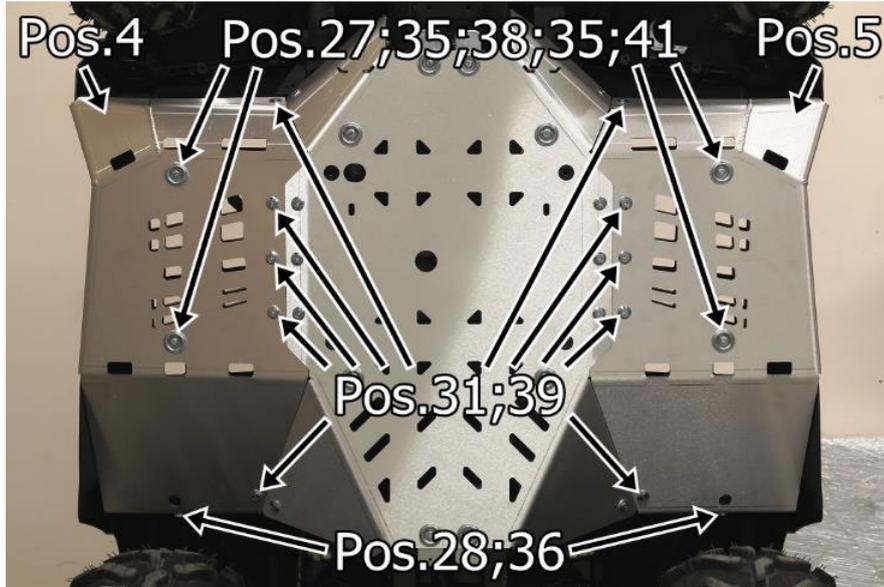


**Step 6** Install front protection 02.8402K.

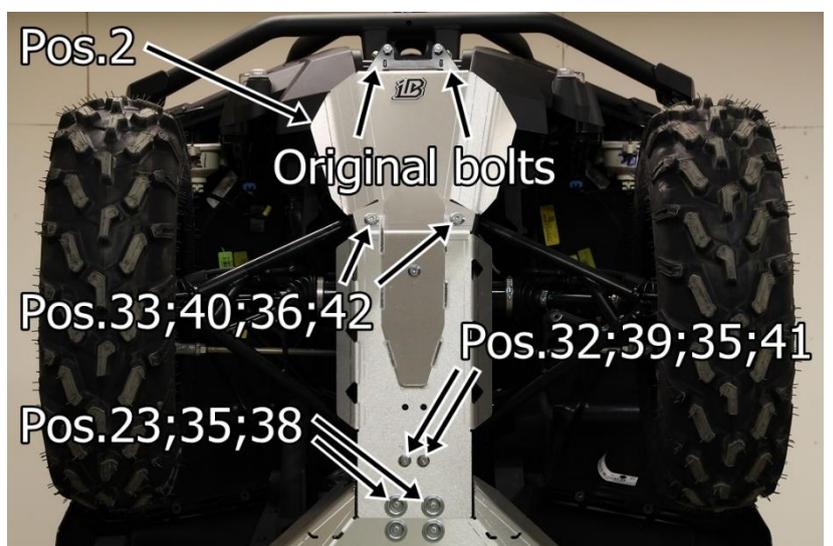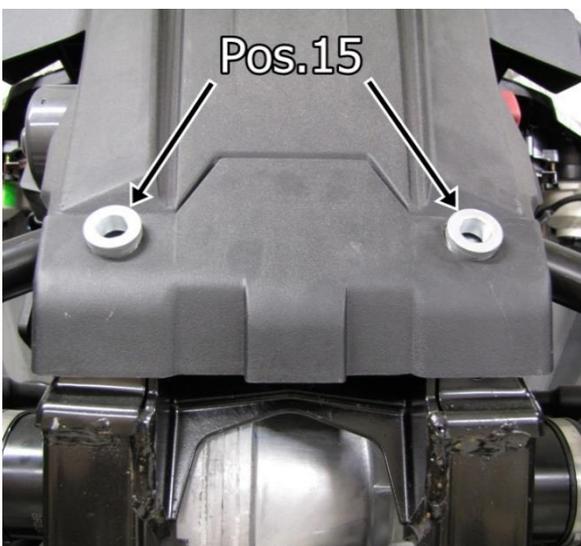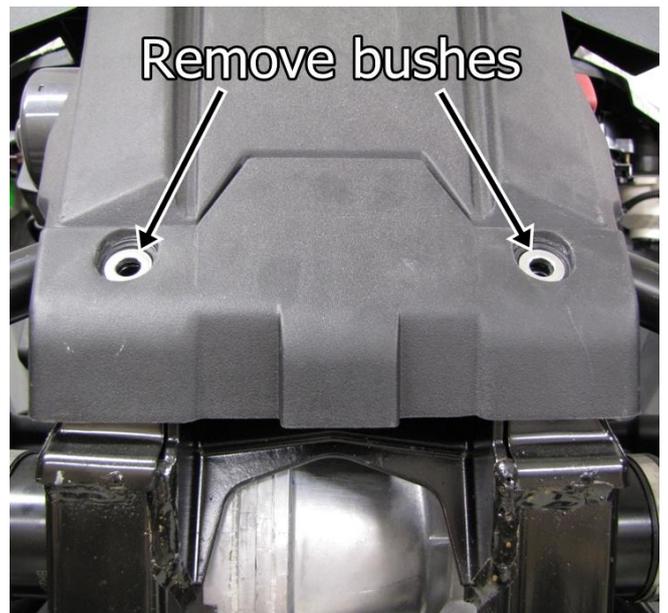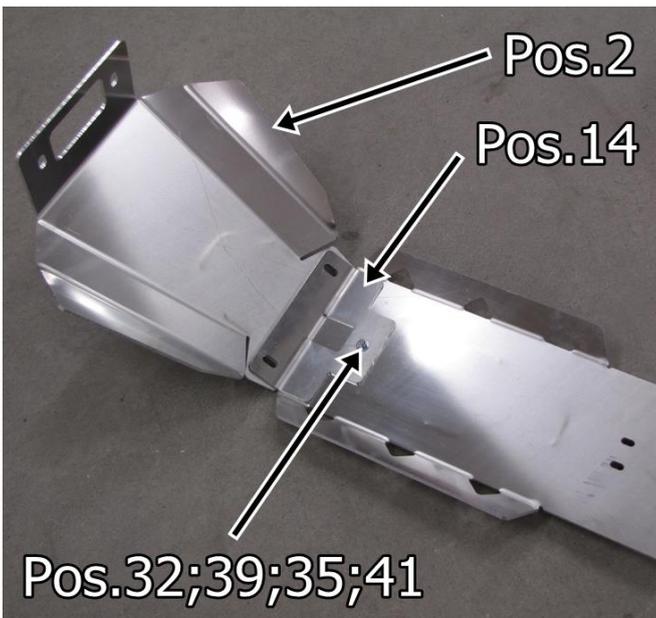

**Step 7** Install rear protection 02.8203K.

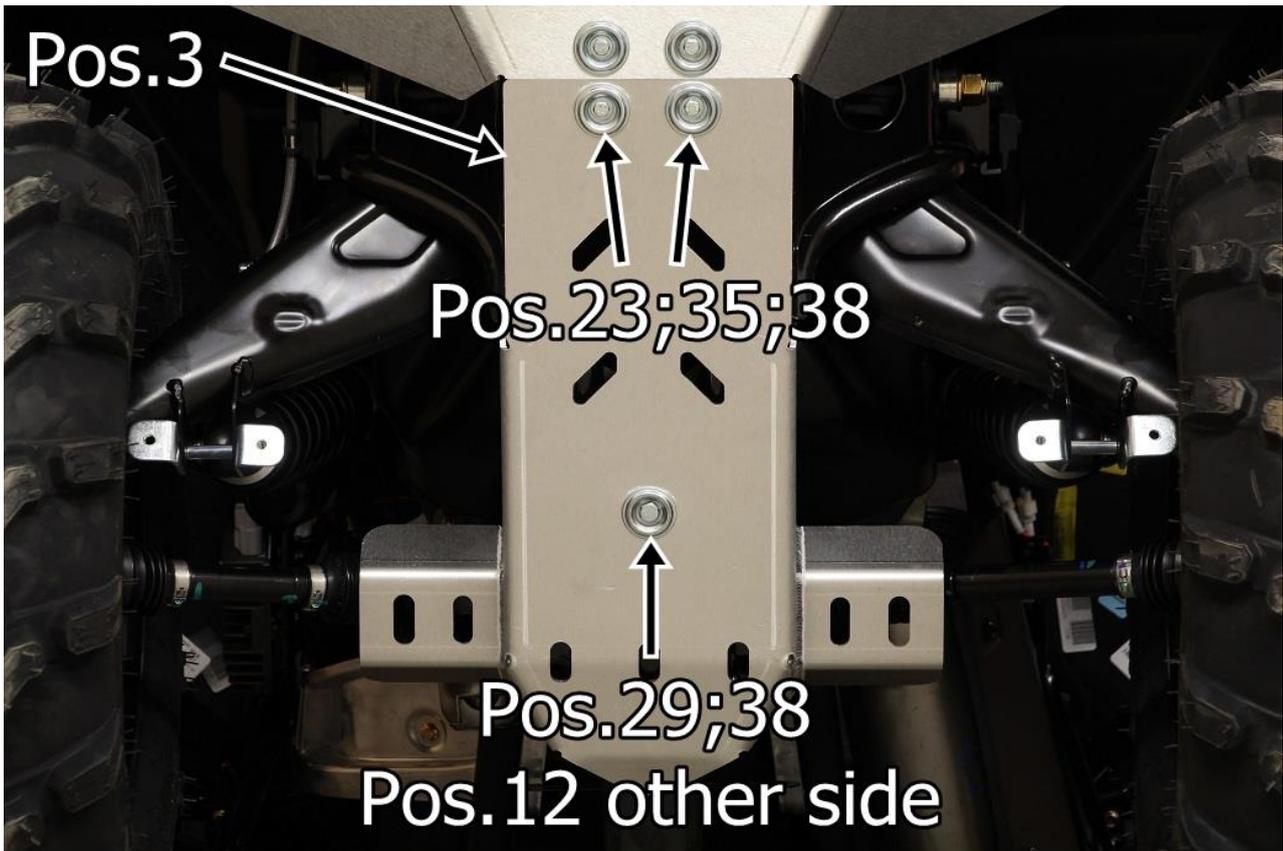


**Step 8** Install front A-arms protections 02.8204, 02.8205 and clamps 02.8210.

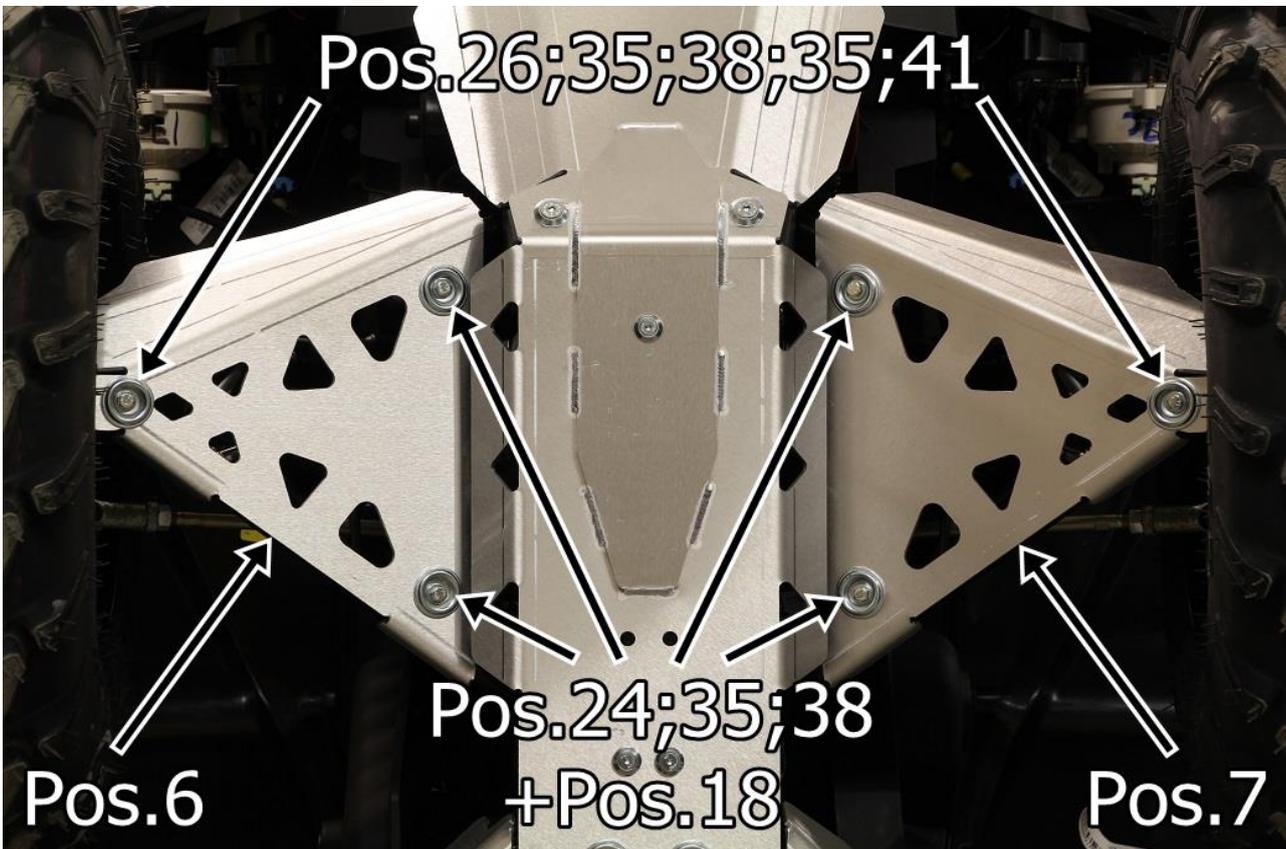


**Step 9** Install brackets 02.18804, 02.18805, 02.18806.


With brake and wheel scraper.

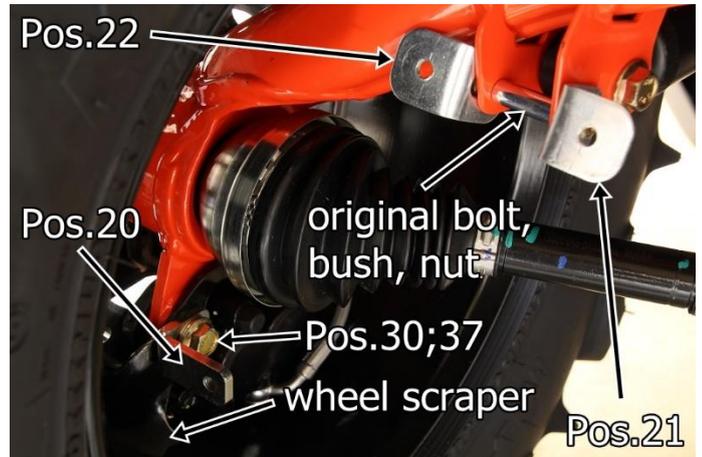

With brake.

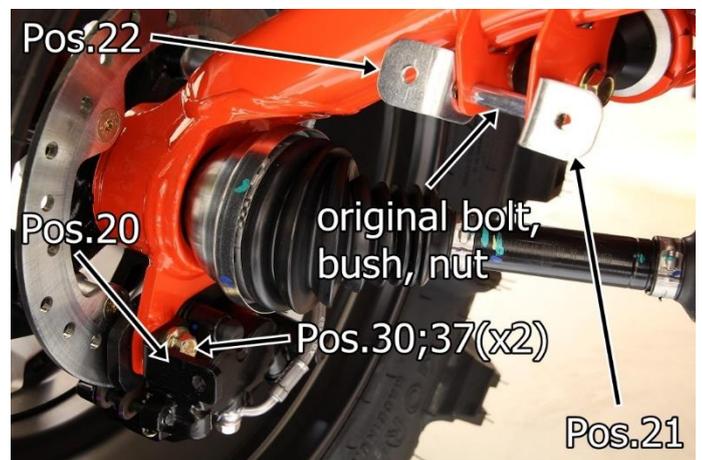


Without brake.

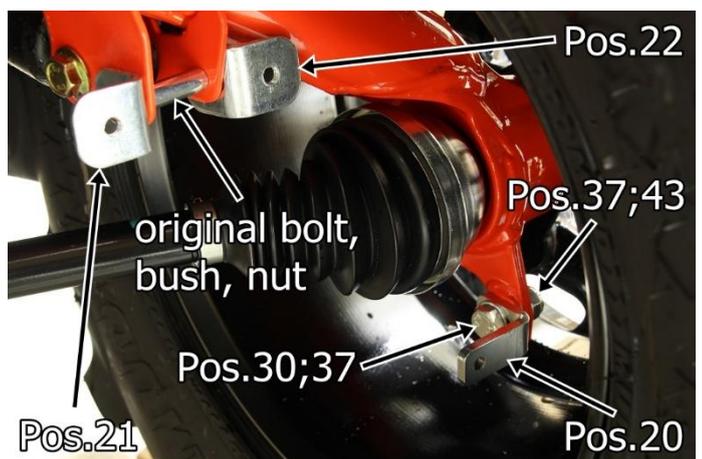

**NB!**

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.30 and brake disc.**

**Step 10** Install rear trailing arms protections 02.18801, 02.18802 and clamps 02.18803.

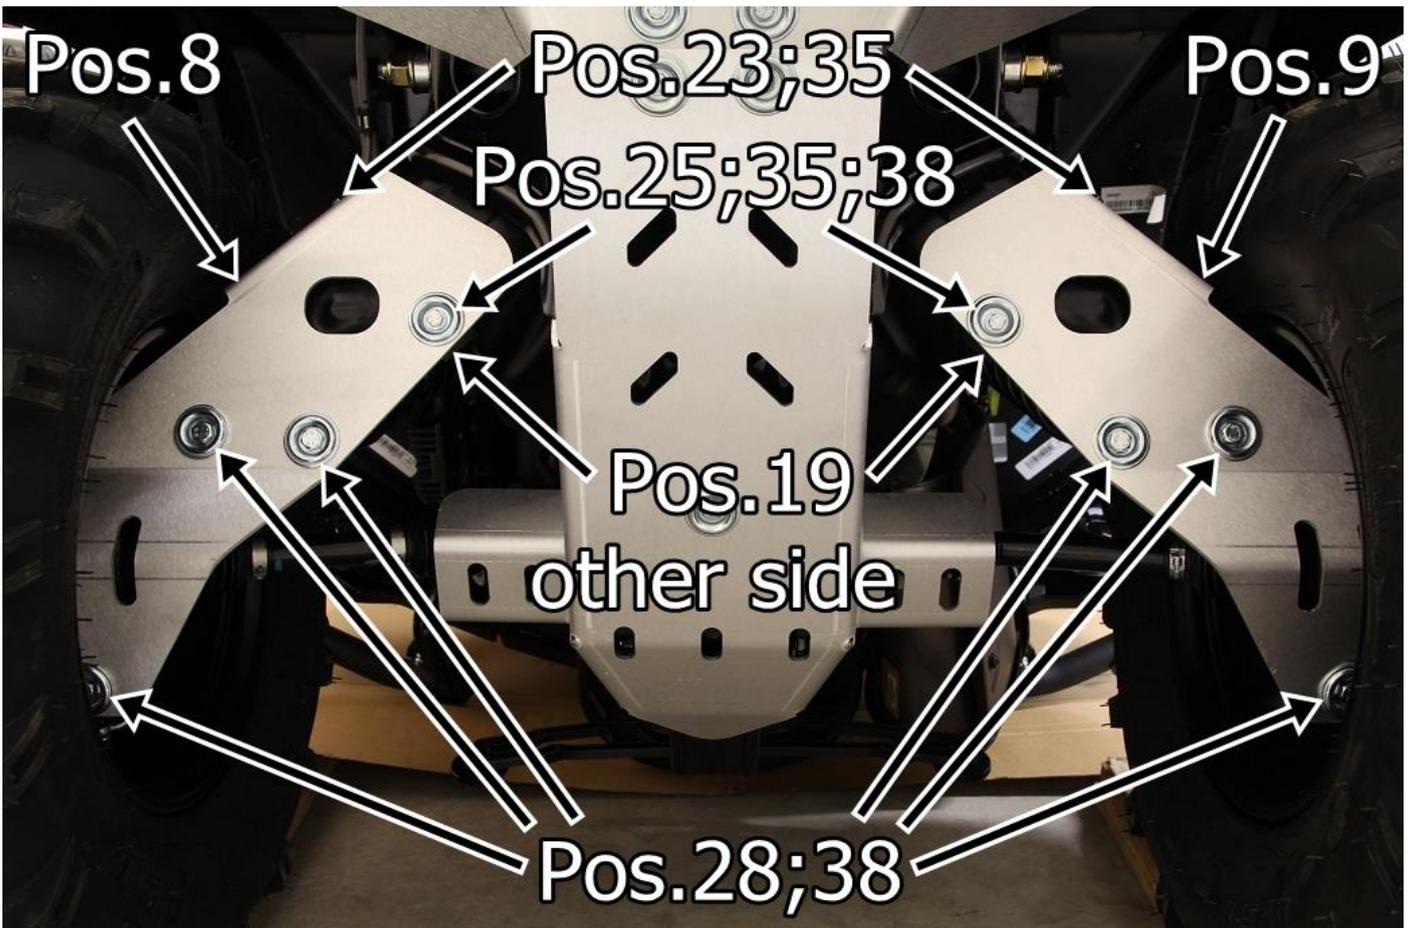





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

