

# IRON BALTIC


## ALUMINIUM SKID PLATE

# GOES

## Iron/ Cobalt

Code 02.19800

Version 14092023

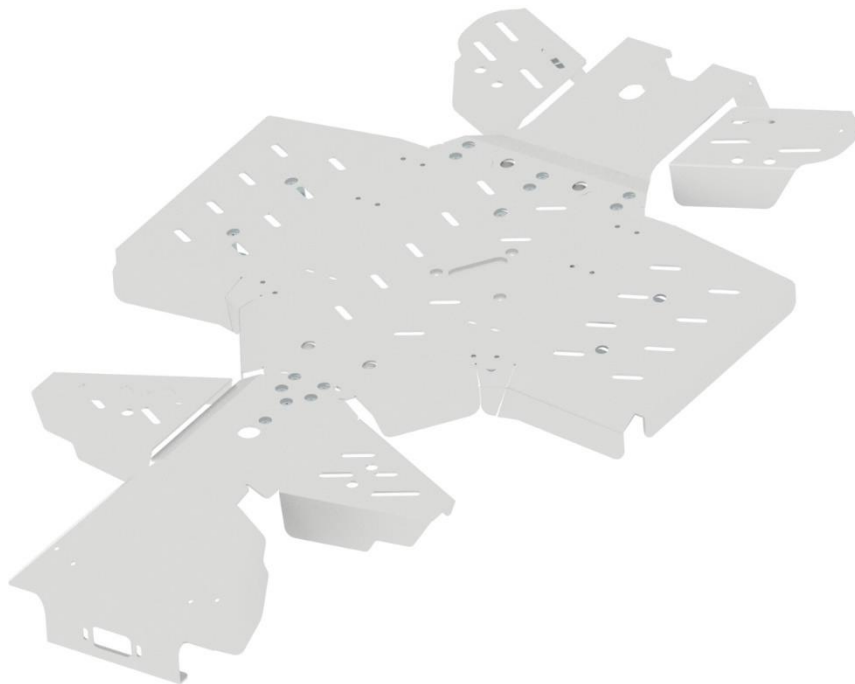

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/19UePMcP](https://code.ironbaltic.com/u/19UePMcP)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.19801K	1
2	Rear part	02.19802K	1
3	Front part	02.19602	1
4	Front left arm protection	02.1075V+	1
5	Front right arm protection	02.1075P+	1
6	Rear left arm protection	02.1076V+	1
7	Rear right arm protection	02.1076P+	1
8	Right side protection	02.5104K	1
9	Left side protection	02.5105K	1
10	Oil drain cover	02.15006	1
11	Front protection bracket	02.19604	1
12	Installation plate	02.718	1
13	Plate	02.5006	11
14	Bracket	02.6408	4
15	Angle	03.1502	2
16	Clamp 38mm	OT.05.04.030	2
17	Dished washer	14.503	32
18	Screw 4,8x19 DIN 7504-K	OT.01.02.050	2
19	Bolt M6x12 DIN 933	OT.02.02.030	4
20	Bolt M6x16 DIN 933	OT.02.02.050	21
21	Bolt M6x20 DIN 933	OT.02.02.060	4
22	Bolt M6x40 DIN 933	OT.02.02.100	2
23	Bolt M6x50 DIN 933	OT.02.02.120	2
24	Bolt M6x60 DIN 933	OT.02.02.140	4
25	Bolt M6x12 DIN 7991	OT.02.04.010	12
26	Bolt M6x20 DIN 7991	OT.02.04.030	2
27	Bolt M8x20 DIN 7991	OT.02.04.150	2
28	Conical washer Ø6	14.502	14
29	Conical washer Ø8	14.501	2
30	Washer Ø5/15 DIN 9021	OT.04.02.010	2
31	Washer Ø6/15 SFS 3738	OT.04.03.020	45
32	Nyloc nut M6 DIN 985	OT.03.02.030	8




# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic covers and roller.





**Step 2** Install installation plates 02.718 and 02.6408.

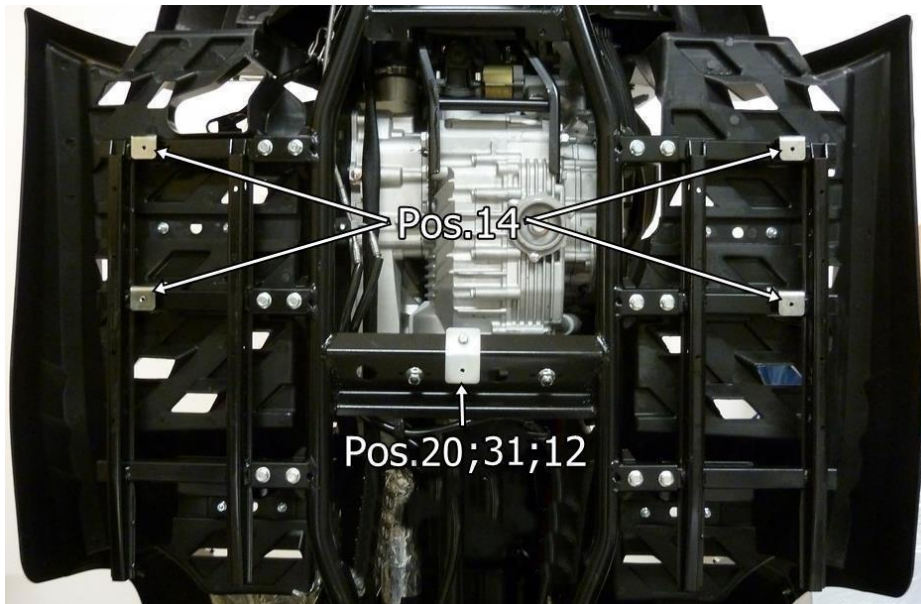


**Step 3** Install front a-arm protectors 02.1075V+ ja 02.1075P+.

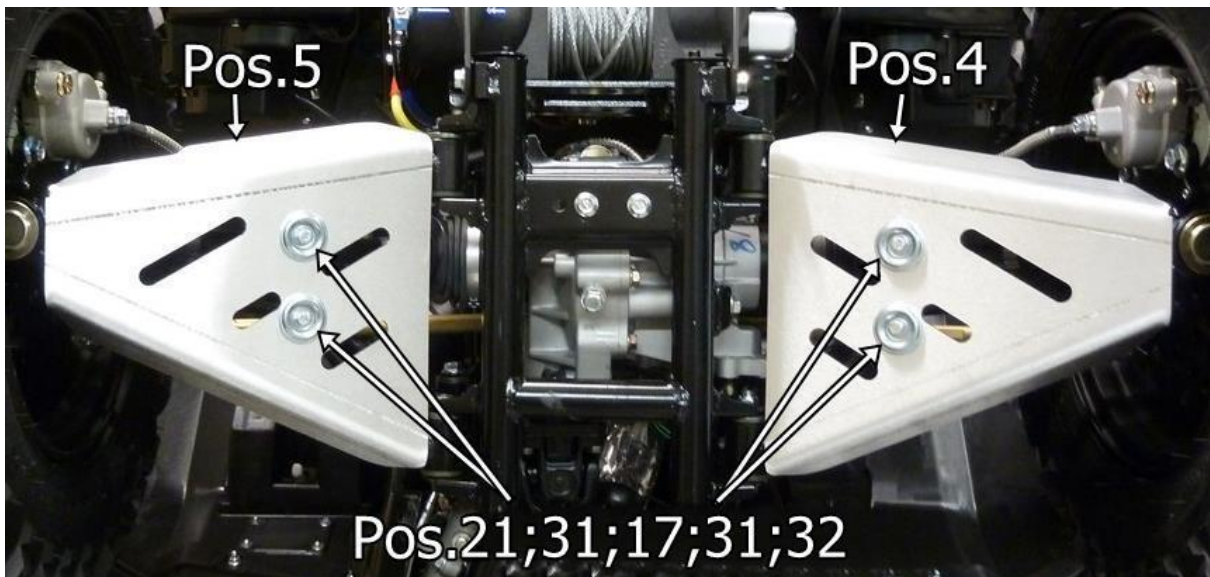

**Step 4** Install rear a-arm protectors 02.1076V+ ja 02.1076P+.

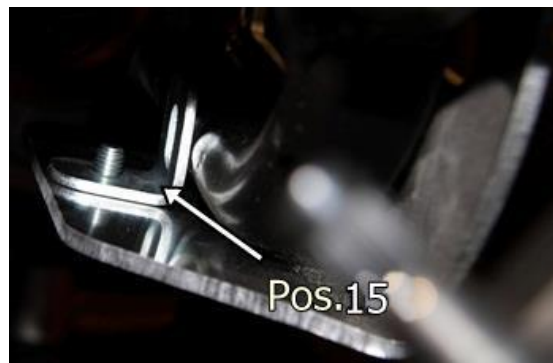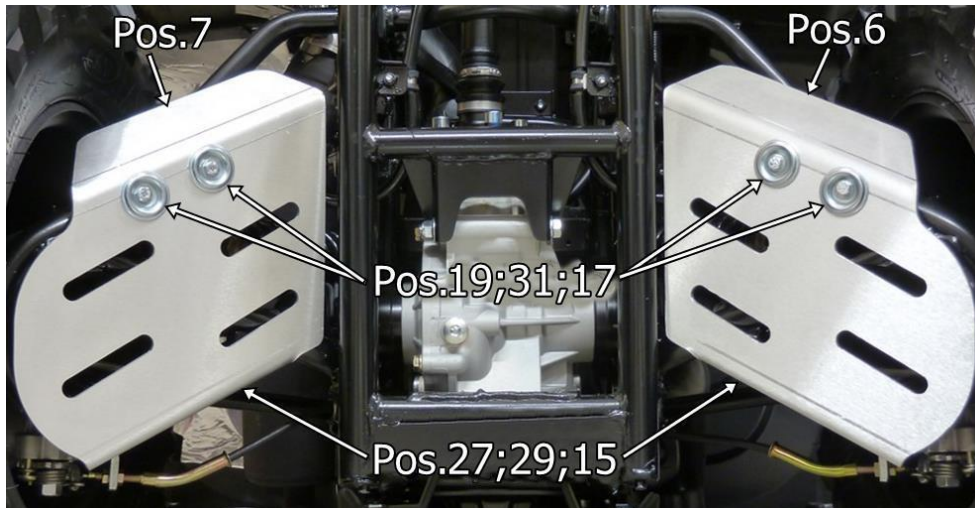


**Step 5** Install oil drain hole cover 02.15006 and install middle protection 02.19801K.

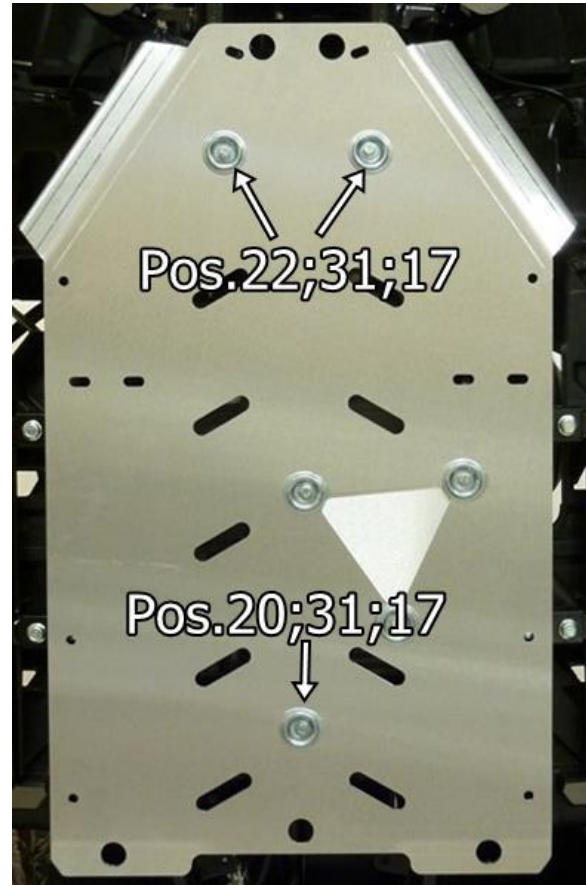



**Step 6** Install plates 02.5006 to the middle part.




**Step 7** Install rear part 02.19803K.

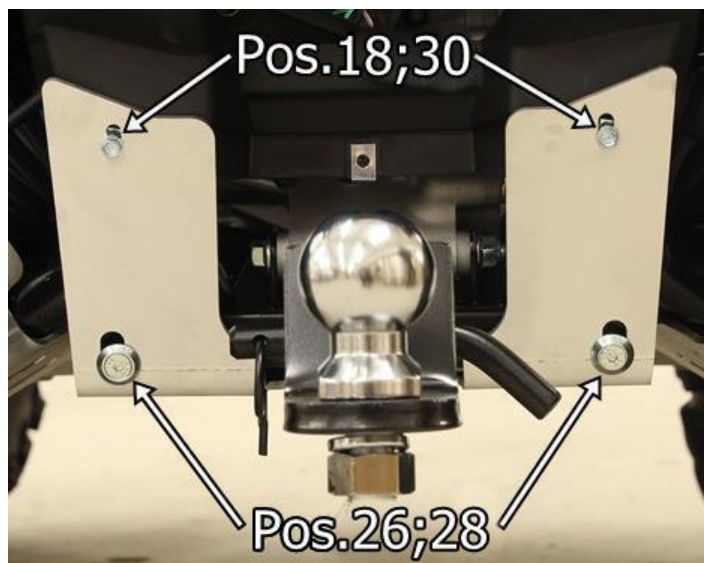


**Step 8** Install front protection 02.19602.

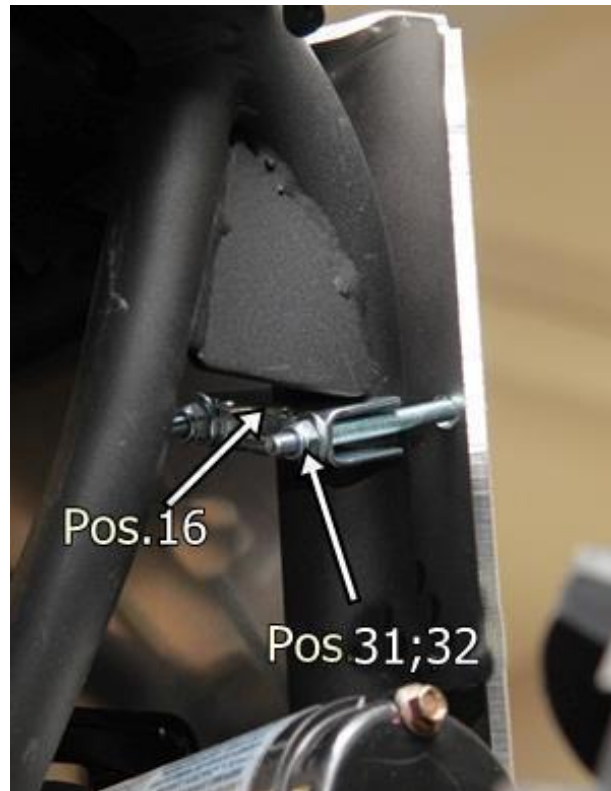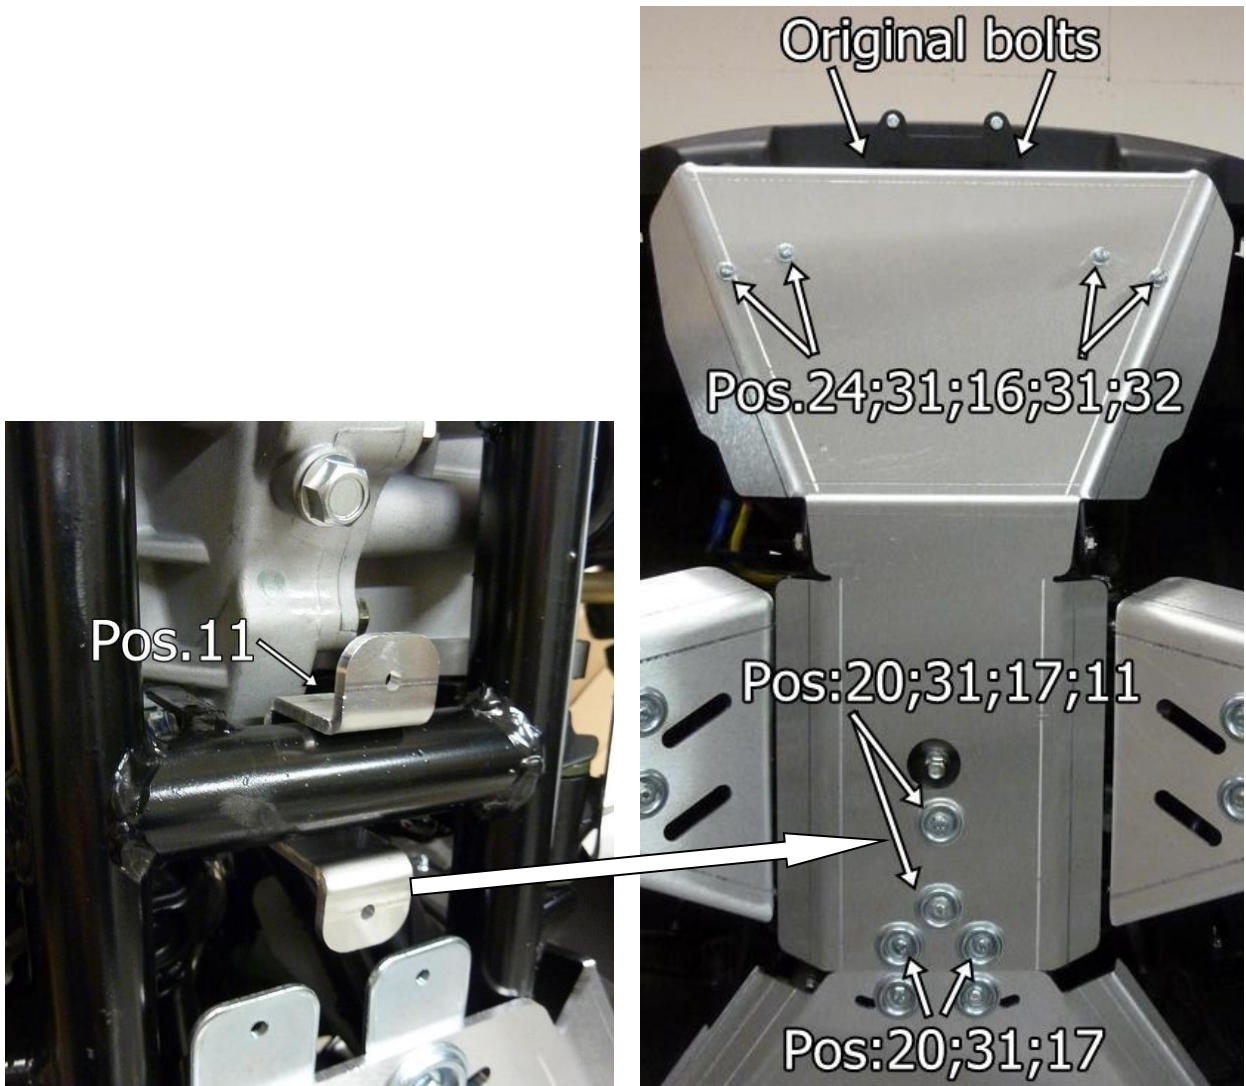

**Step 9** Install side protection 02.5104K and 02.5105K.

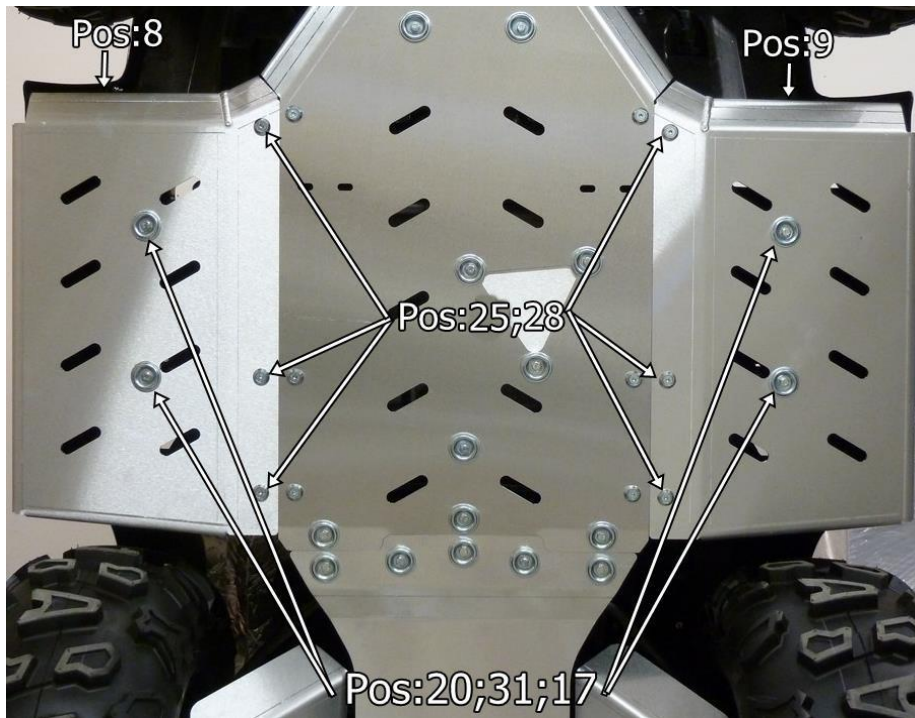

**Step 10** To remove the oil cover plate, remove two bolts indicated with arrows and loosen the third bolt. Slide the plate away.

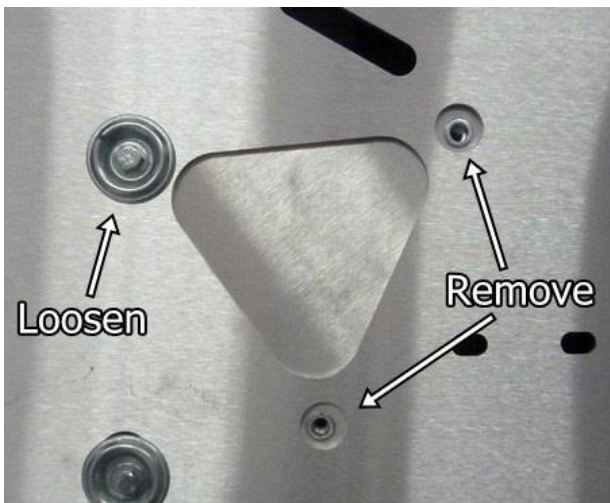





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

