

## ALUMINIUM SKID PLATE

### CAN AM

### Renegade XMR (2019+)

Code 02.23400

Version 23102020



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/FiHSlyOu](http://code.ironbaltic.com/u/FiHSlyOu)



# SPECIFICATION

Pos.	Description	Code	Amount
1	Front left A-arm protection	02.23101S	1
2	Front right A-arm protection	02.23102S	1
3	Rear right trailing arm protection	02.23103	1
4	Rear left trailing arm protection	02.23104	1
5	Middle protection	02.18201	1
6	Front protection	02.18202K	1
7	Right side protection	02.18204	1
8	Left side protection	02.18205	1
9	Rear protection	02.8203K	1
10	Angle (80 degrees)	02.18805	2
11	Rear protection angle	02.18804	2
12	Plate (10 degrees)	02.8312	2
13	Installation bracket	02.6408	4
14	Connecting plate	02.5006	12
15	Threaded plate	02.2305	1
16	Dished washer	14.503	33
17	Bolt M6x12 DIN 933	OT.02.02.030	10
18	Bolt M6x16 DIN 933	OT.02.02.050	6
19	Bolt M6x20 DIN 933	OT.02.02.060	4
20	Bolt M6x25 DIN 933	OT.02.02.070	4
21	Bolt M6x35 DIN 933	OT.02.02.090	2
22	Bolt M6x40 DIN 933	OT.02.02.100	4
23	Bolt M8x16 DIN 933	OT.02.02.170	4
24	Bolt M8x30 DIN 933	OT.02.02.200	1
25	Bolt M10x30 DIN 933	OT.02.02.320	2
26	Bolt M6x16 DIN 7991	OT.02.04.020	20
27	Bolt M6x25 DIN 7991	OT.02.04.040	2
28	Washer Ø6/15 SFS 3738	OT.04.03.020	36
29	Washer Ø6/18 DIN 9021	OT.04.02.020	2
30	Washer Ø10/20 DIN 125	OT.04.01.040	4
31	Conical washer Ø6	14.502	22
32	Nut M6 Nyloc DIN 985	OT.03.02.030	12
33	Nut M10 Nyloc DIN 985	OT.03.02.050	1



## TOOLS REQUIRED FOR INSTALLATION:

- Open end wrench 10mm
- Open end wrench 17mm
- Socket wrench 10mm
- Socket wrench 17mm
- Hex key H4

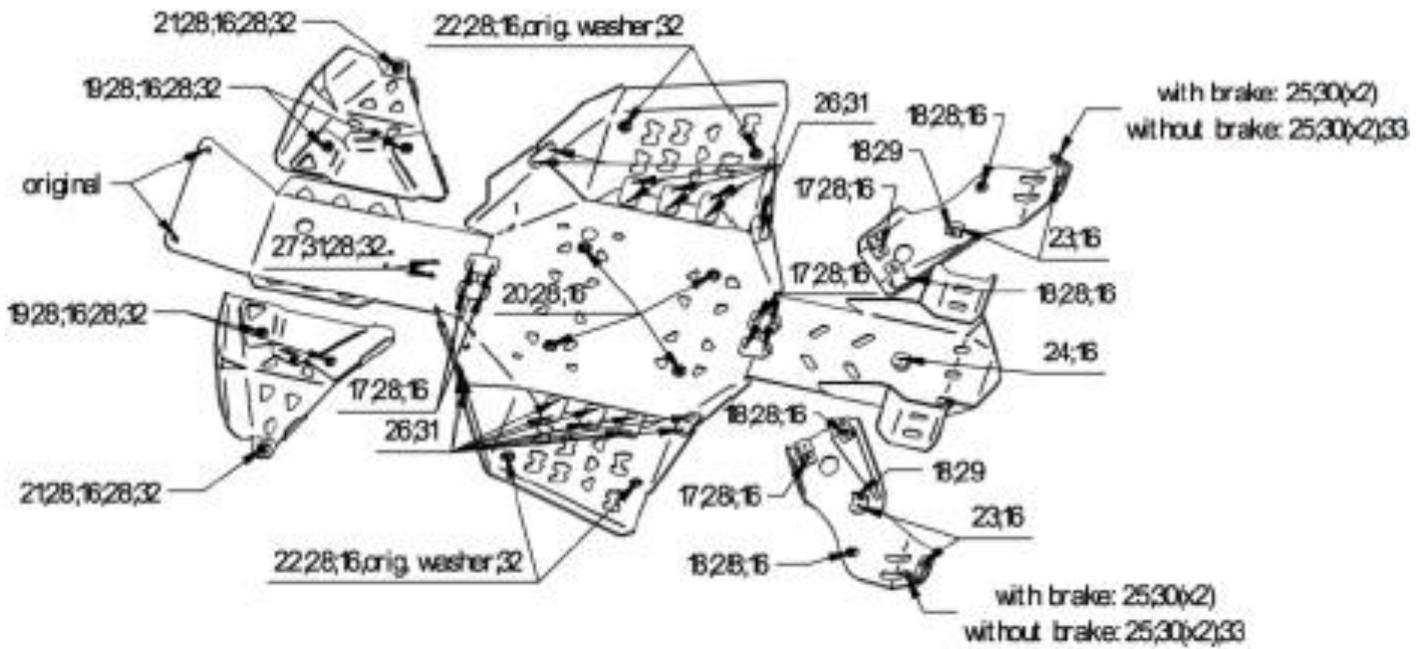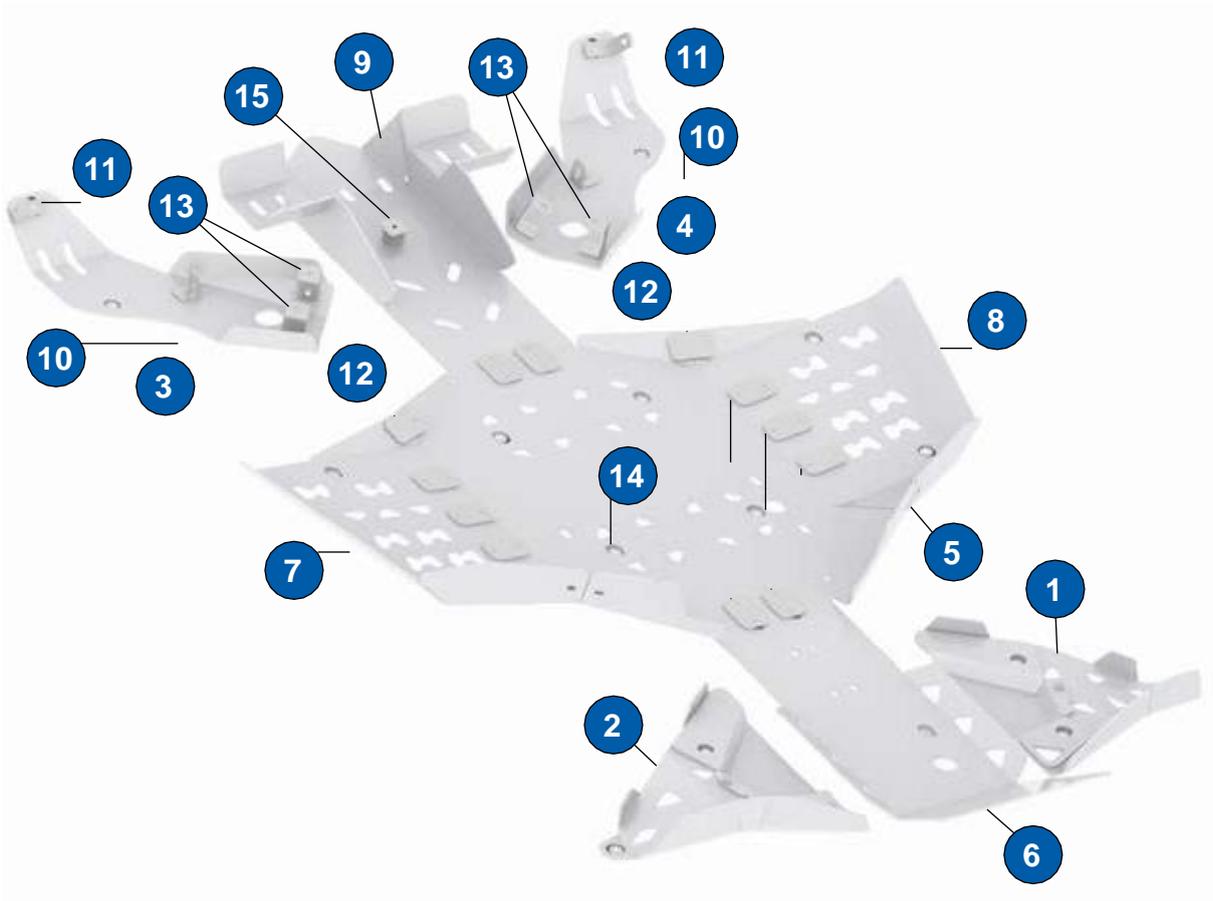

# FITTING INSTRUCTIONS




**NB!**


**We recommend using thread lock fluid on the bolts.  
Bolts tend to loosen with vibration from ATV.**

## Step 1


Remove all standard plastic covers.

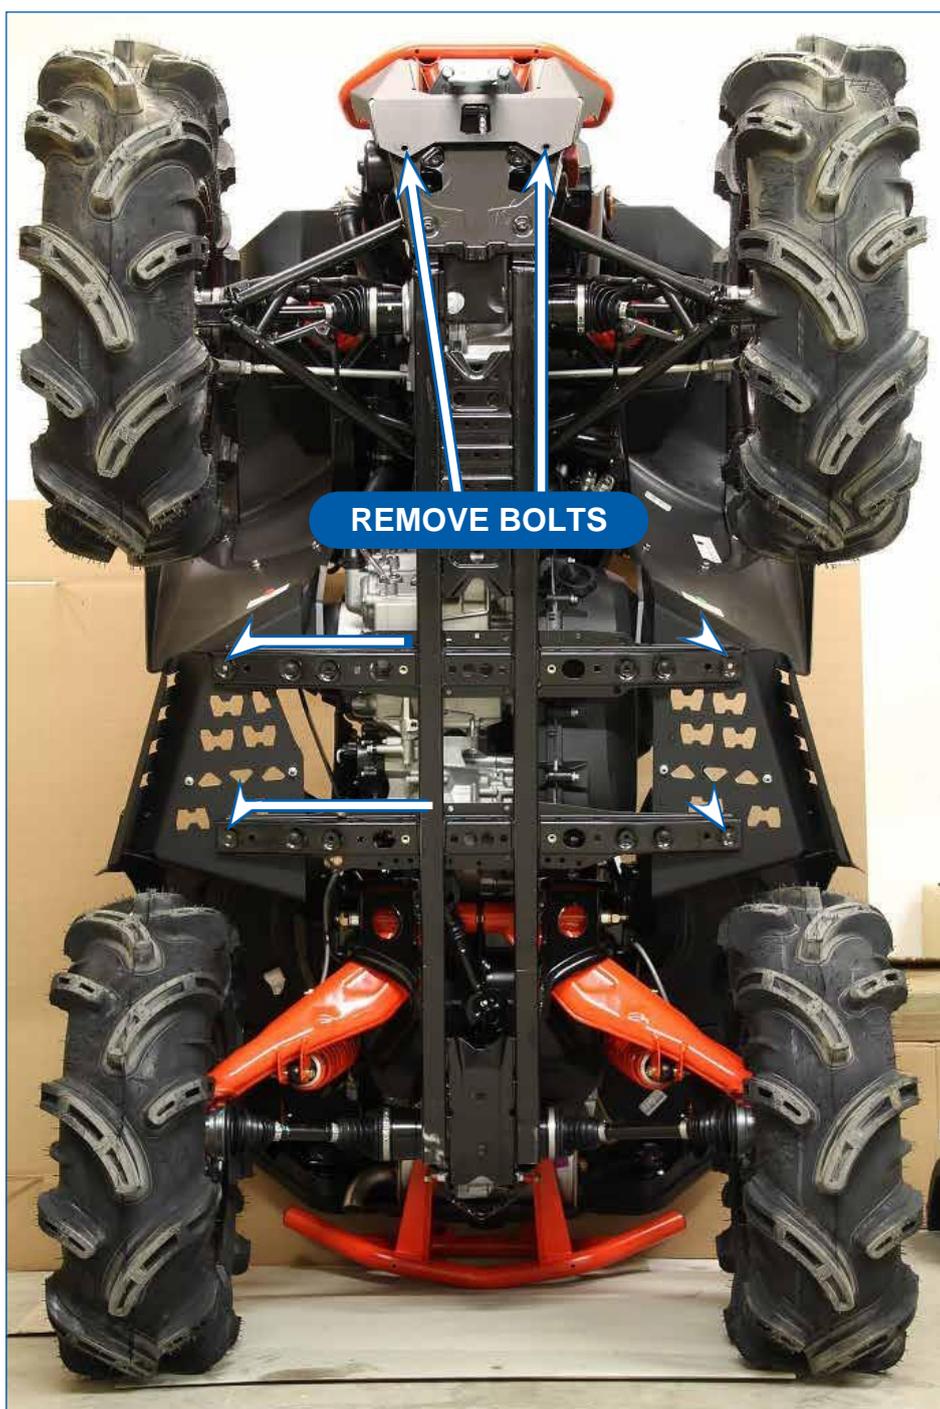


**Step 2** Install middle protection 02.18201.

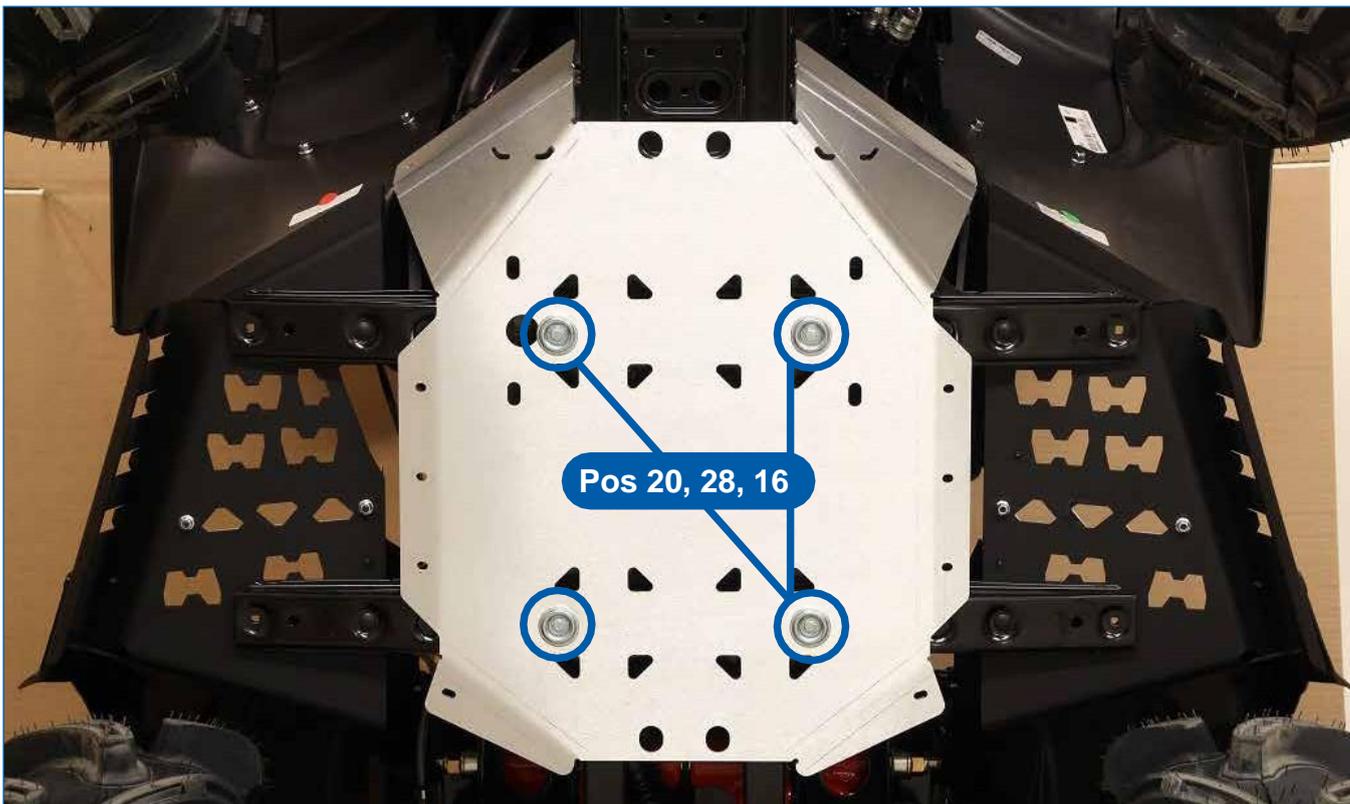

**Step 3** Install plates 02.5006 and 02.8312

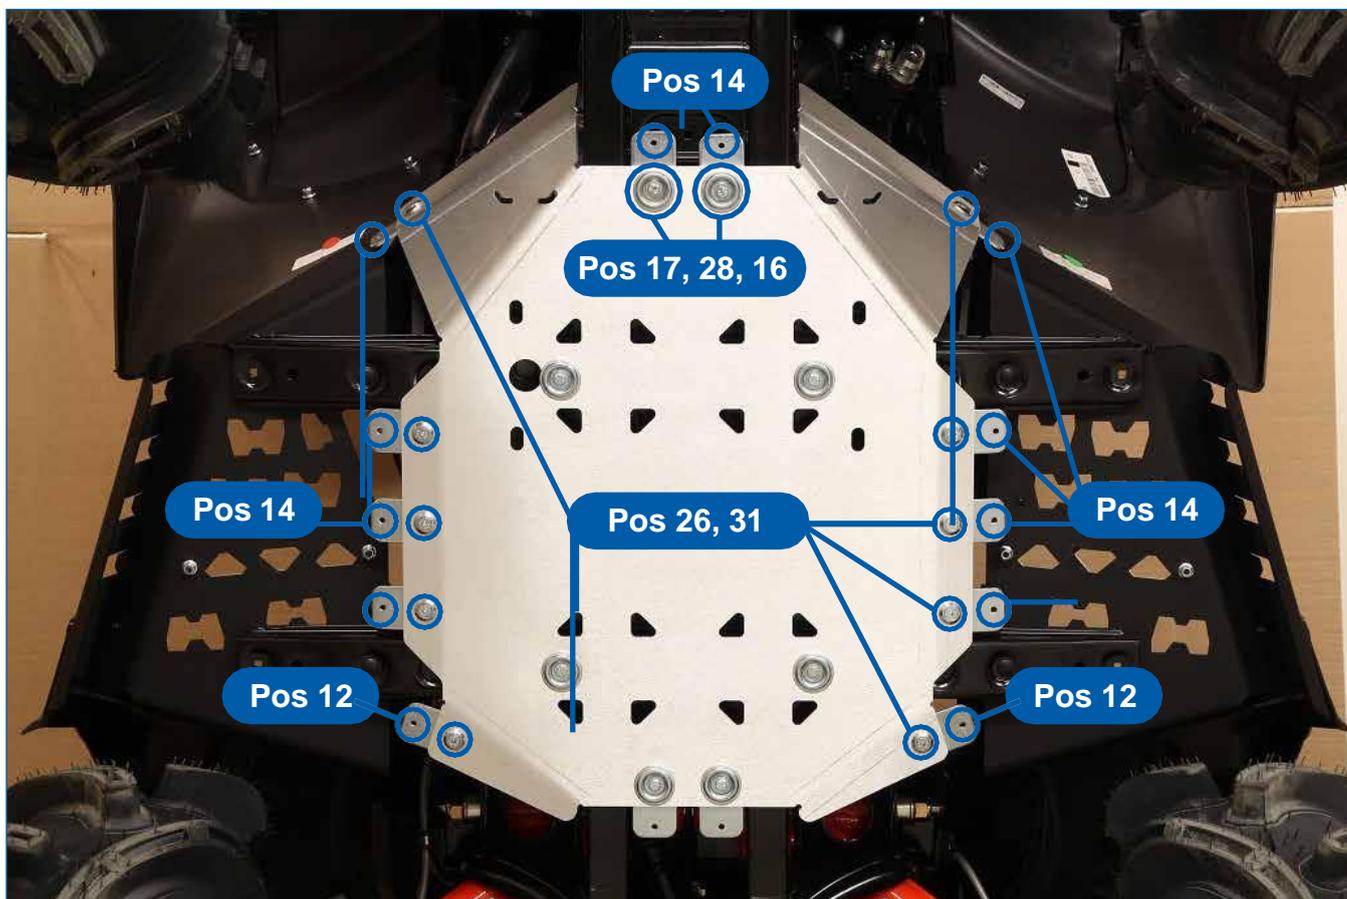




**Step 4** Install right side protection 02.18204 and left side protection 02.18205.

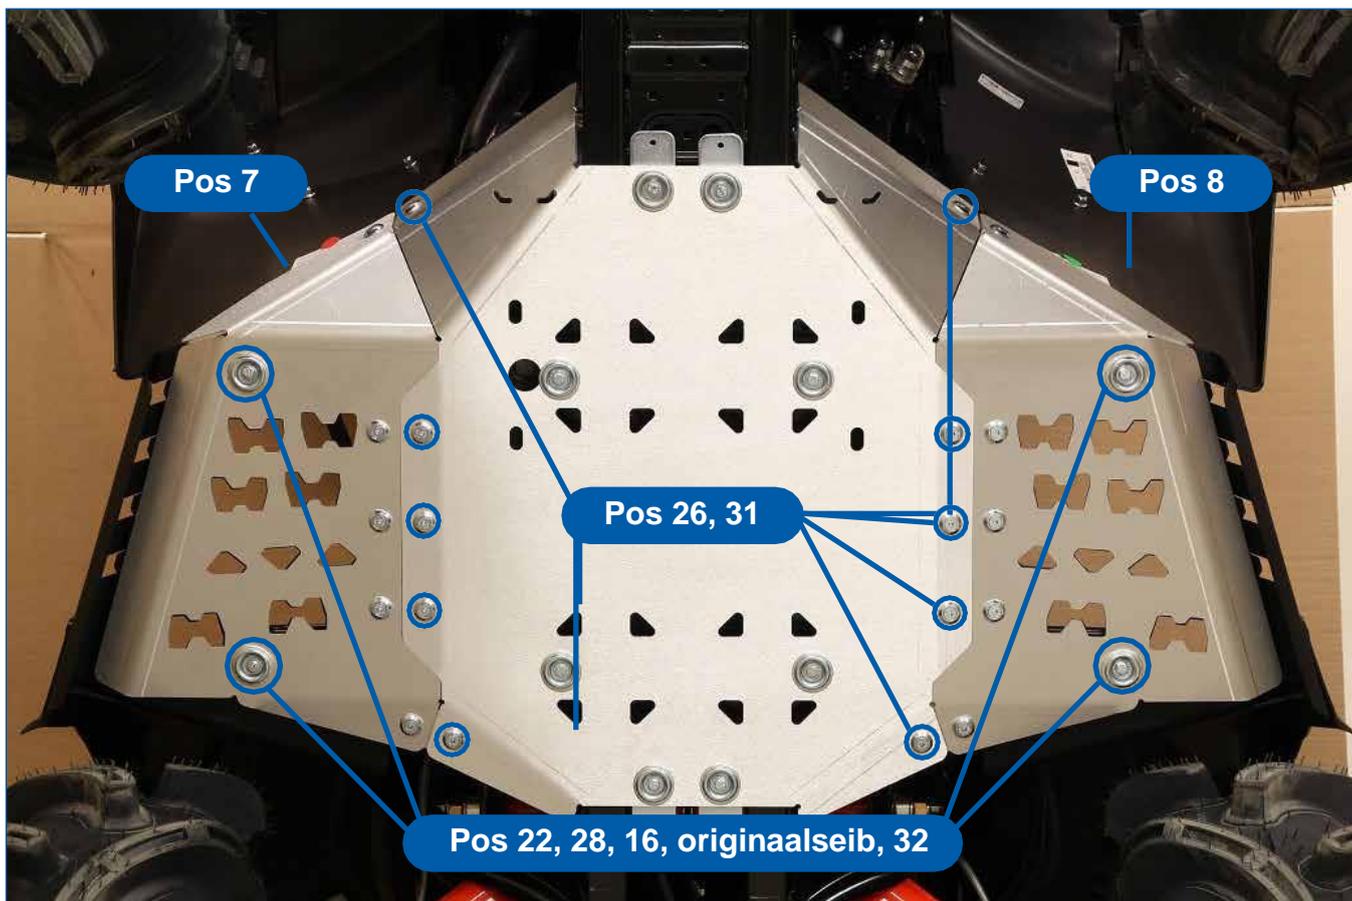

**Samm 5** Install front part 02.18202K.


**LOOK AT THE PICTURES!** If you are using CanAm OE mounting plate (P/N 715004338) cut front protection side bends! Also when installing with OE mounting plate, use plow OE bolts.

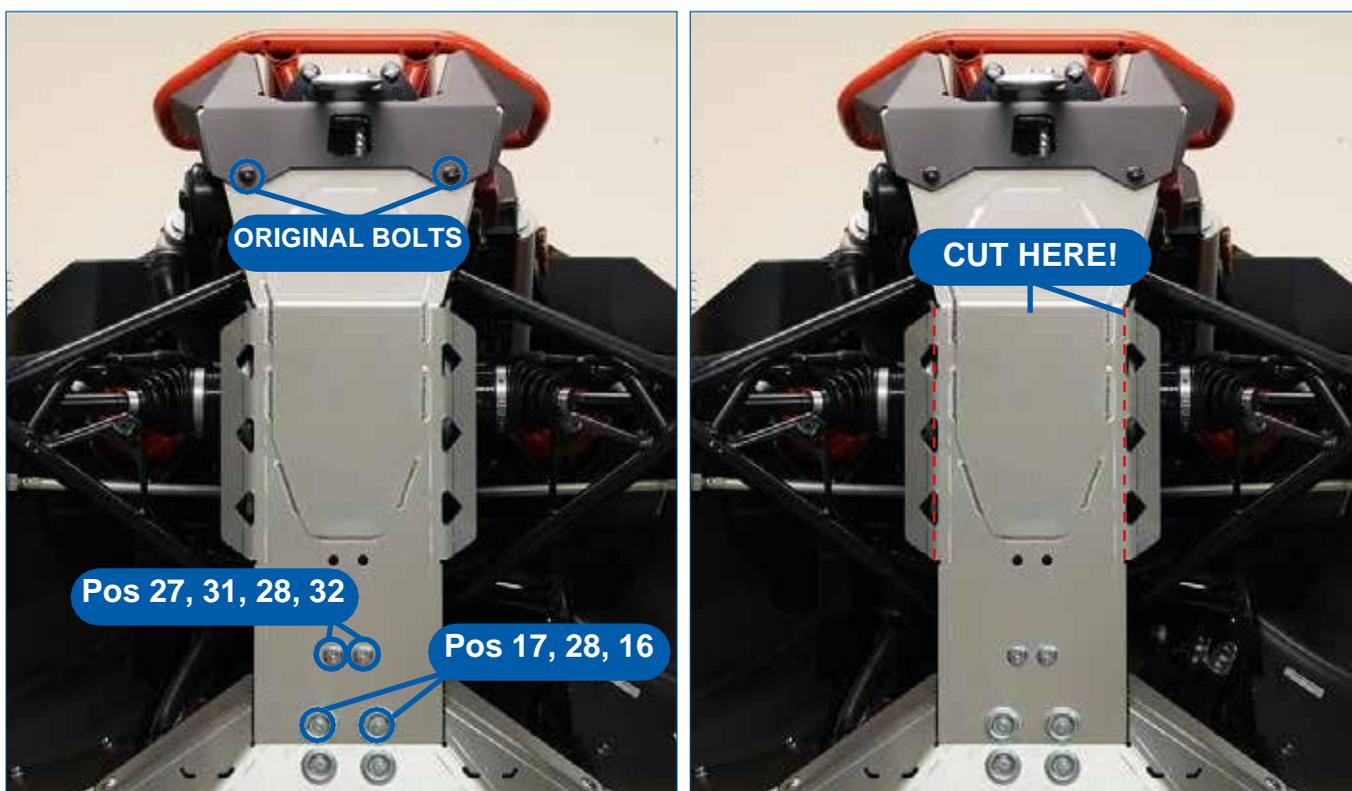

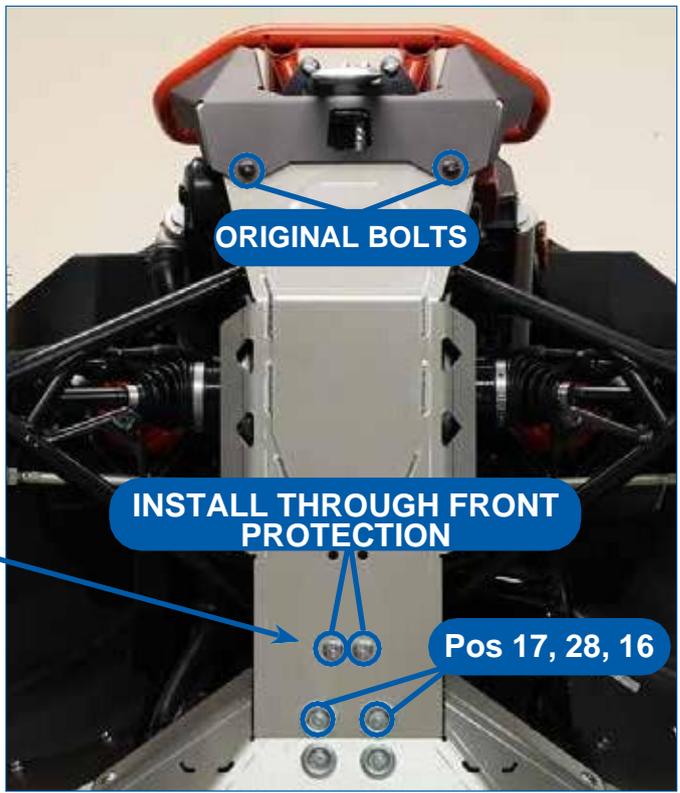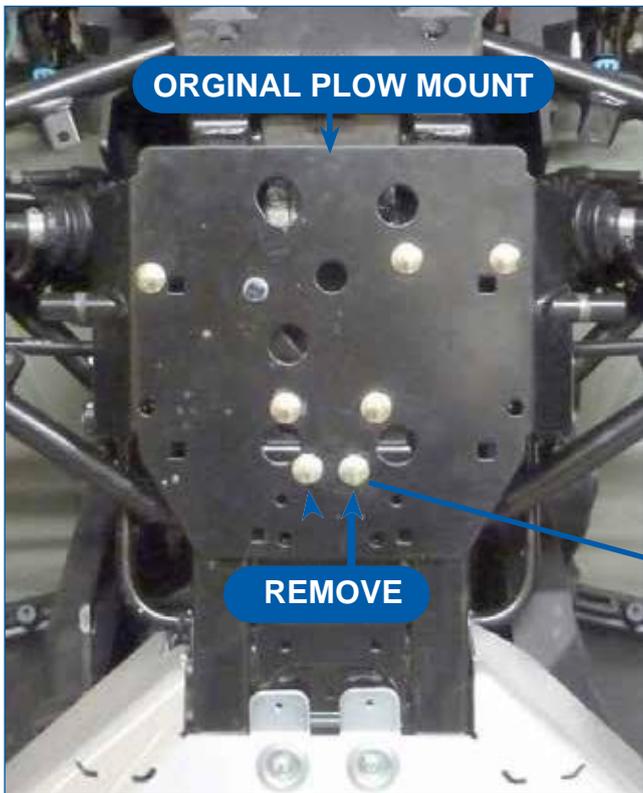


*INSTALLATION WITH CANAM ORIGINAL PLOW MOUNT (P/N 715004338)*

**Step 6** Install rear protection 02.8203K.

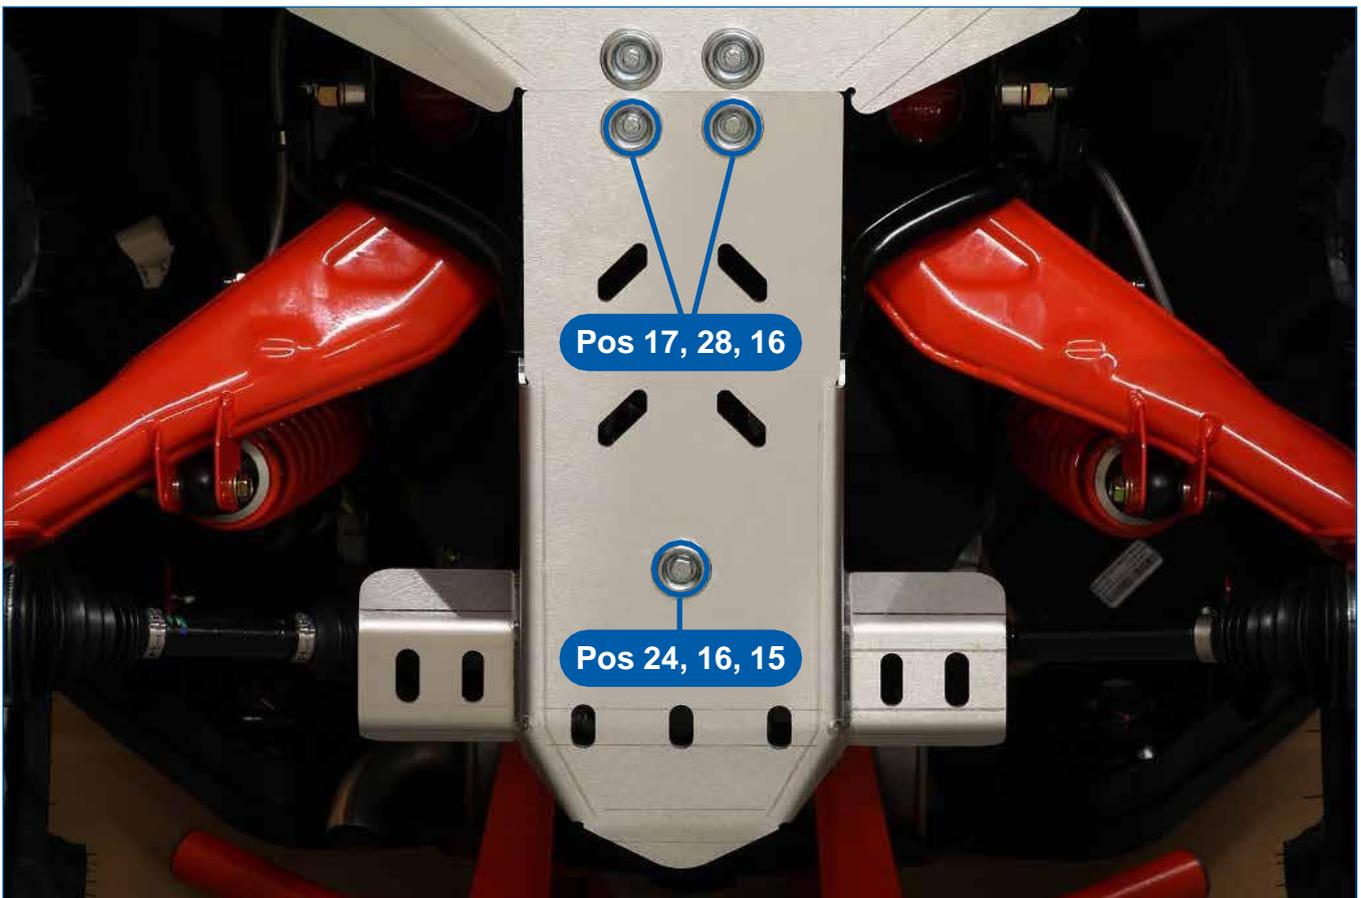


## Step 7

Install front A-arms protections 02.23101S and 02.23102S.

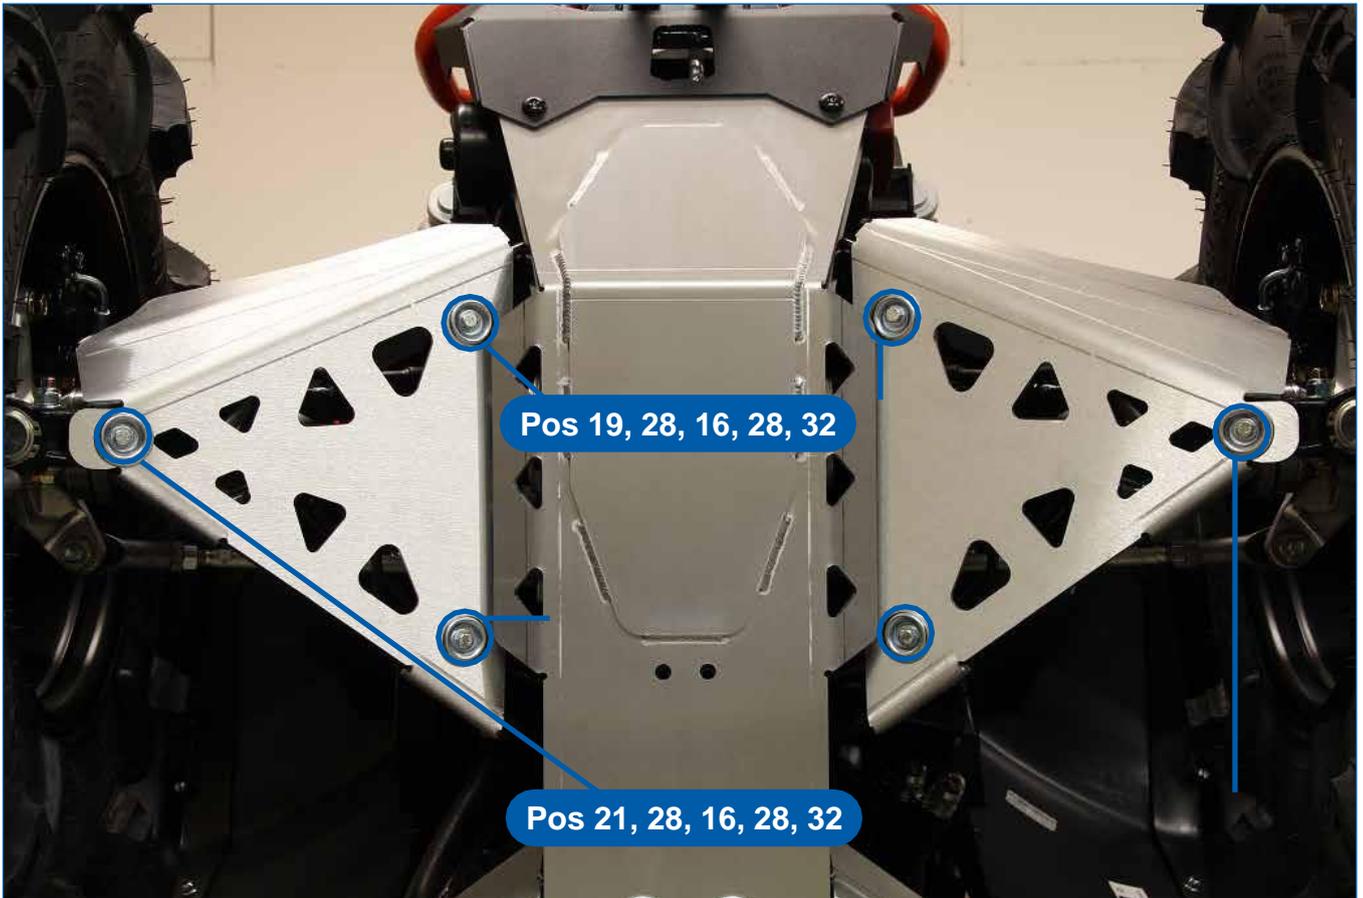


**NB!**

If you are using CanAm original snow plow adapter, then remove cover and cut section indicated with arrows.

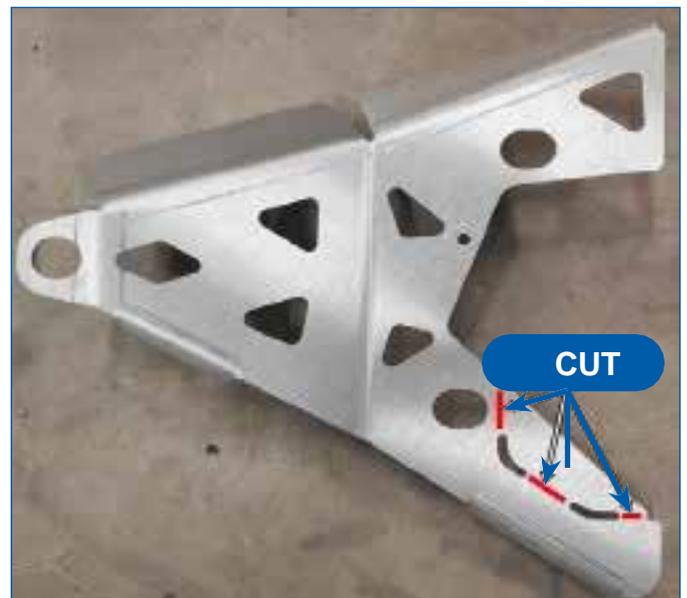


## Step 8

Install brackets 02.18804 and 02.18805.

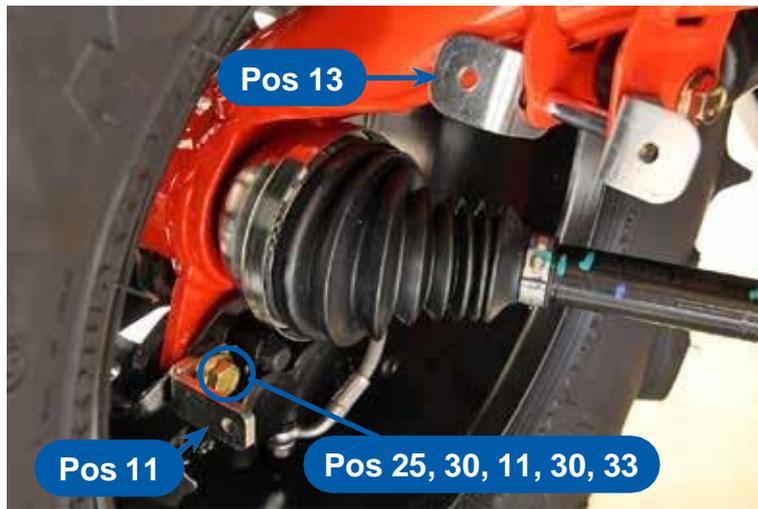

*WHEEL WITH BRAKE*

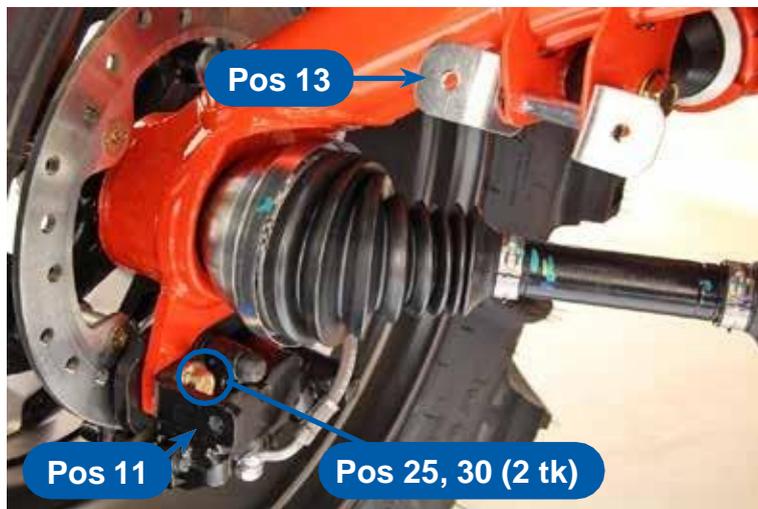

*WHEEL WITHOUT BRAKE*




### **NB!**

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.25 and brake disc.**

**Step 9**

Install rear trailing arms protections 02.23103 and 02.23104. Use installation brackets 02.6408.

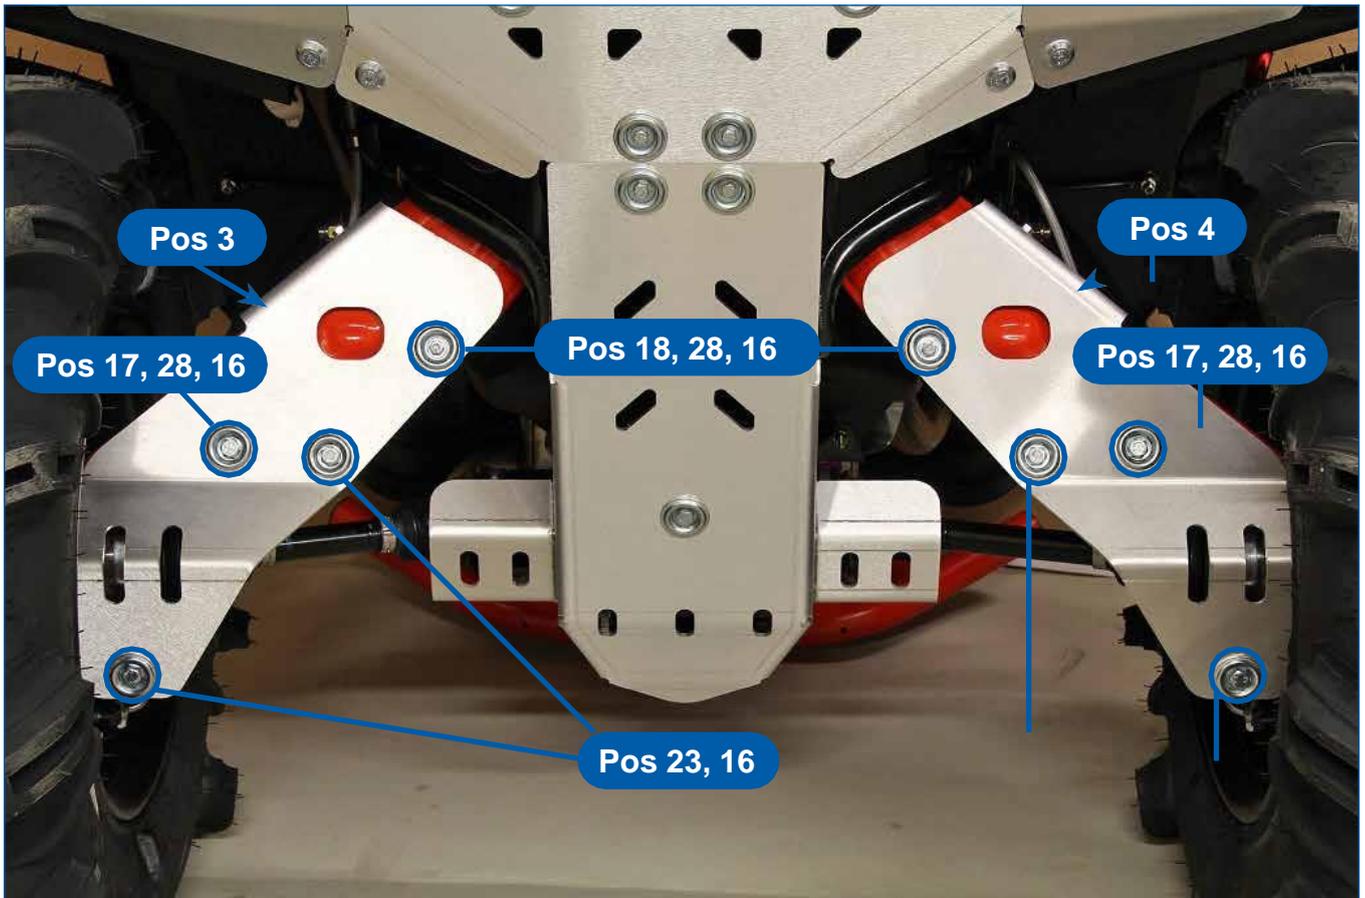



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

