

# IRON BALTIC

## PLASTIC SKID PLATE

### CAN AM

### Renegade X MR (2019-...)

Code 02.23500

Version 01102023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/y56ee9LP](http://code.ironbaltic.com/u/y56ee9LP)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Front left A-arm protection	02.23201K	1
2	Front right A-arm protection	02.23202K	1
3	Rear right trailing arm protection	02.23203	1
4	Rear left trailing arm protection	02.23204	1
5	Rear protection	02.20202	1
6	Front protection	02.18301K	1
7	Right side protection	02.18303	1
8	Left side protection	02.18304	1
9	Middle protection	02.8301	1
10	Rear part bracket	02.20201	1
11	Angle (80)	02.18805	2
12	Rear protection angle	02.18804	2
13	Plate (10 degrees)	02.8312	2
14	Installation bracket	02.6408	4
15	Connecting plate	02.5006	13
16	Threaded plate	02.2305	5
17	Bush D30h14	02.707	1
18	Dished washer	14.503	36
19	Bolt M6x16 DIN933	OT.02.02.050	18
20	Bolt M6x20 DIN933	OT.02.02.060	2
21	Bolt M6x25 DIN933	OT.02.02.070	4
22	Bolt M6x30 DIN933	OT.02.02.080	4
23	Bolt M6x40 DIN933	OT.02.02.100	2
24	Bolt M6x45 DIN933	OT.02.02.110	4
25	Bolt M8x20 DIN933	OT.02.02.180	4
26	Bolt M8x35 DIN933	OT.02.02.210	1
27	Bolt M10x30 DIN933	OT.02.02.320	2
28	Bolt M6x20 DIN7991	OT.02.04.030	20
29	Bolt M6x30 DIN7991	OT.02.04.050	2
30	Washer Ø6/15 SFS3738	OT.04.03.020	40
31	Washer Ø6/18 DIN9021	OT.04.02.020	2
32	Washer Ø8/20 SFS3738	OT.04.03.030	1
33	Washer Ø10/20 DIN125	OT.04.01.040	4
34	Conical washer Ø6	14.502	22
35	Nyloc nut M6 DIN985	OT.03.02.030	12
36	Nyloc nut M10 DIN985	OT.03.02.050	1

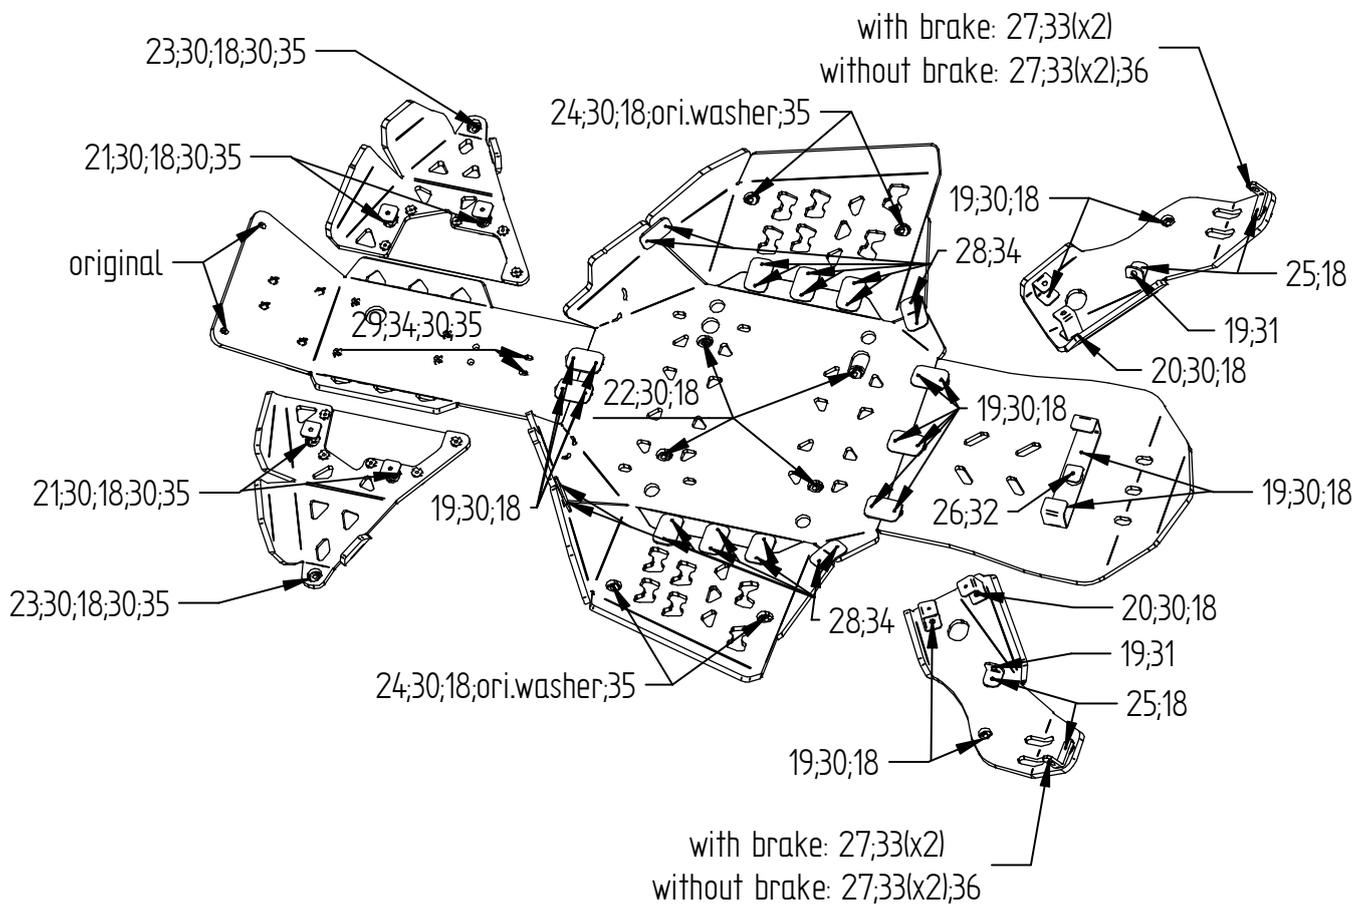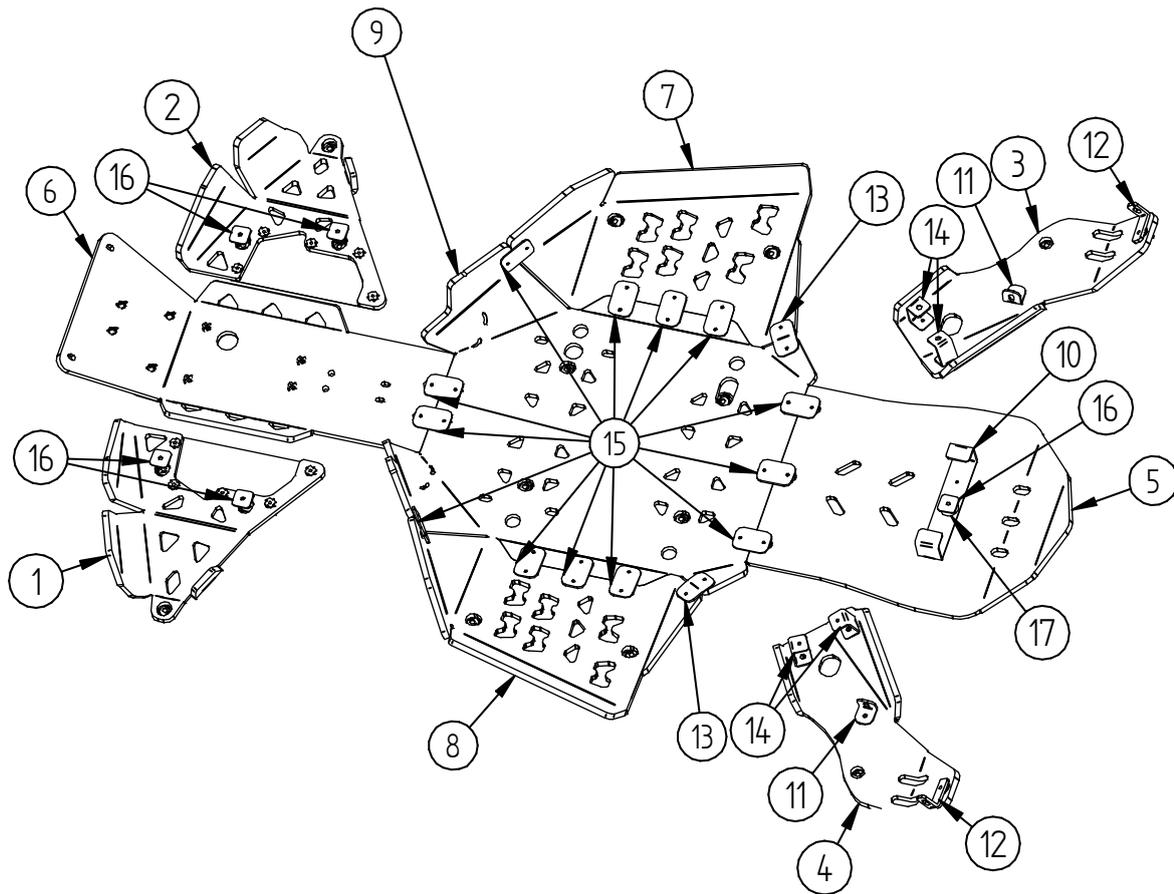


# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.

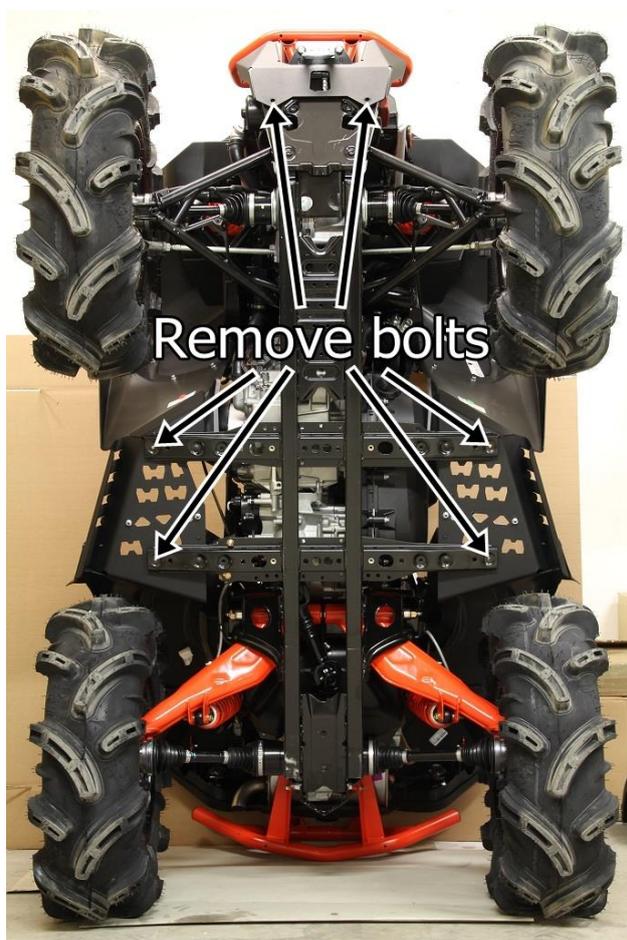


**Step 2** Install middle protection 02.8301.

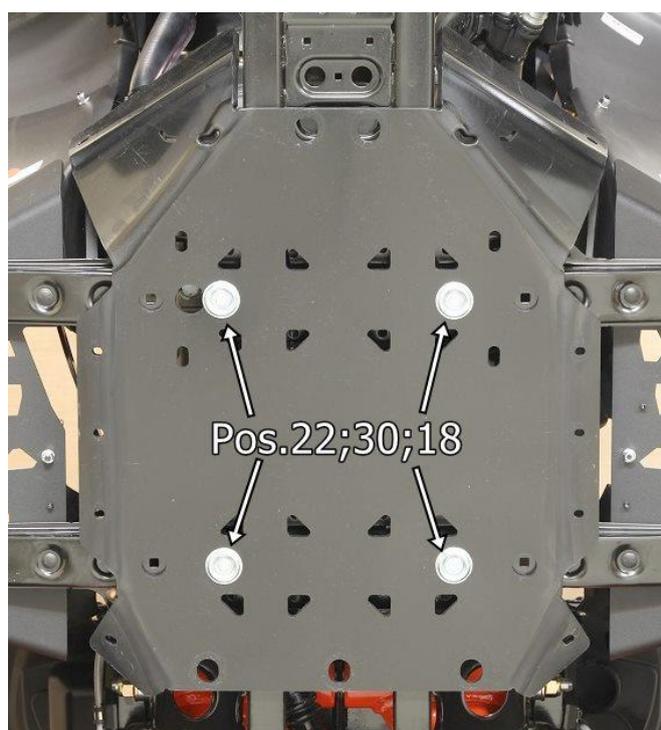


### Step 3

Install plates 02.5006 and 02.8312.

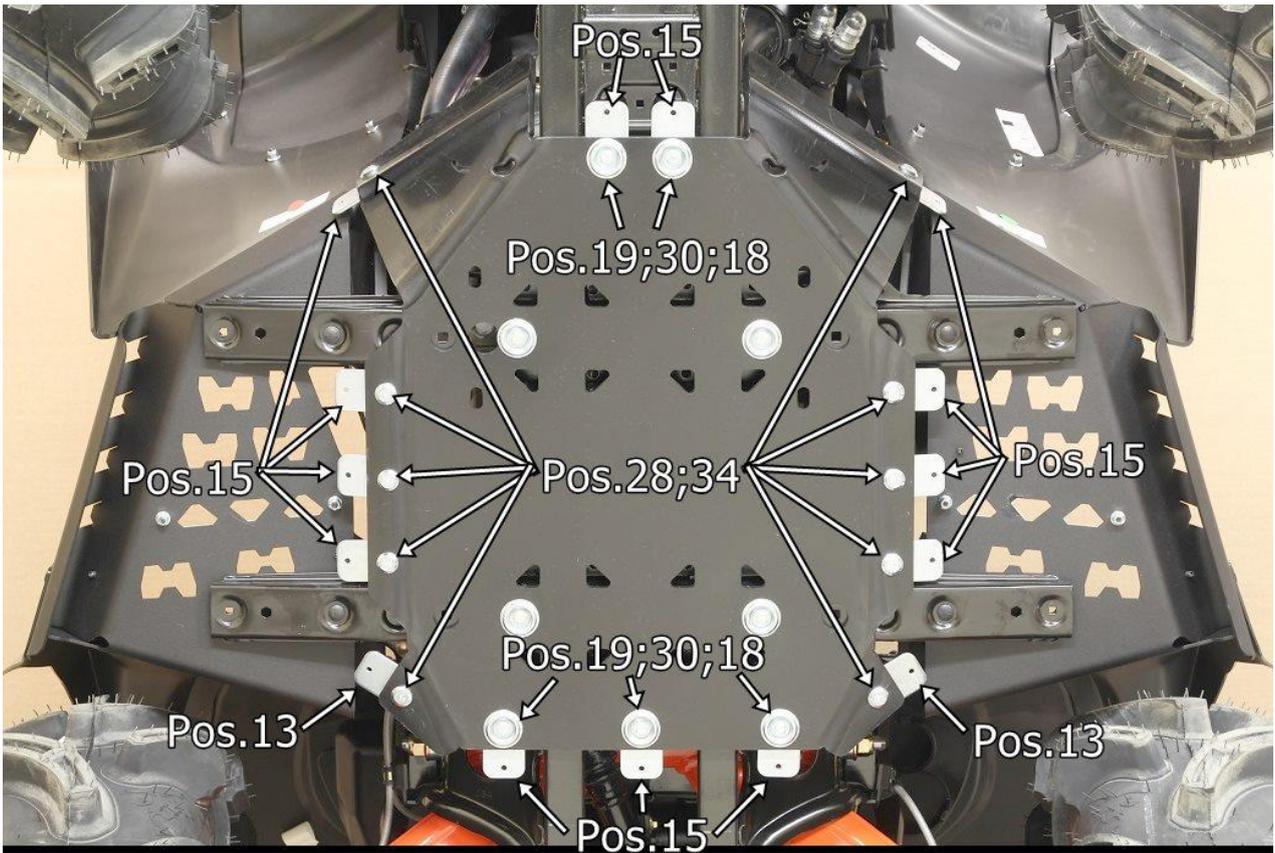


### Step 4

Install right side protection 02.18303 and left side protection 02.18304.

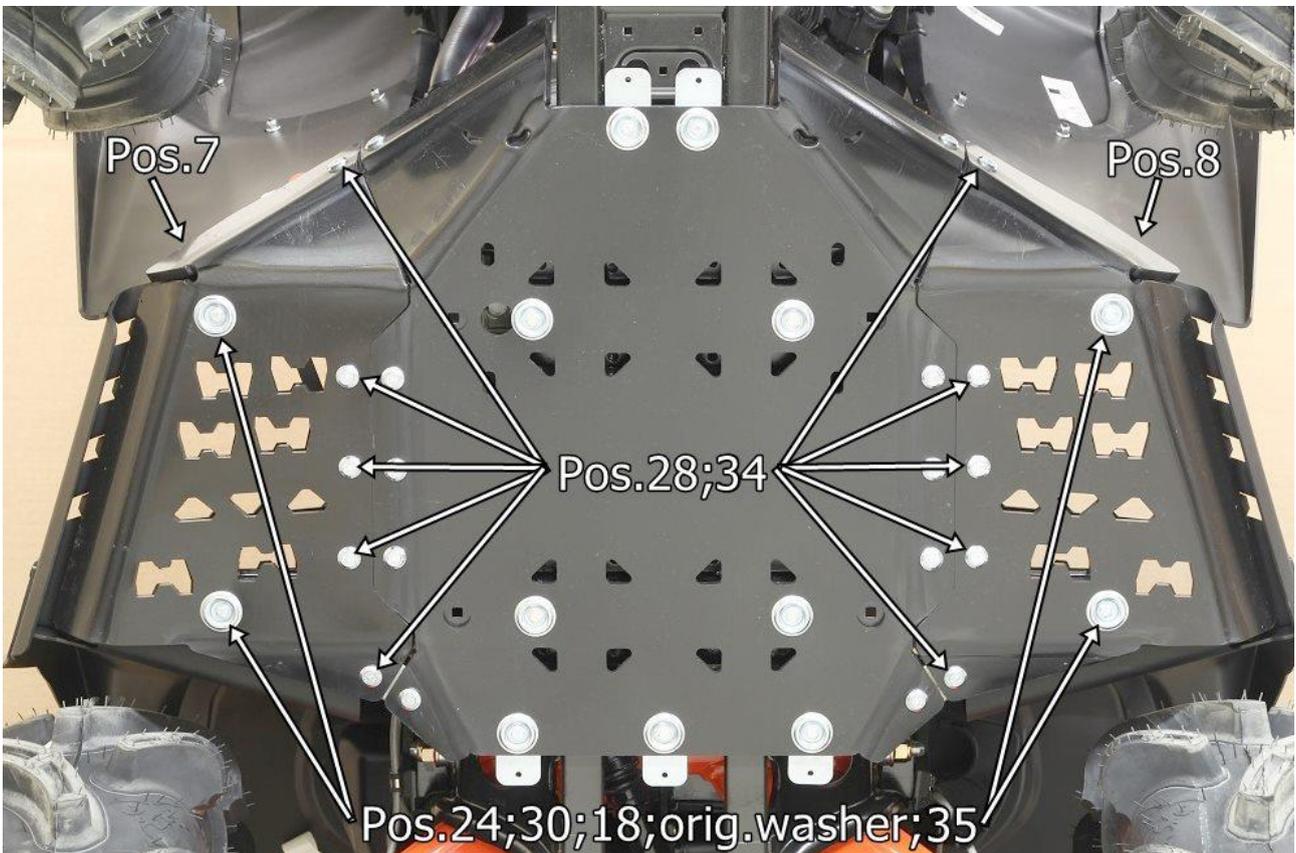



### Step 5

Install front protection 02.18301K. If you are using CanAm original mounting plate (P/N 715004338) cut front protection side bends (see Picture)!

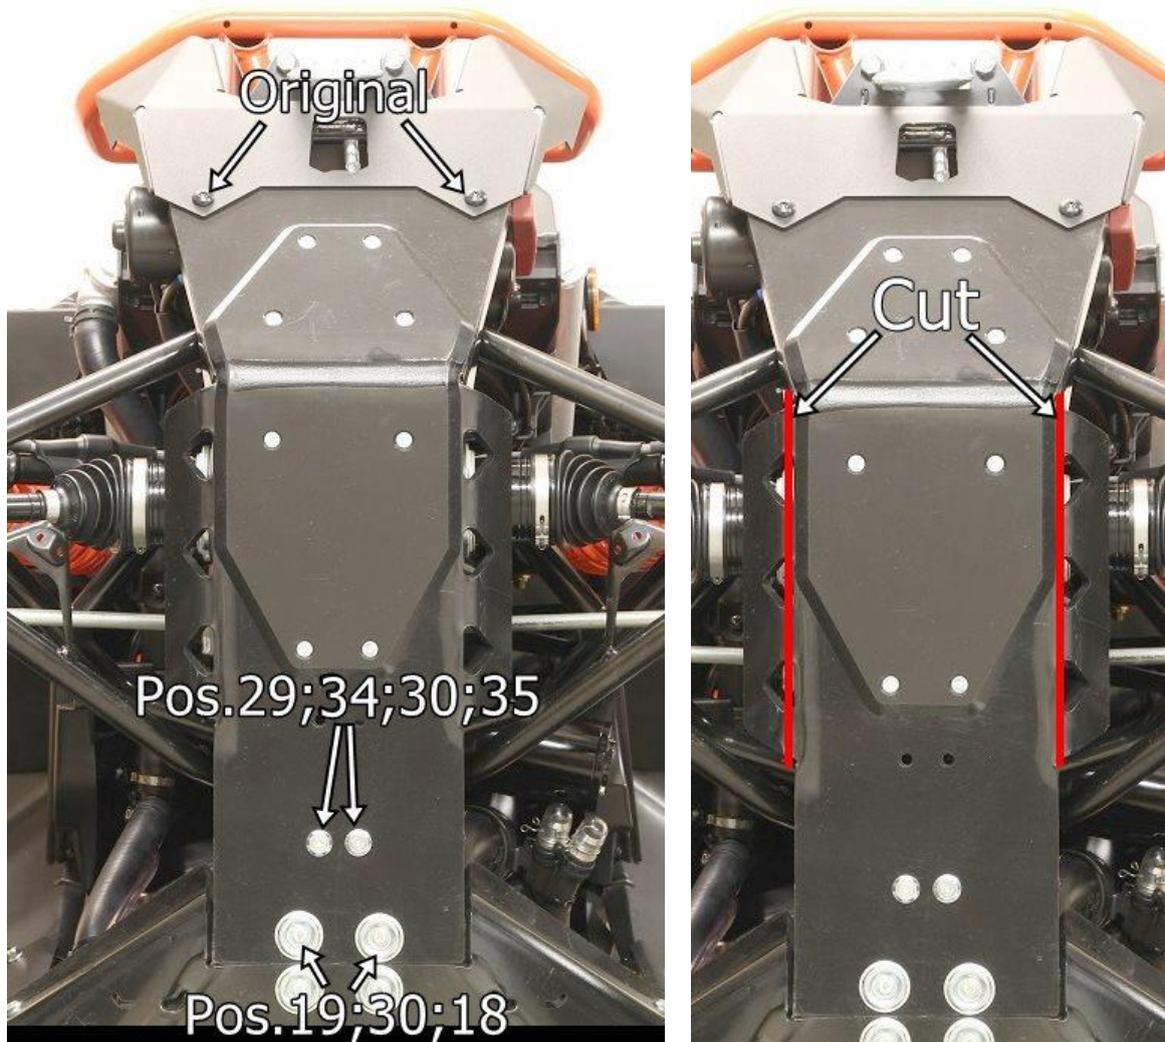


### Step 6

Install bracket, bush (Pos.17) goes between plate (Pos.10) and frame.

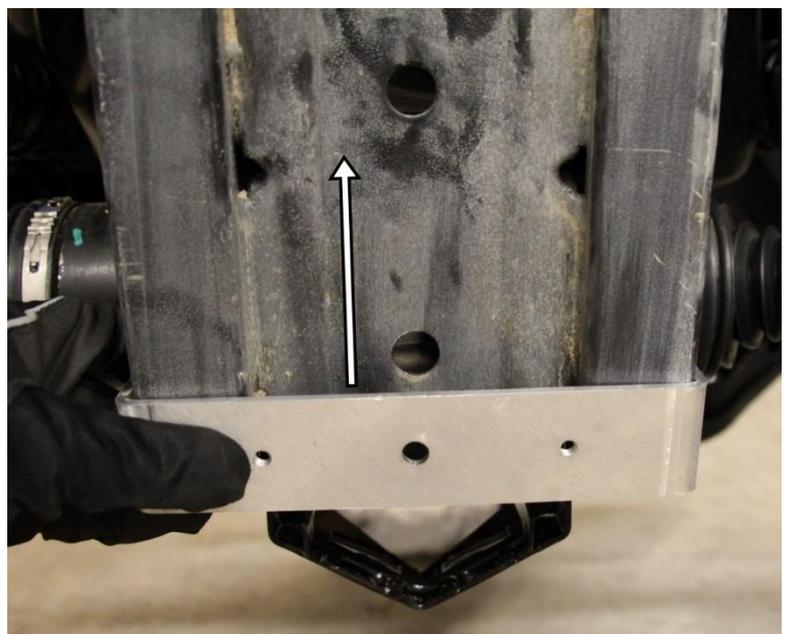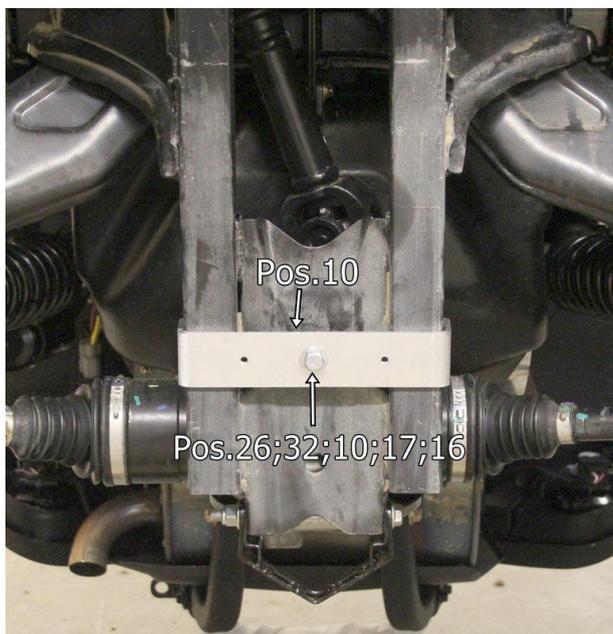


## Step 7

Install rear protection 02.20202.

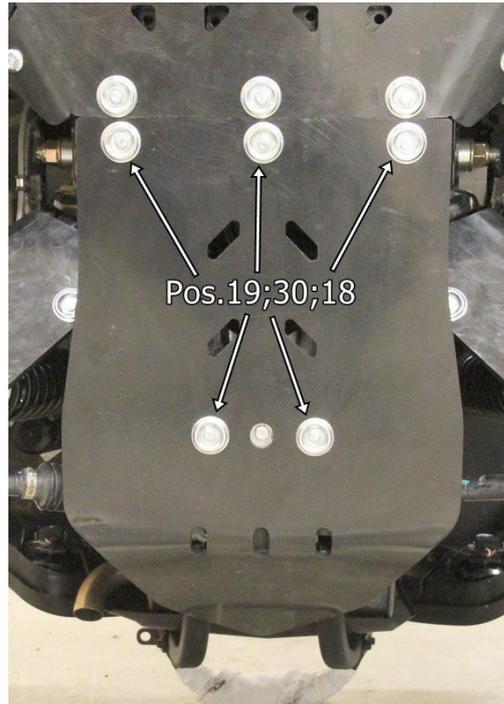

## Step 8

Install front A-arms protections 02.23201K and 02.23202K. Place the plate 02.2305 between a-arm protection and ATV a-arm frame.

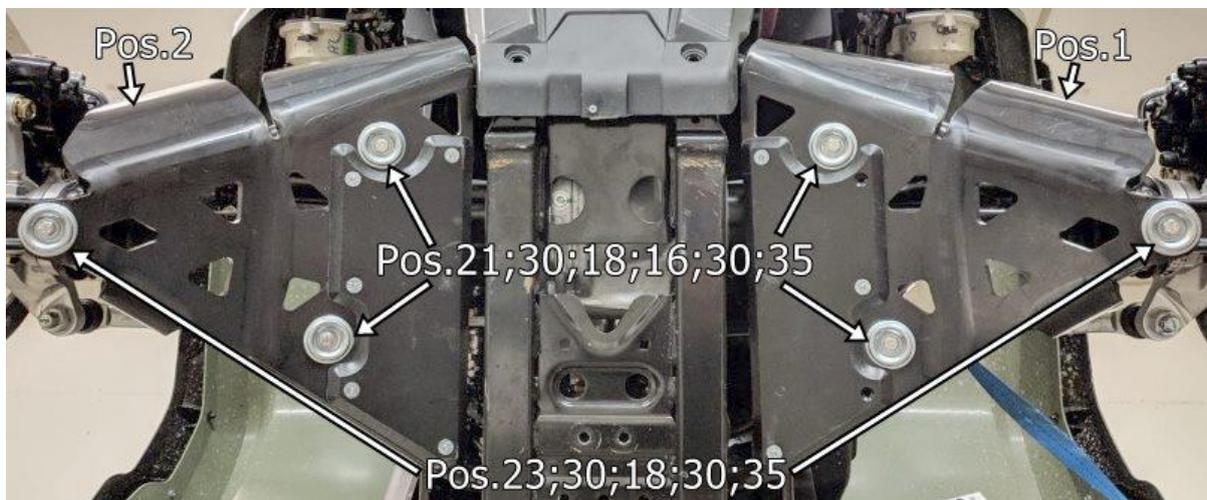





**NB!**

If you are using CanAm original snow plow adapter, then remove cover, indicated with arrow.




### Step 9

Install brackets 02.18804 and 02.18805.

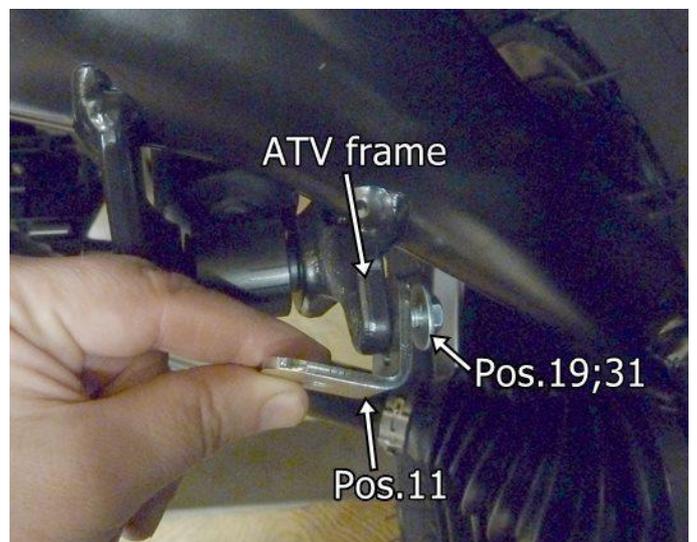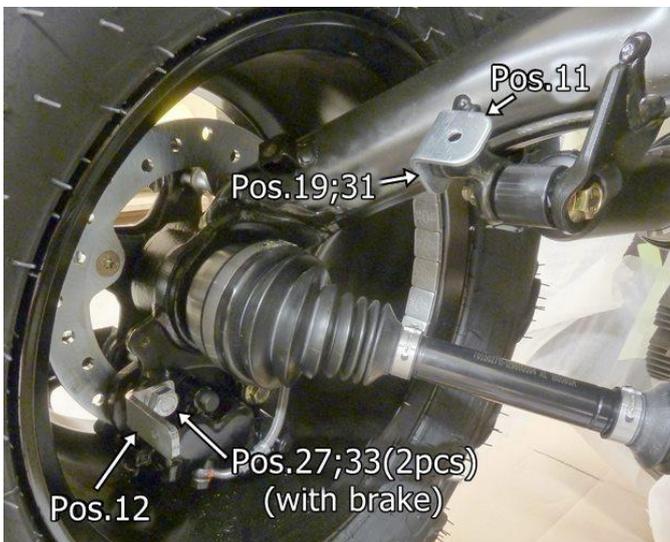

**WHEEL WITH BRAKE**

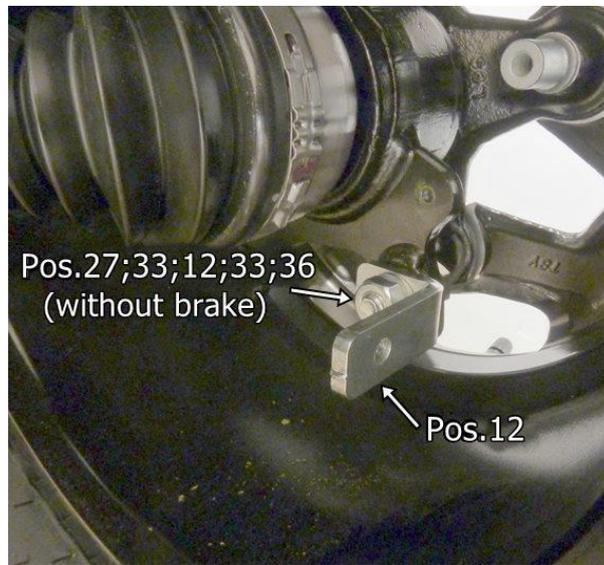

**WHEEL WITHOUT BRAKE**




**NB!**

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.27 and brake disc.**

**Step 10**

Install rear trailing arms protections 02.23203 and 02.23204. Use installation brackets 02.6408.

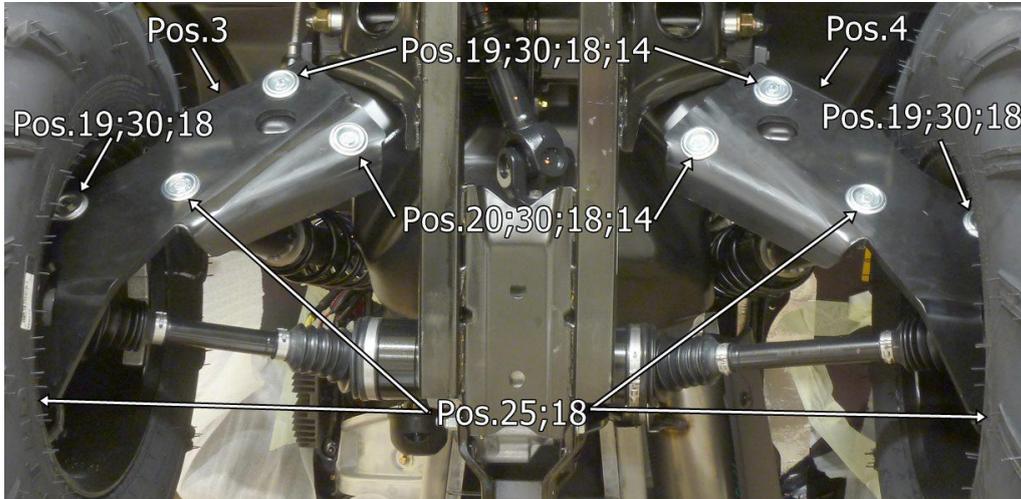





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

