

# IRON BALTIC


## PLASTIC SKID PLATE

# POLARIS

## RZR 900S / 1000S

Code 02.25000

Version 05102023

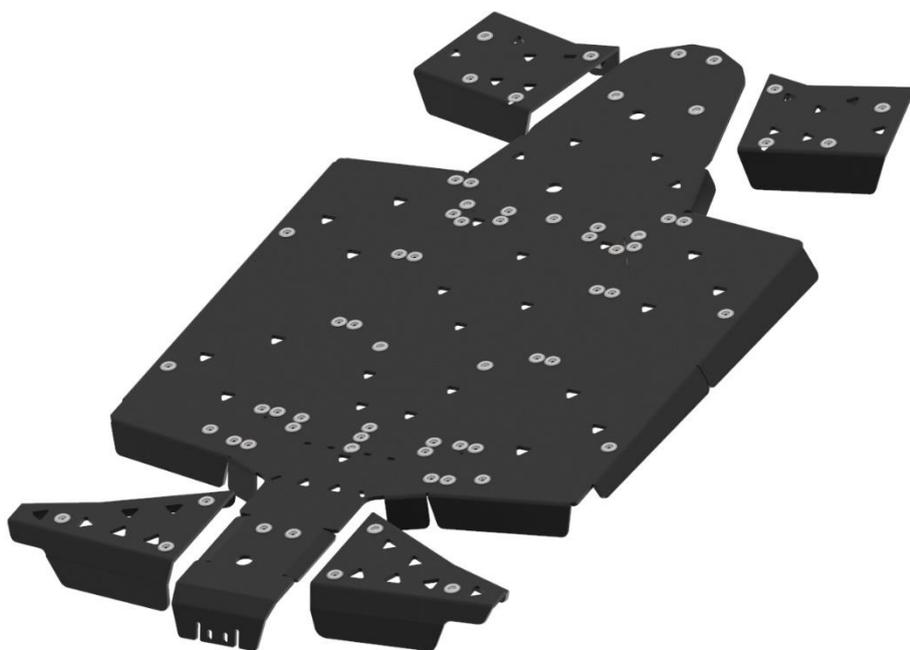

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/nCejshul](http://code.ironbaltic.com/u/nCejshul)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front part	02.25001	1
2	Middle part	02.25002	1
3	Rear part	02.25003	1
4	Right side protection	02.25004	1
5	Left side protection	02.25005	1
6	Distance plate	02.25006	6
7	Front left arm protection	02.20006	1
8	Front right arm protection	02.20007	1
9	Rear left arm protection	02.20008	1
10	Rear right arm protection	02.20009	1
11	Side installation plate	02.812	4
12	Rear part installation part	02.2304	2
13	Installation plate	02.2305	2
14	Installation bracket	02.4606	2
15	Plate	02.5006	17
16	Rear arm bracket	02.5709	2
17	Installation bracket	02.8210	4
18	Distance bush	05.7102	2
19	Dished washer	14.503	66
20	Bolt M6x16 DIN 933	OT.02.02.050	34
21	Bolt M6x20 DIN 933	OT.02.02.060	10
22	Bolt M6x25 DIN 933	OT.02.02.070	6
23	Bolt M6x35 DIN 933	OT.02.02.090	4
24	Bolt M6x60 DIN 933	OT.02.02.140	8
25	Bolt M8x25 DIN 933	OT.02.02.190	2
26	Bolt M8x35 DIN 933	OT.02.02.210	4
27	Bolt M6x60 DIN 7991	OT.02.04.090	2
28	Conical washer Ø6	14.502	2
29	Washer Ø6/15 SFS 3738	OT.04.03.020	62
30	Washer Ø6/18 DIN 9021	OT.04.02.020	8
31	Washer Ø8/20 SFS 3738	OT.04.03.030	6
32	Nyloc nut M6 DIN985	OT.03.02.030	8
33	Nyloc nut M8 DIN 985	OT.03.02.040	4

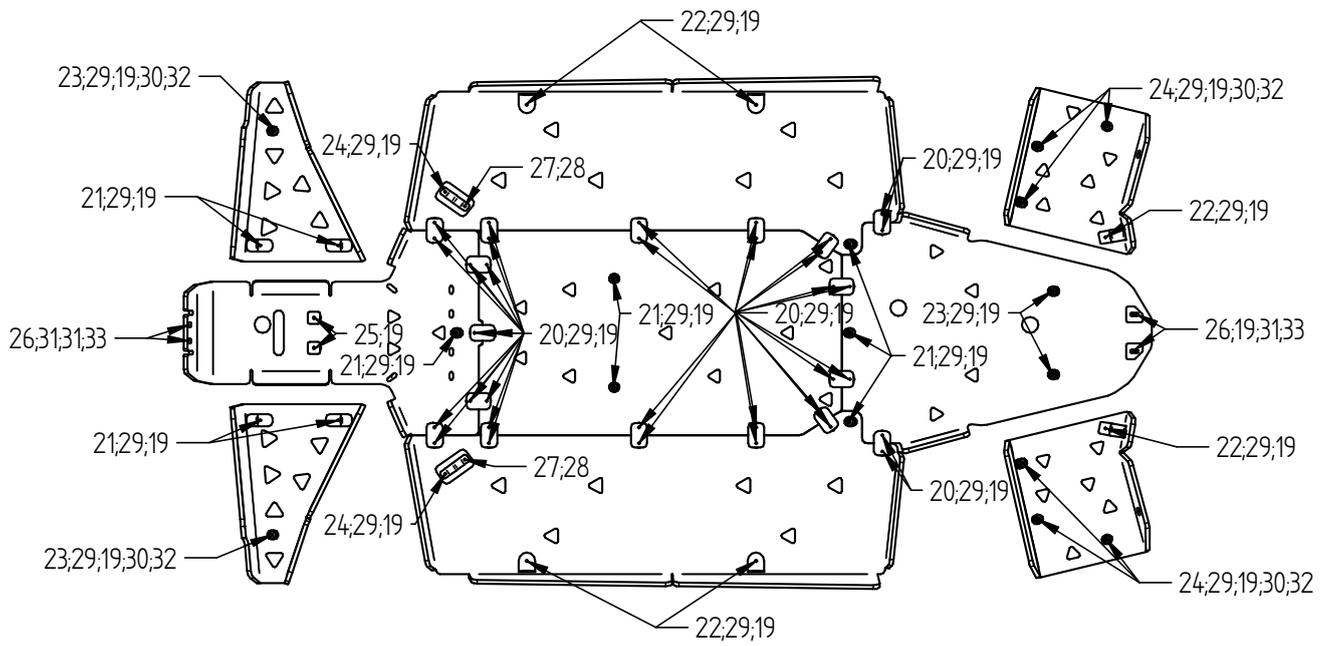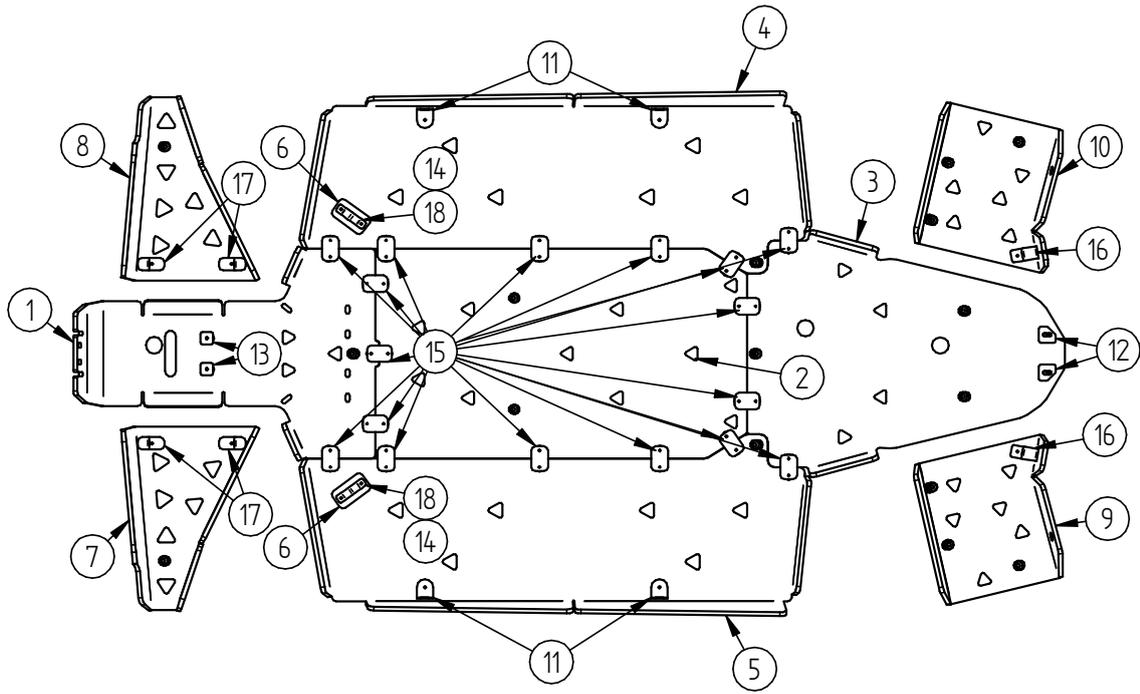

# FITTING INSTRUCTIONS


## Step 1

Remove all standard plastic covers. Do not remove original front half-shaft rubber boot plastic protectors. We recommend removing original rear a-arm plastic protectors but not mandatory!



## Step 2

Install front arm protections 02.20006 and 02.20007.

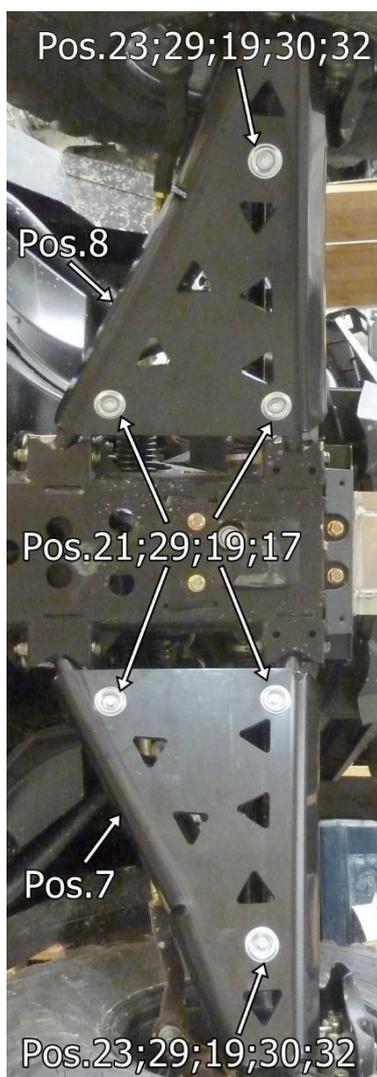


### Step 3

Install rear arm protections 02.20008 and 02.20009.




### Step 4

Install front protection 02.25001.

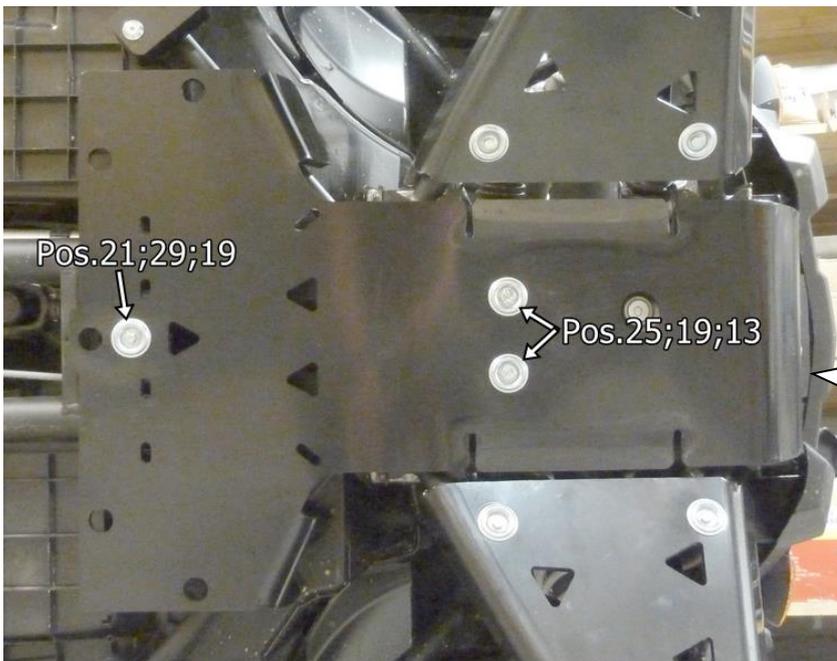


### Step 5

Install plates 02.5006 to front protection.

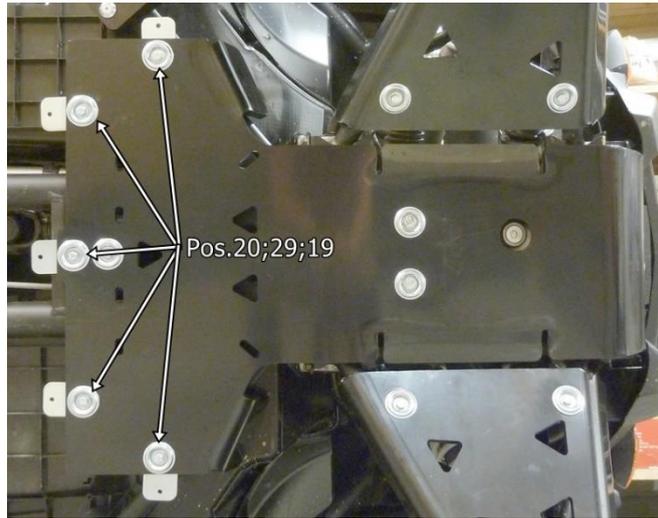



### Step 6

Install middle part 02.25002 and plates 02.5006 to middle part.

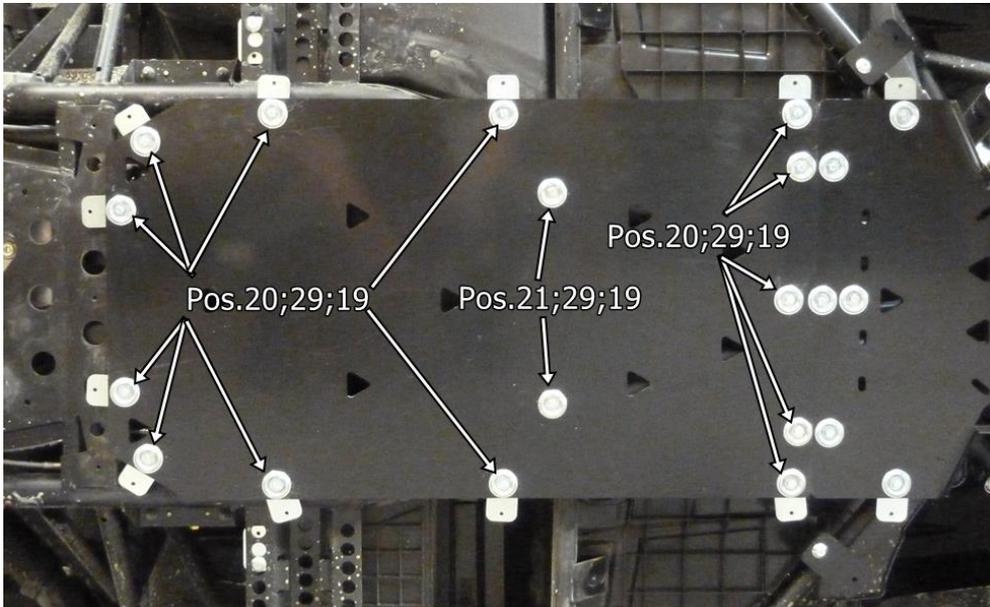




### Step 7

Install rear part 02.25003.

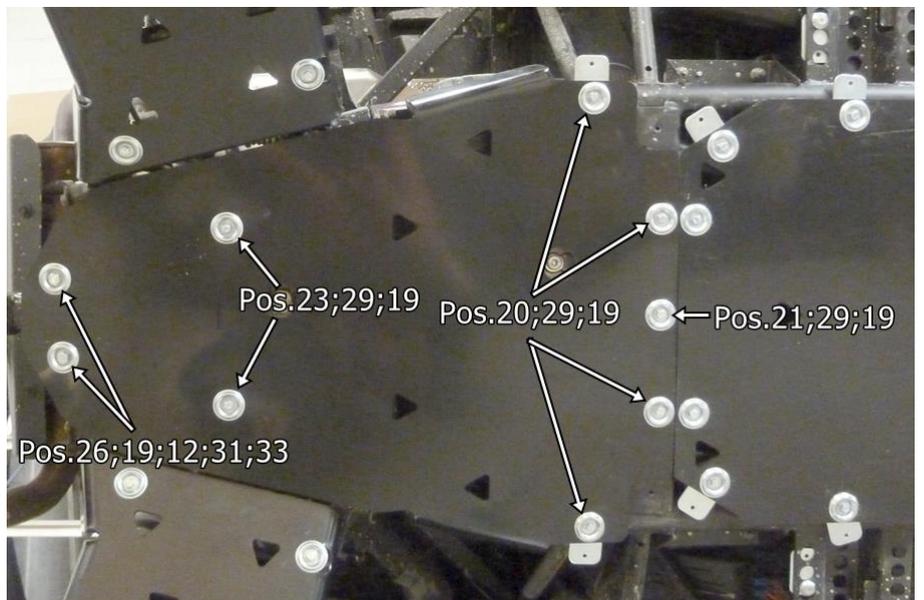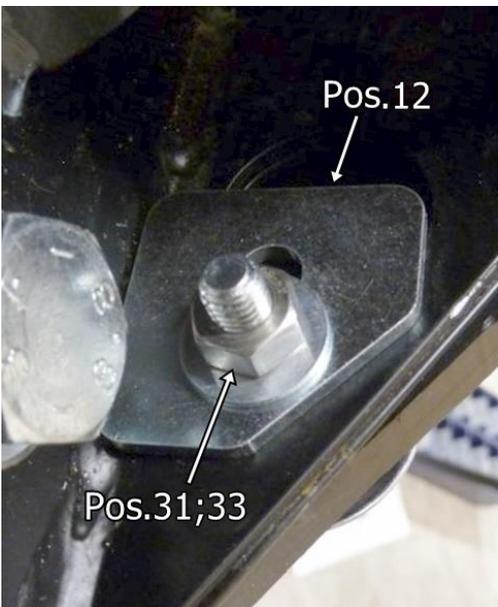

## Step 8

Install distance plates 02.25006, brackets 02.812 and side protections 02.25004 and 02.25005.

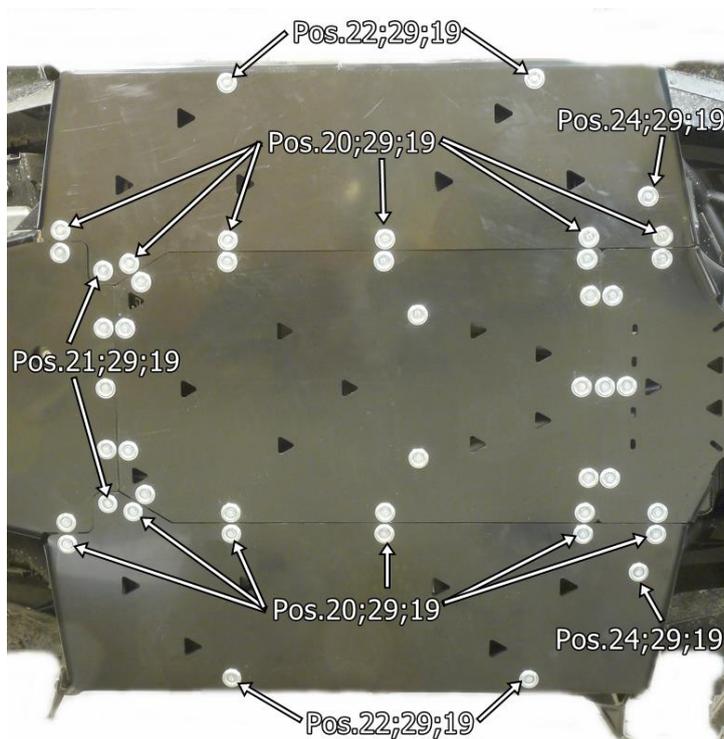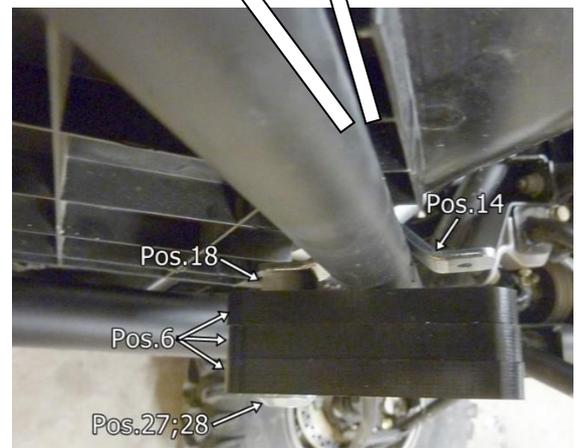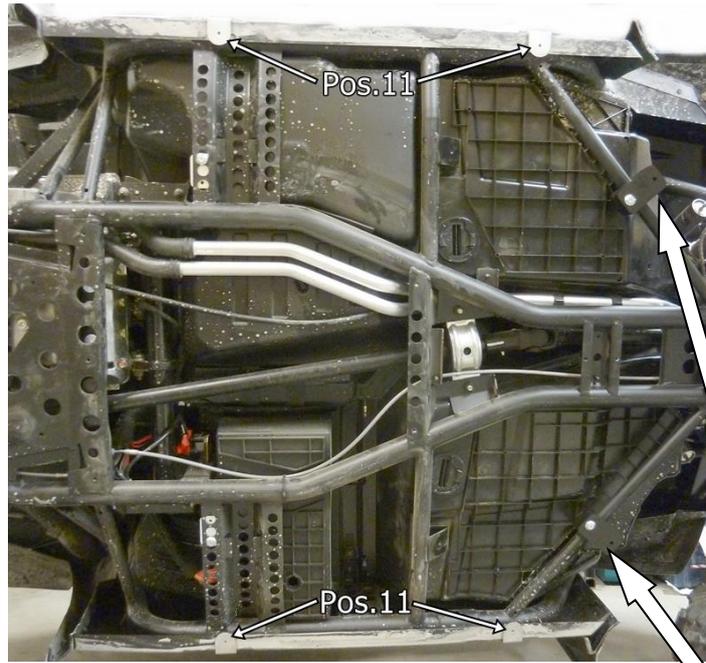

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

