

IRON BALTIC

ALUMINIUM SKID PLATE

SEGWAY Snarler AT6 L

Code 02.27500

Version 10112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/Rj5yjAgJ

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.27501K	1
2	Front protection reinforcement	02.27502	1
3	Front protection 2	02.27503K	1
4	Middle protection	02.27504K	1
5	Oil filter plate	02.27505K	1
6	Rear protection	02.27506K	1
7	Front right control arm protection	02.27507	1
8	Front left control arm protection	02.27508	1
9	Rear right control arm protection	02.27509	1
10	Rear left control arm protection	02.27510	1
11	Front protection (2023+)	02.27511K	1
12	Front protection reinforcement (2023+)	02.27512	1
13	Connecting plate	02.5006	4
14	Conical washer 6	14.502	6
15	Dished washer	14.503	44
16	Bolt M6x14 DIN933	OT.02.02.040	8
17	Bolt M6x20 DIN933	OT.02.02.060	14
18	Bolt M6x25 DIN933	OT.02.02.070	8
19	Bolt M6x30 DIN933	OT.02.02.080	10
20	Bolt M6x40 DIN933	OT.02.02.100	4
21	Bolt M8x40 DIN933	OT.02.02.220	2
22	Bolt M6x20 DIN7991	OT.02.04.030	6
23	Washer Ø6/15 SFS3738	OT.04.03.020	50
24	Washer Ø8/20 SFS3738	OT.04.03.030	2
25	Nyloc nut M6 DIN985	OT.03.02.030	6

TOOLS REQUIRED FOR INSTALLATION:





- Spanner 10mm
- Spanner 13mm
- Socket wrench 10mm
- Allen wrench 4mm



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

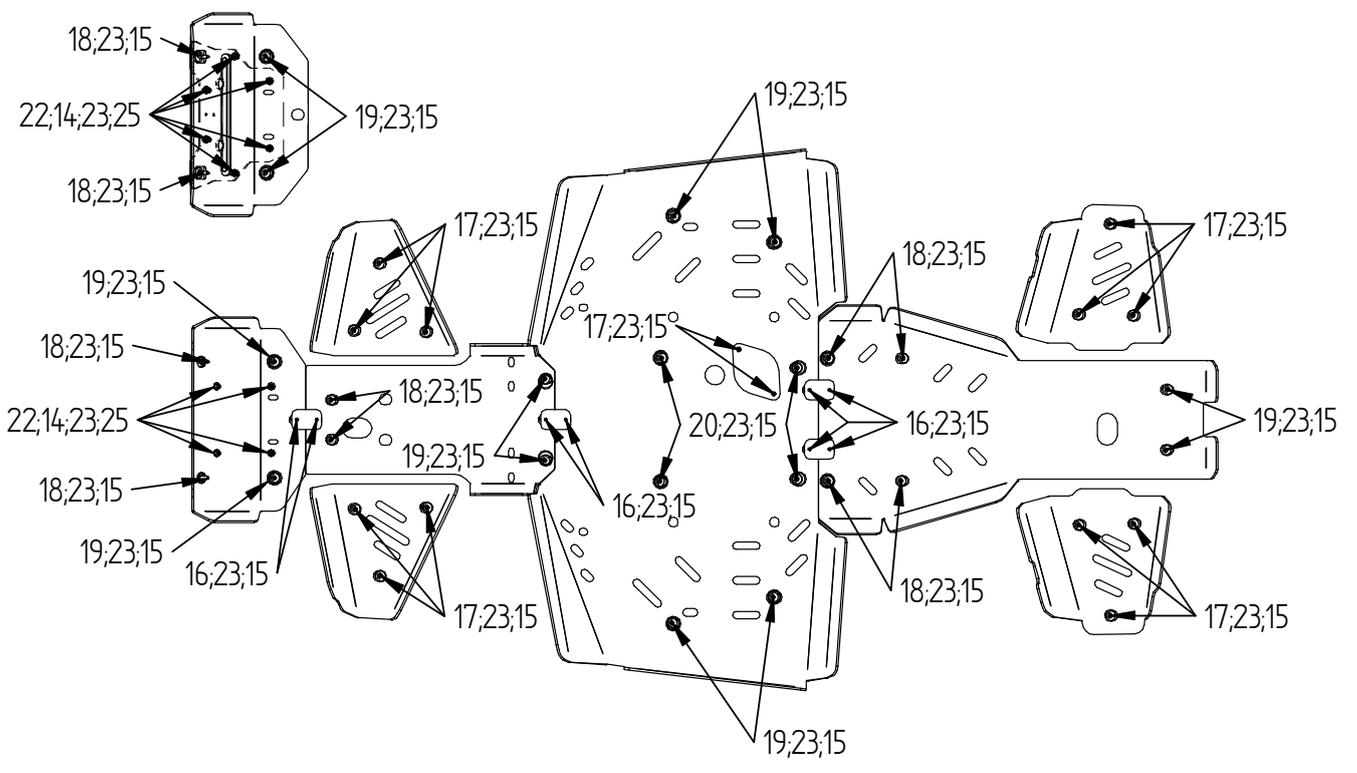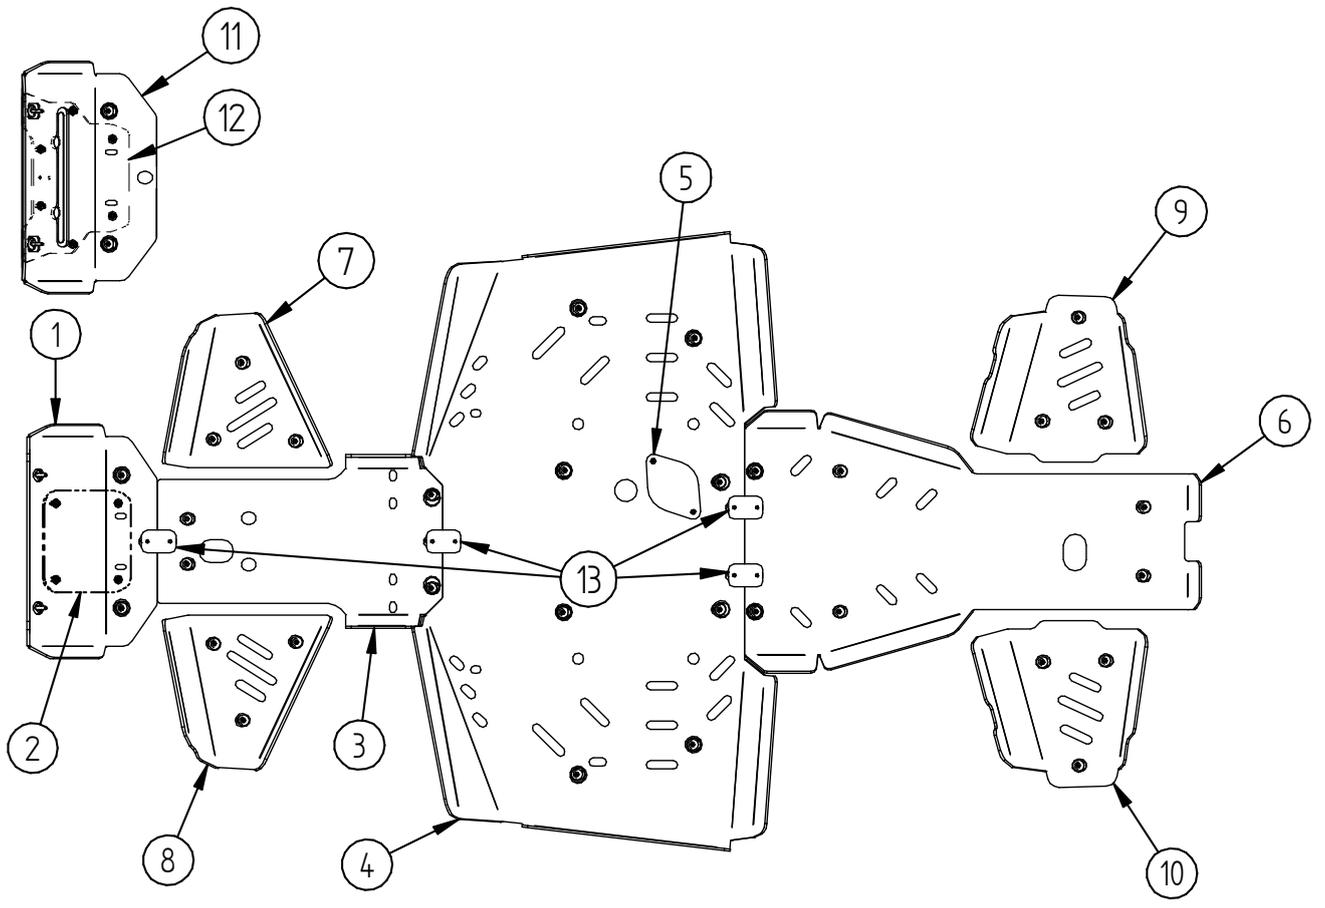


FITTING INSTRUCTIONS

Step 1

Remove standard skid plate and control arm protections. On newer models, the winch is attached to the tube frame. In this case, remove two lower original winch fixing bolts with washers and use M8x40 bolts (Pos. 21) and Ø8 washers (Pos. 24) instead. Another front part must be installed on newer models (see step 5 and step 6).




2023+ MODEL:

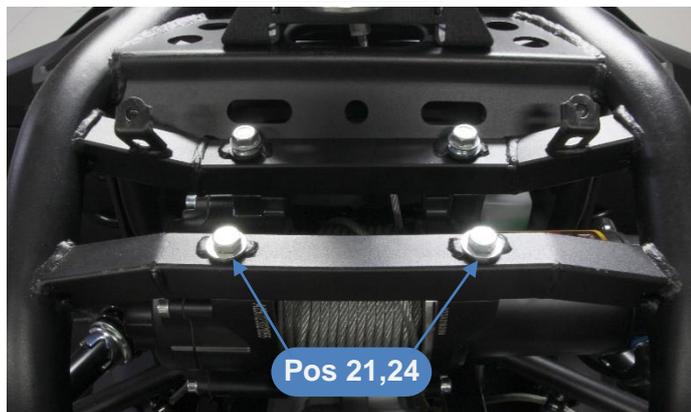


Step 2

Install oil filter plate 02.27505K (Pos. 5) to the middle protection

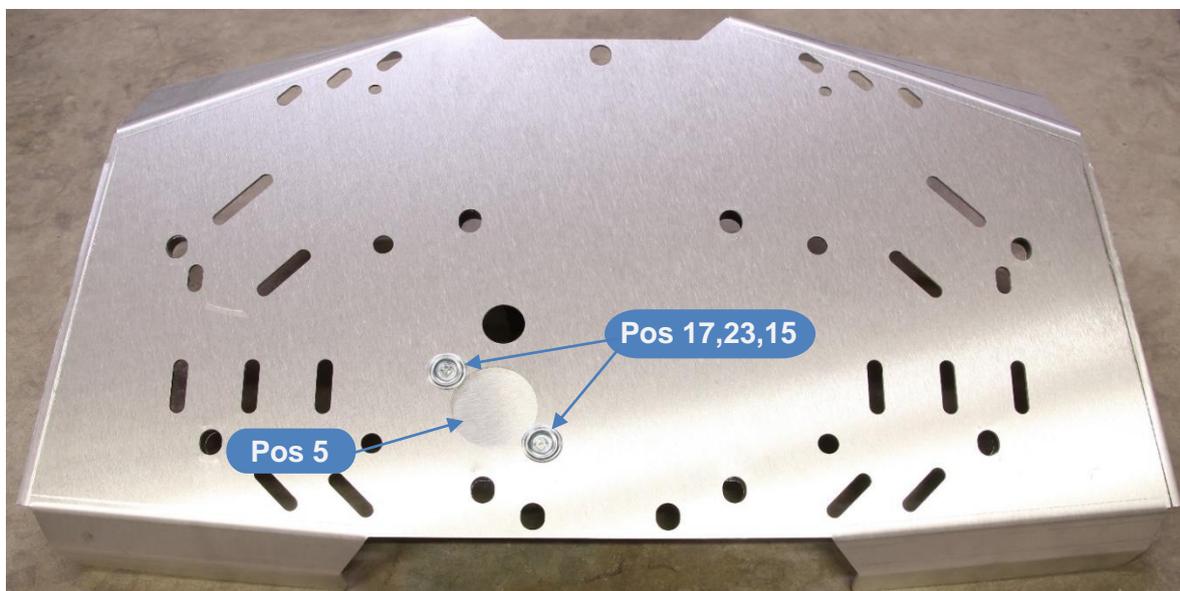


Step 3

Install middle protection 02.27504K (Pos. 4) and connecting plates 02.5006 (Pos. 13)

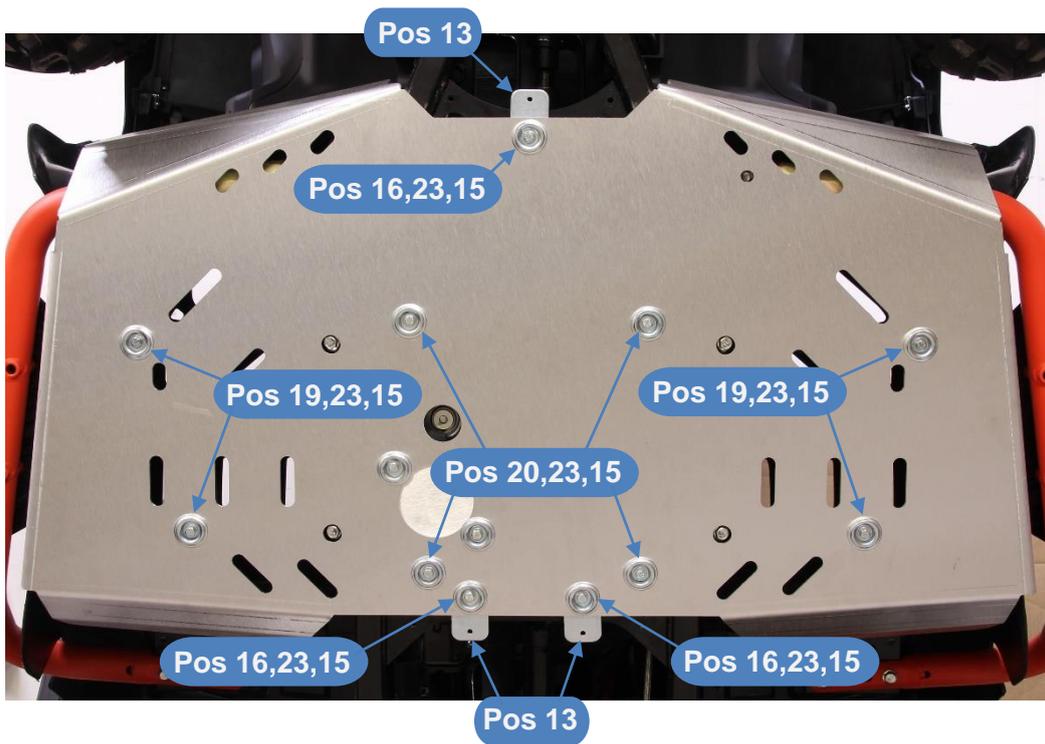

Step 4


Install front protection 2 (Pos.3) 02.27503K and connecting plate 02.5006 (Pos. 13).

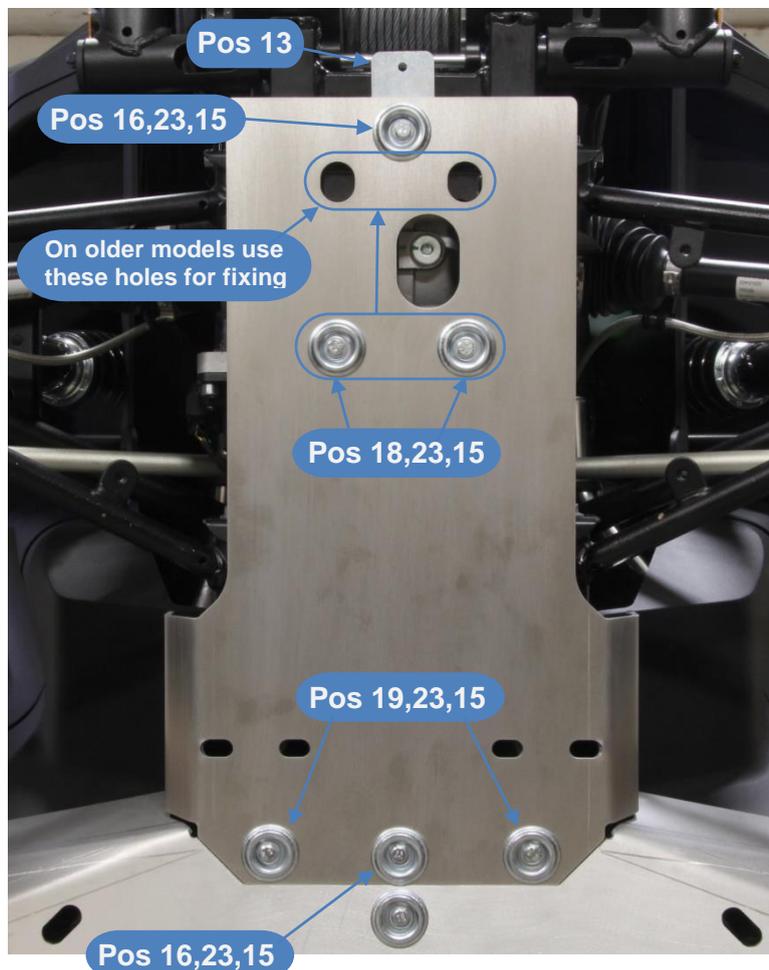

Step 5


Install front protection reinforcement 02.27502 (Pos. 2) to front protection 02.27501K (Pos. 1). On newer models install front protection reinforcement 02.27512 (Pos.12) to front protection 02.27511K (Pos. 11).

2023+ MODEL:

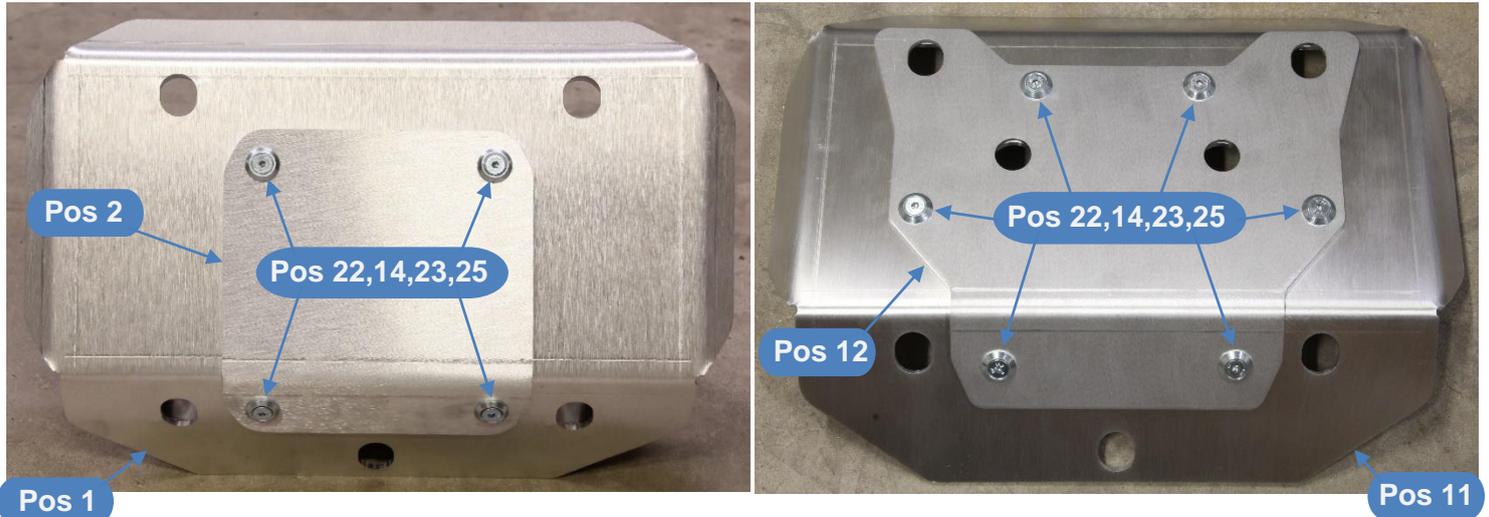


Step 6

Install front protection.

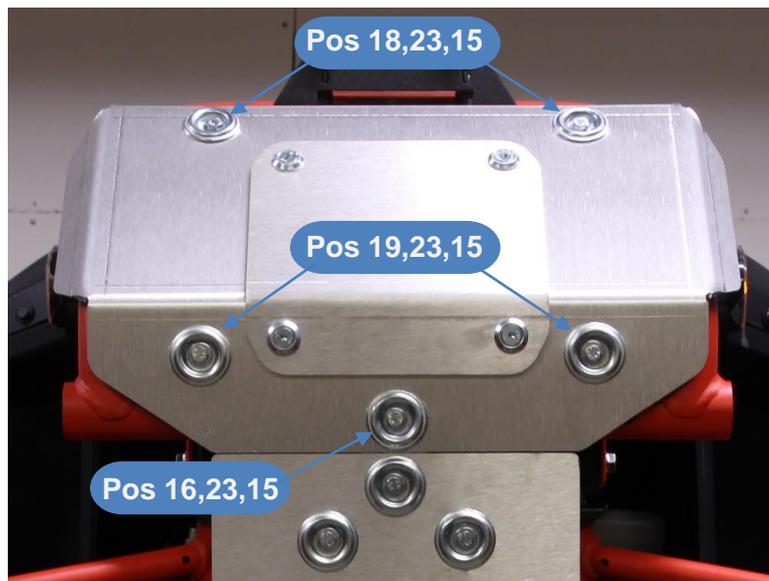


2023+ MODEL:

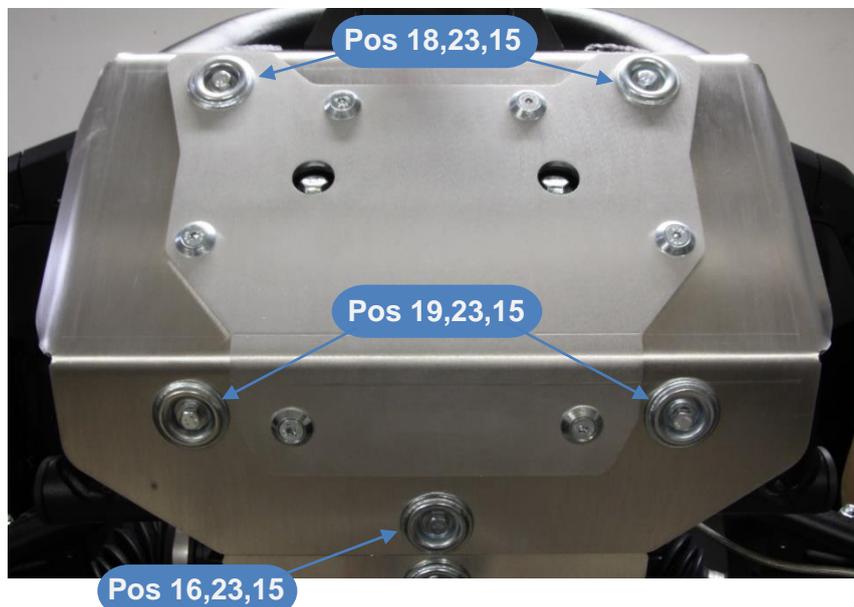

Step 7

Install rear protection 02.27506K (Pos. 6).

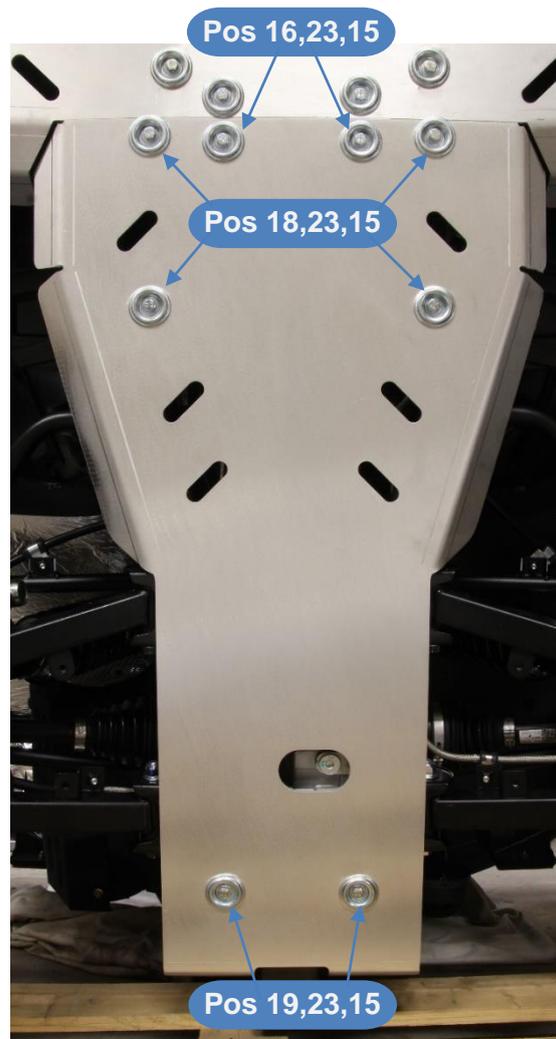


Step 8

Install front control arm protections 02.27507 (Pos. 7) and 02.27508 (Pos. 8).



Step 9

Install rear control arm protections 02.27509 (Pos. 9) and 02.27510 (Pos. 10).

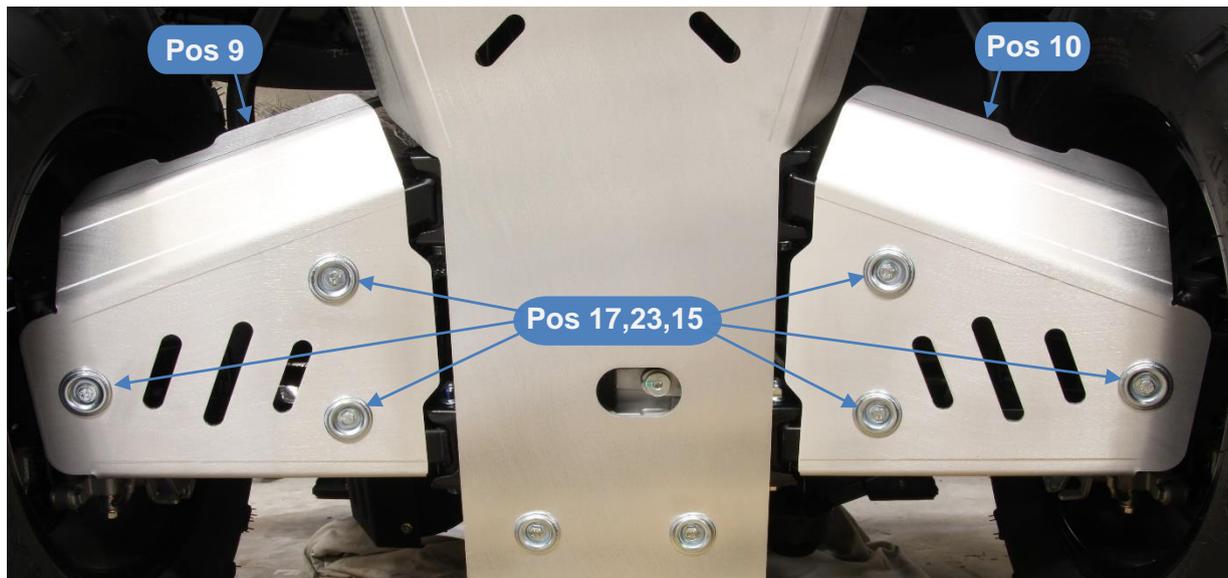

Step 10

To remove the oil filter cover plate, remove the bolt indicated with arrow and loosen the other bolt. Slide the plate away.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

