

IRON BALTIC


PLASTIC SKID PLATE

SEGWAY

Snarler AT6 L

Code 02.27600

Version 09102023

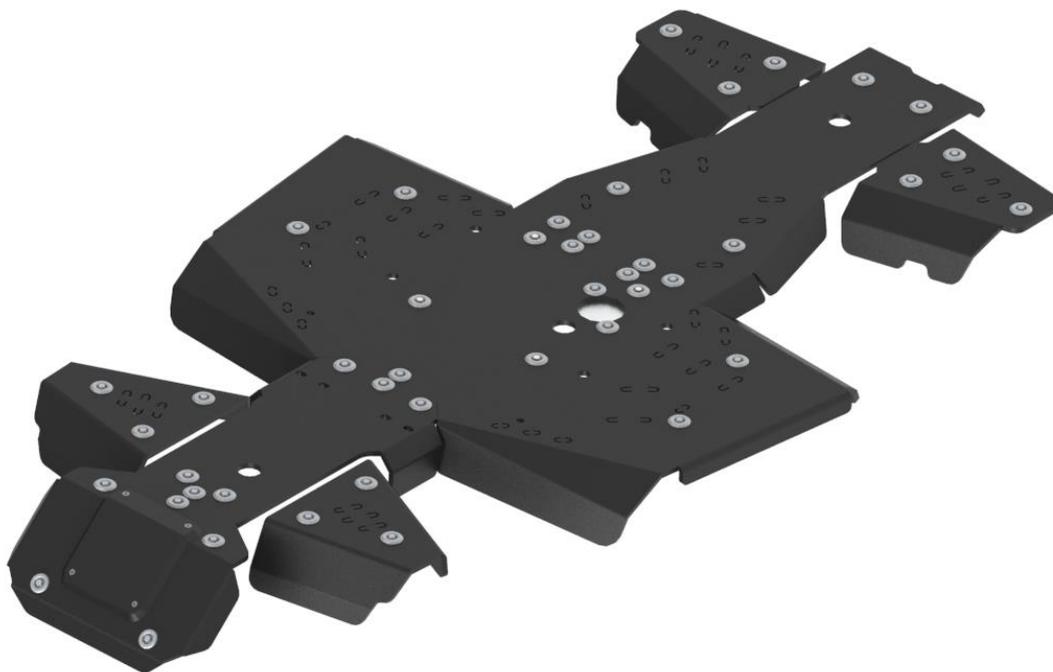

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/R9vvhby2


SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection with reinforcement	02.27602K	1
2	Front protection 2	02.27603K	1
3	Middle protection	02.27604K	1
4	Oil filter plate	02.27505K	1
5	Rear protection	02.27606K	1
6	Front right control arm protection	02.27607	1
7	Front left control arm protection	02.27608	1
8	Rear right control arm protection	02.27609	1
9	Rear left control arm protection	02.27610	1
10	Distance plate	02.27611	2
11	Connecting plate	02.5006	4
12	Dished washer	14.503	44
13	Bolt M6x16 DIN933	OT.02.02.050	8
14	Bolt M6x25 DIN933	OT.02.02.070	14
15	Bolt M6x30 DIN933	OT.02.02.080	8
16	Bolt M6x35 DIN933	OT.02.02.090	10
17	Bolt M6x45 DIN933	OT.02.02.110	4
18	Washer Ø6/15 SFS3738	OT.04.03.020	44

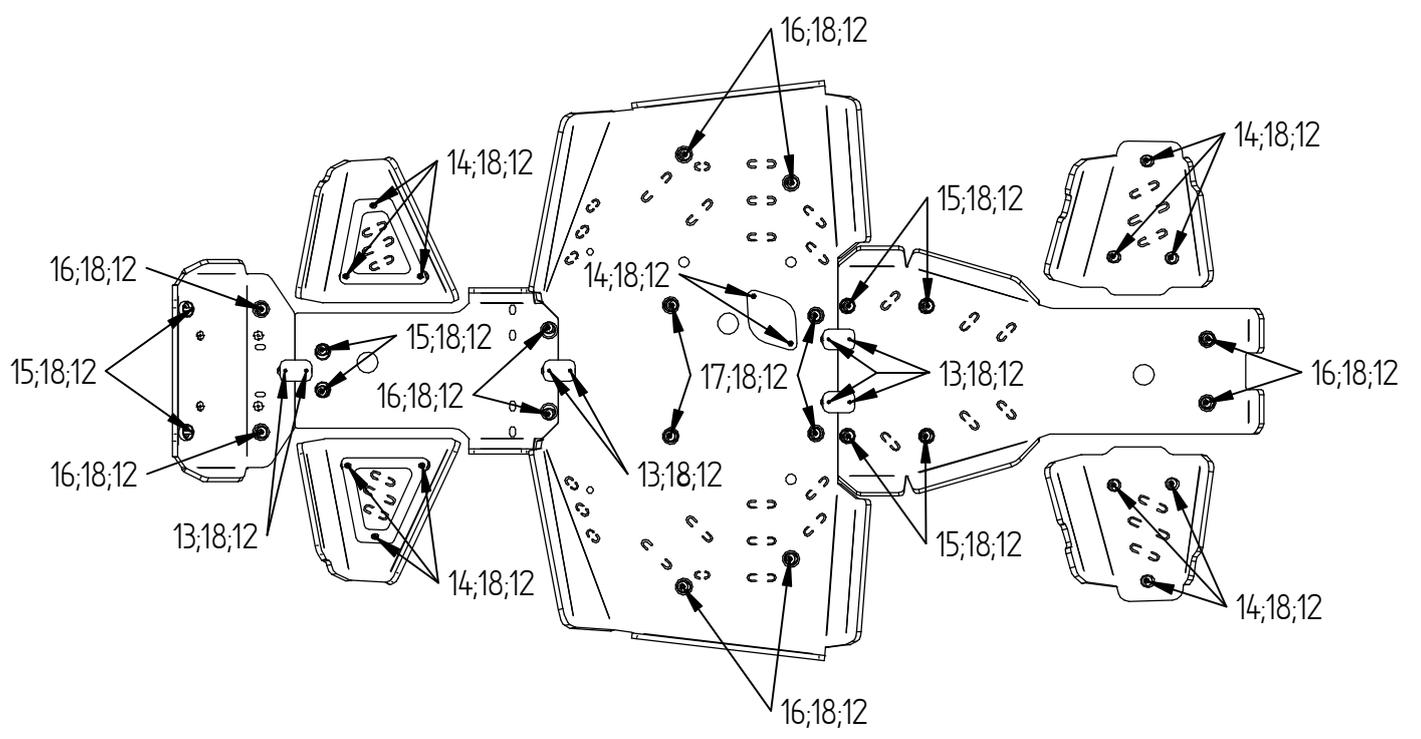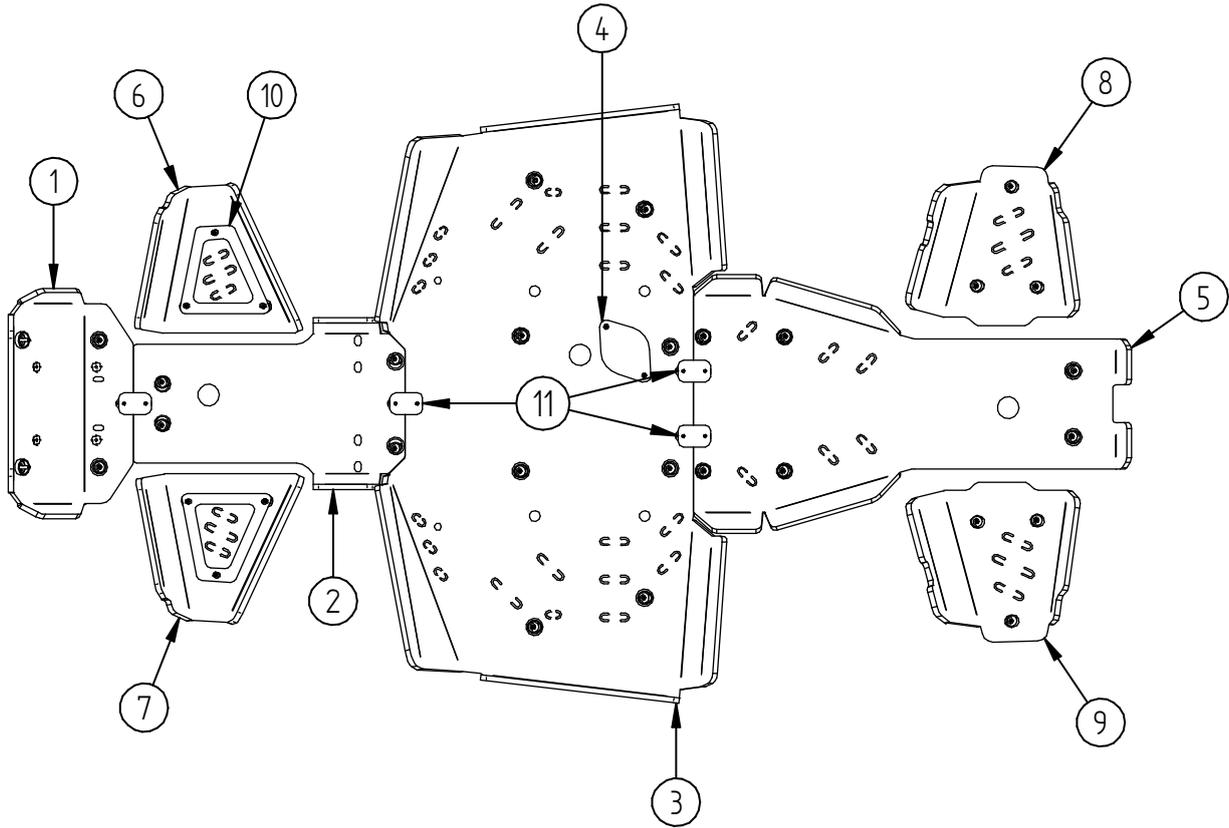


FITTING INSTRUCTIONS

Step 1 Remove standard skid plate and control arm protections.

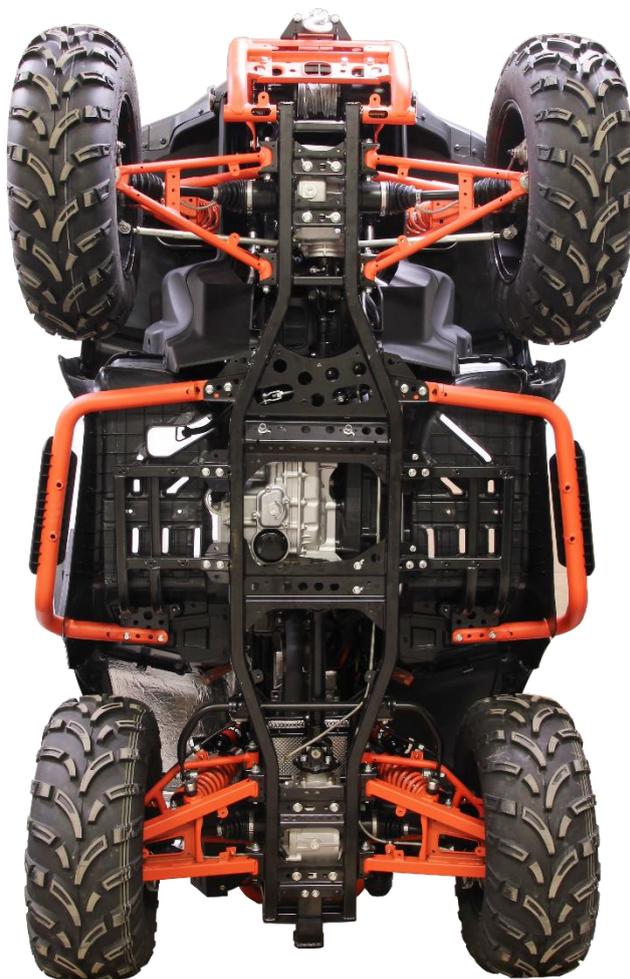


Step 2 Install oil filter plate 02.27505K (Pos. 4) to the middle protection.

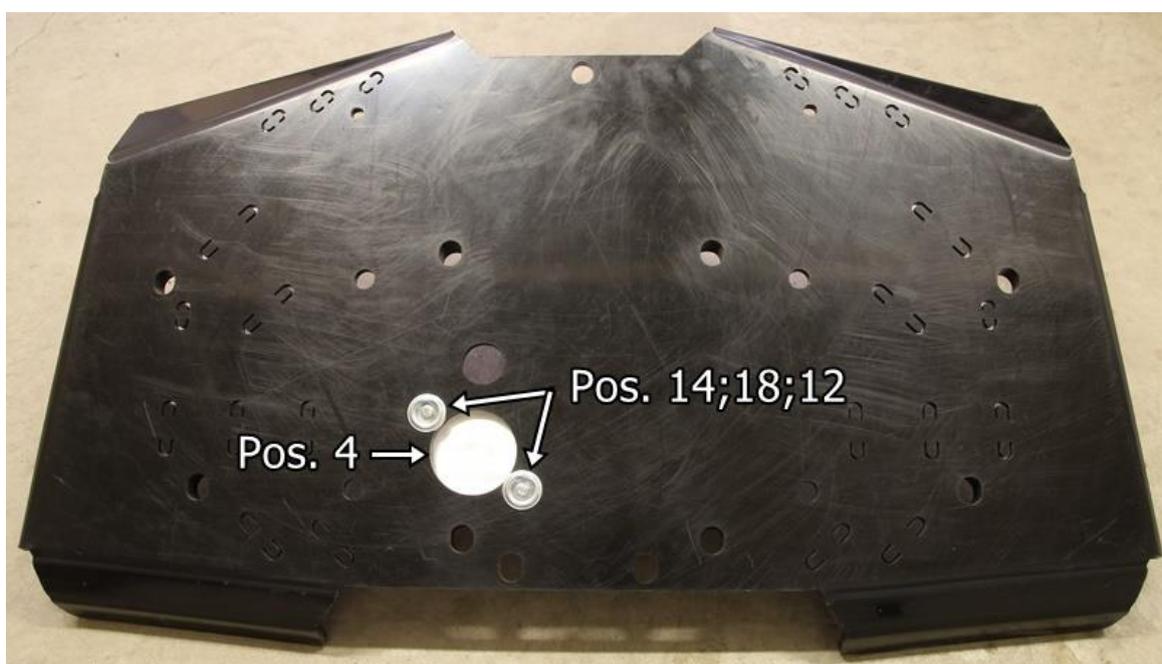


Step 3

Install middle protection 02.27604K (Pos. 3).

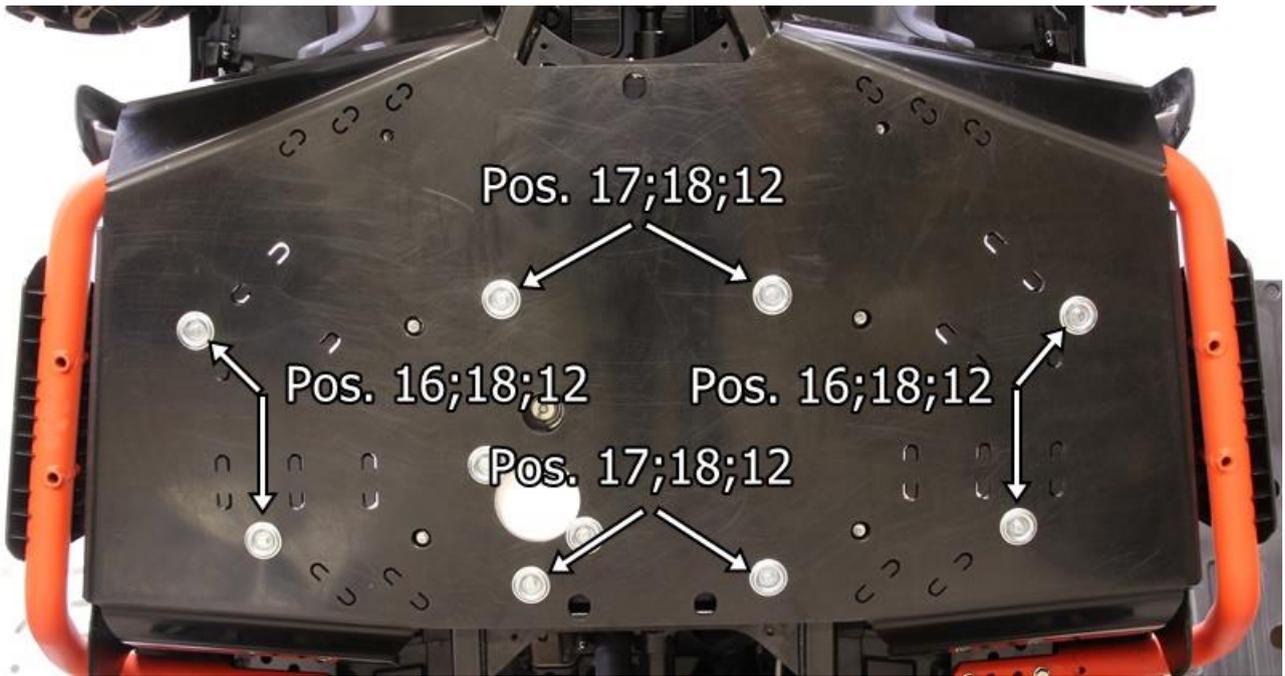


Step 4

Install connecting plates 02.5006 (Pos. 11) to the middle protection.

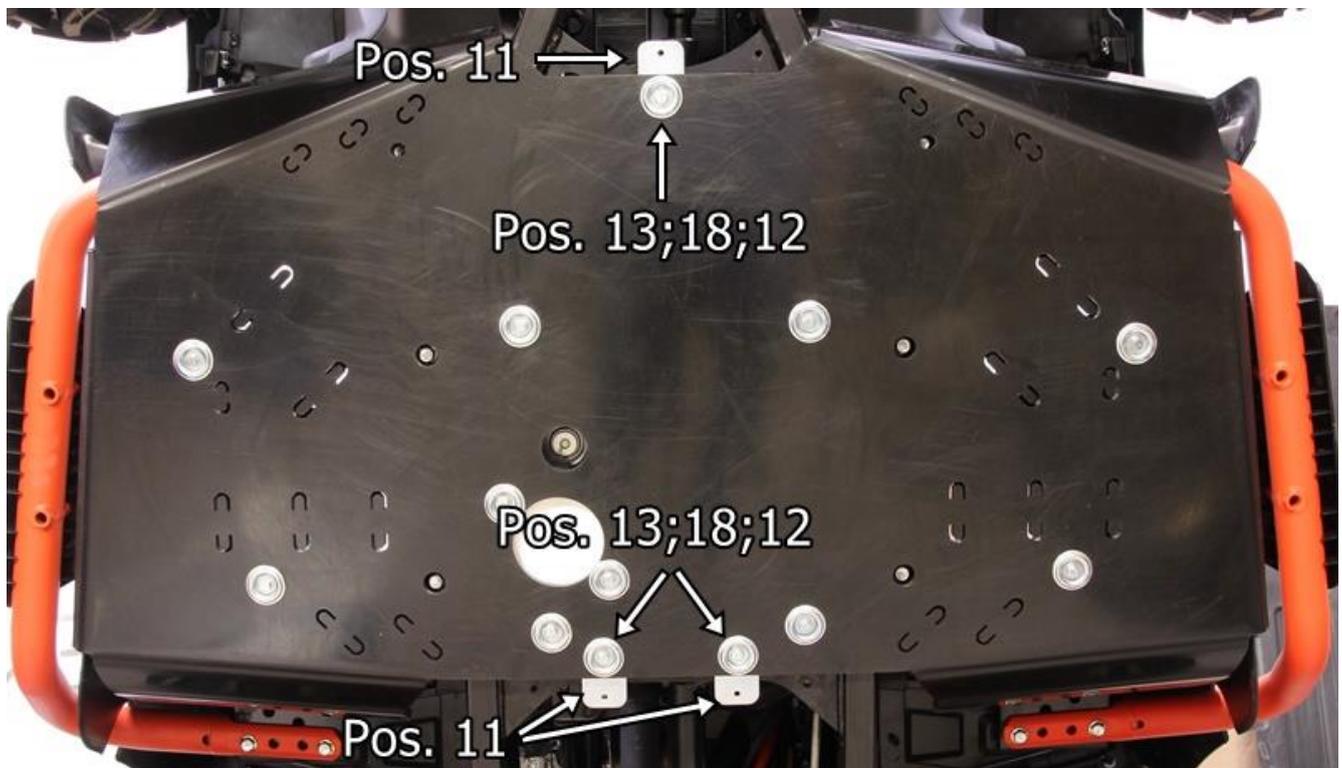


Step 5

Install front protection 2 (Pos.2) 02.27603K and connecting plate 02.5006 (Pos.11).

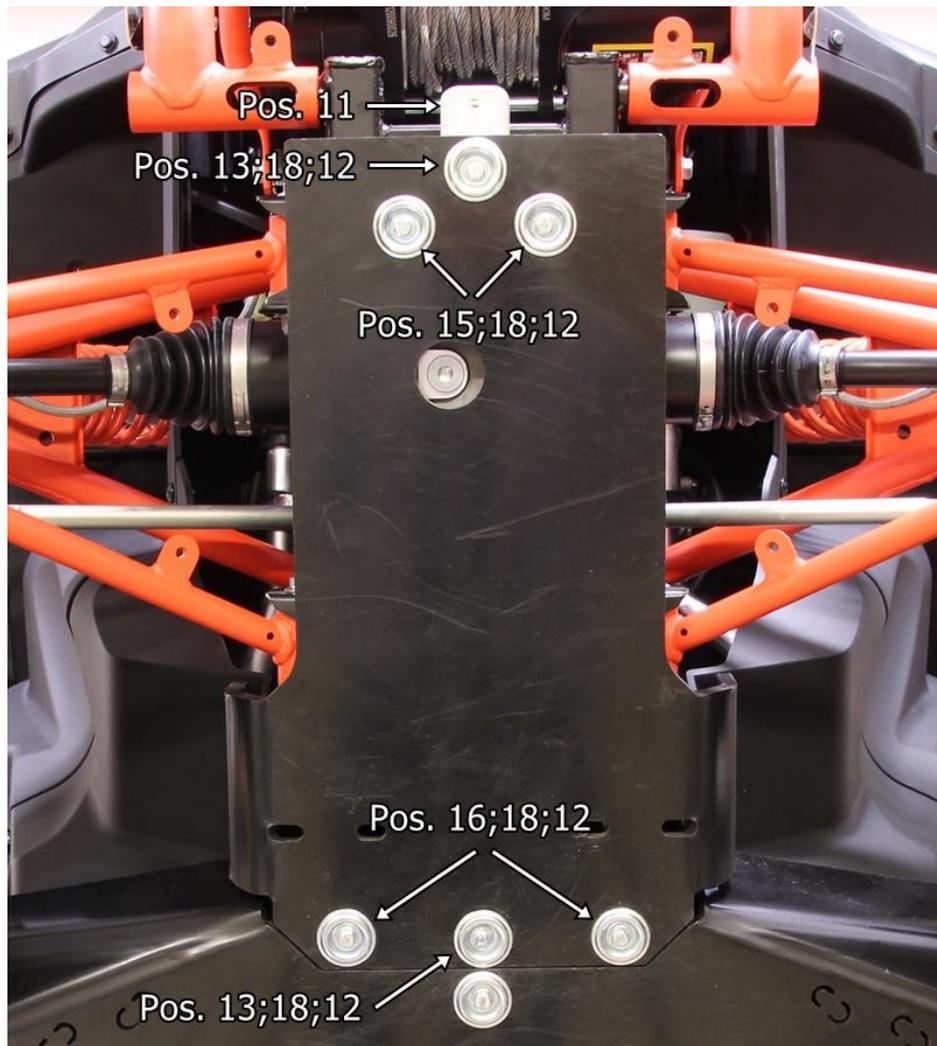

Step 6

Install front protection 02.27602K (Pos. 1).

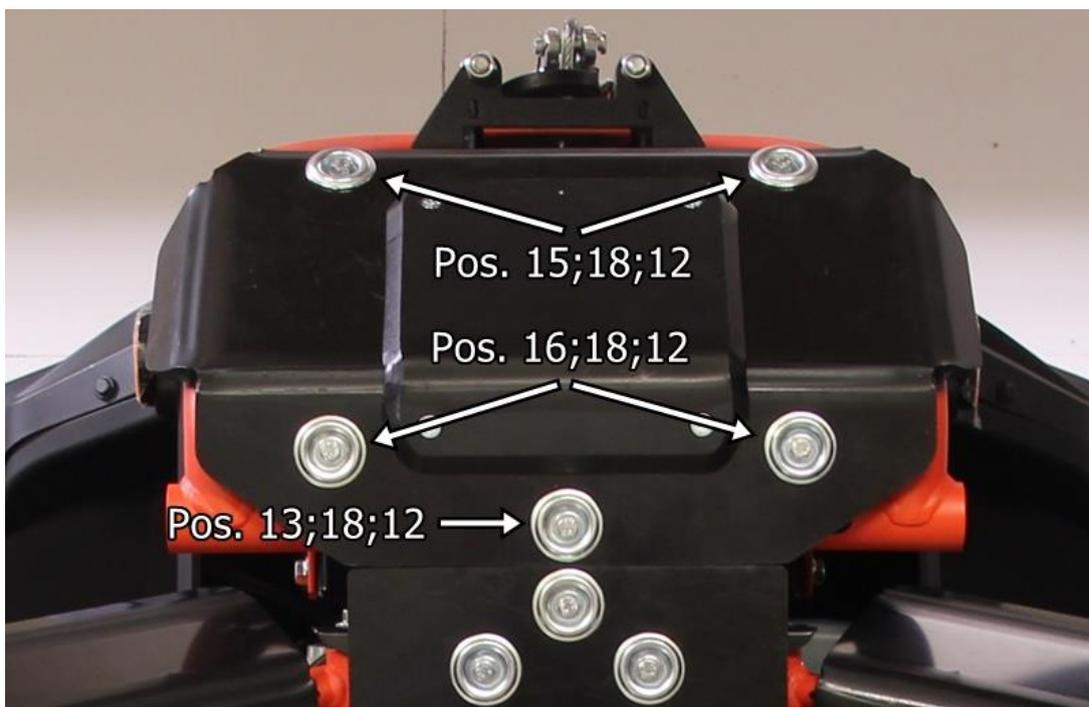


Step 7


Install rear protection 02.27606K (Pos. 5).




Step 8

Install front control arm protections 02.27607 (Pos. 6) and 02.27608 (Pos. 7) with distance plates 02.27611 (Pos. 10).

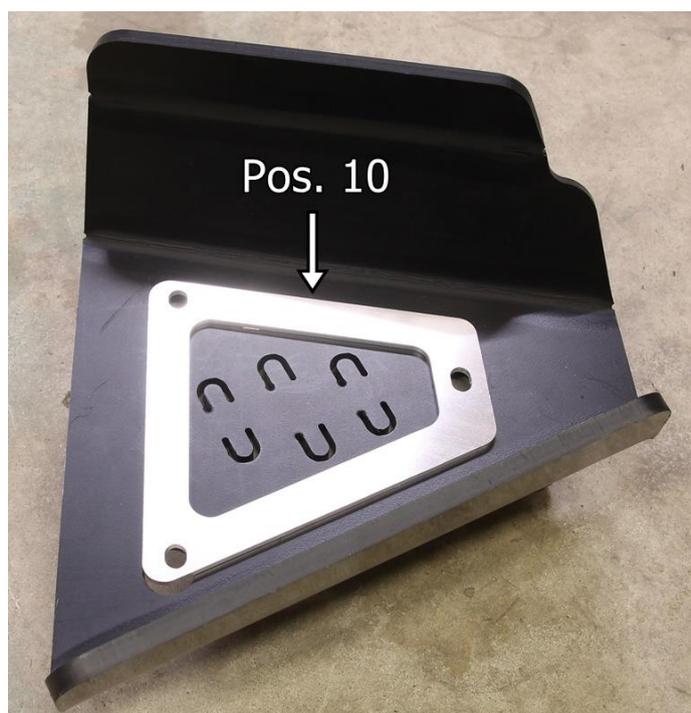

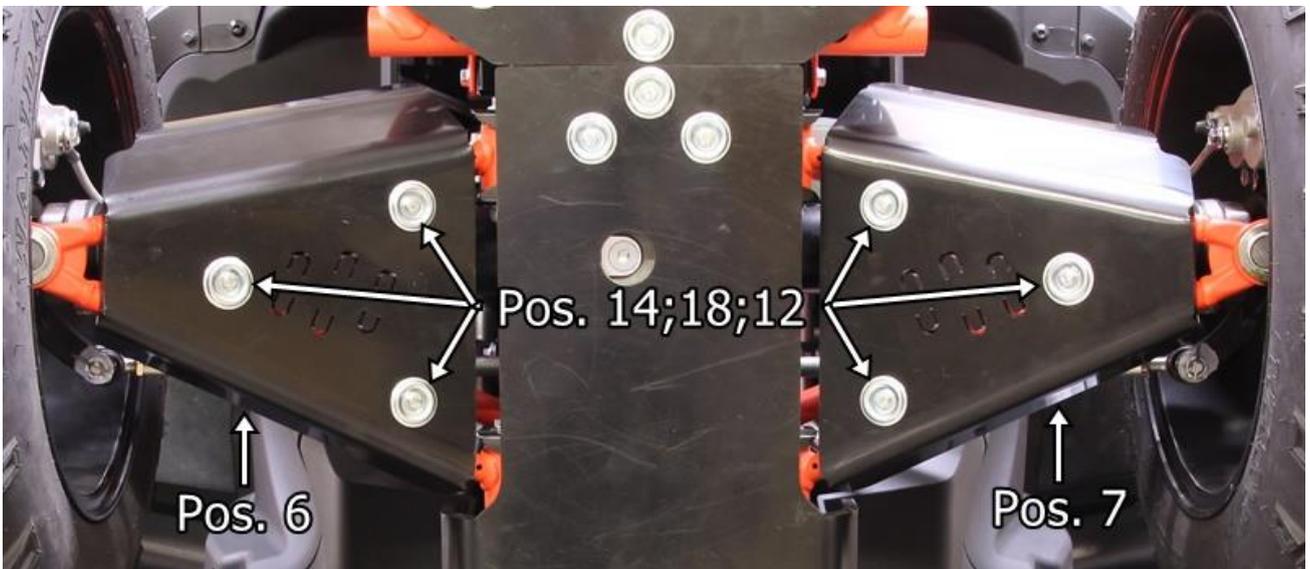

Step 9 Install rear control arm protections 02.27609 (Pos. 8) and 02.27610 (Pos. 9).

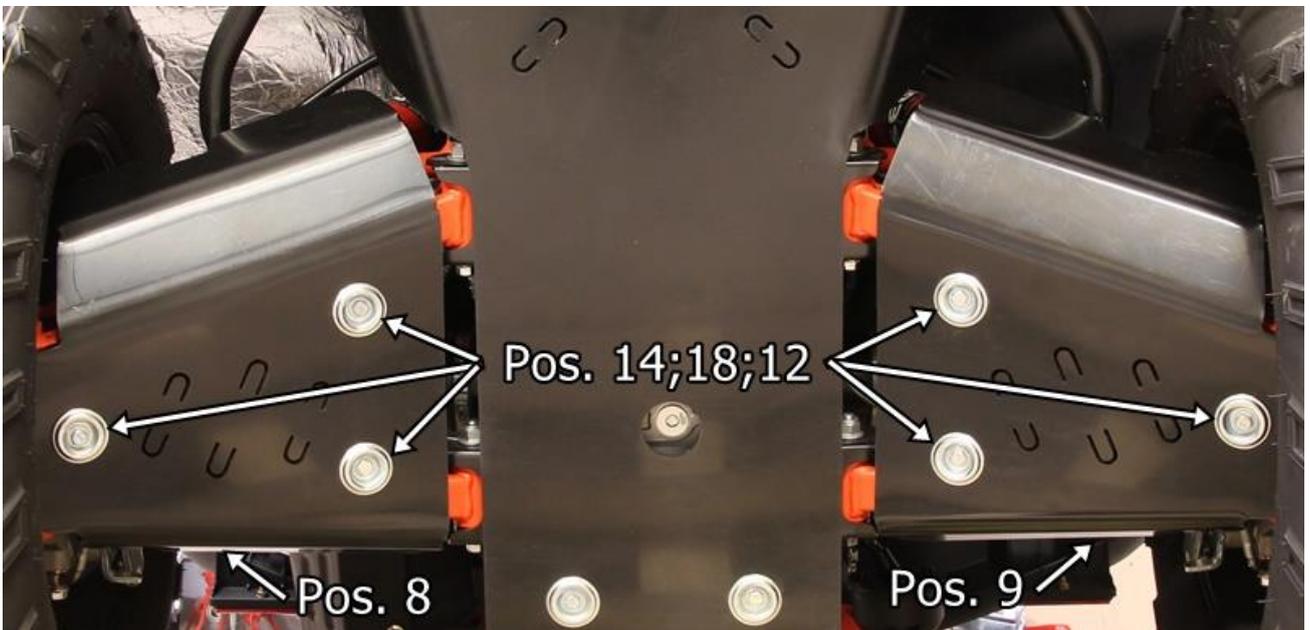

Step 10 To remove the oil filter cover plate, remove the bolt indicated with arrow and loosen the other bolt. Slide the plate away.



IRON BALTIC

IRON BALTIC OÜ
Põldmäe tee 1
Vatsla 76915
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

