

IRON BALTIC


PLASTIC SKID PLATE

CF MOTO

X5A / X6A

Code 02.2800

Version 09102023

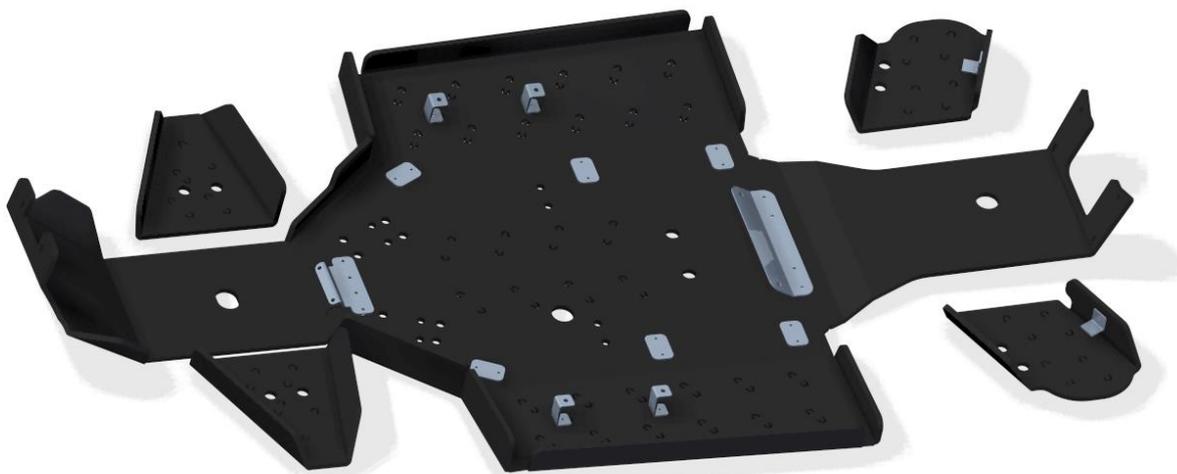

DOWNLOAD MULTILINGUAL
USER MANUAL





code.ironbaltic.com/u/ybCLky5E

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.11001	1
2	Front part	02.2802	1
3	Rear part	02.11003	1
4	Left side protection	02.2805	1
5	Right side protection	02.2804	1
6	Front left arm protection	02.1137V+	1
7	Front right arm protection	02.1137P+	1
8	Rear left arm protection	02.1138V+	1
9	Rear right arm protection	02.1138P+	1
10	Intallation plate	02.5008+	1
11	Intallation plate	02.1072+	1
12	Plate	02.5006	6
13	Bracket	02.6408	4
14	Angle	03.1502	2
15	Screw 3,5x22 DIN7981	OT.01.02.004	2
16	Bolt M6x16 DIN 933	OT.02.02.050	12
17	Bolt M6x20 DIN 7991	OT.02.04.030	12
18	Bolt M6x25 DIN 933	OT.02.02.070	8
19	Bolt M8x20 DIN 933	OT.02.02.180	10
20	Bolt M8x25 DIN 933	OT.02.02.190	2
21	Conical washer Ø6	14.502	12
22	Dished wsher	14.503	22
23	Washer Ø5/15 DIN 9021	OT.04.02.010	2
24	Washer Ø6/18 DIN 9021	OT.04.02.020	24
25	Washer Ø8/20 SFS 3738	OT.04.03.030	4
26	Nyloc nut M6 DIN 985	OT.03.02.030	4

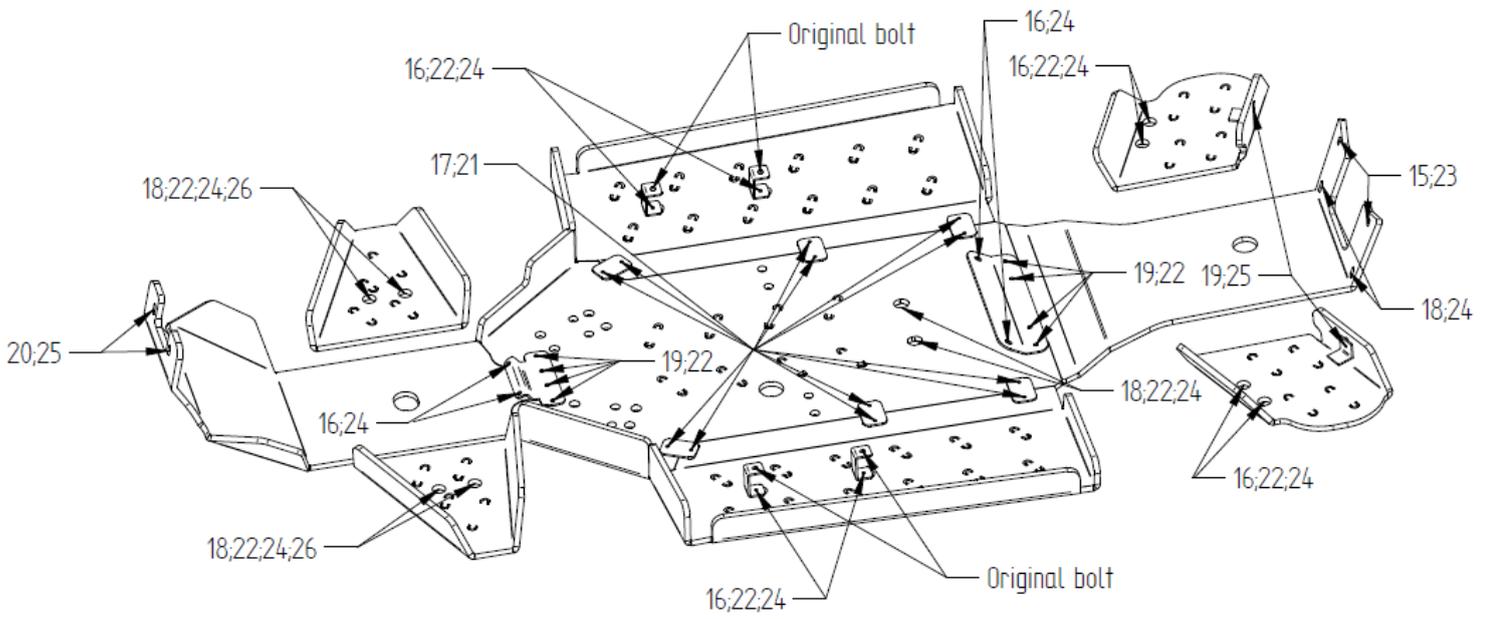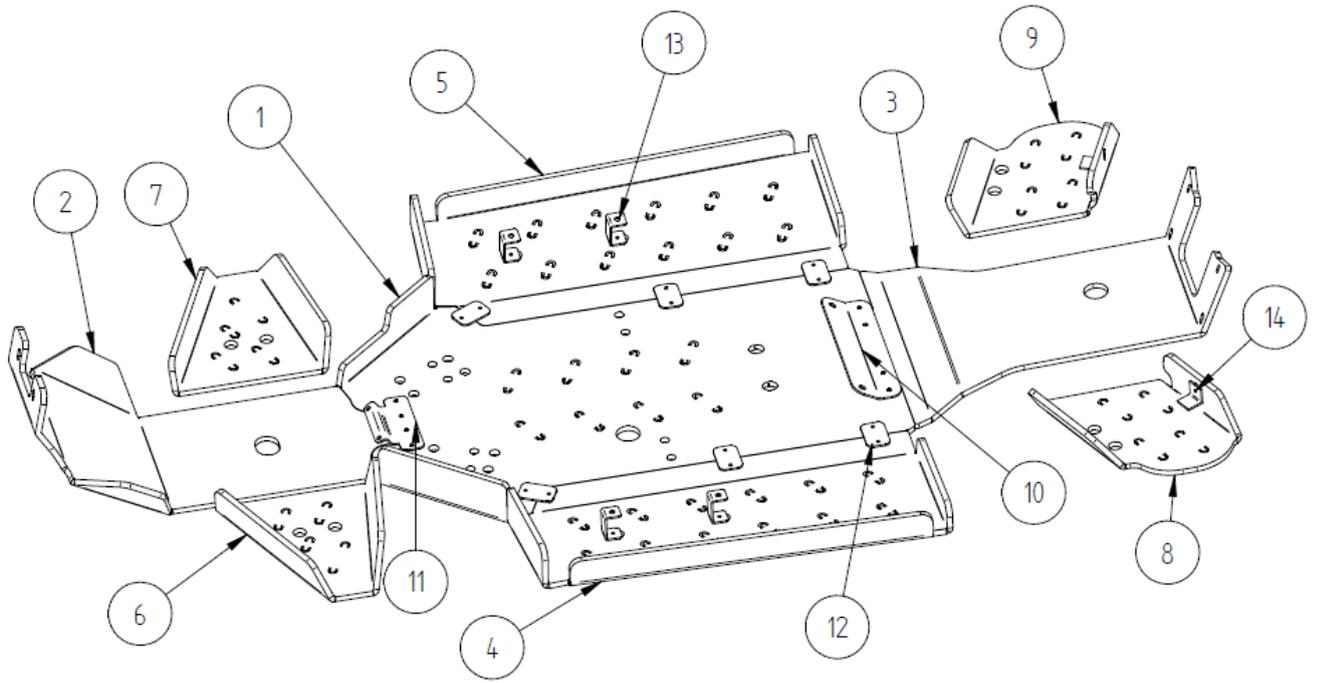


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and roller.




Step 2 Install installation plates 02.1072+, 02.5008+ and 02.6408.

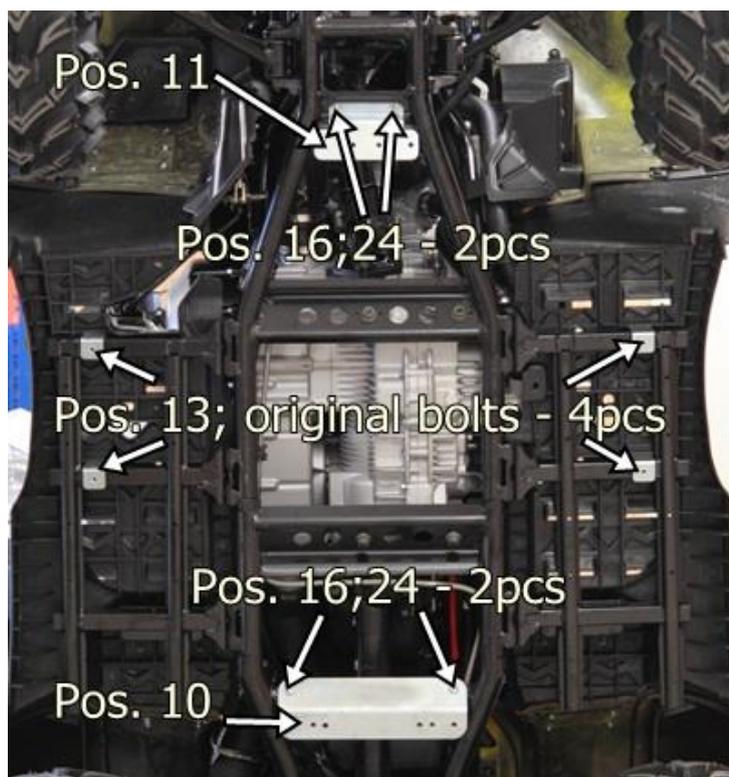


Step 3

Install middle part 02.11001.

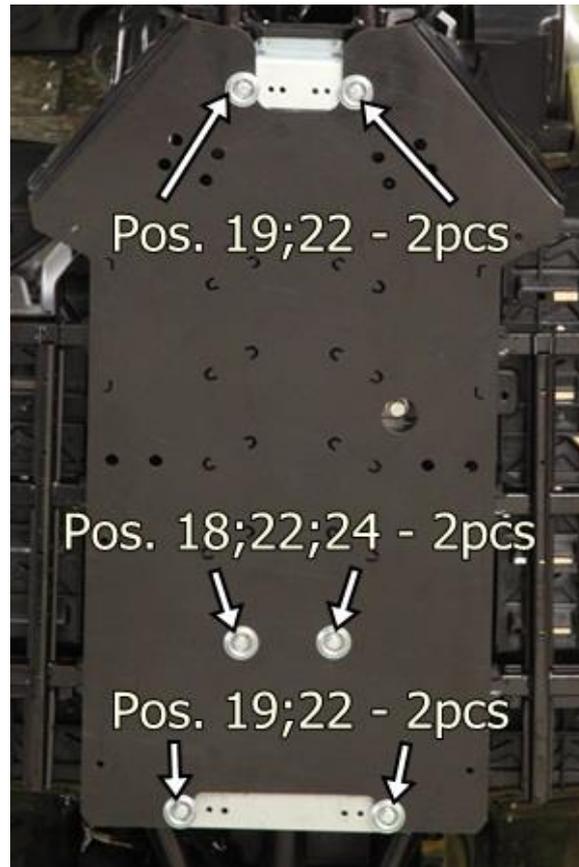


Step 4

Install plates 02.5006.

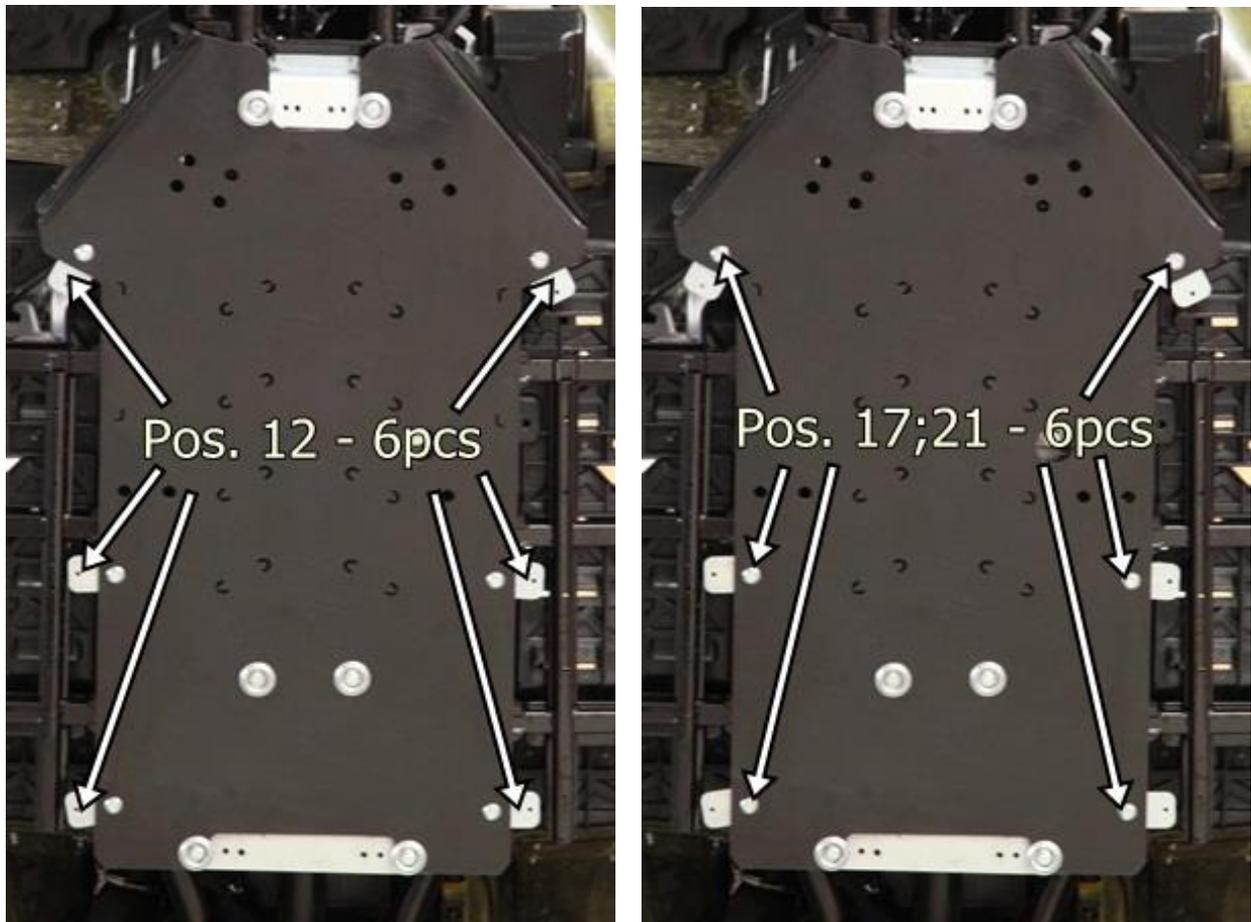


Step 5

Install side protections 02.2804, 02.2805.

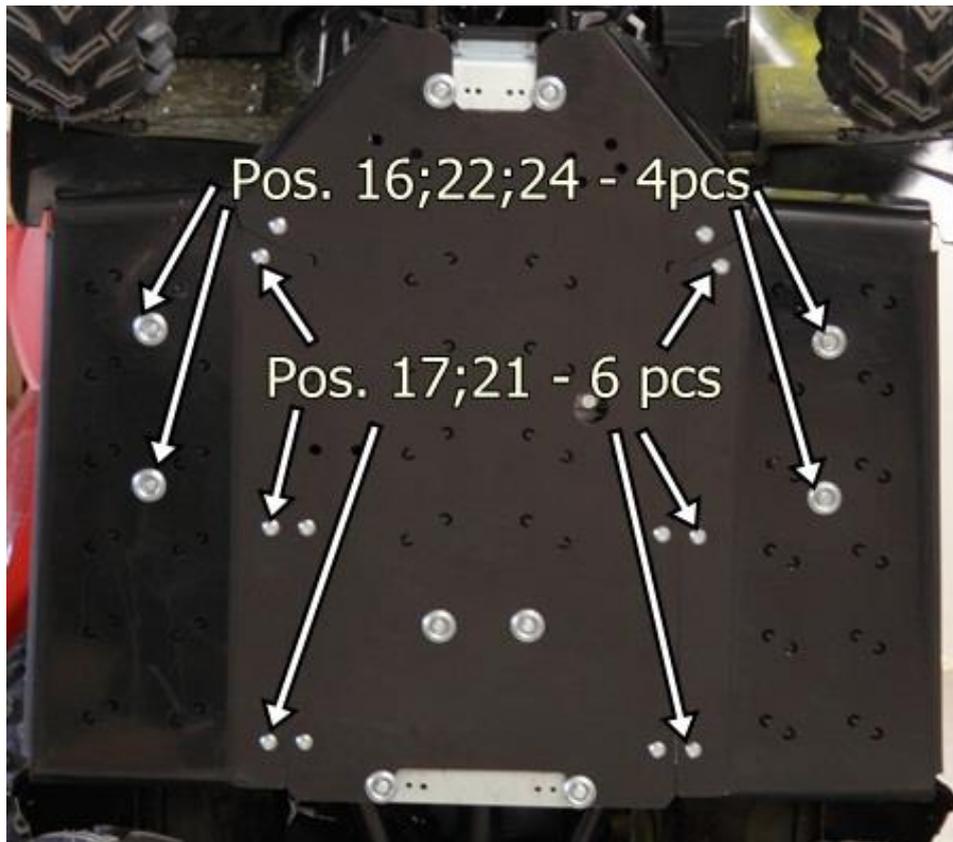


Step 6

Install rear part 02.11003.

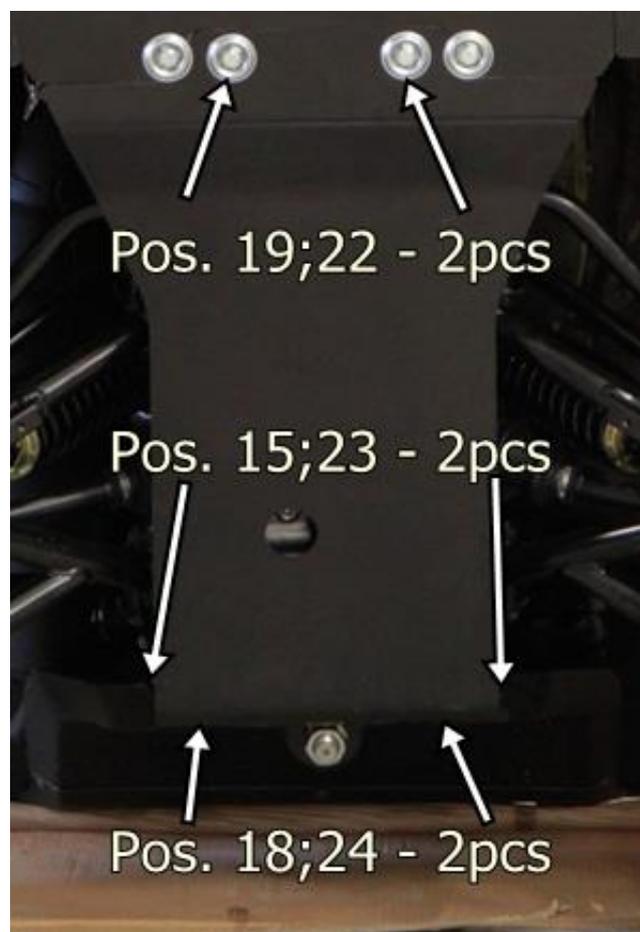

Step 7

Install front part 02.2802. Install roller back.

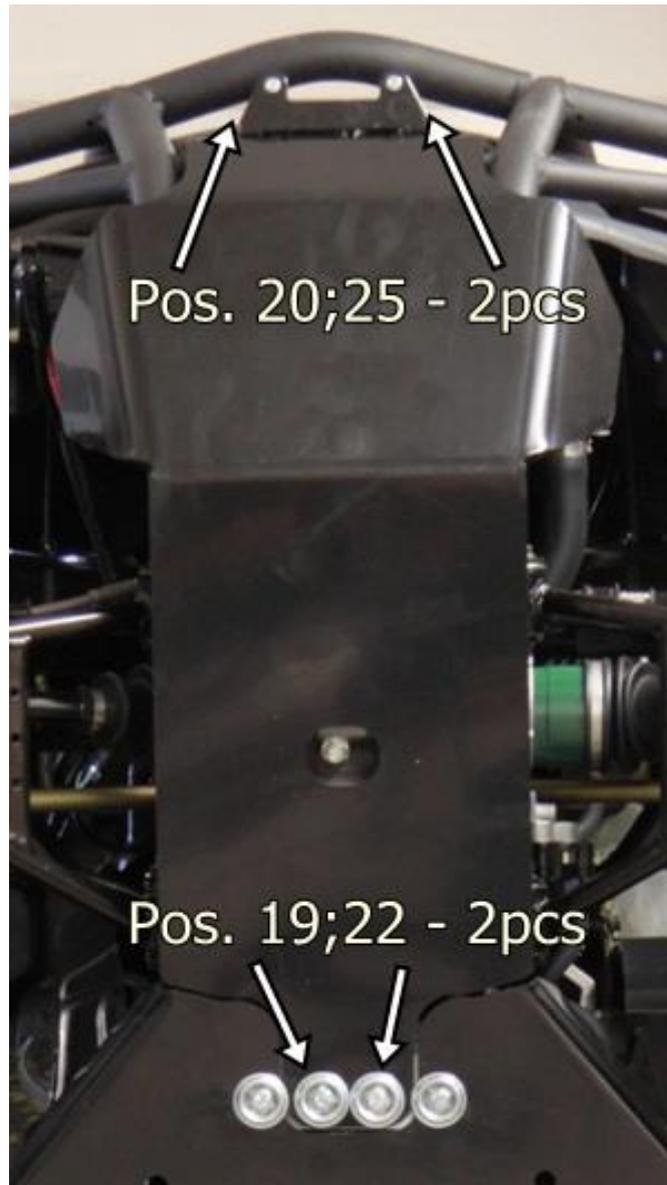

Step 8



Install front arms protections 02.1137P+, 02.1137V+.



Step 9

Install rear arms protections 02.1138P+, 02.1138V+.

First install the bracket 03.1502 (Pos.14) to the arm protection (do not tighten the bolt). Then place the protection on to the ATV's A-arm. Press the guard against the A-arm tube and tighten the bracket bolt so that the side of the bracket is against the A-arm tube. Finally, attach the other side of the A-arm protection.

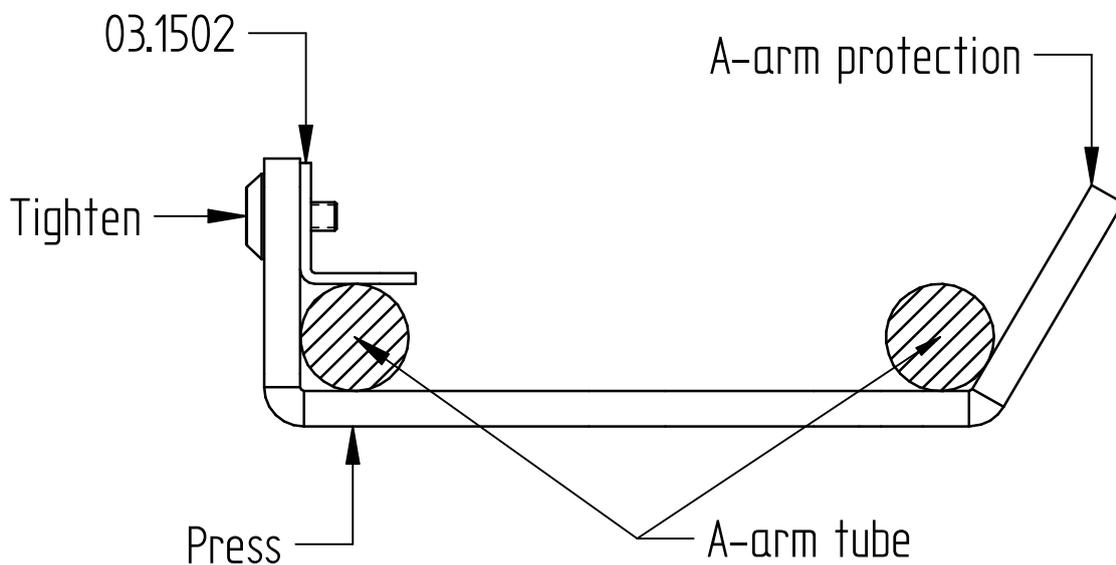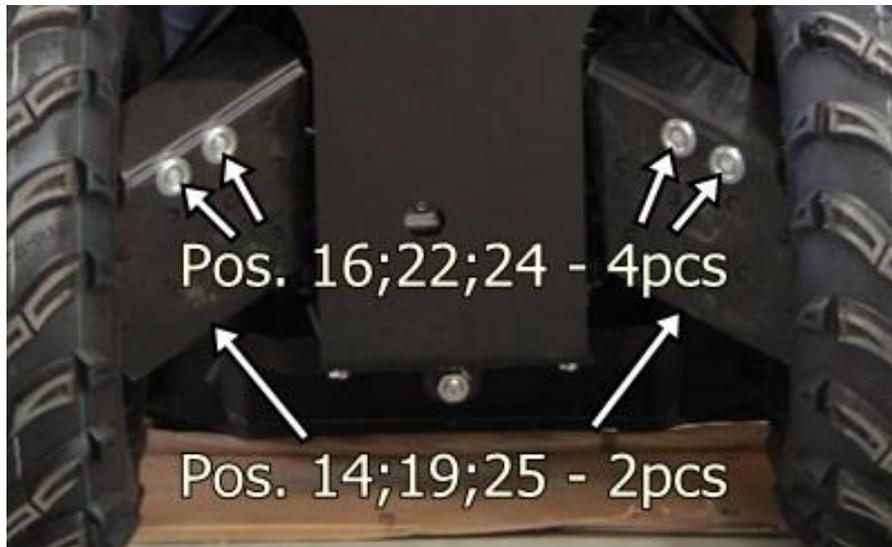

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

