



[code.ironbaltic.com/u/OmquuBeG](https://code.ironbaltic.com/u/OmquuBeG)

## PLASTIC SKID PLATE

# AODES

Pathcross 1000 L / 850 L / 650 L

Code 02.28200

Version 13102023





**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.28201K	1
2	Middle protection	02.28202	1
3	Rear protection	02.28203K	1
4	Right sideprotection	02.28204K	1
5	Left sideprotection	02.28205K	1
6	Front right a-arm protection	02.28206K	1
7	Front left a-arm protection	02.28207K	1
8	Rear right a-arm protection (BLACK)	02.28108	1
9	Rear left a-arm protection (BLACK)	02.28109	1
10	Distance plate	02.28110	2
11	Fron a-arm bracket	02.1018	2
12	Front a-arm bracket 2	02.4606	2
13	Connecting plate	02.5006	10
14	Rear a-arm bracket	02.7508	2
15	Front a-arm bracket	02.8210	2
16	Sideprotection bracket	02.16005	2
17	Dished washer	14.503	48
18	Bolt M6x12 DIN933	OT.02.02.030	2
19	Bolt M6x16 DIN933	OT.02.02.050	32
20	Bolt M6x25 DIN933	OT.02.02.070	9
21	Bolt M6x30 DIN933	OT.02.02.080	11
22	Bolt M6x45 DIN933	OT.02.02.110	6
23	Bolt M8x55 DIN933	OT.02.02.240	2
24	Washer Ø6/15 SFS3738	OT.04.03.020	58
25	Washer Ø6/18 DIN9021	OT.04.02.020	12
26	Washer Ø8/20 SFS3738	OT.04.03.030	4
27	Nyloc nut M6 DIN985	OT.03.02.030	10
28	Nyloc nut M8 DIN985	OT.03.02.040	2

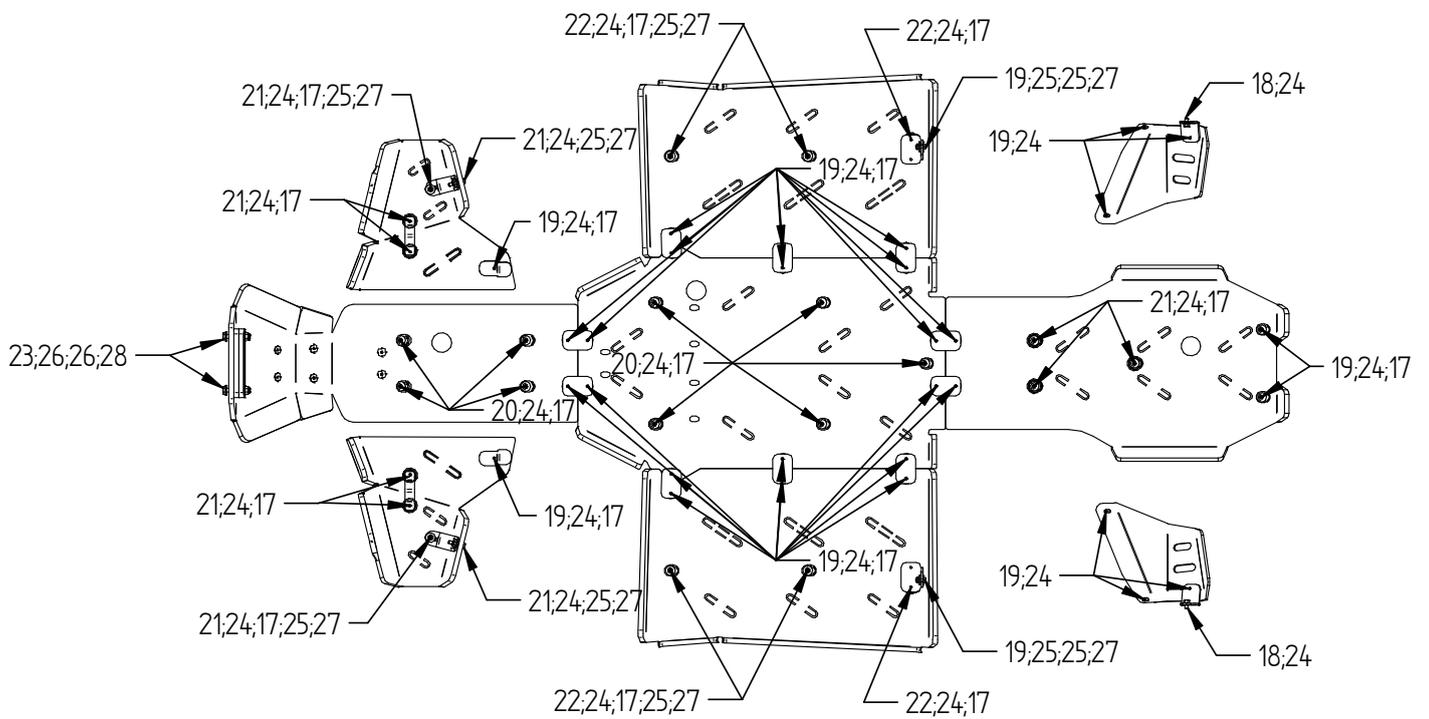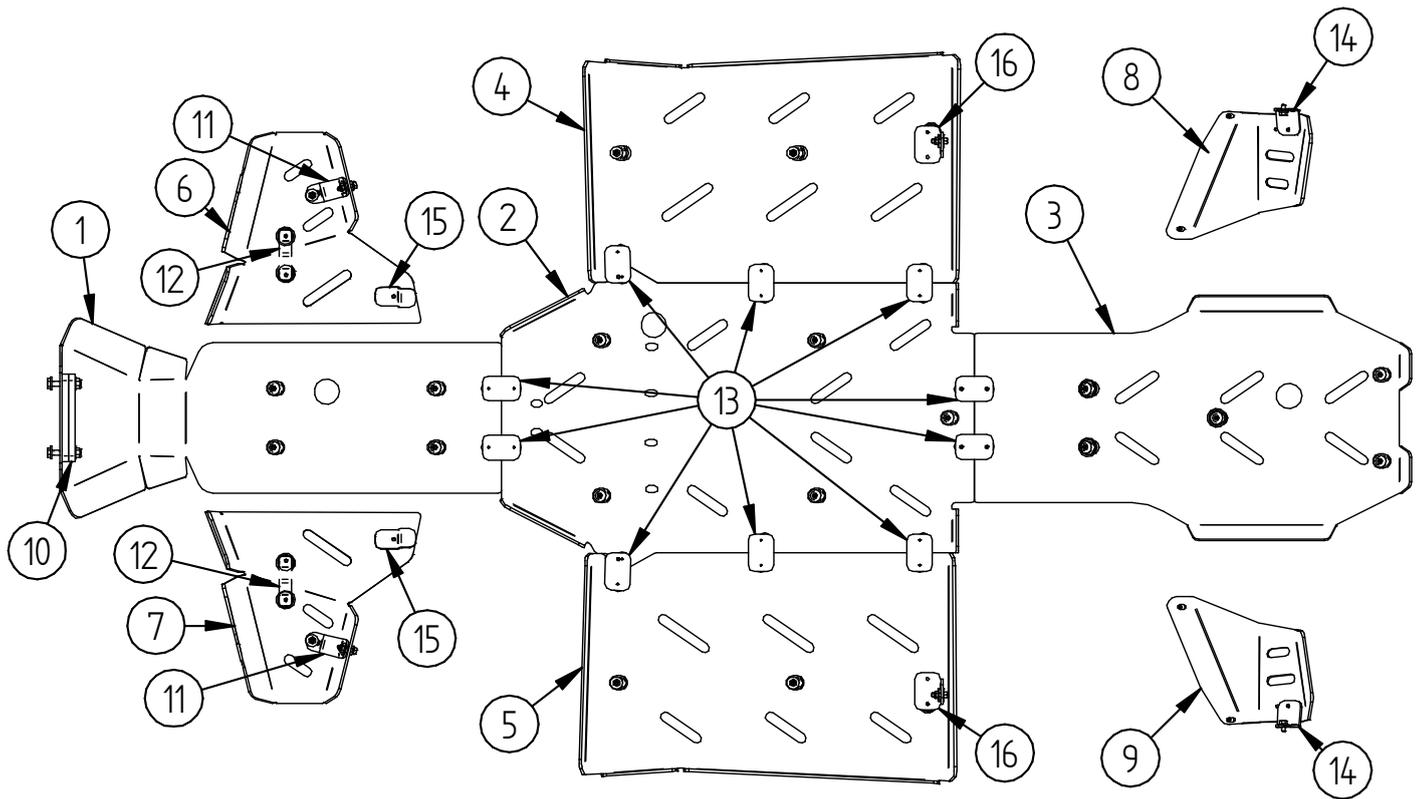

# FITTING INSTRUCTIONS



## Step 1

Remove standard skid plate and control arm protections.




## Step 2

Install front control arm protections 02.28206K (Pos. 6) and 02.28207K (Pos. 7).

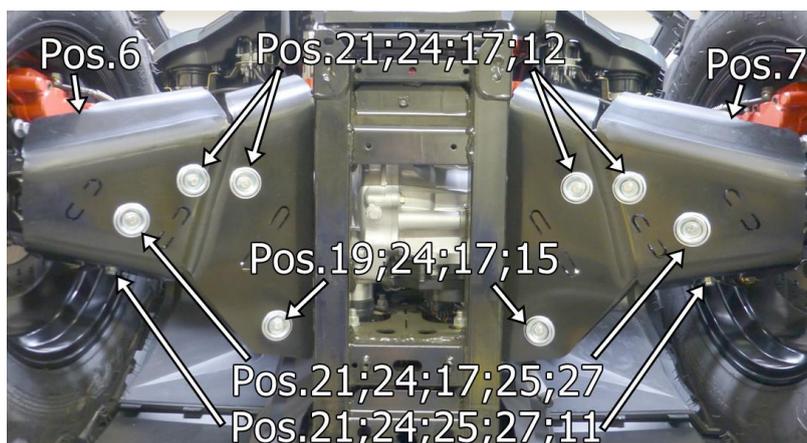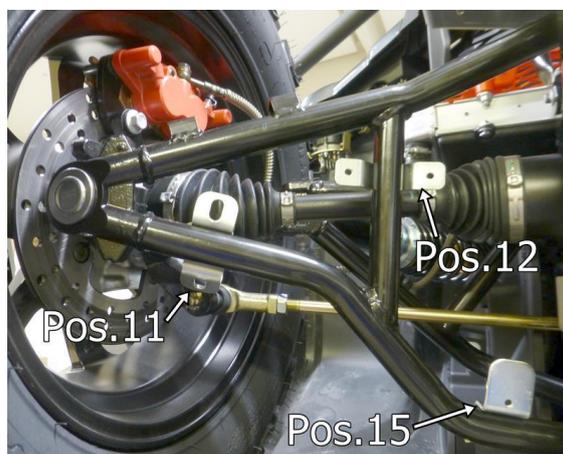


### Step 3

Install rear control arm protections 02.28108 (Pos. 8) and 02.28109 (Pos. 9).  
First install bracket 02.7508.

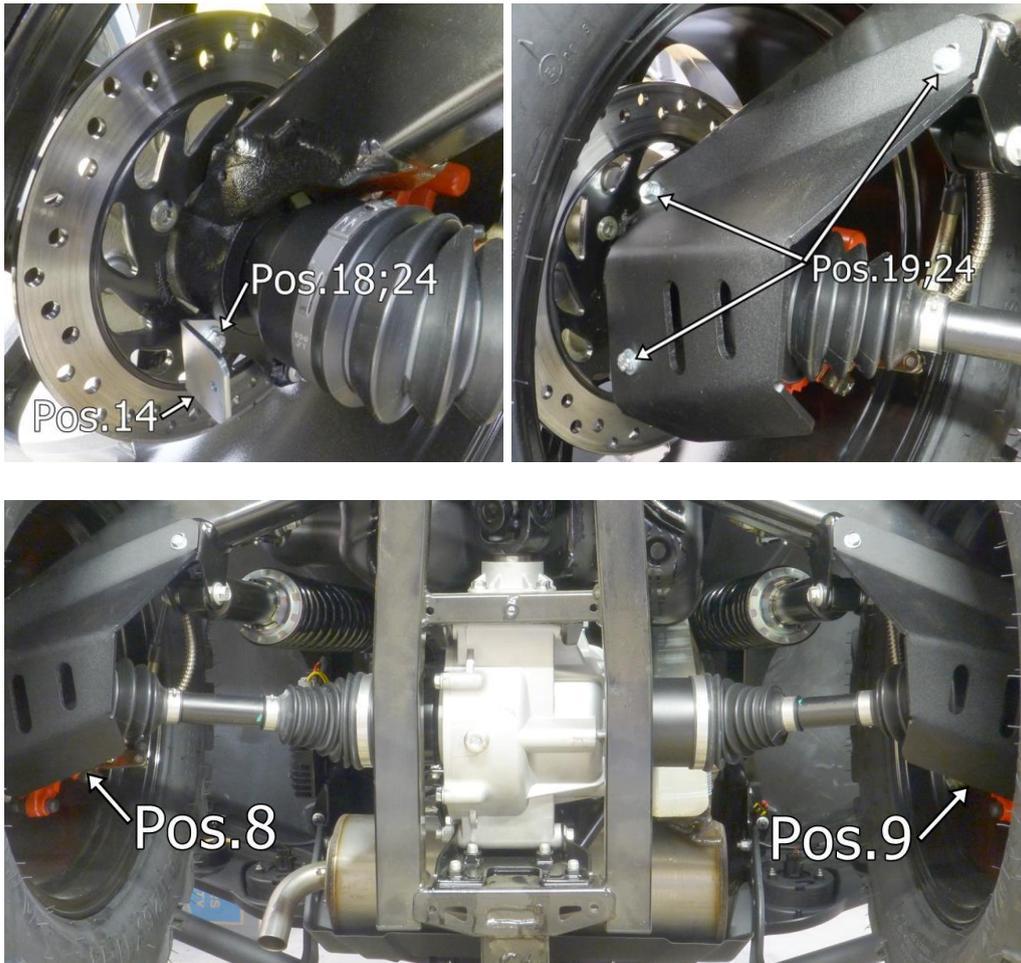


### Step 4

Install rear protection 02.28203K (Pos. 3)  
and connection plates 02.5006 (Pos.13).

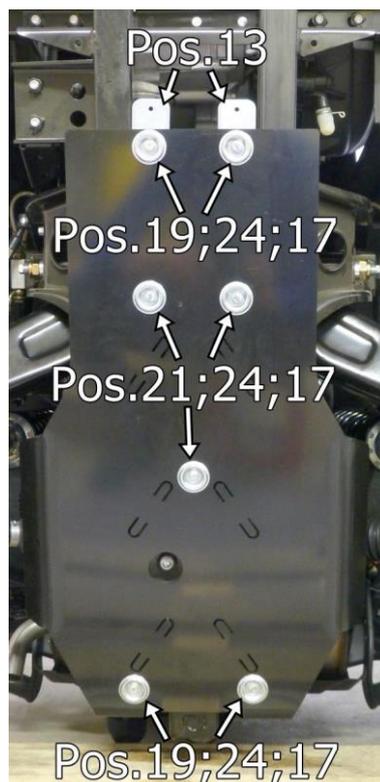



## Step 5


Install middle protection 02.28202 (Pos. 2) and connecting plates 02.5006 (Pos.13).

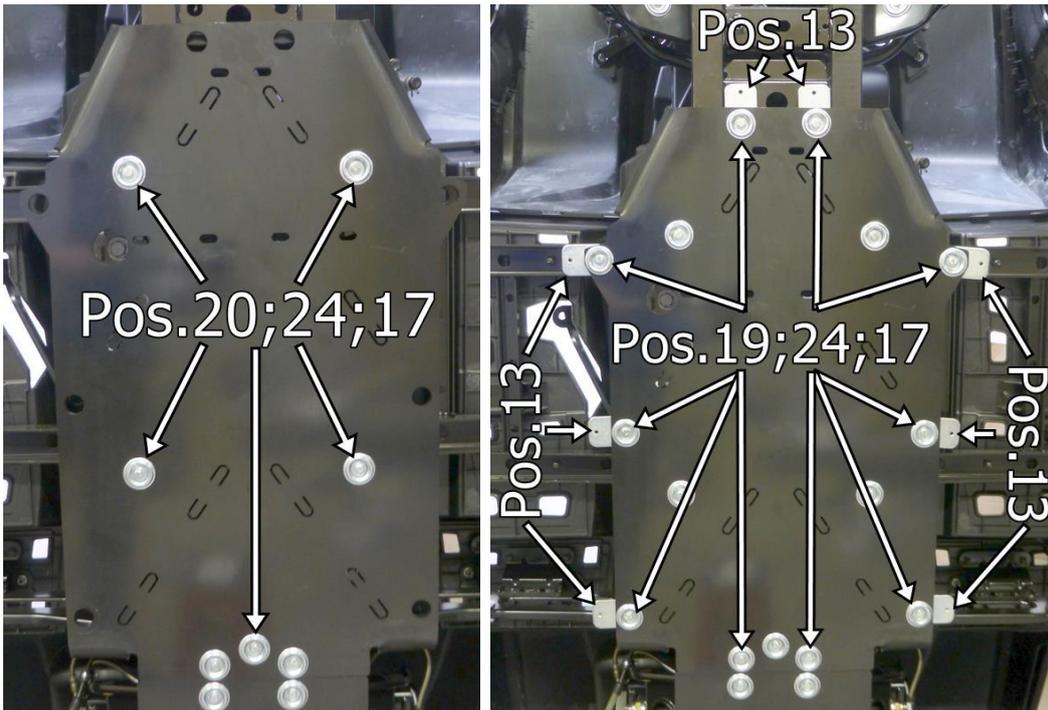

## Step 6



Install side protections 02.28204K (Pos.4) and 02.28205K (Pos.5). First remove bolts indicated with arrows and install bracket 02.16005 (Pos.16).

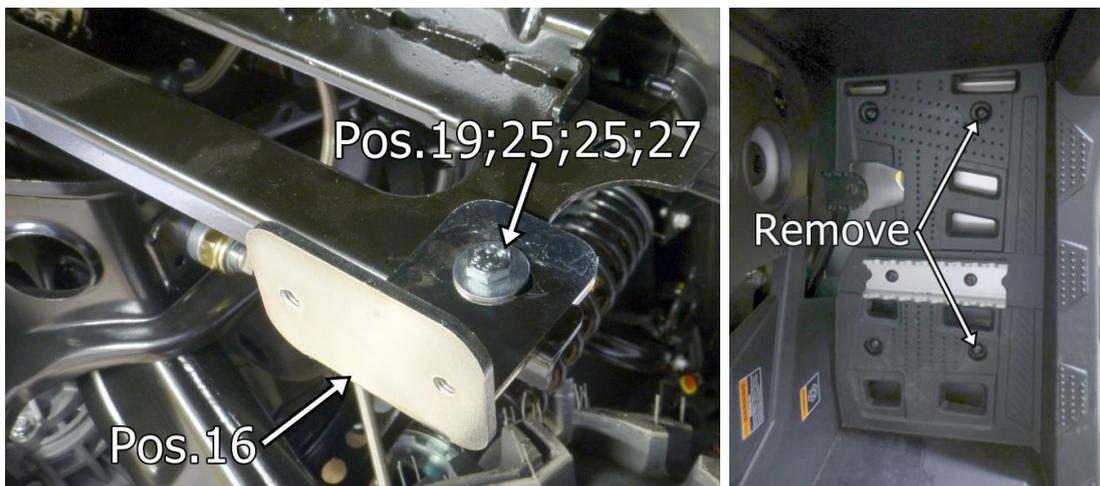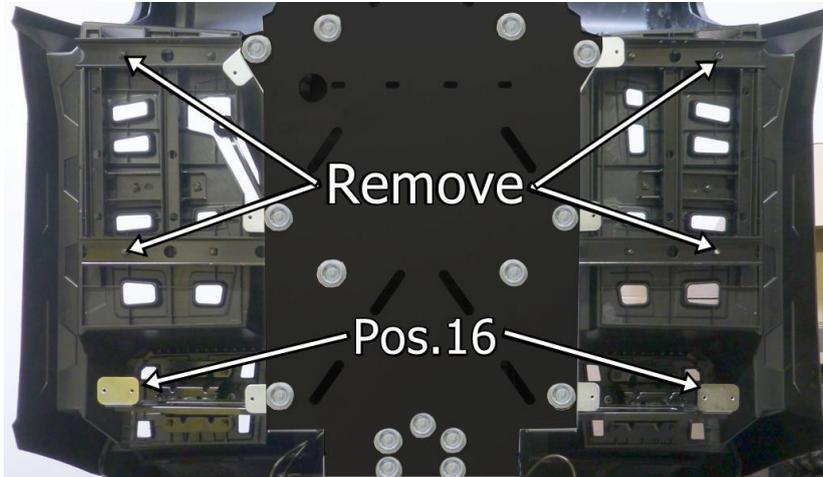

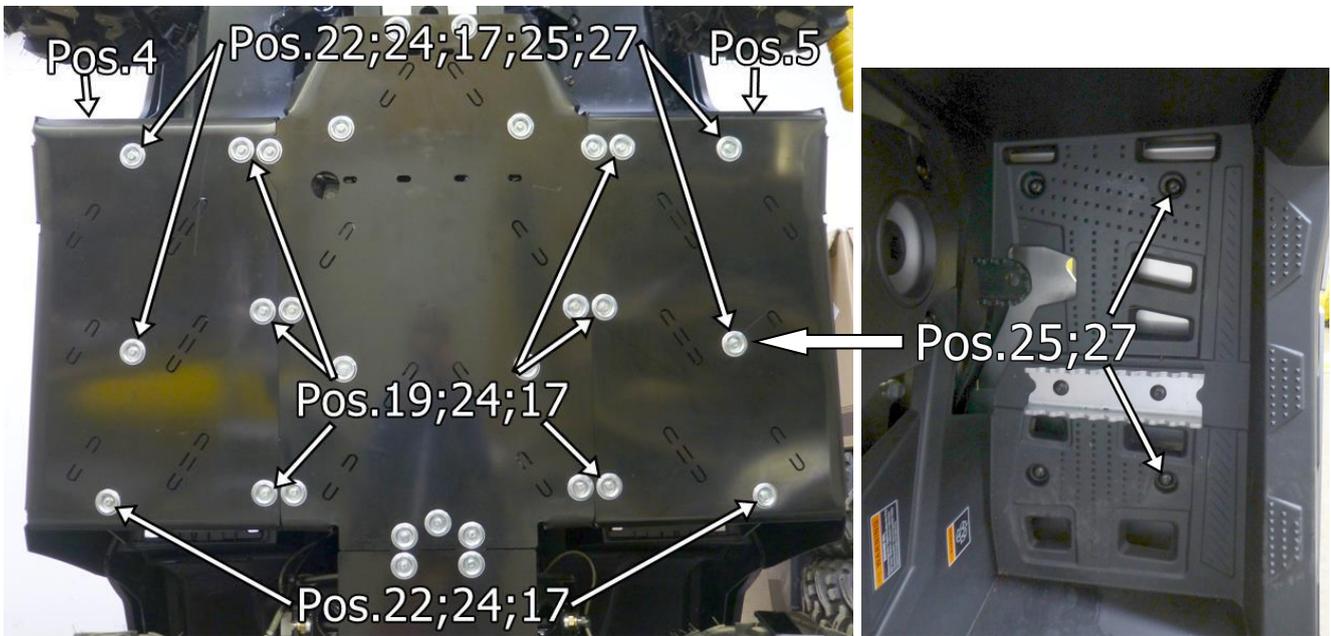

**Step 7**

Install front protection 02.28201K (Pos. 1) and distance plates 02.28110 (Pos.10).

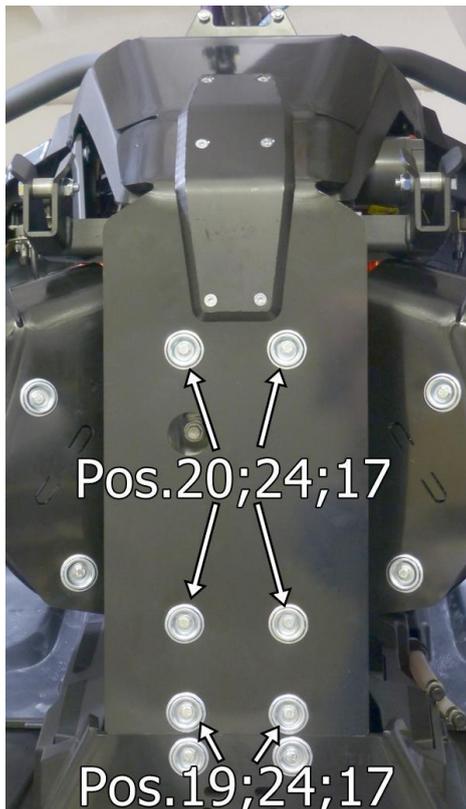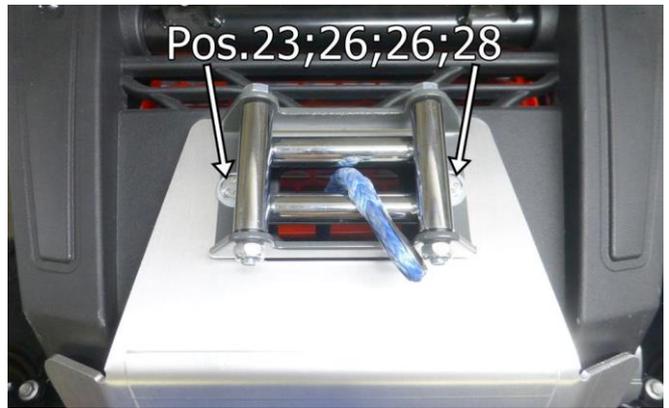

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

