

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/KVqAwWyH

ALUMINIUM SKID PLATE

AODES

Pathcross 1000 S / 850 S / 650 S

Code 02.28300

Version 13102023





Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.28101K	1
2	Middle protection	02.28302	1
3	Rear protection	02.28103K	1
4	Right sideprotection	02.28304	1
5	Left sideprotection	02.28305	1
6	Front right a-arm protection	02.28106K	1
7	Front left a-arm protection	02.28107K	1
8	Rear right a-arm protection	02.28108	1
9	Rear left a-arm protection	02.28109	1
10	Distance plate	02.28110	2
11	Fron a-arm bracket	02.1018	2
12	Front a-arm bracket 2	02.4606	2
13	Connecting plate	02.5006	10
14	Rear a-arm bracket	02.7508	2
15	Front a-arm bracket	02.8210	2
16	Dished washer	14.503	45
17	Bolt M6x12 DIN933	OT.02.02.030	2
18	Bolt M6x14 DIN933	OT.02.02.040	30
19	Bolt M6x20 DIN933	OT.02.02.060	8
20	Bolt M6x25 DIN933	OT.02.02.070	11
21	Bolt M6x40 DIN933	OT.02.02.100	4
22	Bolt M8x50 DIN933	OT.02.02.240	2
23	Washer Ø6/15 SFS3738	OT.04.03.020	55
24	Washer Ø6/18 DIN9021	OT.04.02.020	8
25	Washer Ø8/20 SFS3738	OT.04.03.030	4
26	Nyloc nut M6 DIN985	OT.03.02.030	8
27	Nyloc nut M8 DIN985	OT.03.02.040	2

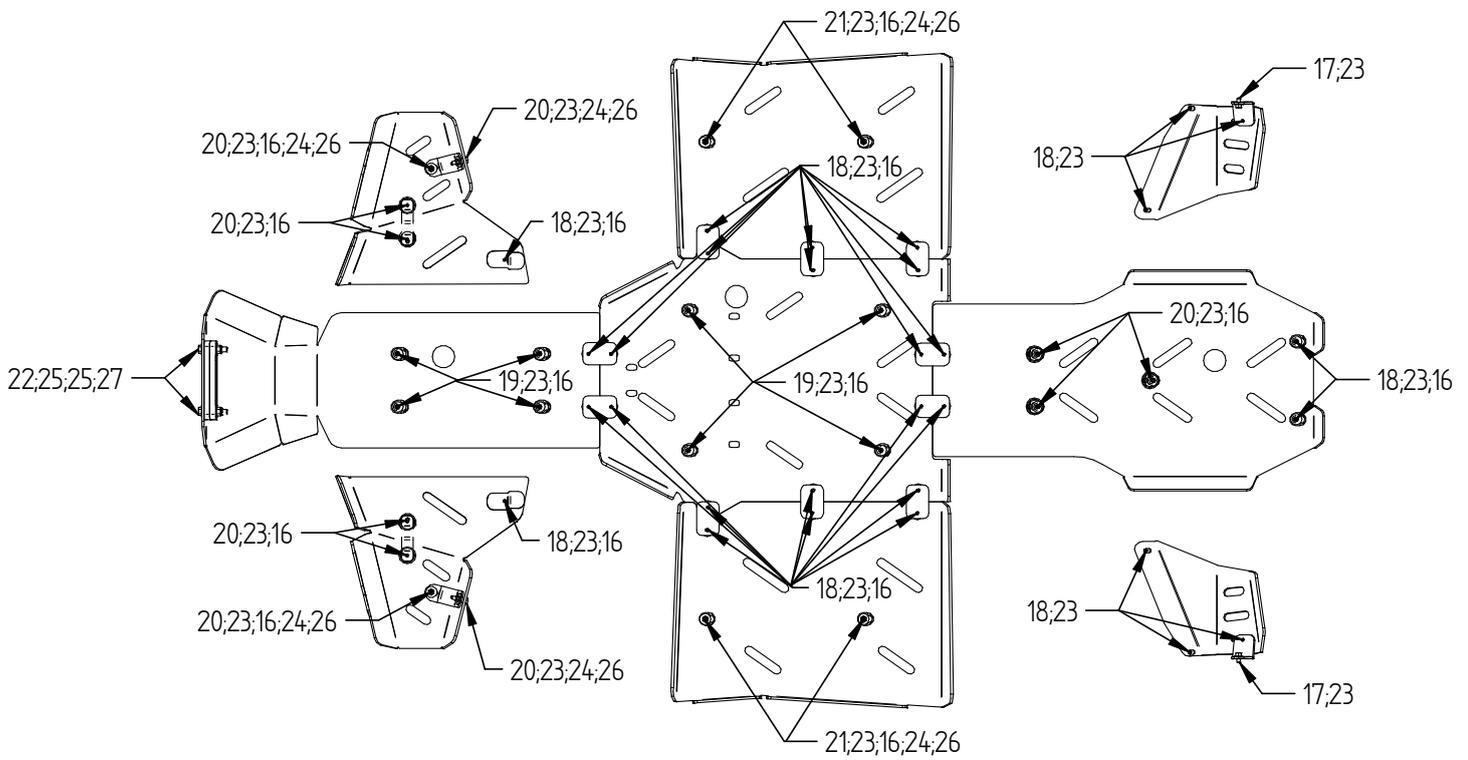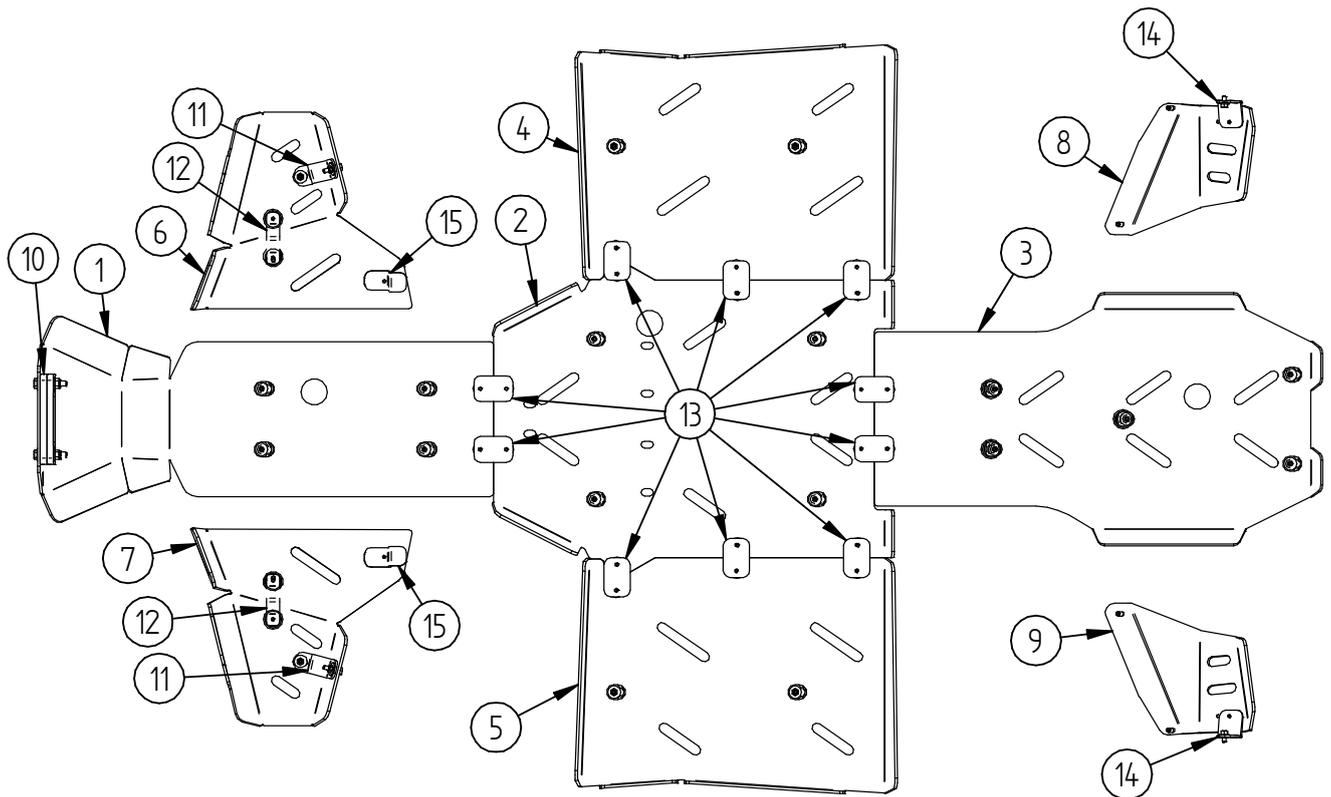

FITTING INSTRUCTIONS



Step 1

Remove standard skid plate and control arm protections.




Step 2

Install front control arm protections 02.28106K (Pos. 6) and 02.28107K (Pos. 7).

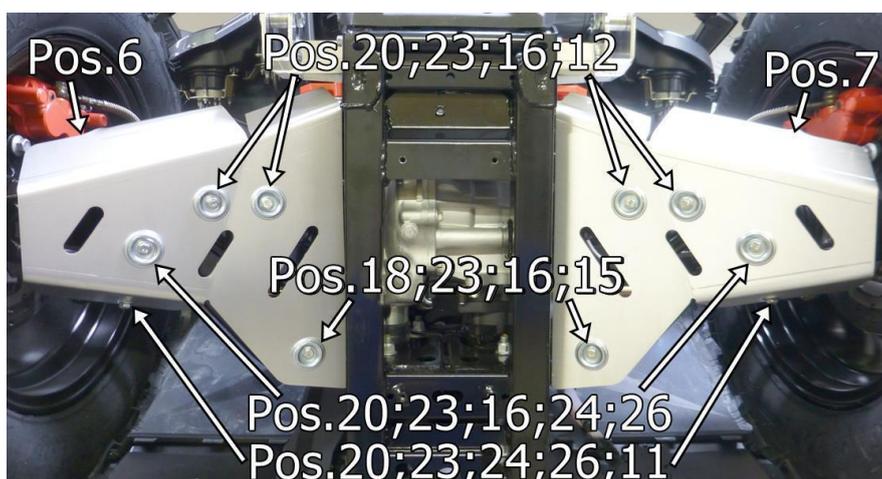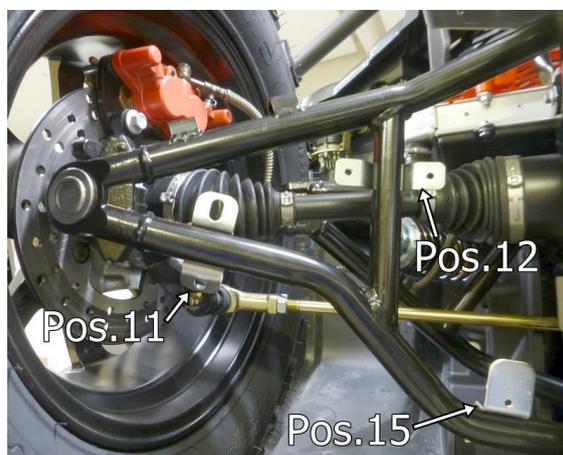

Step 3

Install rear control arm protections 02.28108 (Pos. 8) and 02.28109 (Pos. 9).
First install bracket 02.7508.

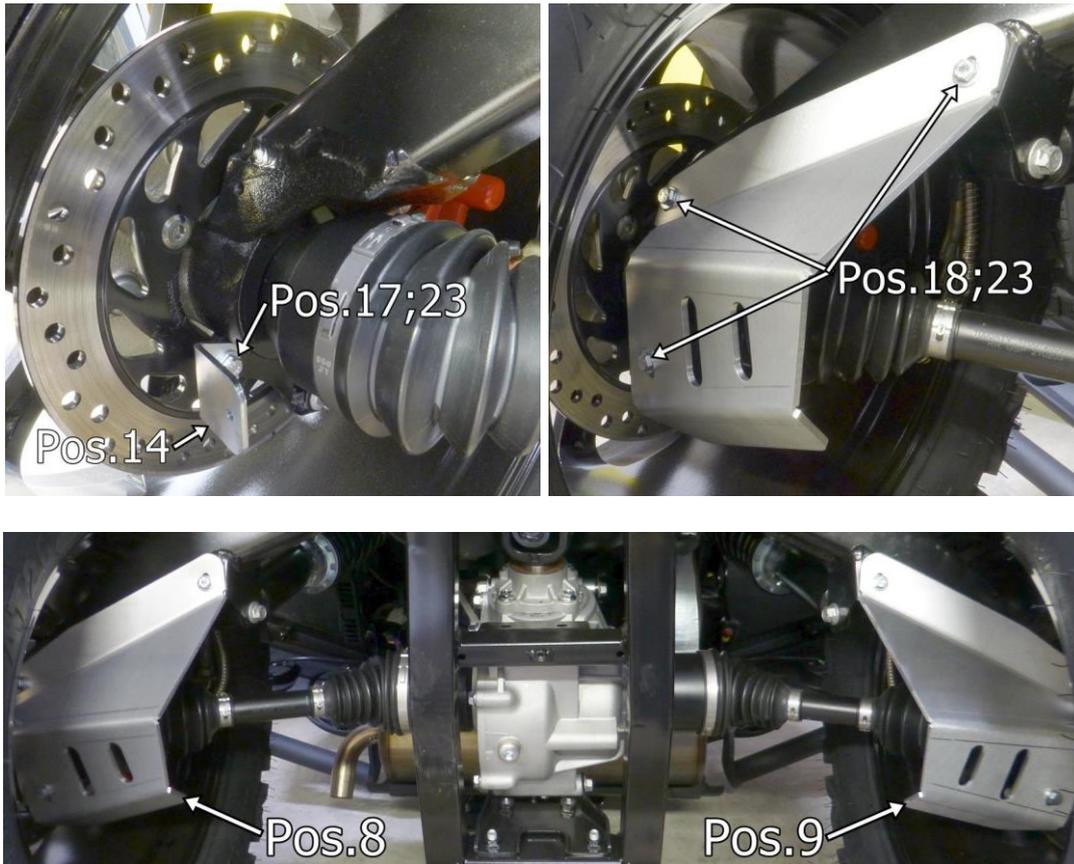


Step 4

Install rear protection 02.28103K (Pos. 3)
and connection plates 02.5006 (Pos.13).





Step 5

Install middle protection 02.28302 (Pos. 2) and connecting plates 02.5006 (Pos.13).

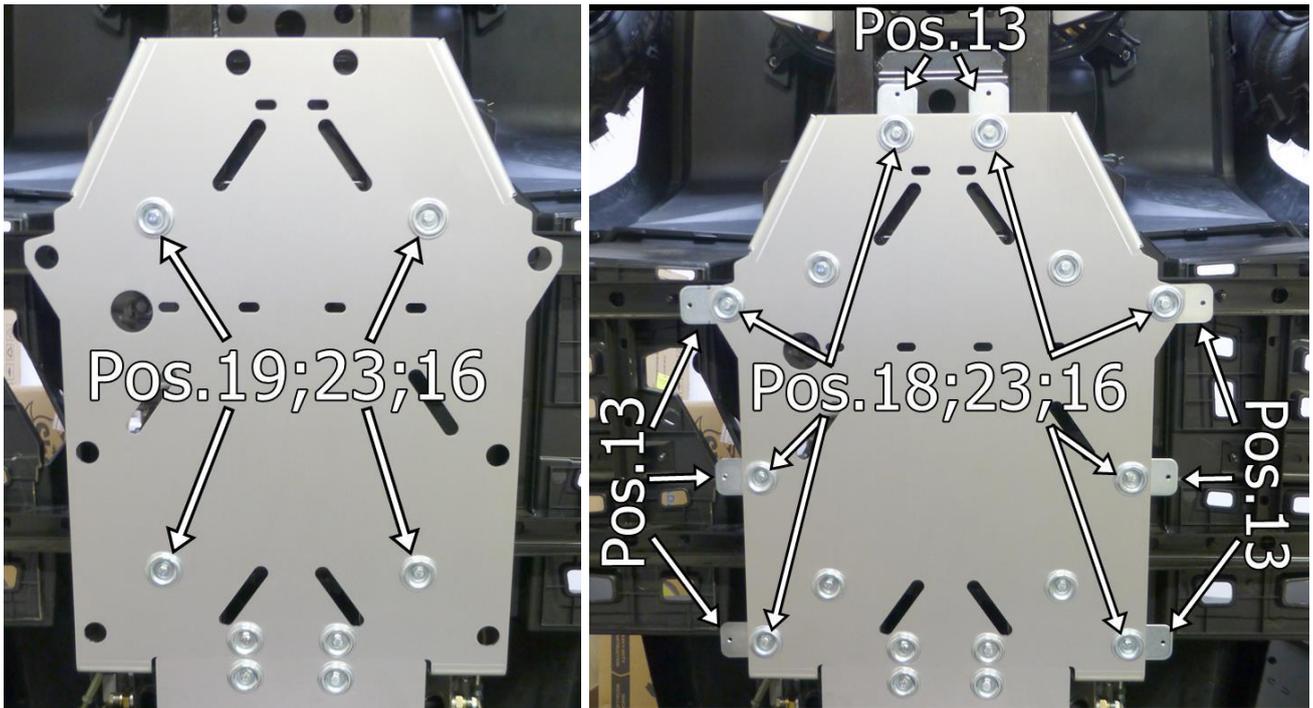



Step 6

Install side protections 02.28304 (Pos. 4) and 02.28305 (Pos. 5). First remove bolts indicated with arrows.

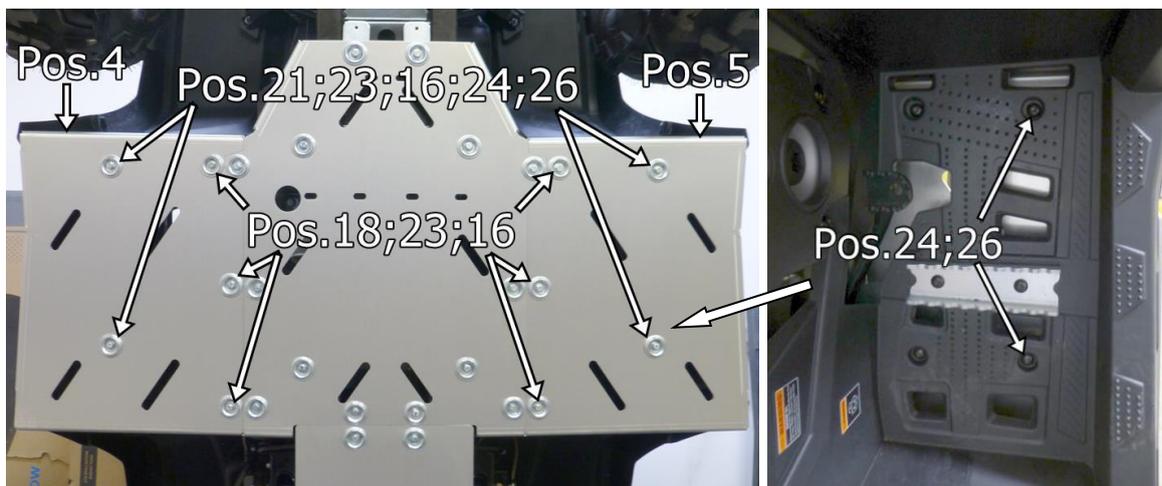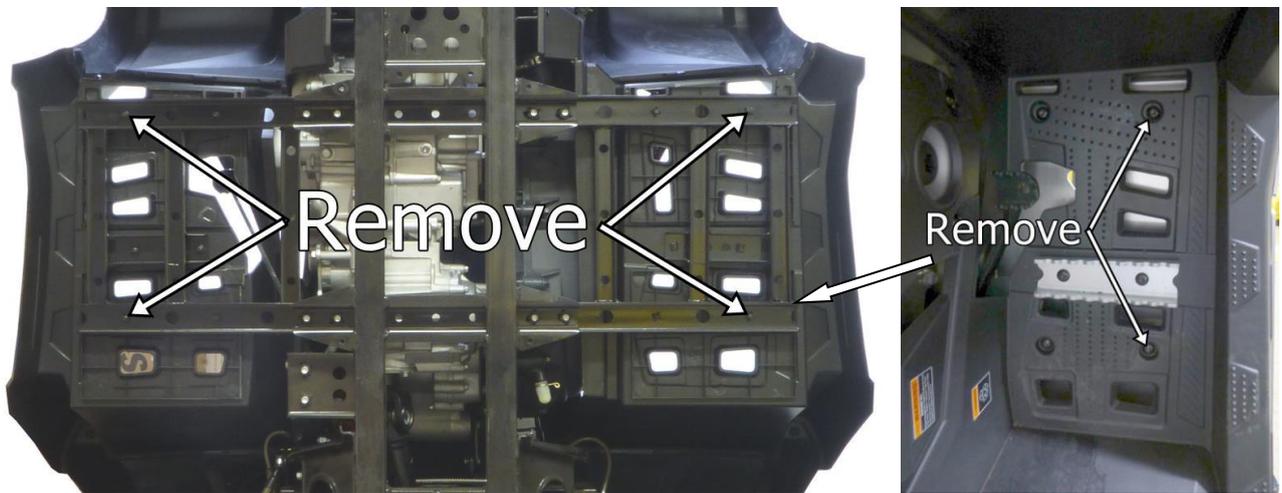

Step 7

Install front protection 02.28101K (Pos. 1)
and distance plates 02.28110 (Pos.10).

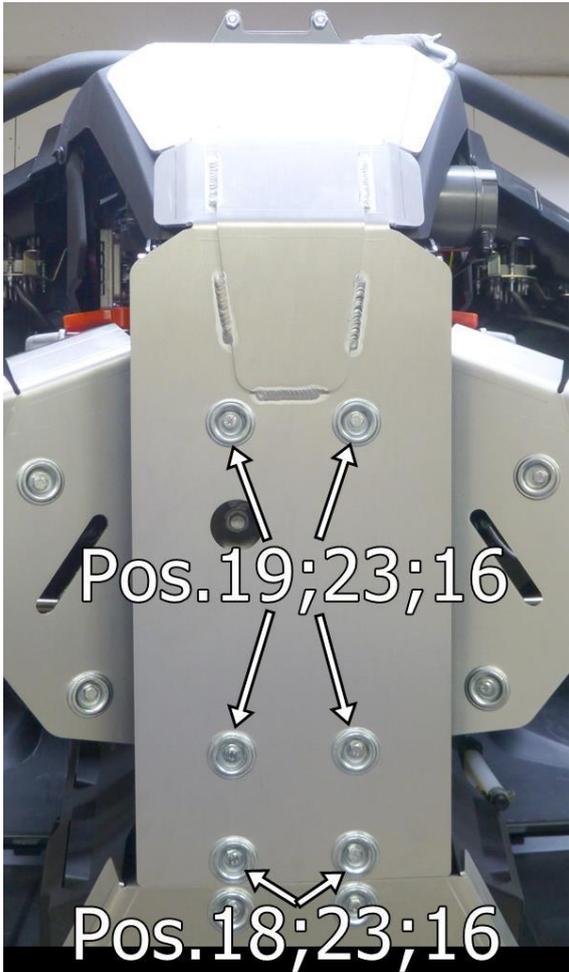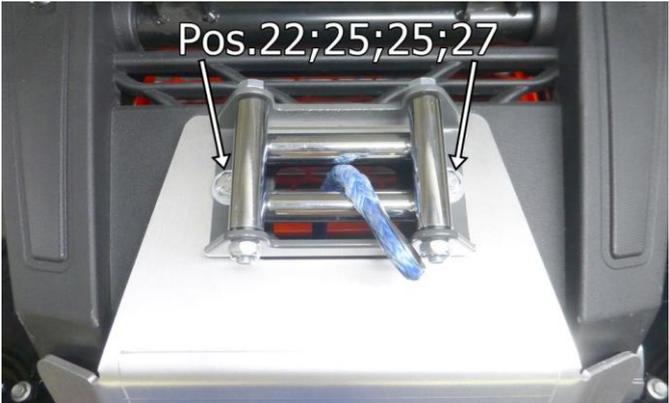

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

