

IRON BALTIC


PLASTIC SKID PLATE

CF MOTO

X5A / X6A

Code 02.2850

Version 09102023

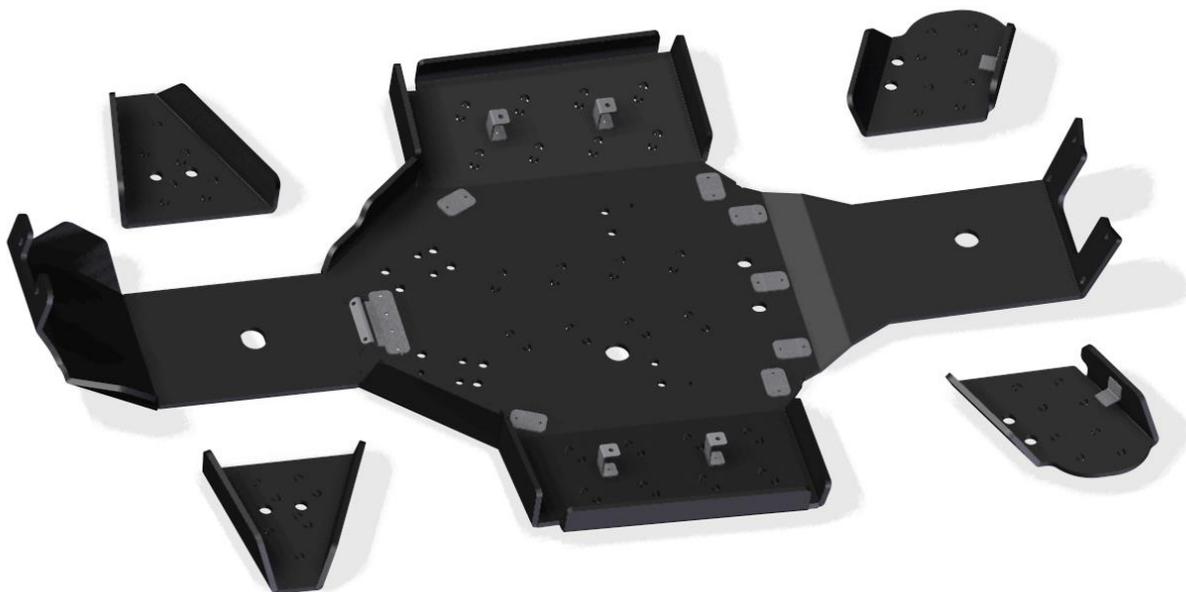

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/HMwDHDtL

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.6202	1
2	Front part	02.2802	1
3	Rear part	02.6203	1
4	Left side protection	02.2855	1
5	Right side protection	02.2854	1
6	Front left arm protection	02.1137V+	1
7	Front right arm protection	02.1137P+	1
8	Rear left arm protection	02.1138V+	1
9	Rear right arm protection	02.1138P+	1
10	Intallation plate	02.1072+	1
11	Plate	02.5006	7
12	Bracket	02.6408	4
13	Angle	03.1502	2
14	Screw 3,5x22 DIN7981	OT.01.02.004	2
15	Bolt M6x16 DIN 933	OT.02.02.050	4
16	Bolt M6x20 DIN 7991	OT.02.04.030	14
17	Bolt M6x20 DIN 933	OT.02.02.060	12
18	Bolt M6x30 DIN 933	OT.02.02.080	2
19	Bolt M8x20 DIN 933	OT.02.02.180	6
20	Bolt M8x25 DIN 933	OT.02.02.190	2
21	Conical washer Ø6	14.502	14
22	Dished washer	14.503	18
23	Washer Ø5/15 DIN 9021	OT.04.02.010	2
24	Washer Ø6/15 SFS 3738	OT.04.03.020	22
25	Washer Ø8/20 SFS 3738	OT.04.03.030	4
26	Nyloc nut M6 DIN 985	OT.03.02.030	4

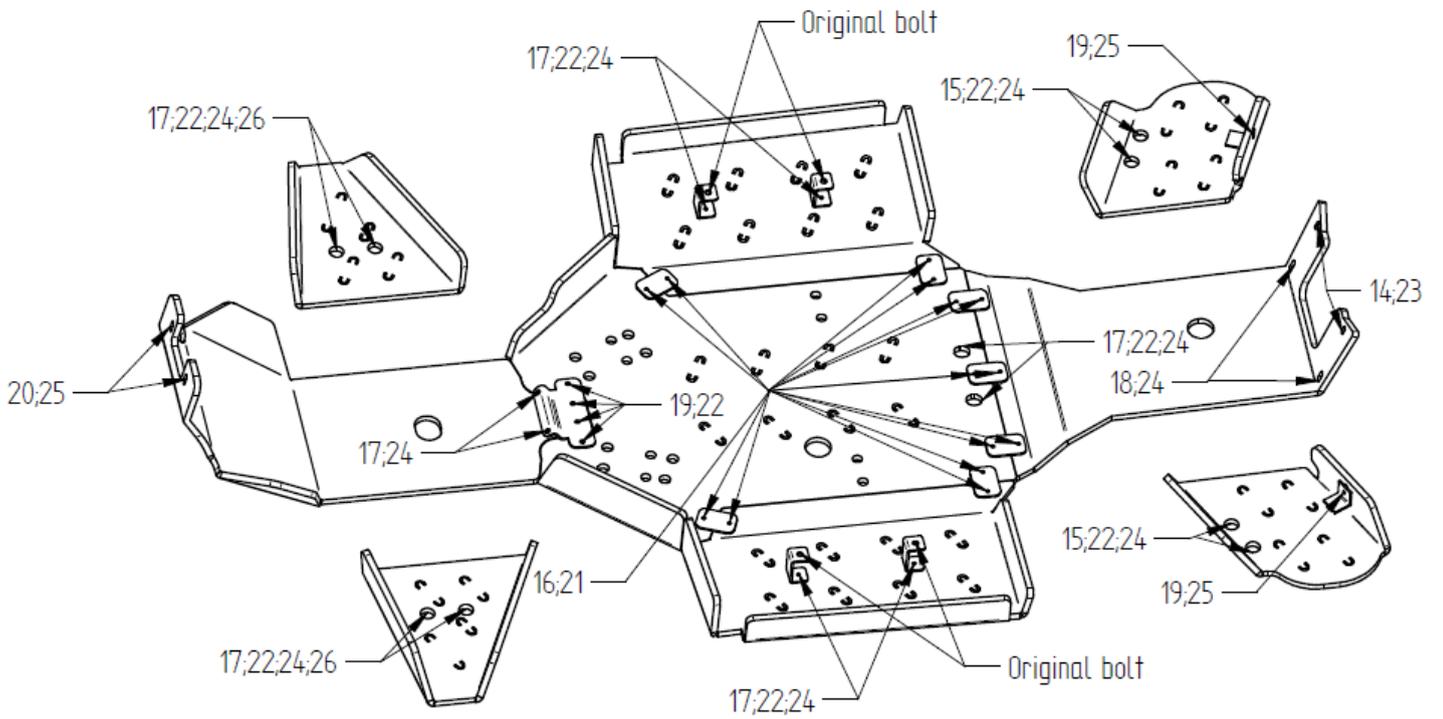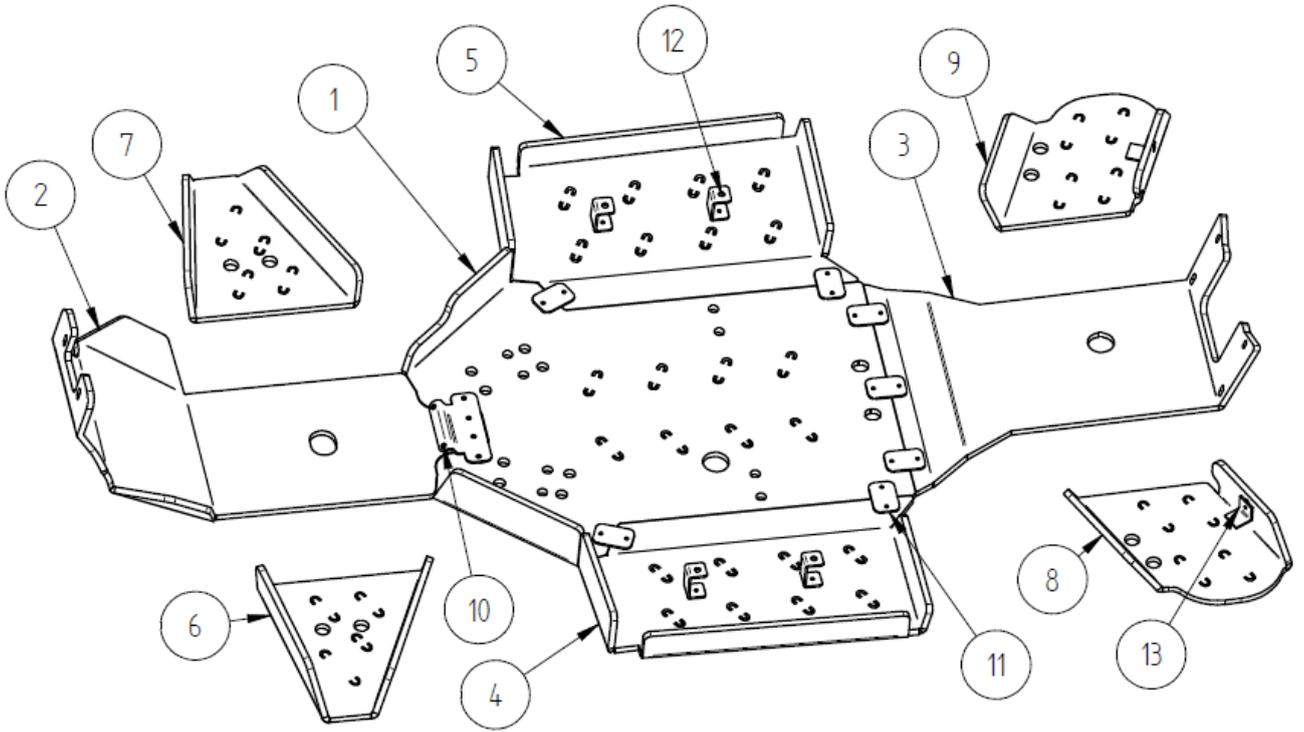


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and roller.




Step 2 Install installation plates 02.1072+ and 02.6408.

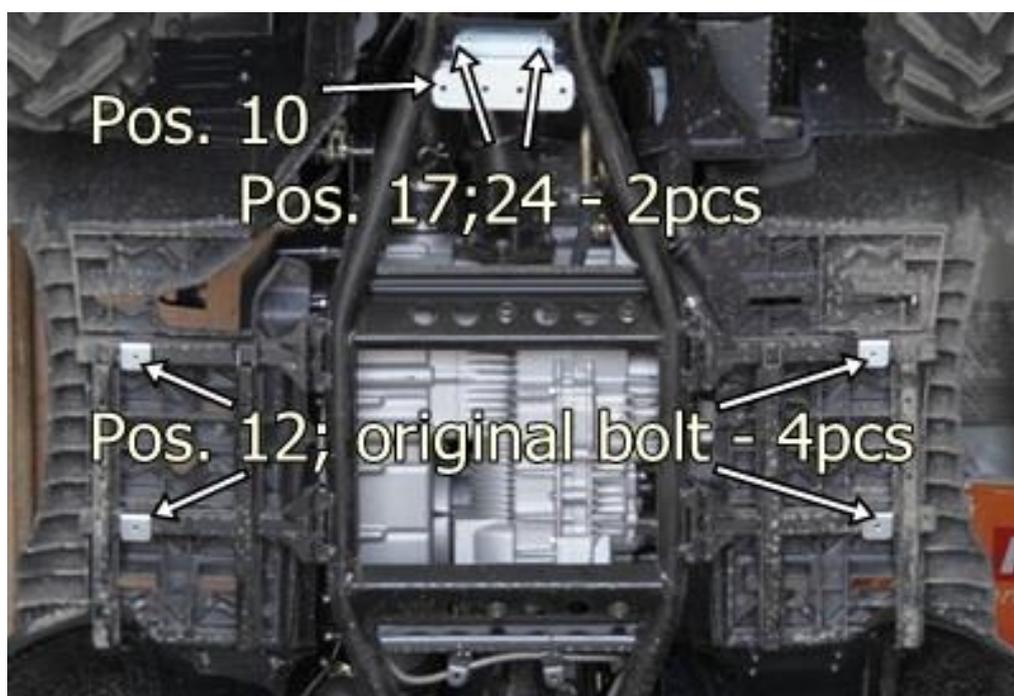



Step 3

Install middle part 02.6202.

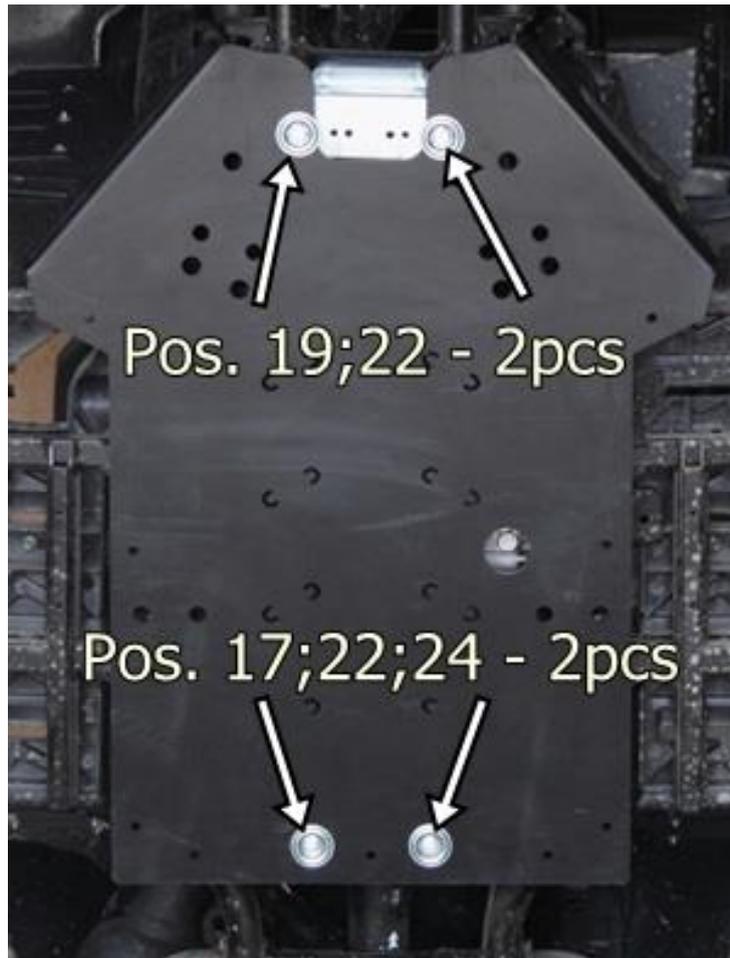


Step 4

Install plates 02.5006.

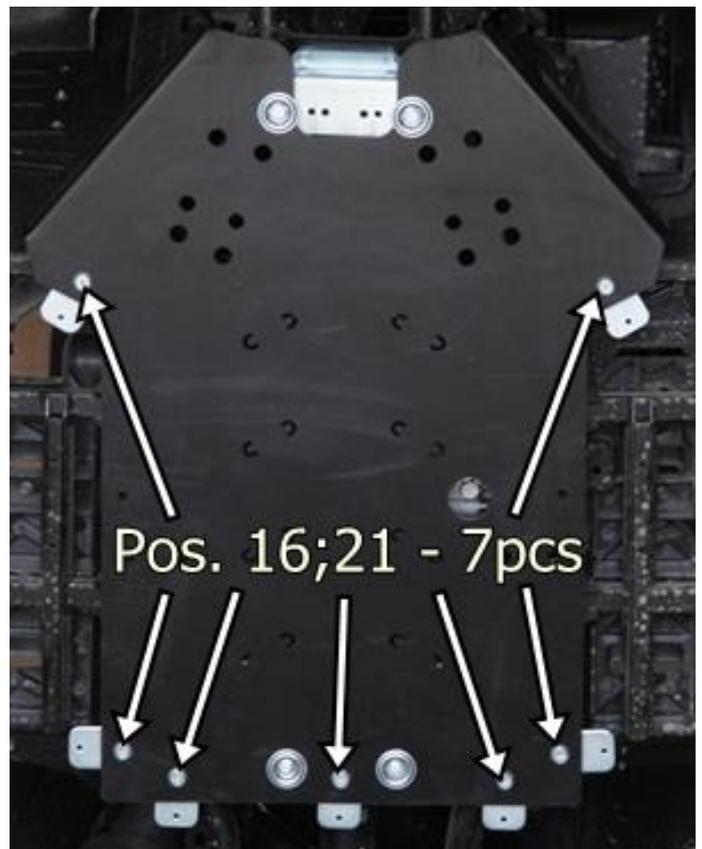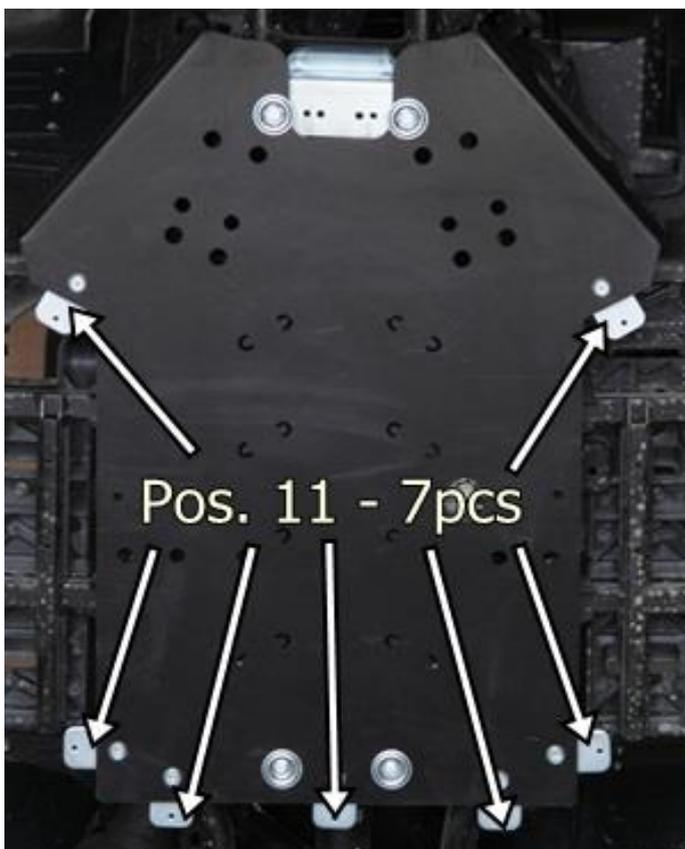


Step 5

Install side protections 02.2854, 02.2855.

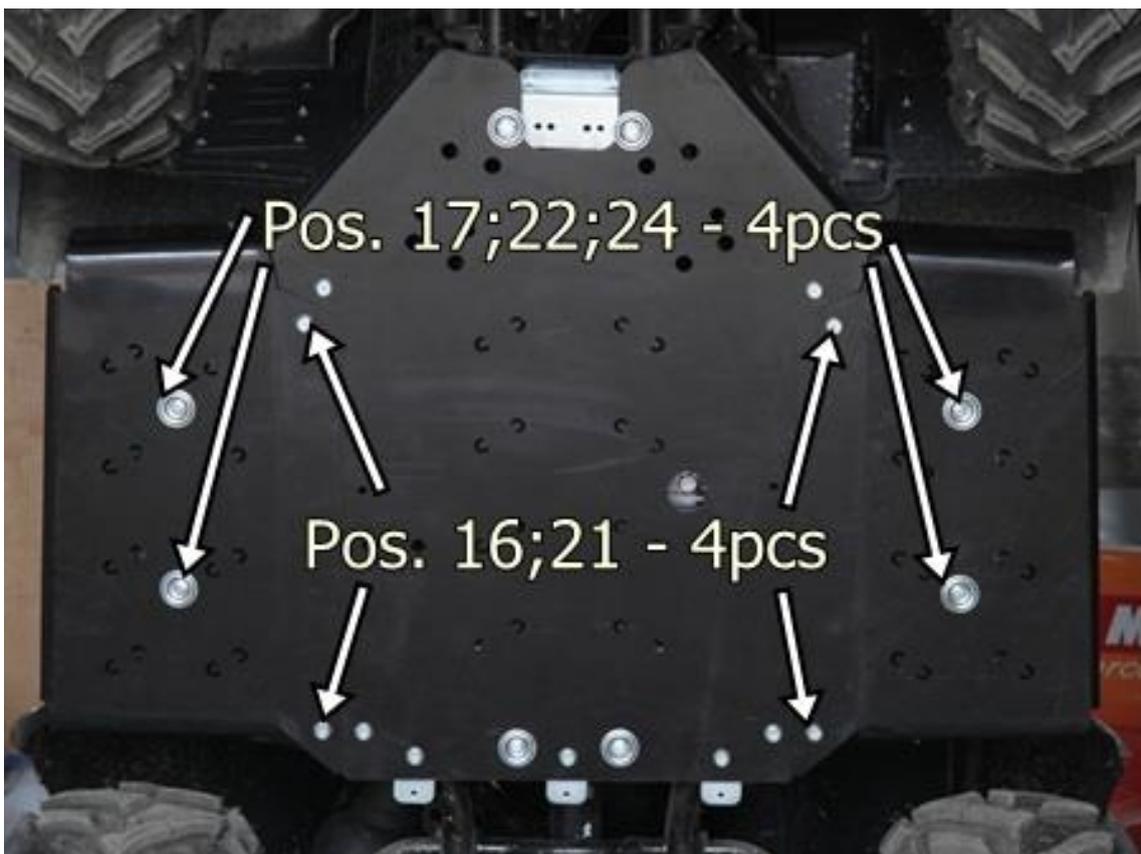


Step 6

Install rear part 02.6203.

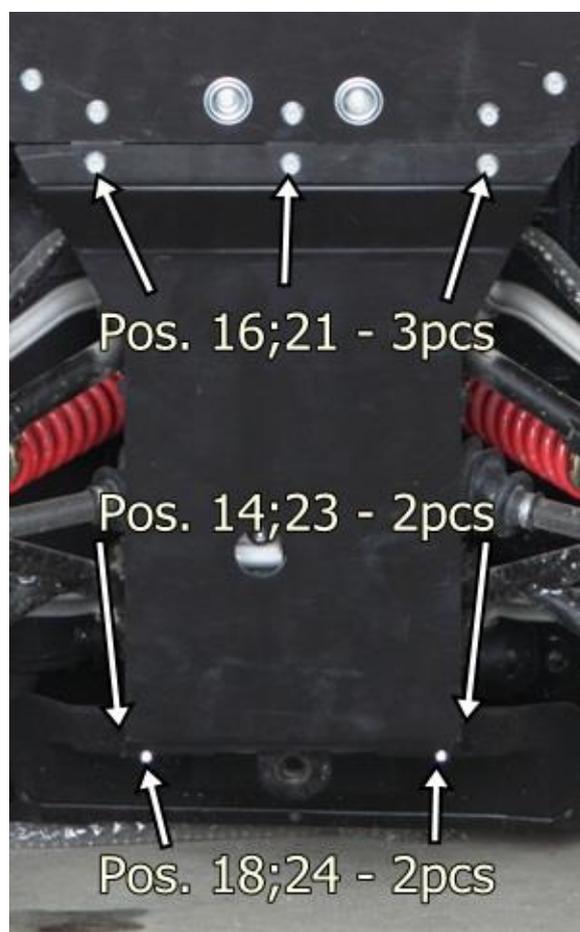


Step 7

Install front part 02.2802. Install roller back.

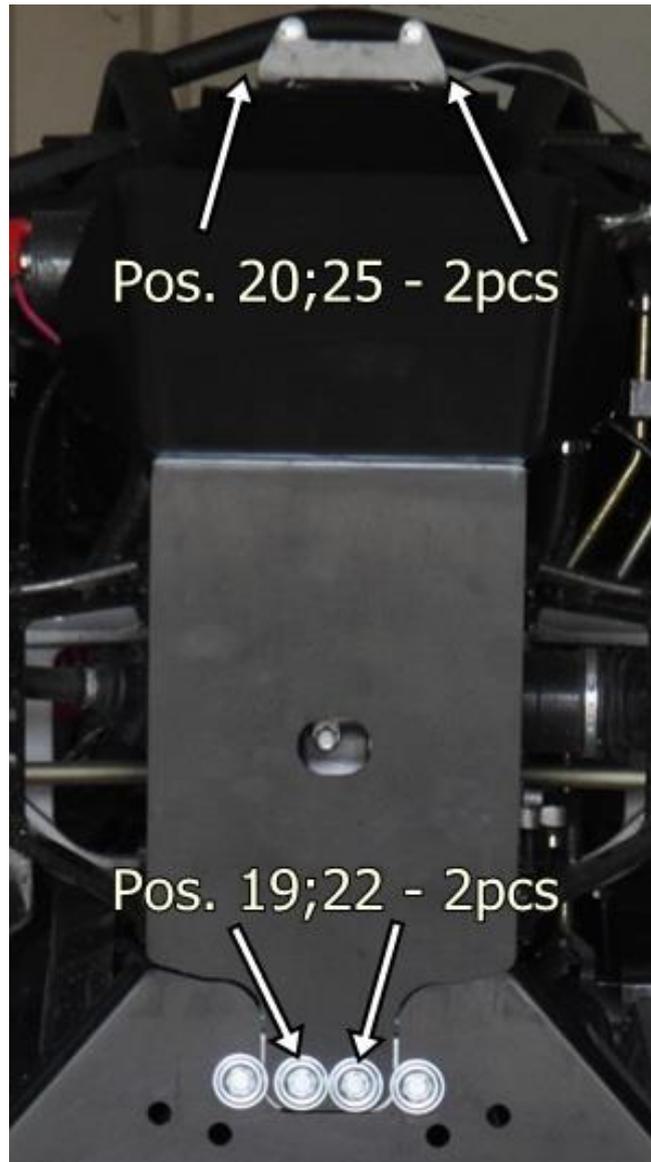

Step 8



Install front arms protections 02.1137P+, 02.1137V+.

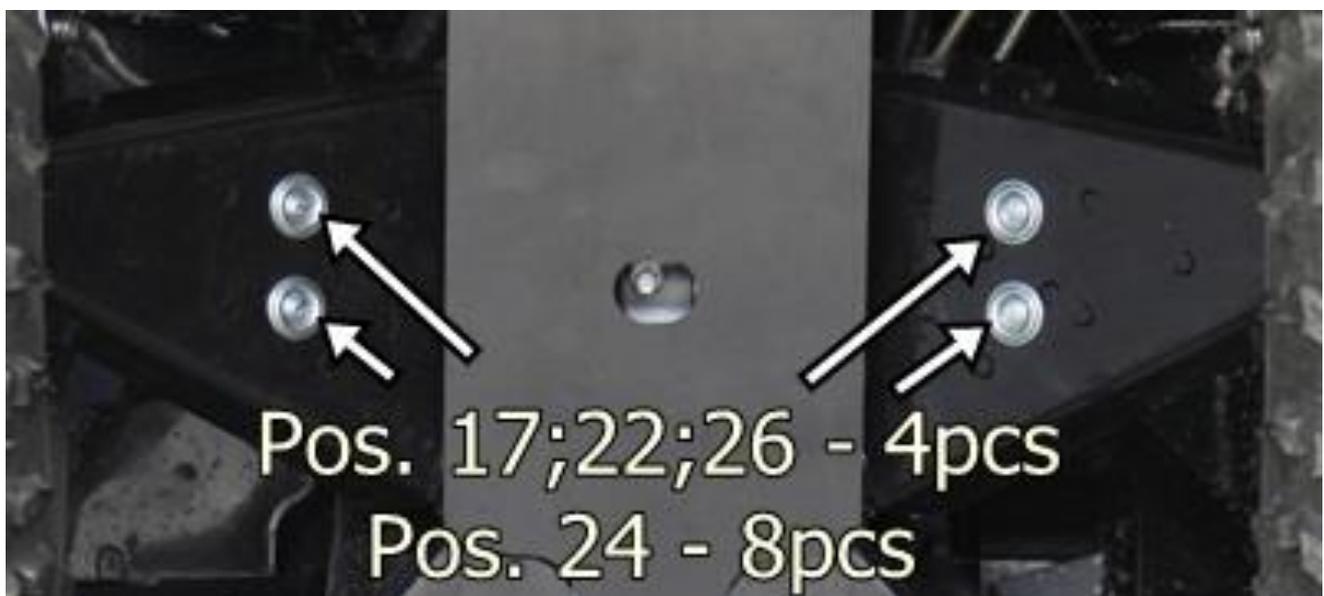

Step 9

Install rear arms protections 02.1138P+, 02.1138V+.

First install the bracket 03.1502 (Pos.13) to the arm protection (do not tighten the bolt). Then place the protection on to the ATV's A-arm. Press the guard against the A-arm tube and tighten the bracket bolt so that the side of the bracket is against the A-arm tube. Finally, attach the other side of the A-arm protection.

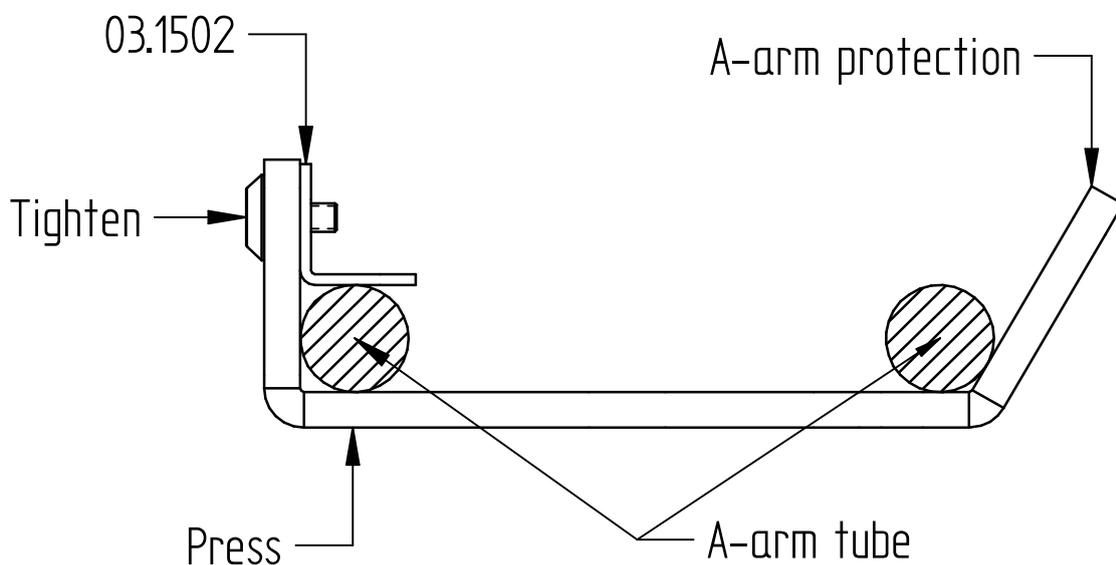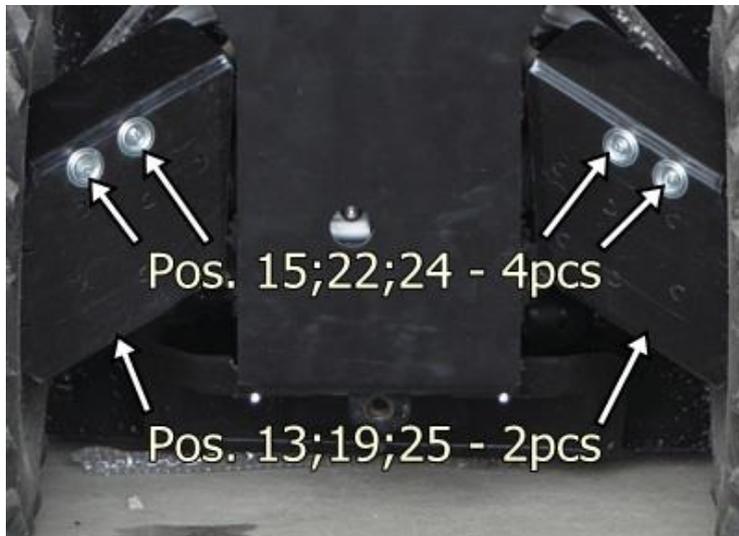

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

