

IRON BALTIC


PLASTIC SKID PLATE

SEGWAY

Fugleman UT10

Code 02.28500

Version 13102023

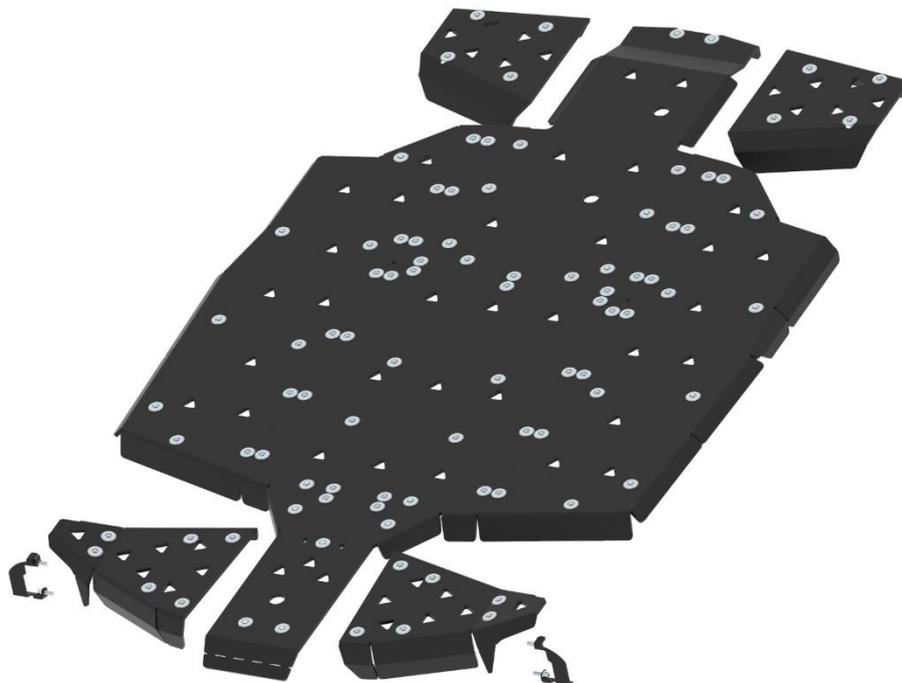

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/NBFQArSd

SPECIFICATION


Pos.	Description	Code	Amount
1	Front part	02.28501	1
2	Middle part	02.28502	1
3	Rear part	02.28503	1
4	Left side protection	02.28504	1
5	Right side protection	02.28505	1
6	Right front A-arm protection	02.28506	1
7	Left front A-arm protection	02.28507	1
8	Right rear A-arm protection	02.28508	1
9	Left rear A-arm protection	02.28509	1
10	Right caliper protector (BLACK)	02.28510	1
11	Left caliper protector (BLACK)	02.28511	1
12	Threaded plate	02.2305	7
13	Connection plate	02.5006	19
14	Front A-arm bracket	02.8210	4
15	Dished washer	14.503	93
16	Bolt M6x16 DIN933	OT.02.02.050	38
17	Bolt M6x20 DIN933	OT.02.02.060	32
18	Bolt M6x25 DIN933	OT.02.02.070	14
19	Bolt M6x35 DIN933	OT.02.02.145	2
20	Bolt M8x25 DIN933	OT.02.02.190	7
21	Bolt M10x1,25-30 DIN912 ZP	OT.02.06.055	4
22	Washer Ø6/15 SFS3738	OT.04.03.020	86
23	Washer Ø10 DIN125	OT.04.03.020	4

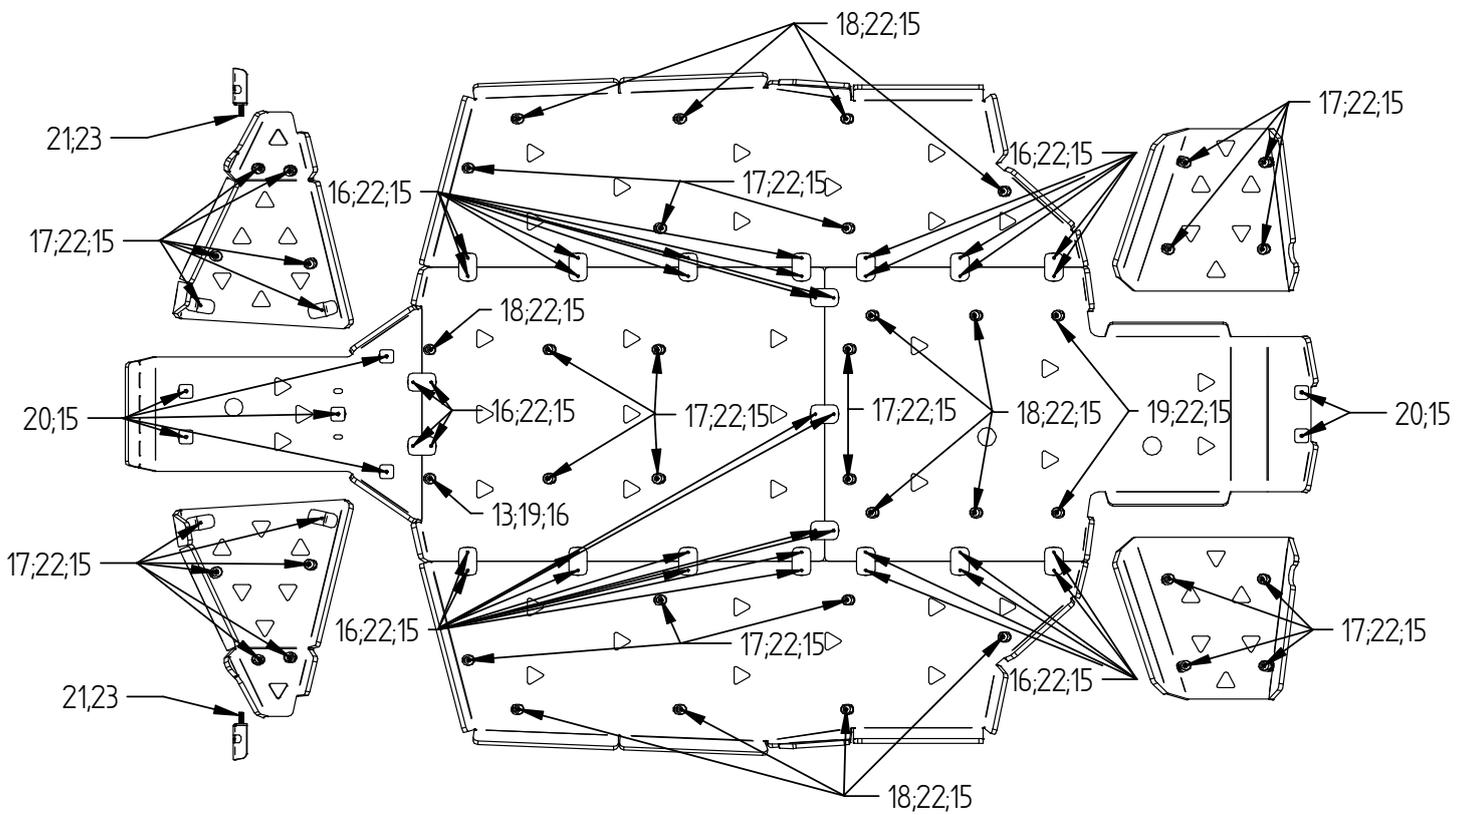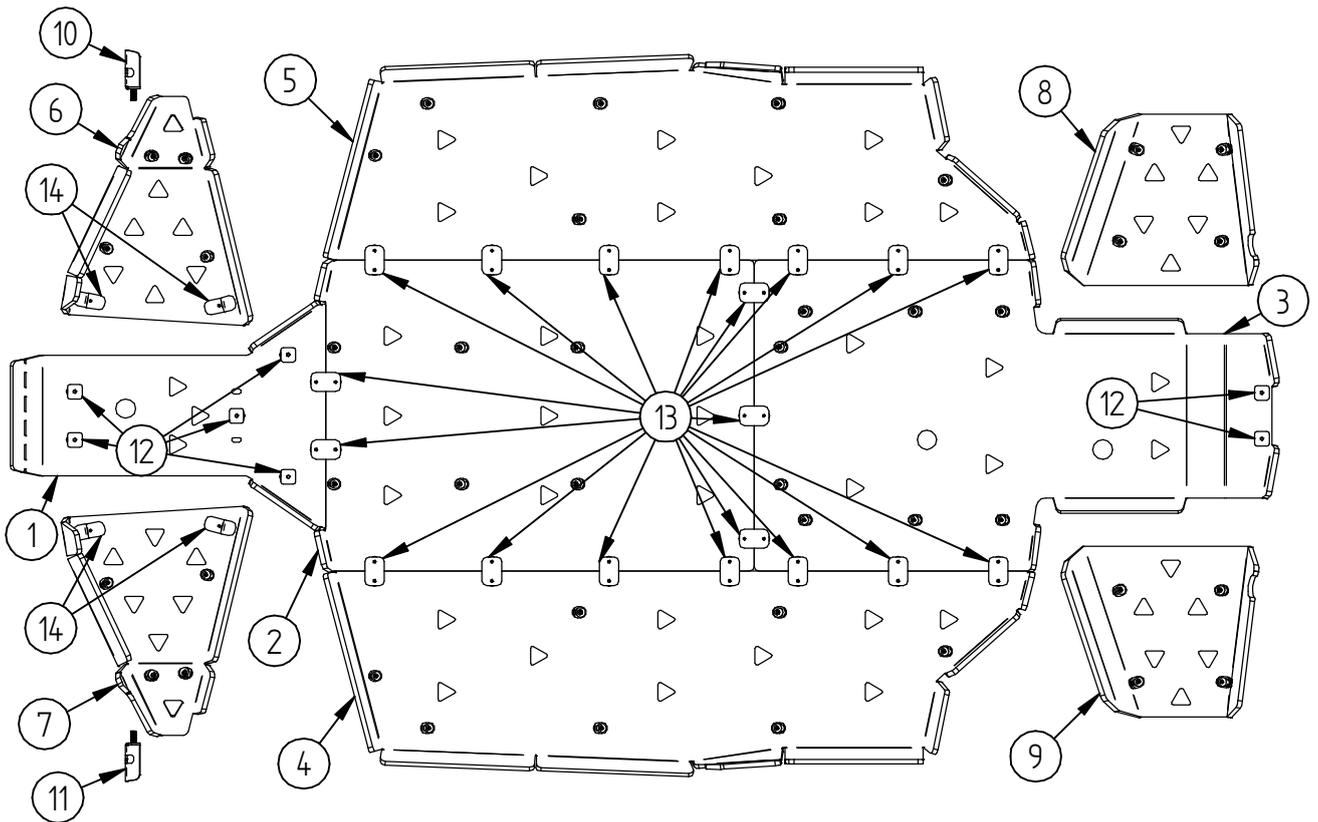

PAIGALDUSJUHEND


Step 1

Remove all original skid plate parts. Also remove bolts from the side plastic protection as shown in the picture.

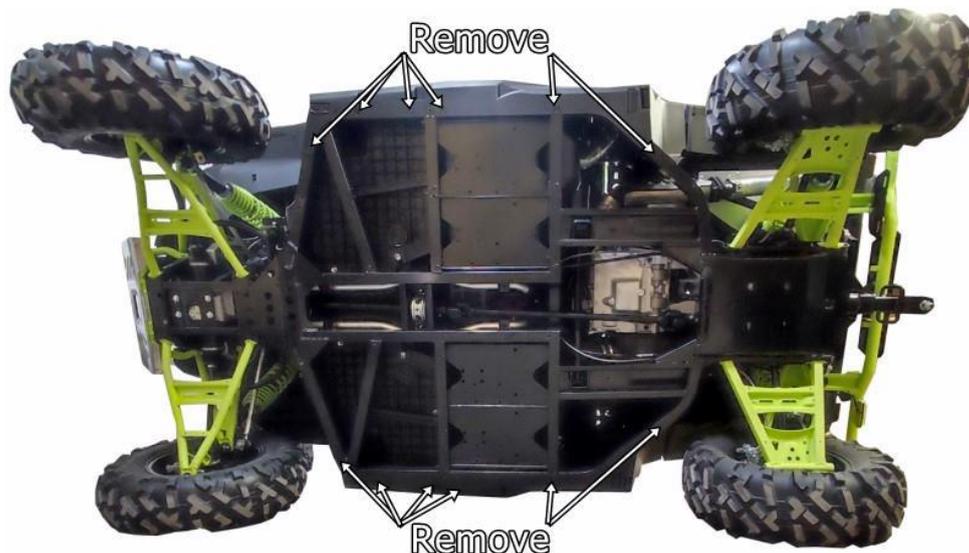


Step 2

Remove front brake caliper bolts. Install right caliper protector (Pos.10) and left caliper protector (Pos.11), use M10x1,25-30 bolts (Pos.21) and Ø10 washers (Pos.23). Use thread lock fluid on bolts!

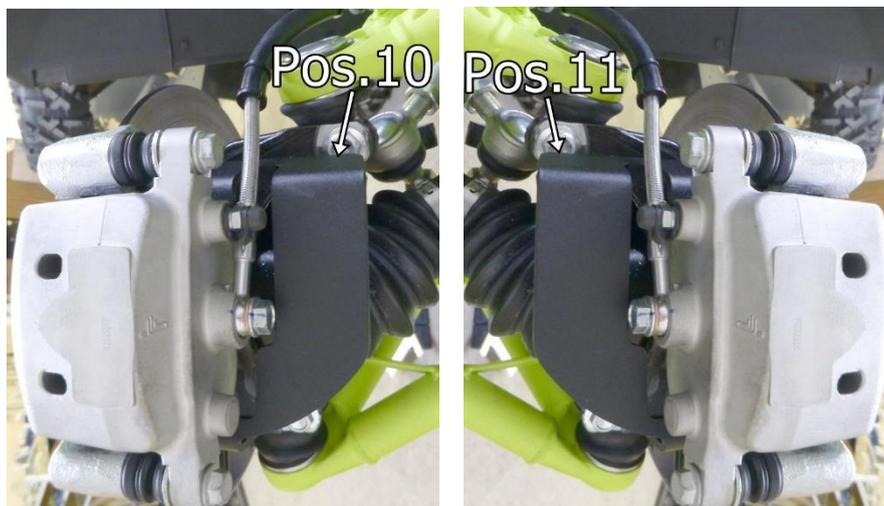


Step 3

Install front right A-arm protection (Pos.6) and front left A-arm protection (Pos.7). For fastening use front a-arm brackets (Pos.14), M6x20 bolts (Pos.17), Ø6 mm washers (Pos.22) and dished washers (Pos.15).

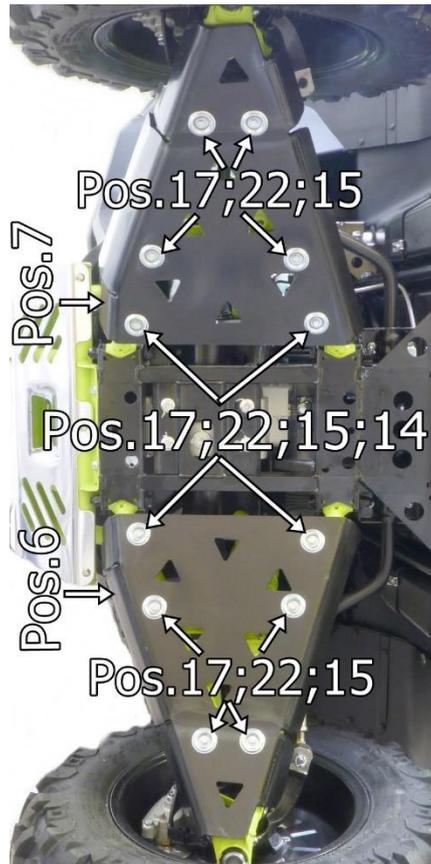

Step 4

Install right rear A-arm protection (Pos.8) and left rear A-arm protection (Pos.9). For fastening use M6x20 bolts (Pos.17), Ø6 mm washers (Pos.22) and dished washers (Pos.15).

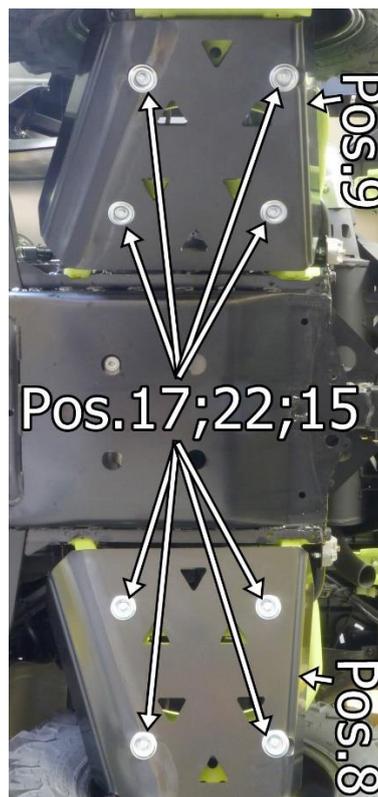


Step 5

Install middle part (Pos.2). For fastening use M6x20 bolts (Pos.18), M6x25 bolts (Pos.19), Ø6 mm washers (Pos.22) and dished washers (Pos.15).




Step 6

Install connection plates (Pos.13) to middle part. For fastening use M6x16 bolts (Pos.16), Ø6 mm washers (Pos.22) and dished washers (Pos.15).

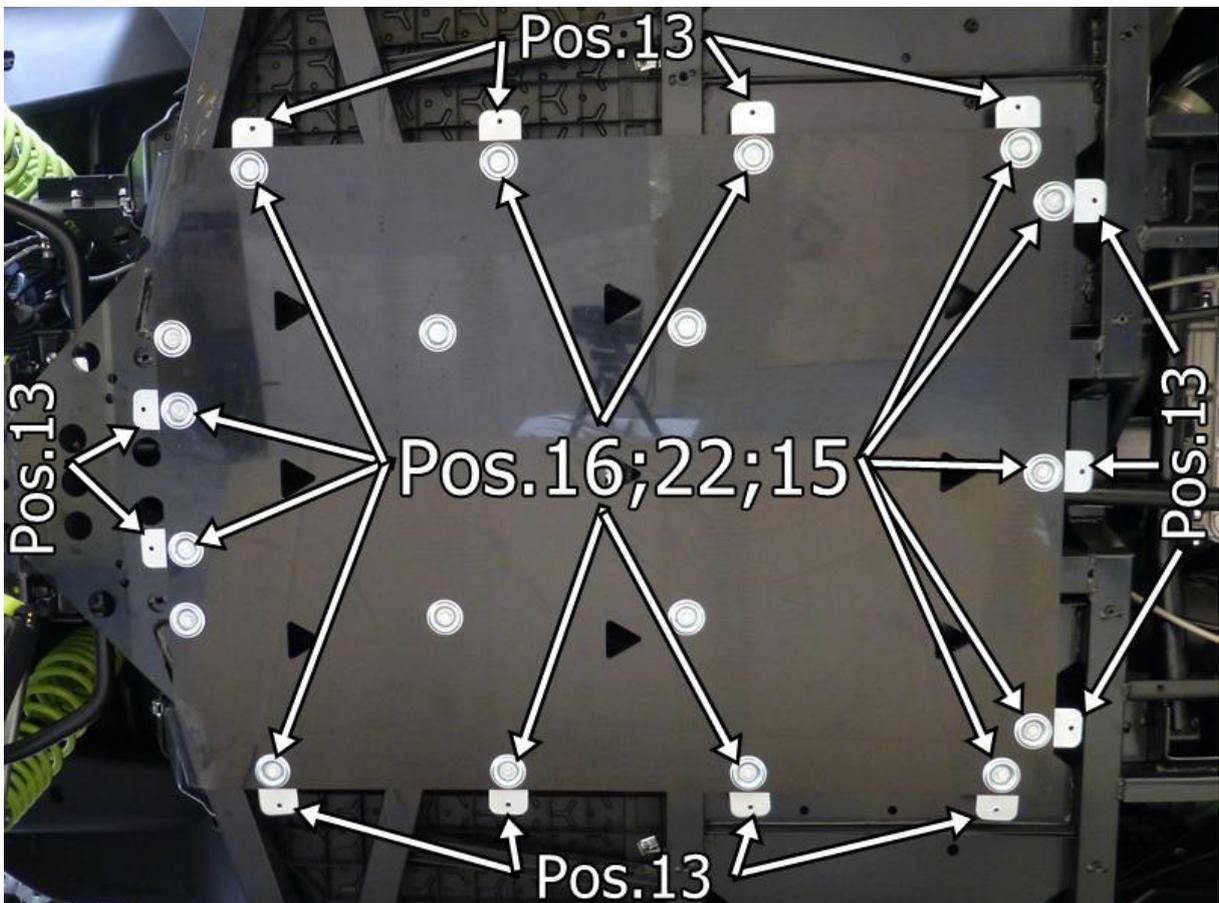


Step 7

Install front part (Pos.1). For fastening use M8x25 bolts (Pos.20), M6x16 bolts (Pos.16), Ø6 washers (Pos.22), dished washers (Pos.15) and threaded plates (Pos.12).

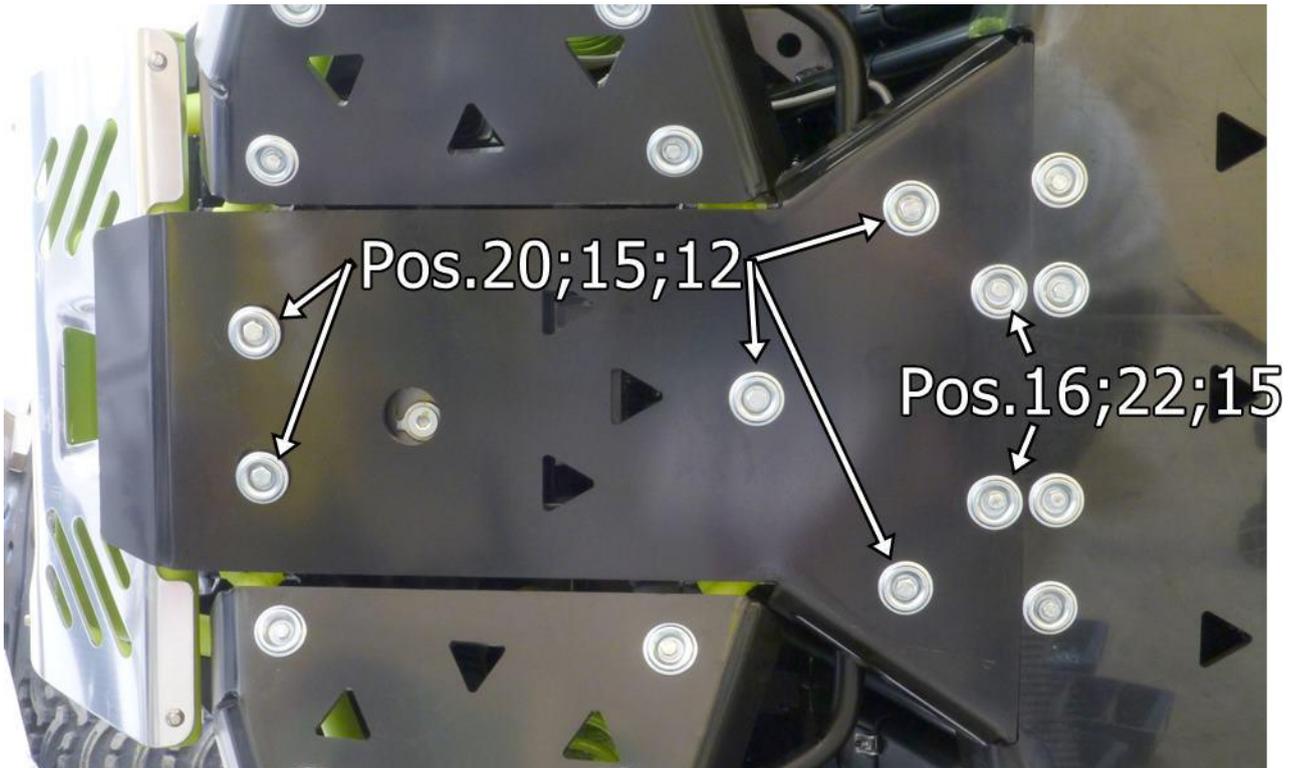


Step 8

Install rear part (Pos.3). For fastening use M6x16 bolts (Pos.16), M6x20 bolts (Pos.17), M6x25 bolts (Pos.18), M6x35 bolts (Pos.19), M8x25 bolts (Pos.20), Ø6 mm washers (Pos.22), dished washers (Pos.15) and threaded plates (Pos.12).

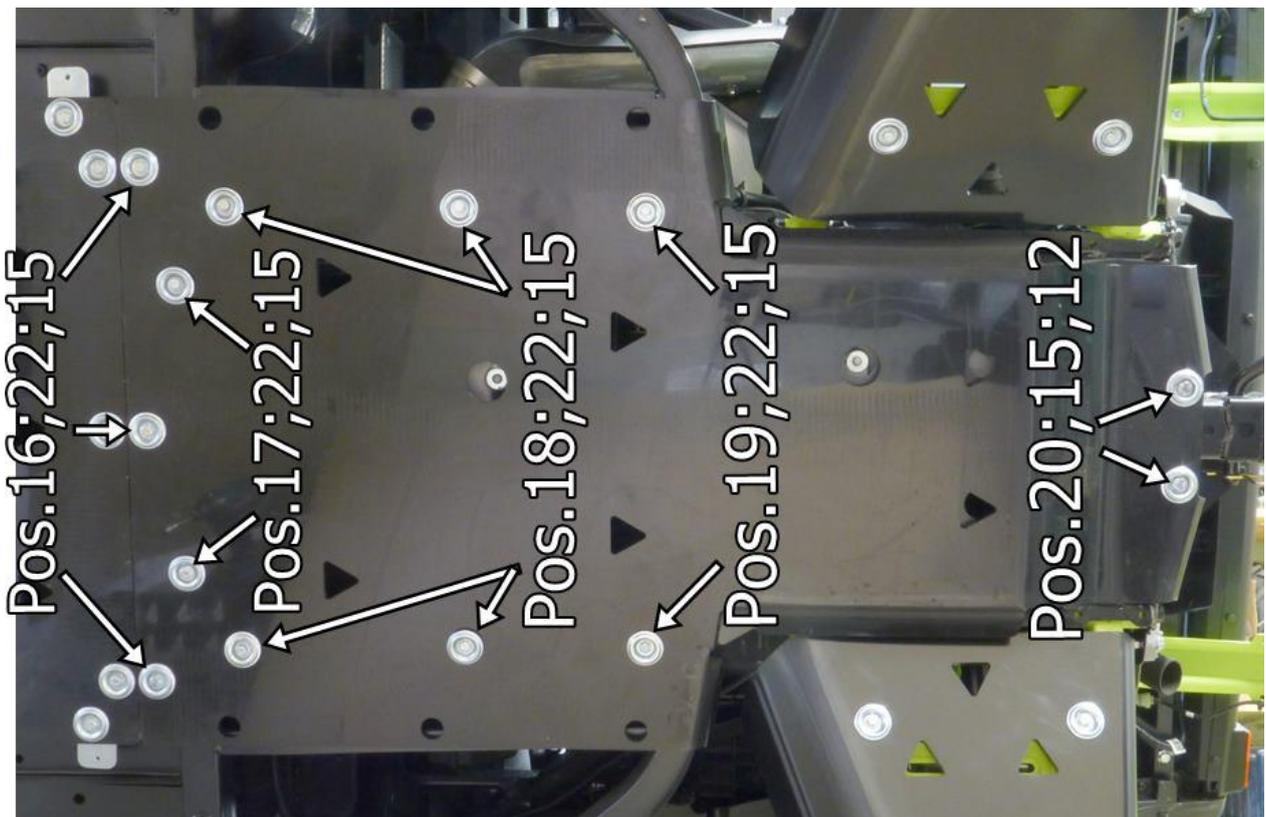


Step 9

Install connection plates (Pos.13) to rear part. Use M6x16 bolts (Pos.16), Ø6 mm washers (Pos.22) and dished washers (Pos.15).

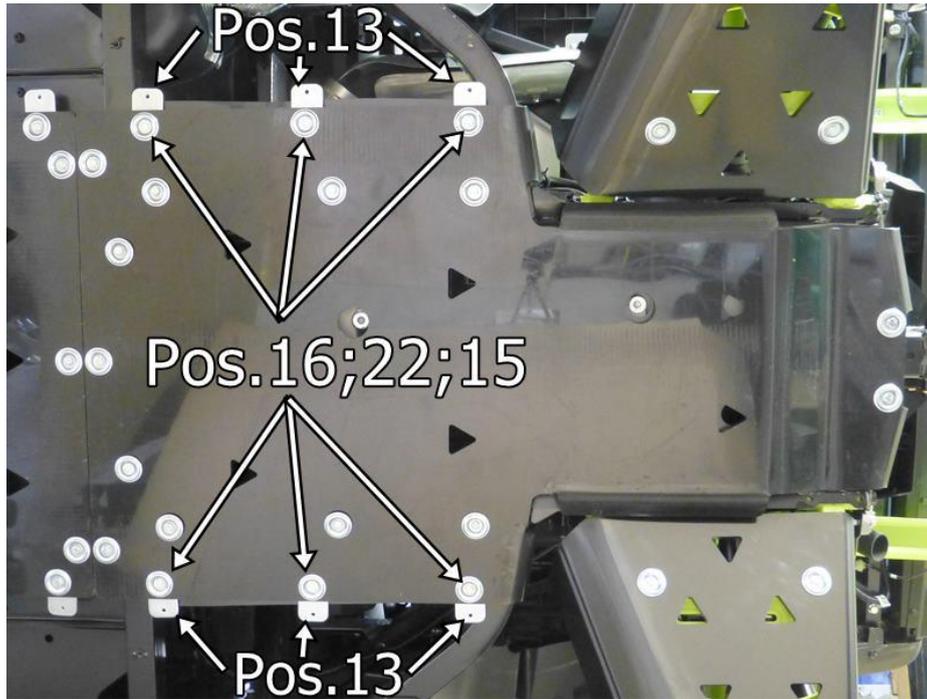

Step 10

Install right side protection (Pos.5) and left side protection (Pos.4). For fastening use M6x16 bolts (Pos.16), M6x20 bolts (Pos.17), M6x25 bolts (Pos.18), Ø6 mm washers (Pos.22) and dished washers (Pos.15).

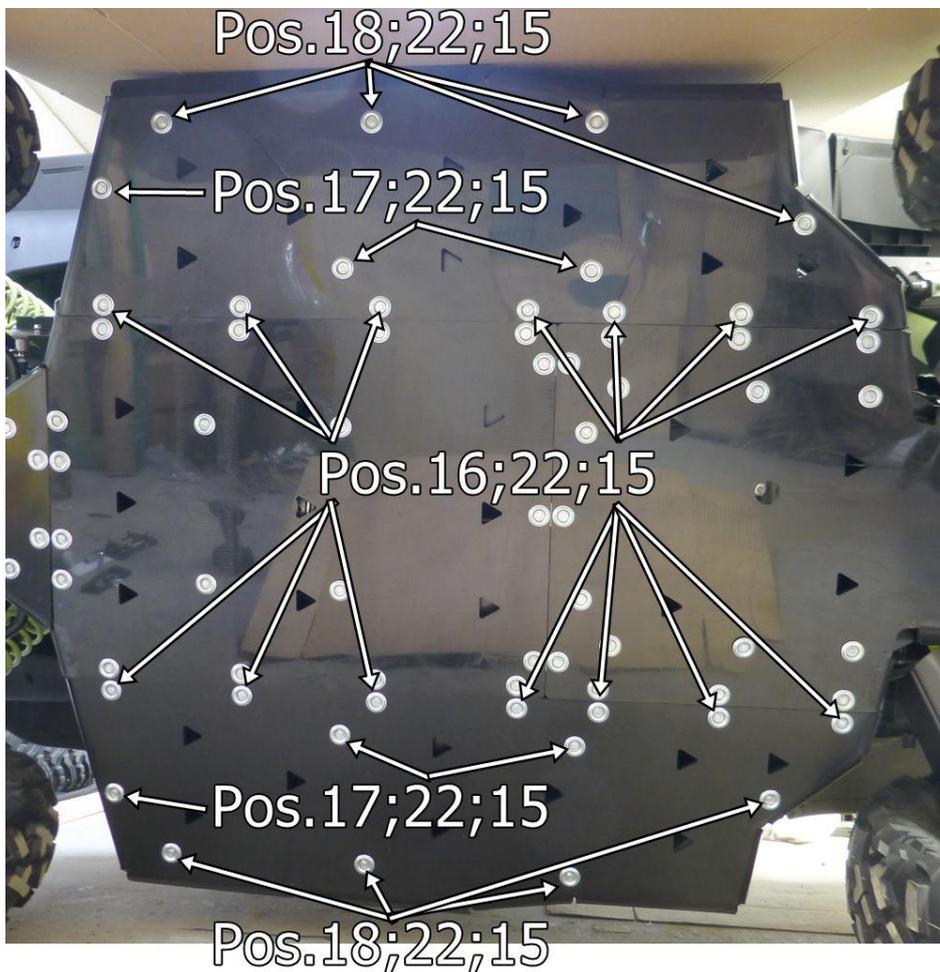

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

