

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/vMnoAady

ALUMINIUM SKID PLATE

SEGWAY SNARLER AT5 S

Code 02.31400

Version 05012024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.31401K	1
2	Front protection reinforcement	02.31402	1
3	Front protection 2	02.31403	1
4	Middle protection	02.31404K	1
5	Oil filter plate	02.27505K	1
6	Rear protection	02.31405K	1
7	Front right control arm protection	02.31406	1
8	Front left control arm protection	02.31407	1
9	Rear right control arm protection	02.31408K	1
10	Rear left control arm protection	02.31409K	1
11	Middle mounting bracket	02.31410	2
12	Right mounting bracket	02.31411	1
13	Left mounting bracket	02.31412	1
14	Mounting bracket for front control arm protections	02.31413	2
15	Connecting plate	02.5006	5
16	Bracket	02.5710	2
17	Distance plate	03.5204	2
18	Conical washer 6	14.502	4
19	Dished washer	14.503	44
20	Bolt M6x12 DIN933	OT.02.02.030	18
21	Bolt M6x16 DIN933	OT.02.02.050	2
22	Bolt M6x20 DIN933	OT.02.02.060	10
23	Bolt M6x25 DIN933	OT.02.02.070	10
24	Bolt M6x30 DIN933	OT.02.02.080	4
25	Bolt M6x35 DIN933	OT.02.02.090	4
26	Bolt M6x20 DIN7991	OT.02.04.030	4
27	Washer Ø6/15 SFS3738	OT.04.03.020	52
28	Nyloc nut M6 DIN985	OT.03.02.030	4

TOOLS REQUIRED FOR INSTALLATION:





- Spanner 10mm
- Spanner 15mm
- Socket wrench 10mm
- Allen wrench 4mm
- Allen wrench 5mm



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

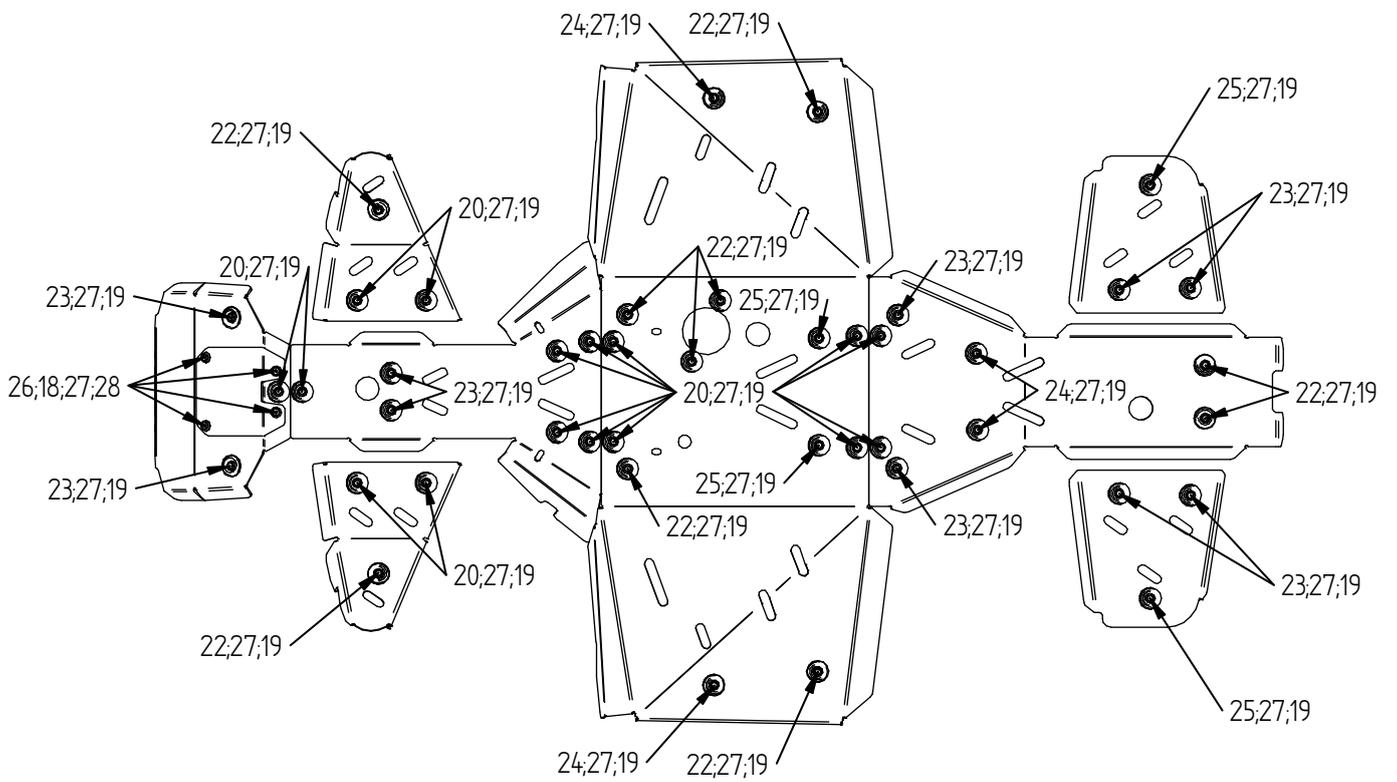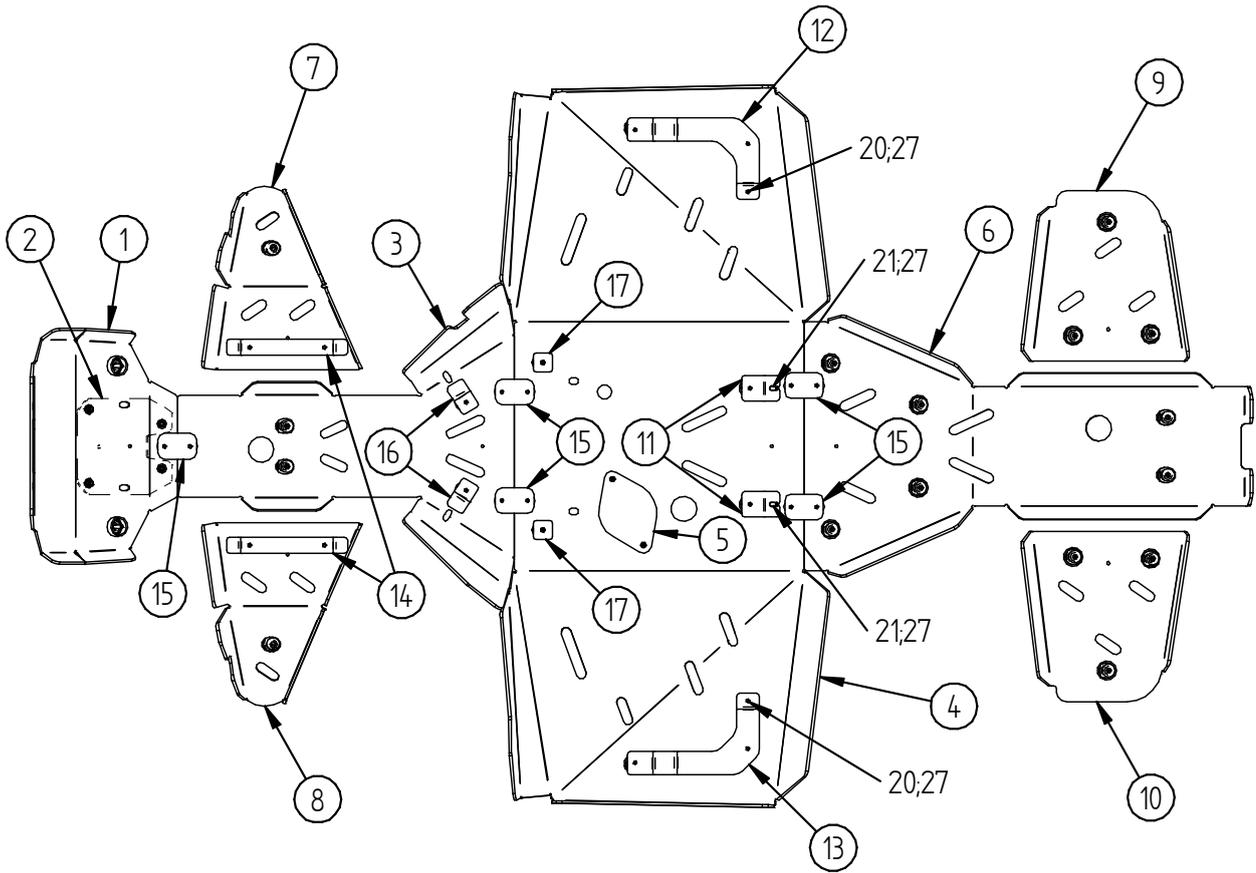


FITTING INSTRUCTIONS


Step 1 Remove standard skid plate and control arm protections. Remove winch fairlead.





Step 2 Install mounting brackets 02.31410 (Pos. 11), 02.31411 (Pos. 12), 02.31412 (Pos. 13) for middle protection.

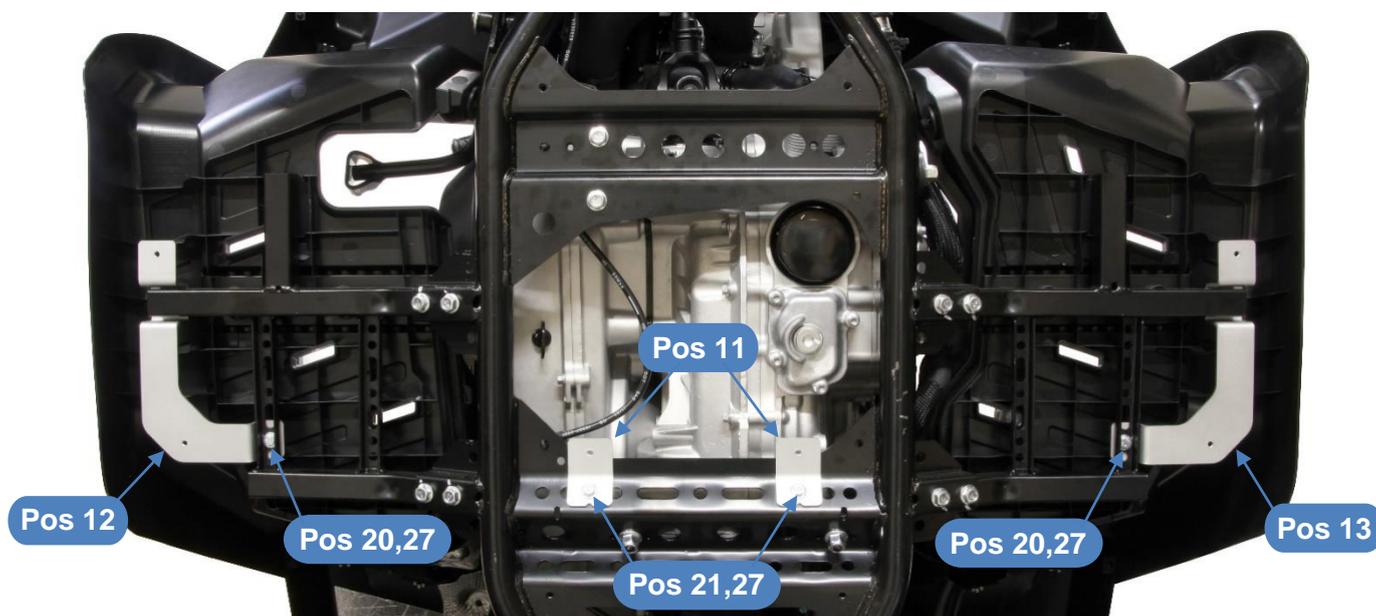

Step 3 Install oil filter plate 02.27505K (Pos. 5) to the middle protection.

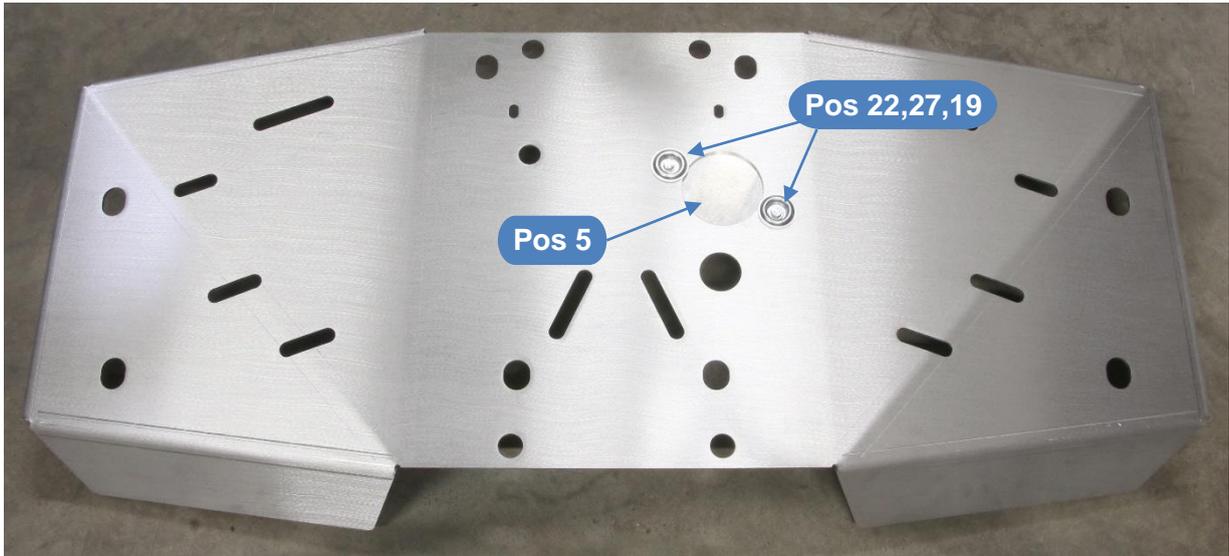


Step 4 Install middle protection 02.31404K (Pos. 4).
NB! Pos. 17 goes between ATV frame and skid plate!

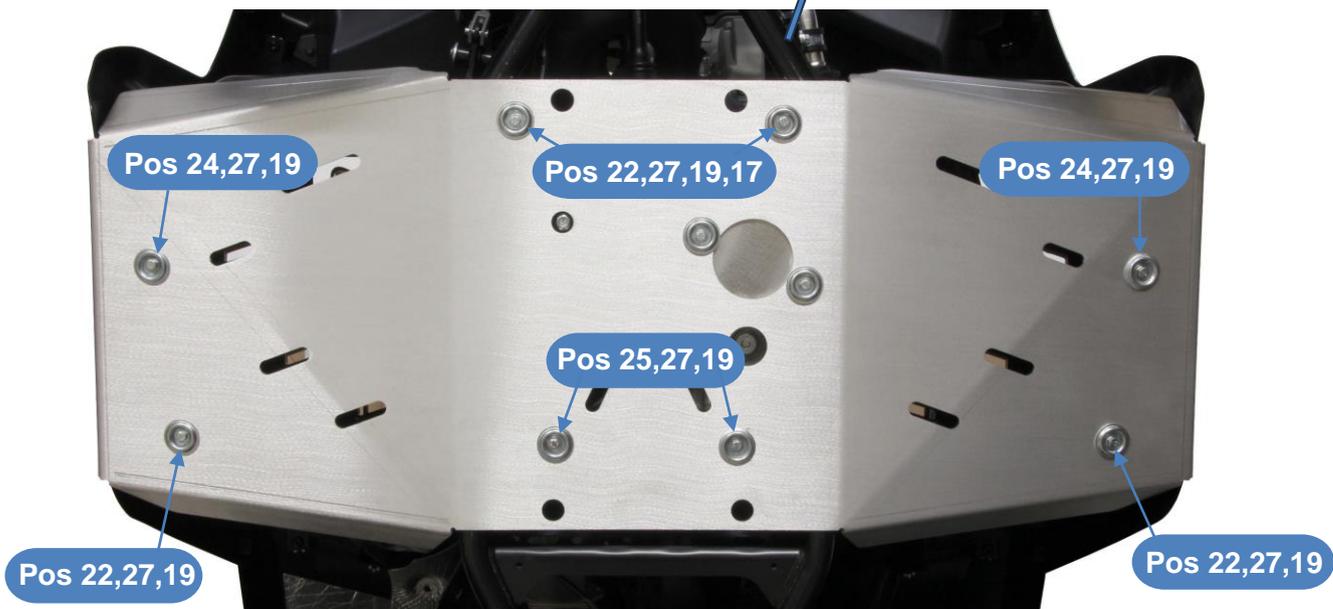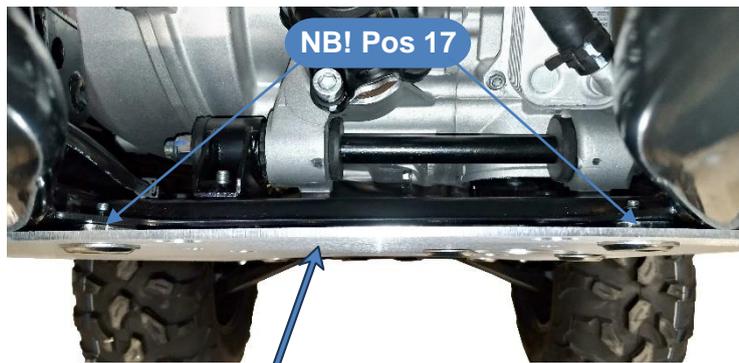


Step 5

Install plates 02.5006 (Pos. 15) to the middle protection.

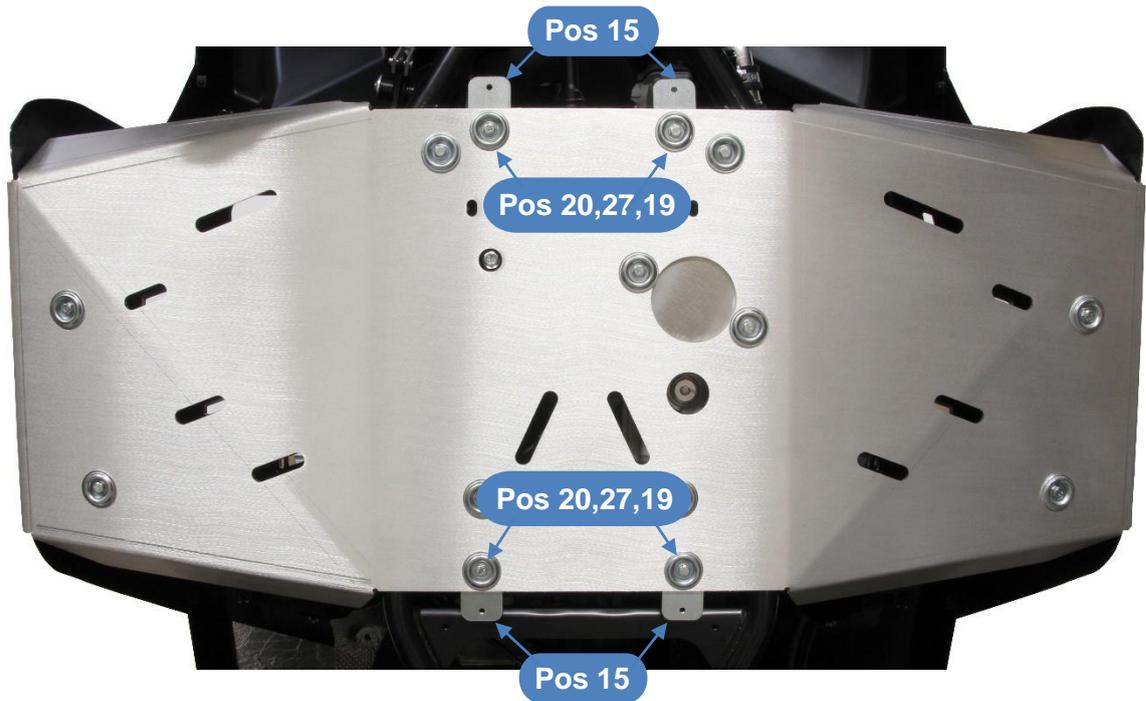


Step 6

Install front protection 2 (Pos. 3) 02.31403 and connecting plate 02.5006 (Pos. 15).

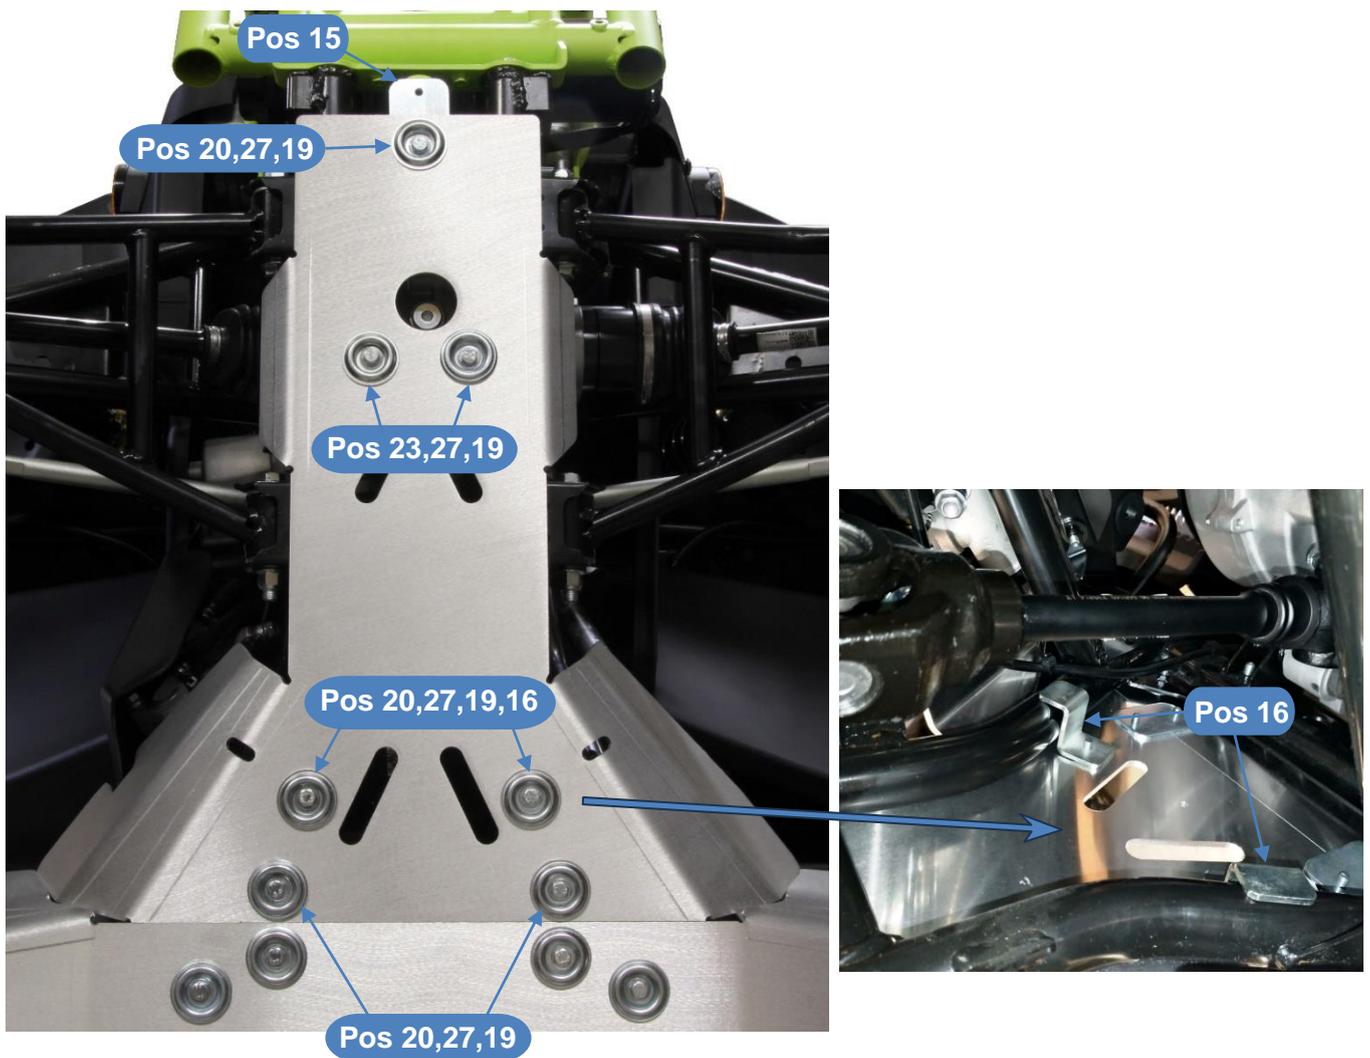

Step 7

Install front protection reinforcement 02.31402 (Pos. 2) to front protection 02.31401K (Pos. 1).

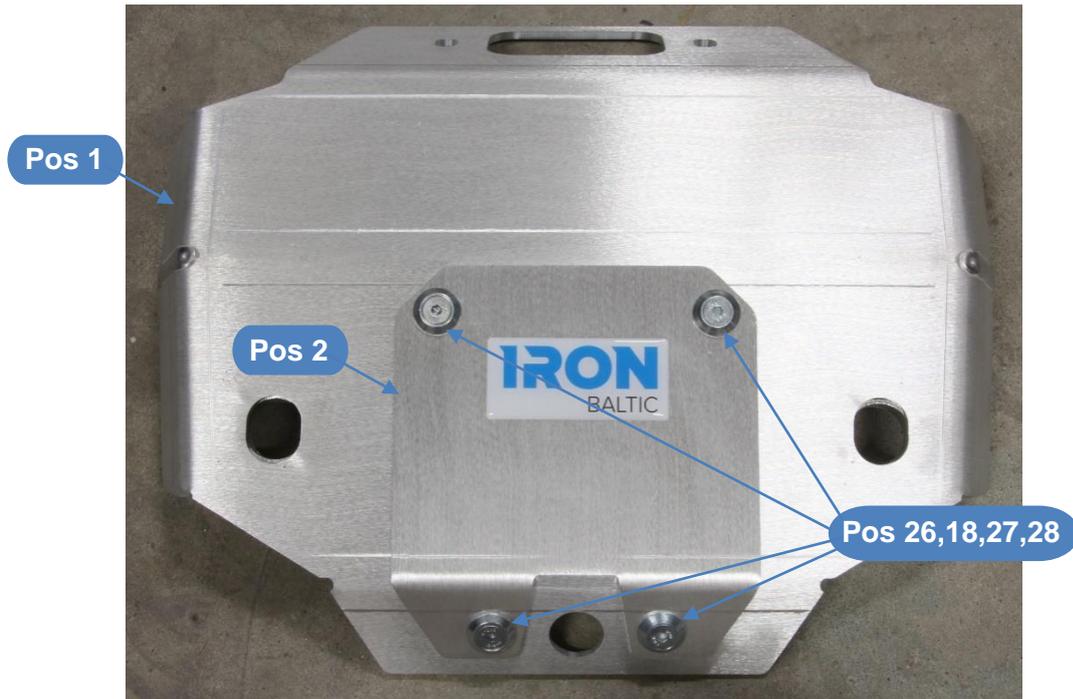

Step 8

Install front protection and winch fairlead.





Step 9

Install rear protection 02.31405K (Pos. 6).




Step 10

Install front control arm protections 02.31406 (Pos. 7) and 02.31407 (Pos. 8).

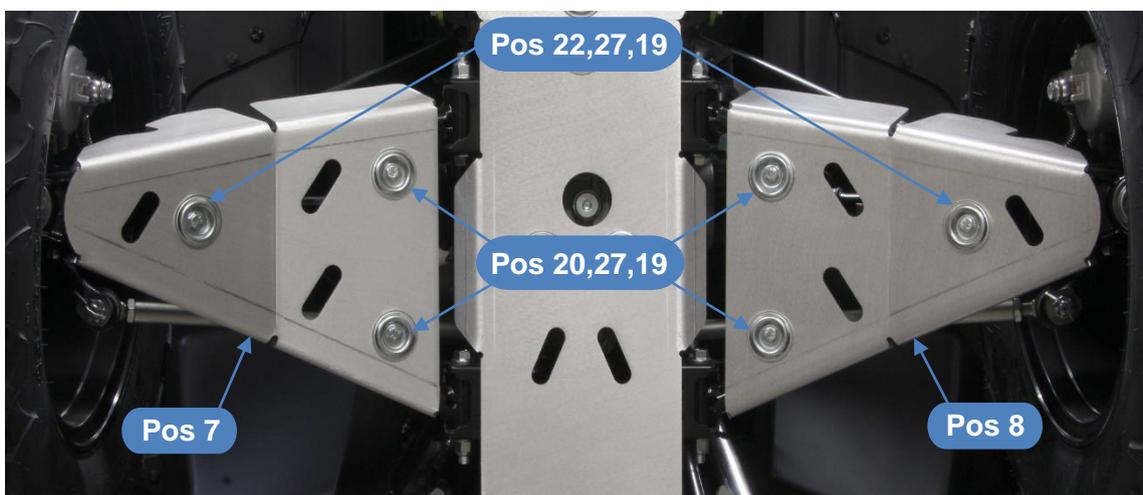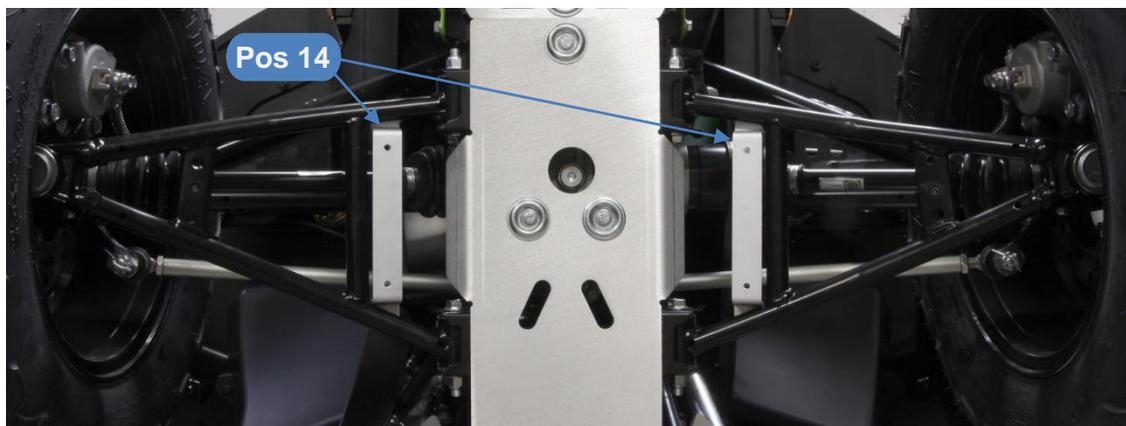

Step 11 Install rear control arm protections 02.31408K (Pos. 9) and 02.31409K (Pos. 10).

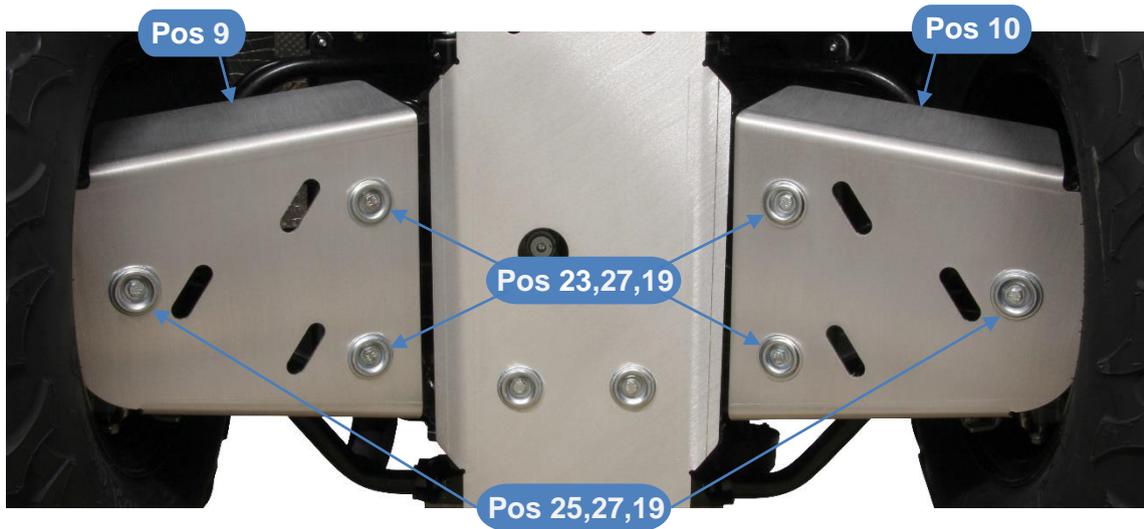

Step 12 To remove the oil filter cover plate, remove the bolt indicated with arrow and loosen the other bolt. Slide the plate away.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

