

# IRON BALTIC

## PLASTIC SKID PLATE

# SEGWAY SNARLER AT5 L

Code 02.31700

Version 19012024



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/kQPIi6X5](http://code.ironbaltic.com/u/kQPIi6X5)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection with reinforcement	02.31502K	1
2	Front protection 2	02.31503	1
3	Middle protection	02.31704K	1
4	Oil filter plate	02.27505K	1
5	Rear protection	02.31705K	1
6	Front right control arm protection	02.31506	1
7	Front left control arm protection	02.31507	1
8	Rear right control arm protection	02.31508K	1
9	Rear left control arm protection	02.31509K	1
10	Right mounting bracket	02.31411	1
11	Left mounting bracket	02.31412	1
12	Mounting bracket for front control arm protections	02.31413	2
13	Connecting plate	02.5006	5
14	Bracket	02.5710	2
15	Distance plate	03.5204	2
16	Dished washer	14.503	42
17	Bolt M6x12 DIN933	OT.02.02.030	2
18	Bolt M6x16 DIN933	OT.02.02.050	16
19	Bolt M6x25 DIN933	OT.02.02.070	8
20	Bolt M6x30 DIN933	OT.02.02.080	10
21	Bolt M6x35 DIN933	OT.02.02.090	4
22	Bolt M6x40 DIN933	OT.02.02.100	4
23	Bolt M10x30 DIN961	OT.02.08.340	2
24	Washer Ø6/15 SFS3738	OT.04.03.020	44
25	Washer Ø10 DIN125	OT.04.01.040	2

## TOOLS REQUIRED FOR INSTALLATION:





- Spanner 15mm
- Spanner 17mm
- Socket wrench 10mm
- Allen wrench 5mm



## NB!

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**

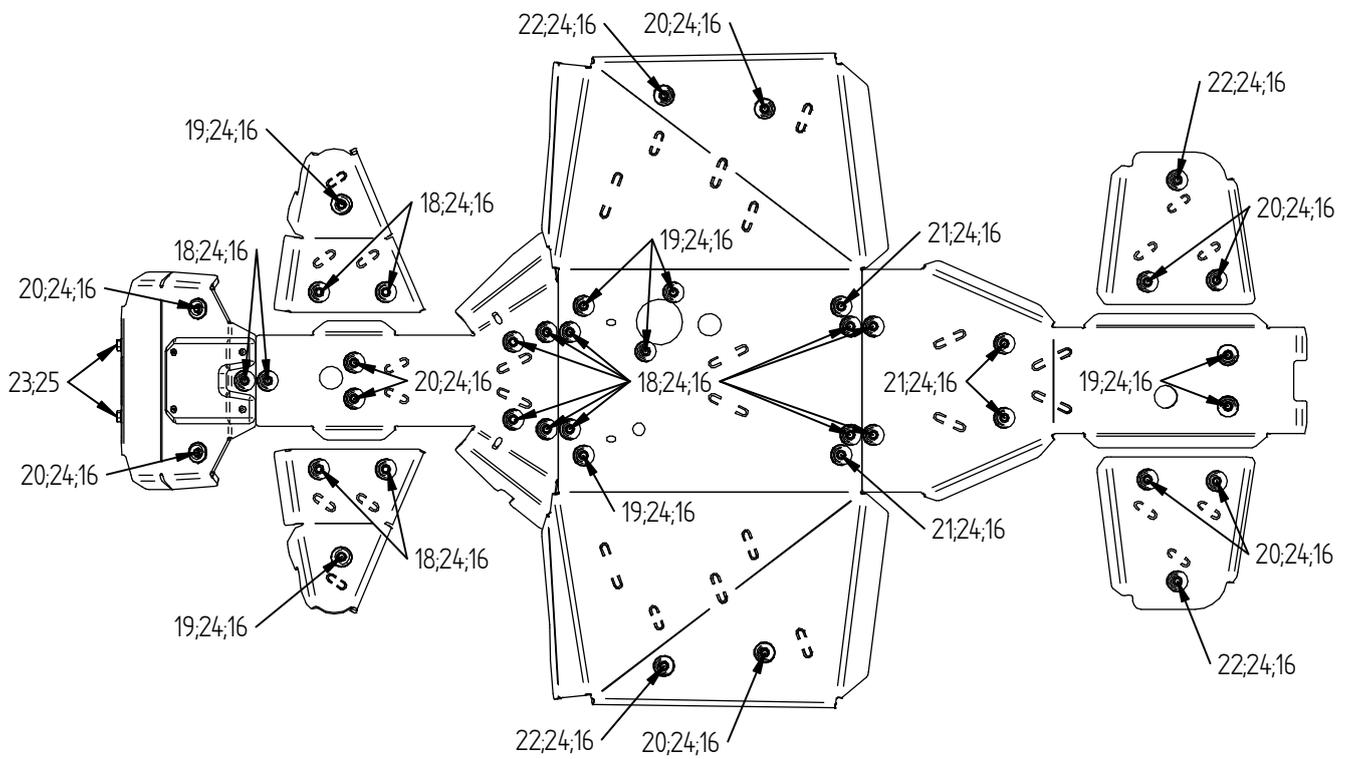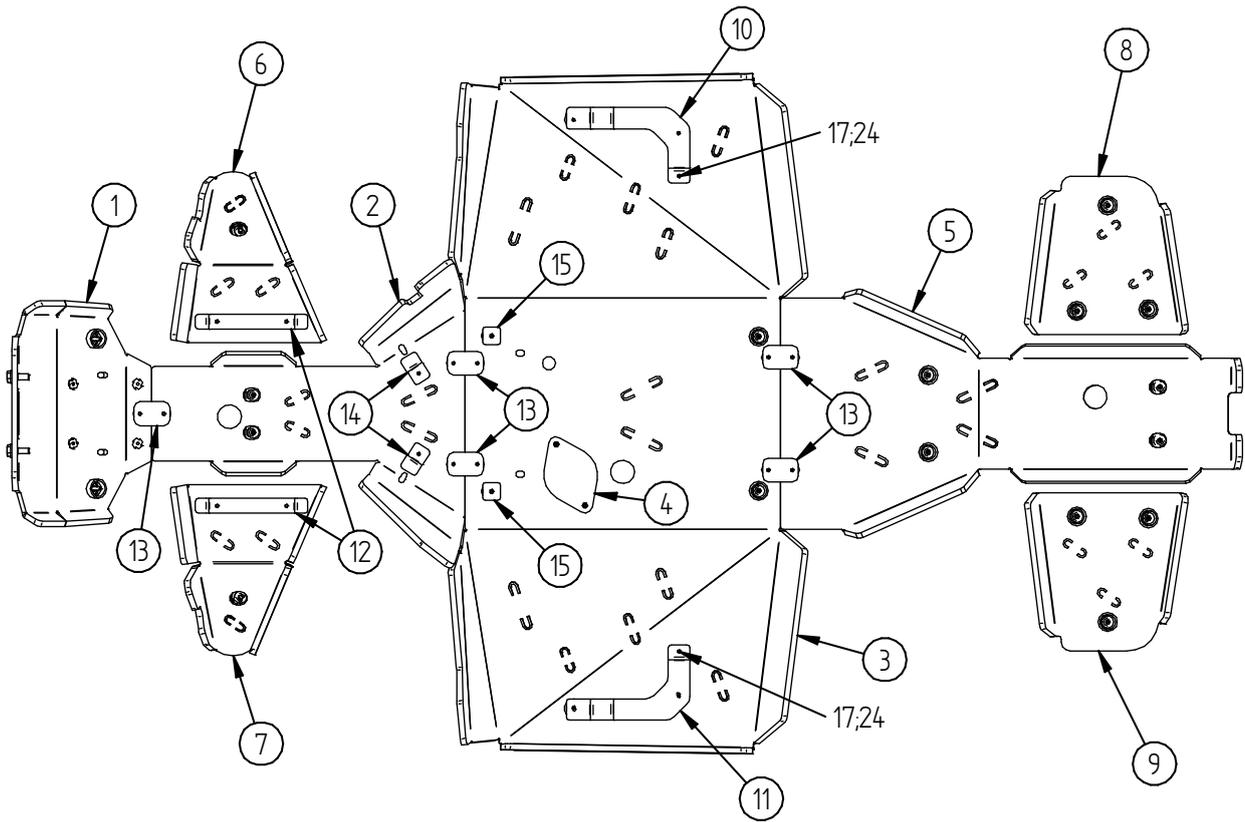

# FITTING INSTRUCTIONS


## Step 1

Remove standard skid plate and control arm protections. Remove winch fairlead.




## Step 2

Install mounting brackets 02.31411 (Pos. 10) and 02.31412 (Pos. 11).

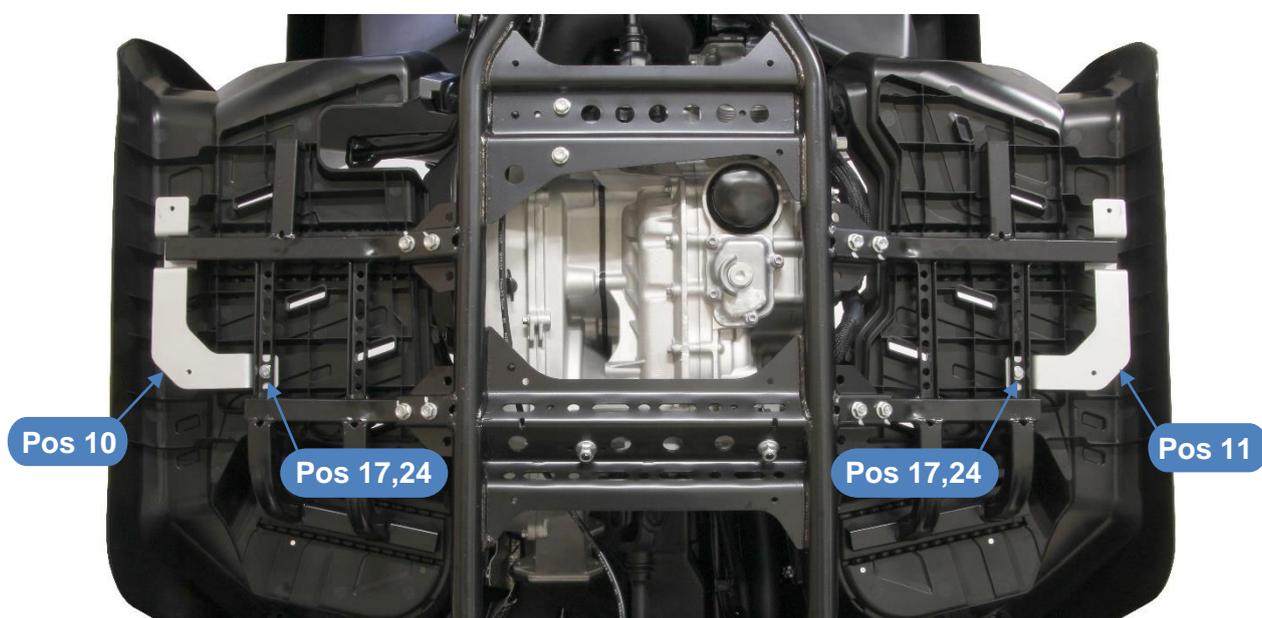

### Step 3


Install oil filter plate 02.27505K (Pos. 4) to the middle protection.

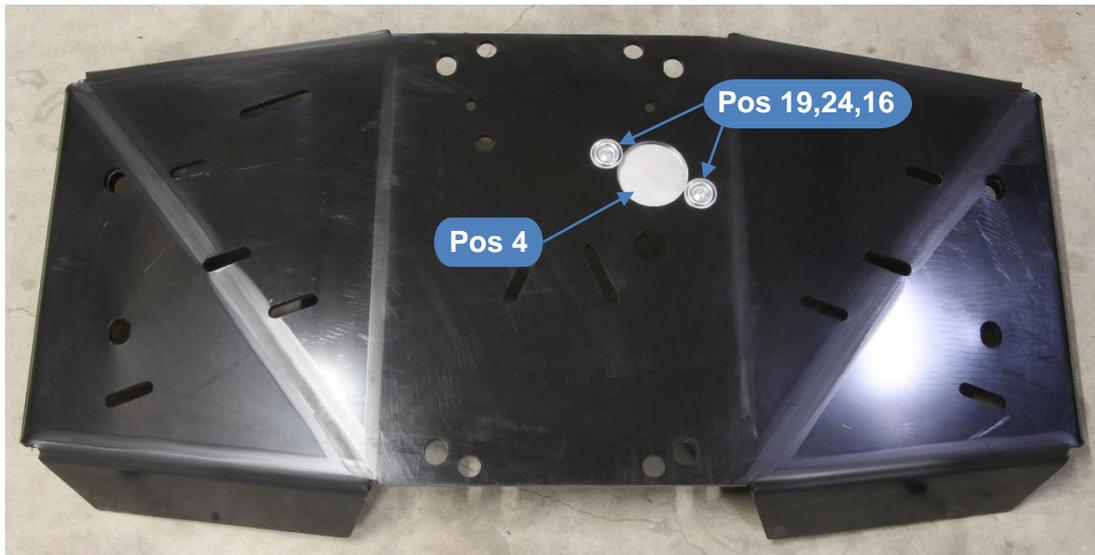

### Step 4


Install middle protection 02.31704K (Pos. 3).

NB! Pos. 15 goes between ATV frame and skid plate!

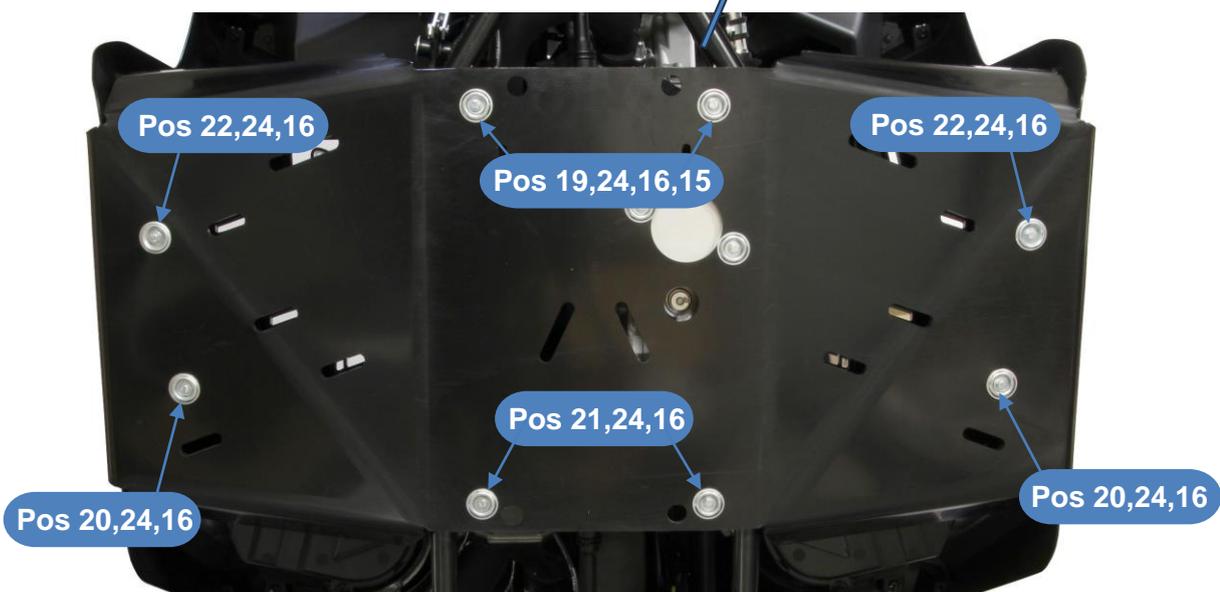


## Step 5

Install plates 02.5006 (Pos. 13) to the middle protection.

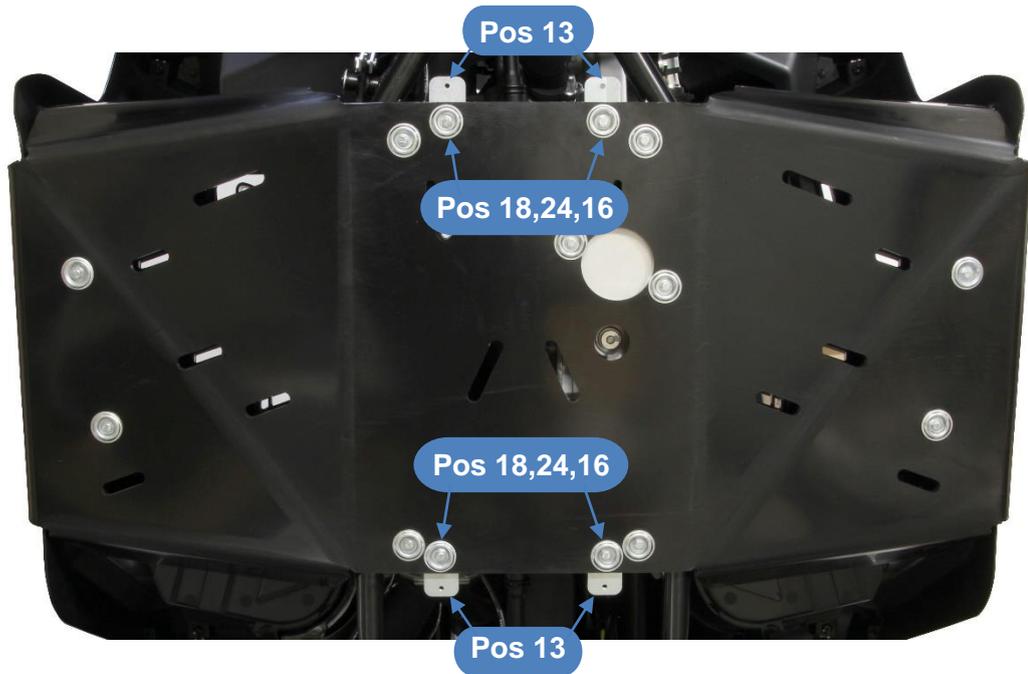

## Step 6

Install front protection 2 (Pos. 2) 02.31503 and connecting plate 02.5006 (Pos. 13).

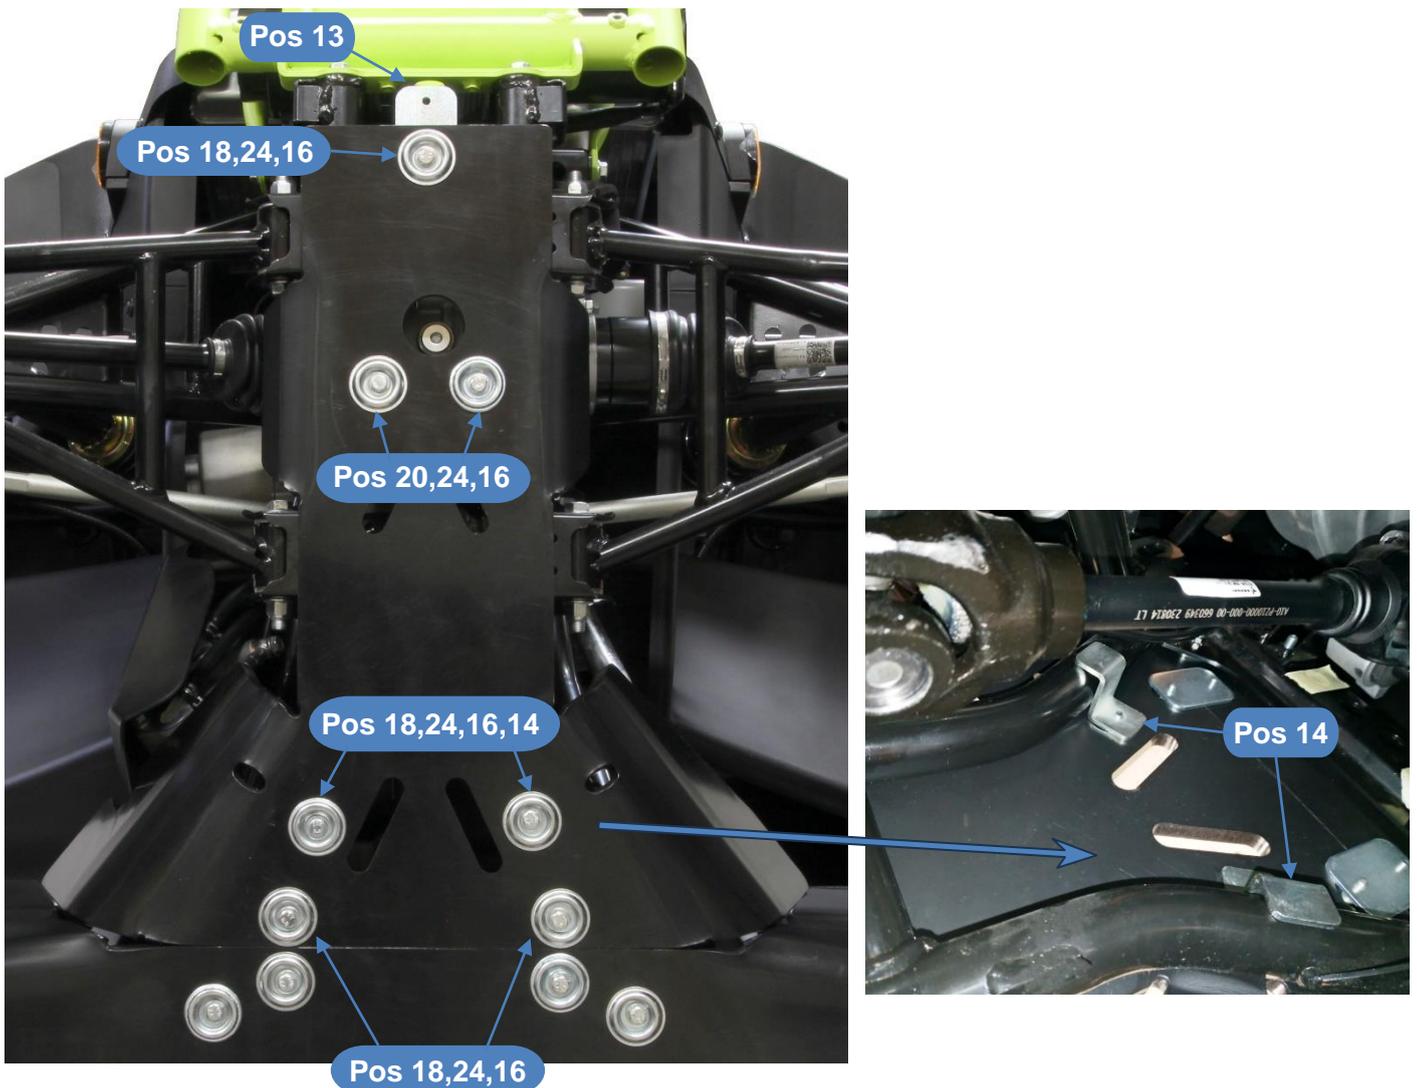

## Step 7

Install front protection with reinforcement 02.31502K (Pos. 1) and winch fairlead.





## Step 8

Install rear protection 02.31705K (Pos. 5).




## Step 9

Install front control arm protections 02.31506 (Pos. 6) and 02.31507 (Pos. 7).

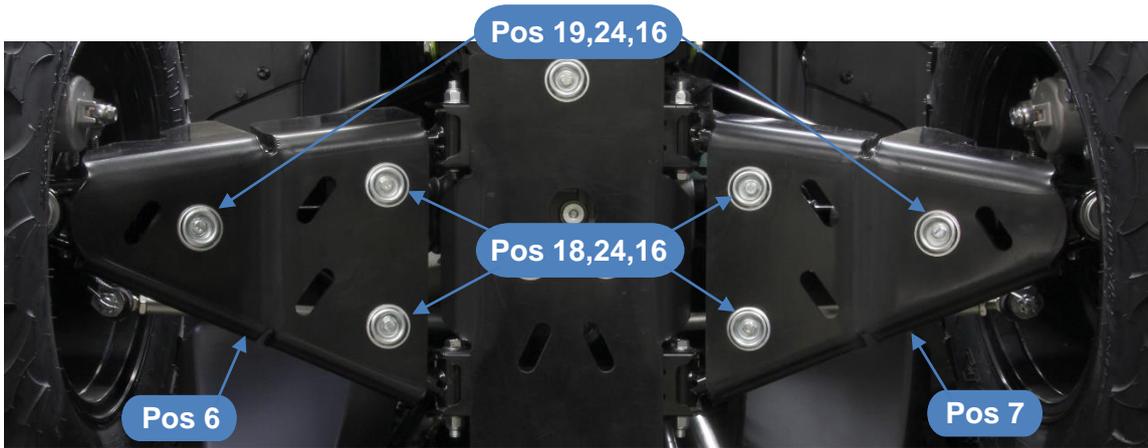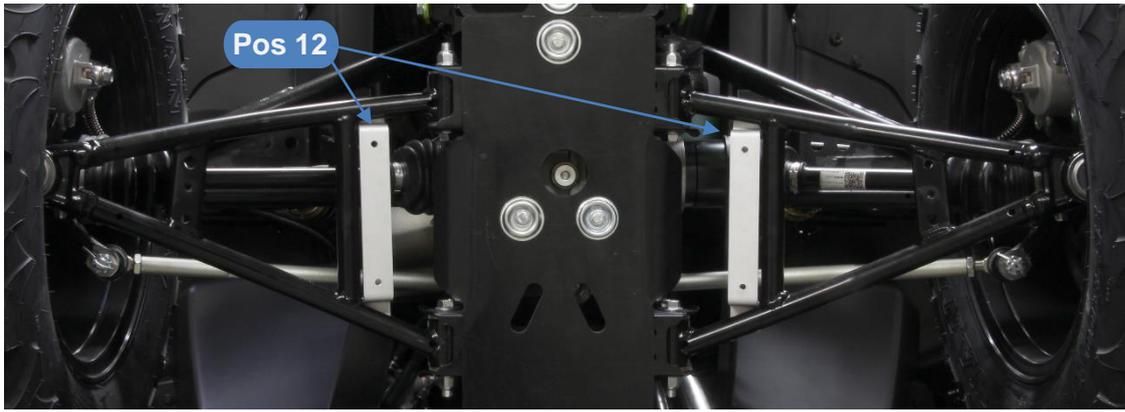

## Step 10

Install rear control arm protections 02.31508K (Pos. 8) and 02.31509K (Pos. 9).

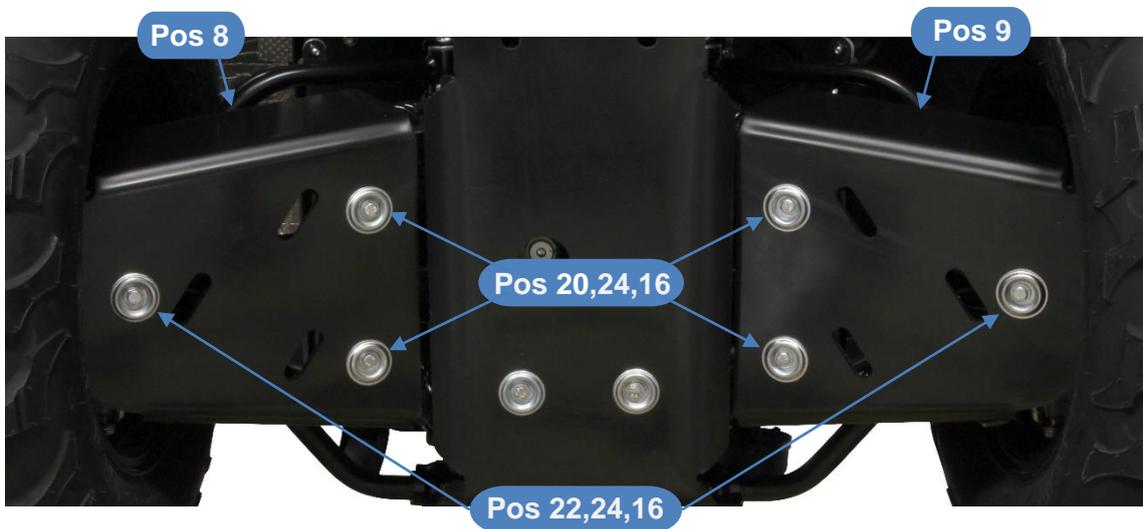

## Step 11

To remove the oil filter cover plate, remove the bolt indicated with arrow and loosen the other bolt. Slide the plate away.







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

