

# IRON BALTIC

## ALUMINIUM SKID PLATE

# CAN-AM

# OUTLANDER 500/700 MAX (2023+)

Code 02.33900

Version 25022025



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/qINeEgwq](http://code.ironbaltic.com/u/qINeEgwq)



# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection with reinforcement	02.33501K	1
2	Middle protection	02.33502	1
3	Right side protection	02.33503	1
4	Left side protection	02.33504	1
5	Rear protection	02.33505	1
6	Front right control arm protection	02.30906	1
7	Front left control arm protection	02.30907	1
8	Rear right control arm protection	02.30908K	1
9	Rear left control arm protection	02.30909K	1
10	Connecting plate	02.5006	5
11	Bracket 1	02.5709	1
12	Bracket 2	02.5710	12
13	Bracket 3	02.8210	4
14	Connecting plate 10°	02.8312	8
15	Bracket 80°	02.18805	2
16	Bracket 90°	03.1502	2
17	Dished washer	14.503	53
18	Bolt M6x8 DIN933	OT.02.02.028	18
19	Bolt M6x12 DIN933	OT.02.02.030	20
20	Bolt M6x20 DIN933	OT.02.02.060	7
21	Bolt M6x25 DIN933	OT.02.02.070	4
22	Bolt M8x12 DIN933	OT.02.02.168	4
23	Bolt M8x50 DIN933	OT.02.02.240	4
24	Bolt M10x30 DIN933	OT.02.02.320	2
25	Washer Ø6/15 SFS3738	OT.04.03.020	49
26	Washer Ø6/18 DIN9021	OT.04.02.020	6
27	Washer Ø8/20 SFS3738	OT.04.03.030	8
28	Washer Ø10 DIN125	OT.04.01.040	4
29	Nyloc nut M6 DIN985	OT.03.02.030	6
30	Nyloc nut M8 DIN985	OT.03.02.040	4
31	Nyloc nut M10 DIN985	OT.03.02.050	2

## TOOLS REQUIRED FOR INSTALLATION:



- Spanner 10mm
- Spanner 13mm
- Socket wrench 10mm
- Socket wrench 13mm
- Socket wrench 17mm
- Allen wrench 8mm
- Drill bit 7mm

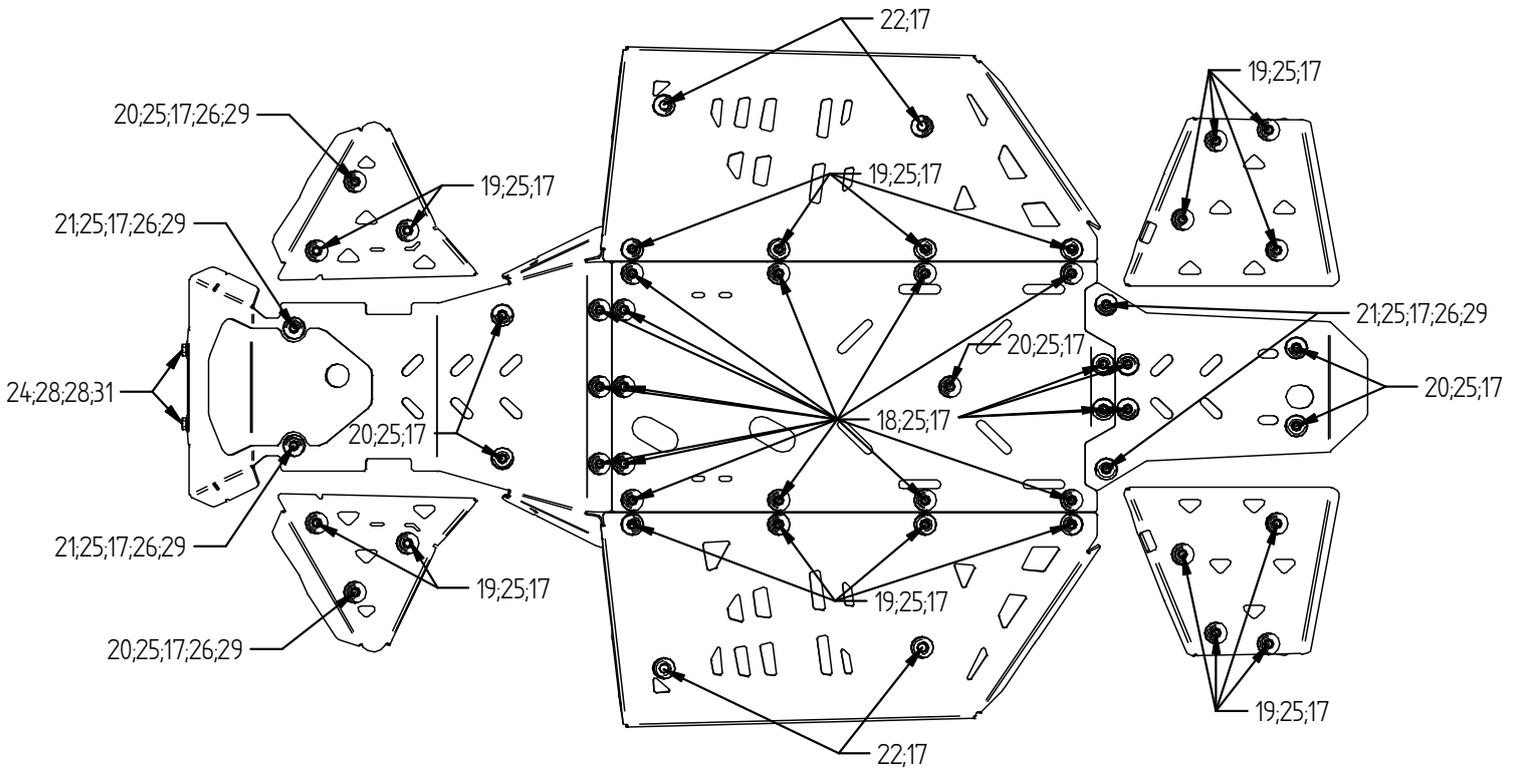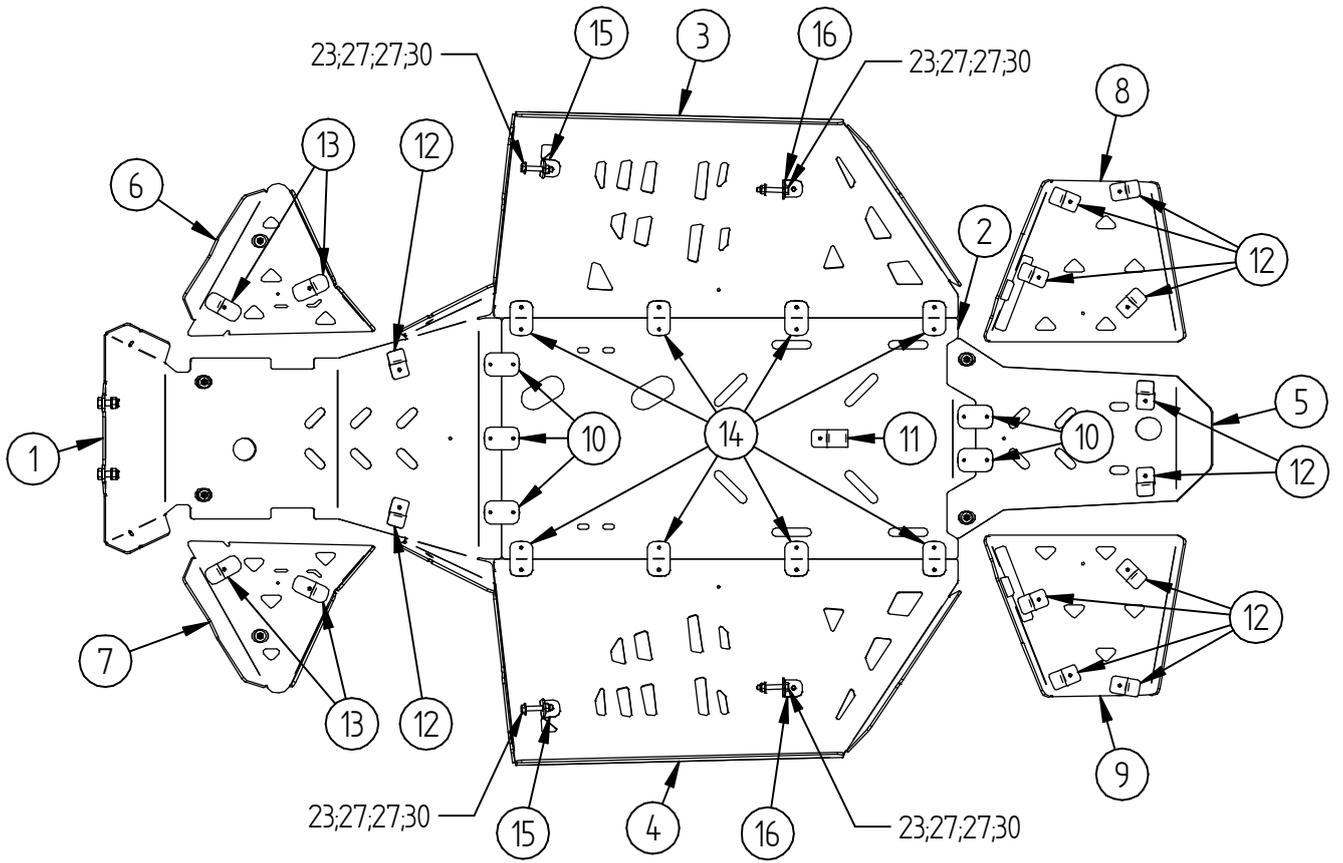

# FITTING INSTRUCTIONS




**NB!**

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**


## Step 1

Remove winch fairlead. Drill holes (7mm) to the original plastic skid plate. The drilling points are marked with small dimples. Remove the original front arm plastic protections (drill out the rivets).


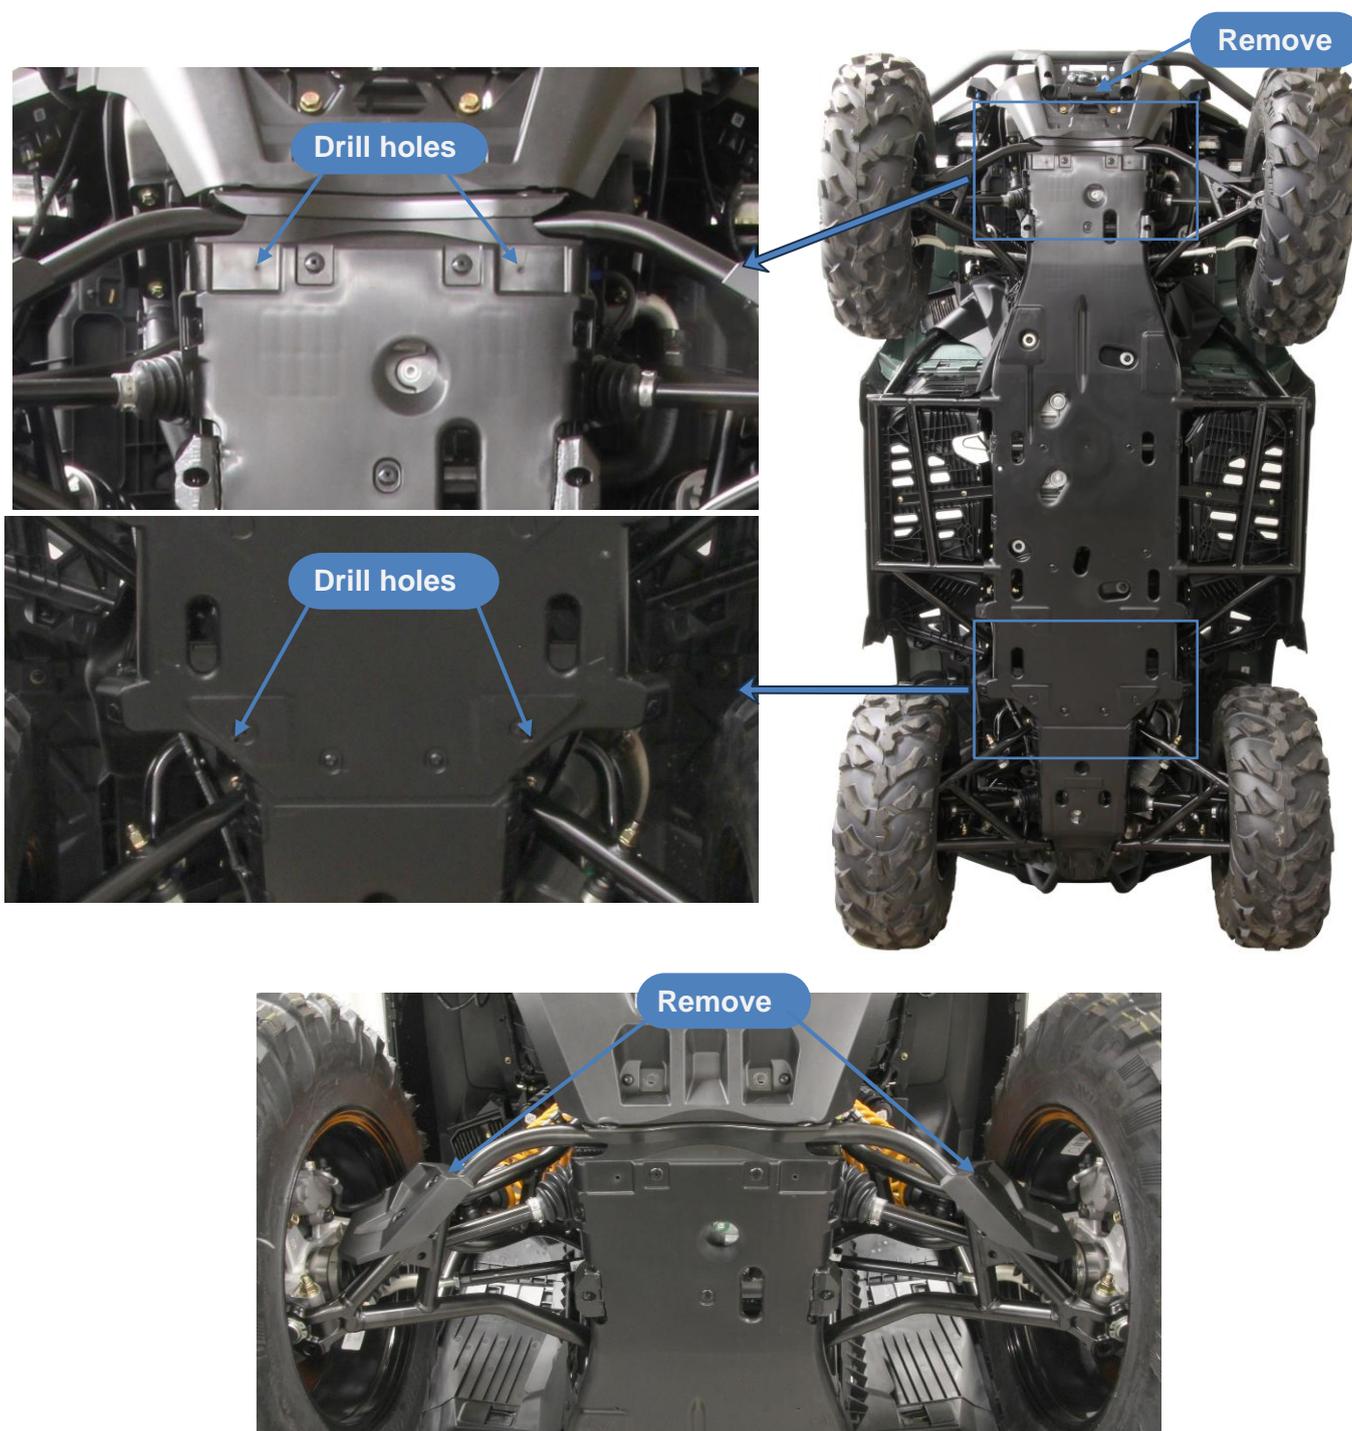


## Step 2

Install 02.5006 plates (Pos. 10) to the front protection 02.33501K (Pos. 1).


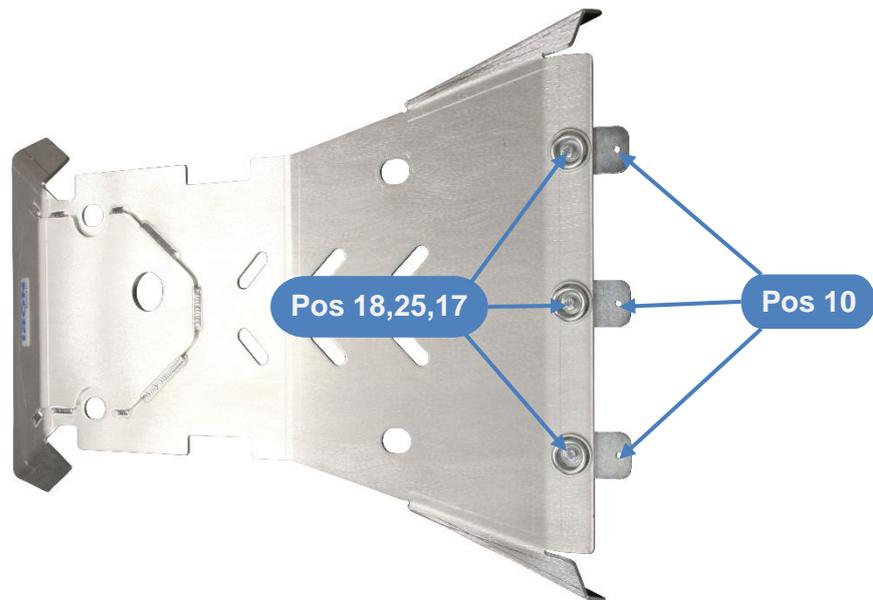


**OPTIONAL!** If you want the front side panels to be easier to remove for maintenance, remove the fixing dowels shown in the picture and make cutouts to the front protection, so that the remaining fixing dowels are easier to access without the need to remove skid plate.

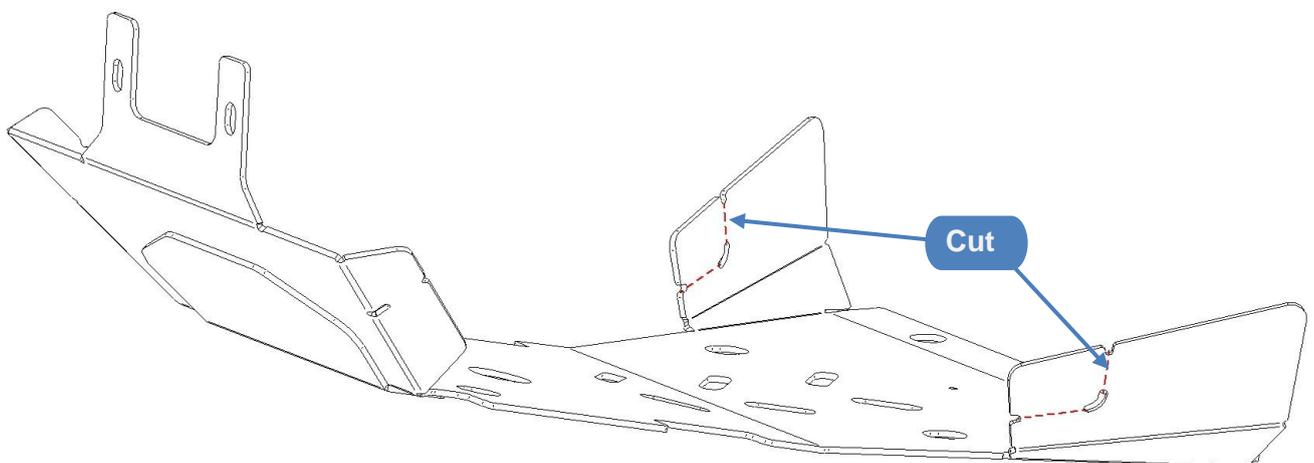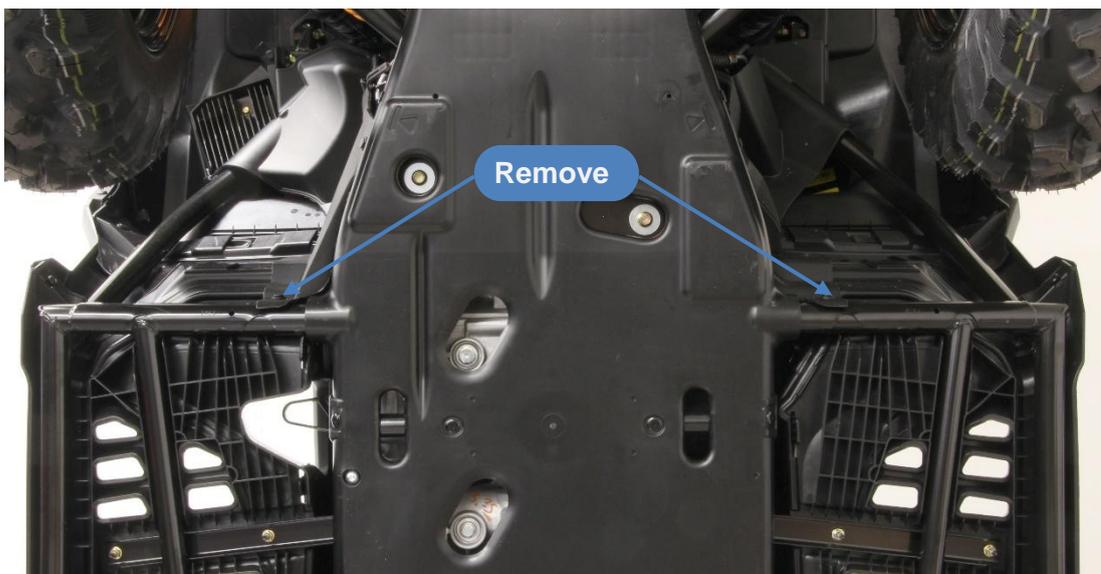


### Step 3

Install front protection 02.33501K (Pos. 1) and drill 7mm holes in the original plastic (in the center of the skid plate lower mounting points).

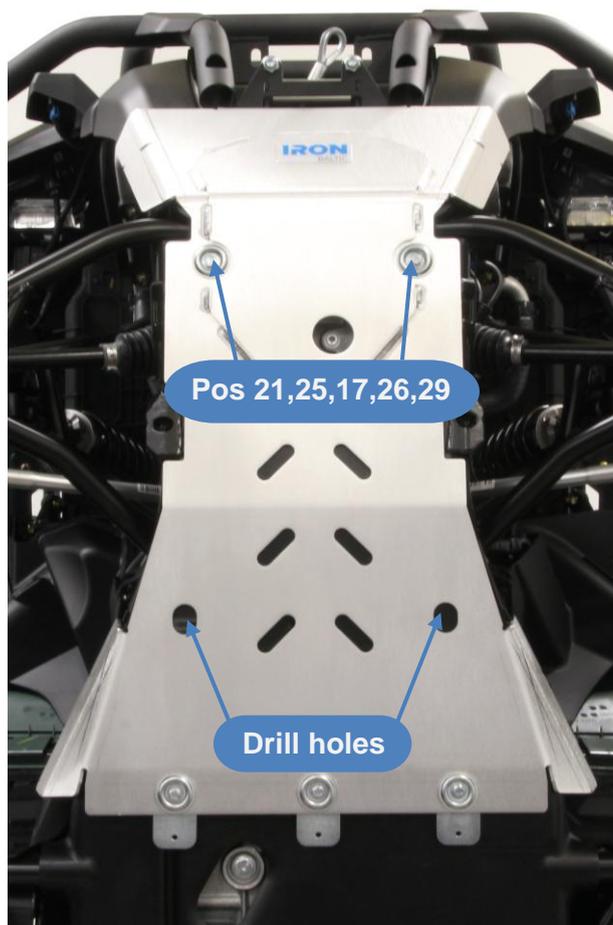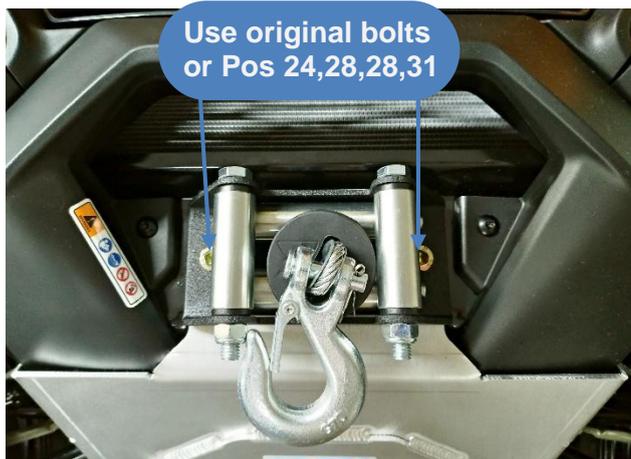


### Step 4

Install brackets 02.5710 (Pos. 12).

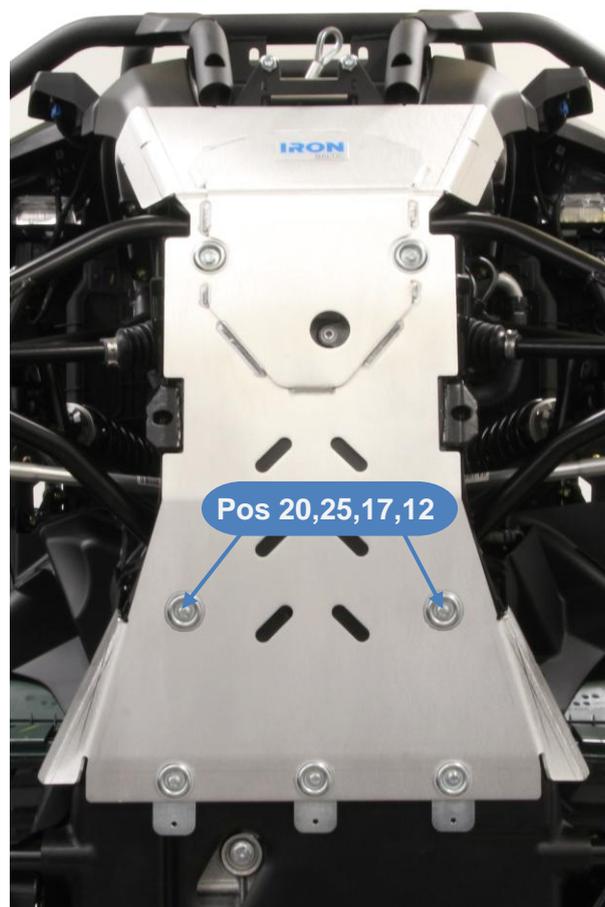


## Step 5

Install 02.8312 plates (Pos. 14) and 02.5006 plates (Pos. 10) to the middle protection 02.33502 (Pos. 2).

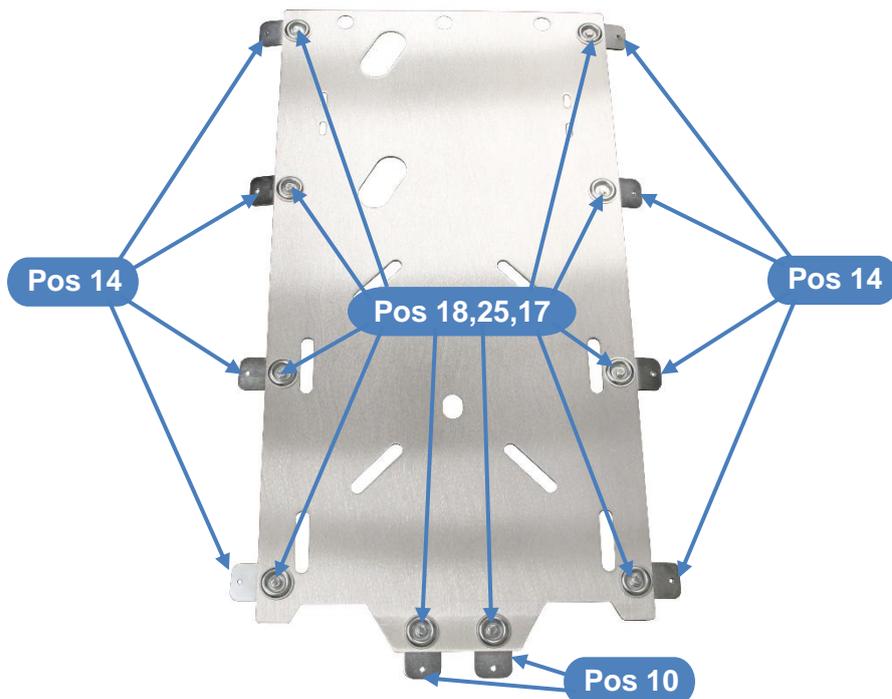


## Step 6

Install middle protection 02.33502 (Pos. 2) and drill 7mm hole in the original plastic (in the center of the skid plate lower mounting point).

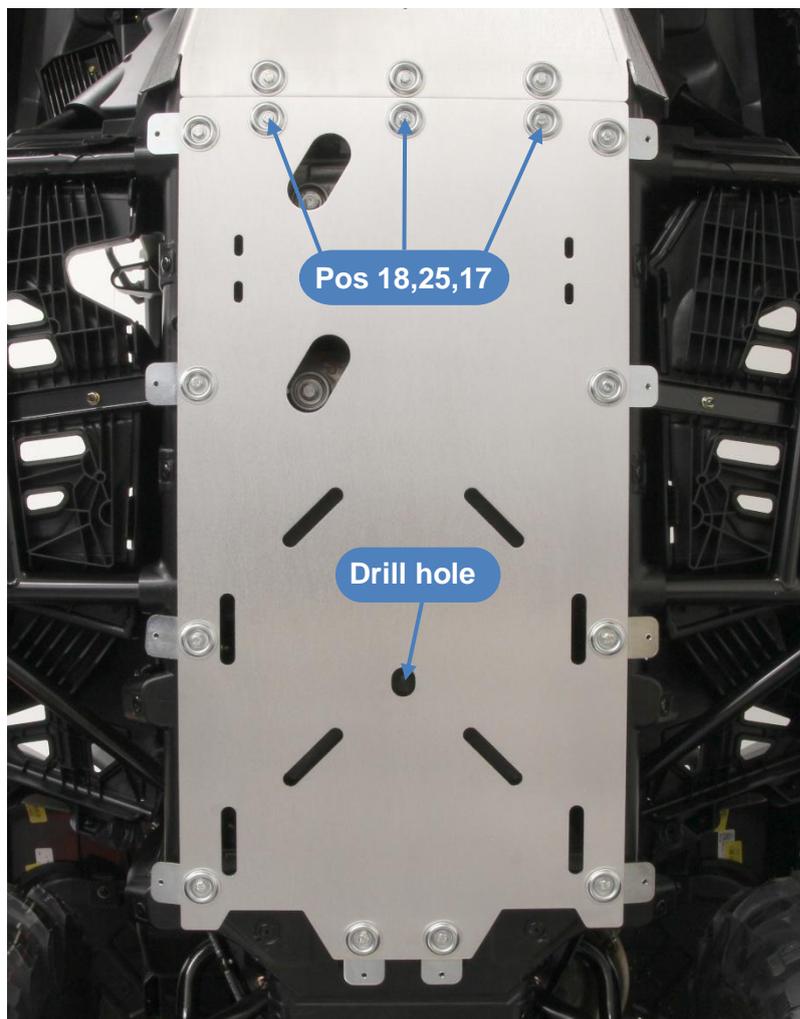


## Step 7

Install bracket 02.5709 (Pos. 11).

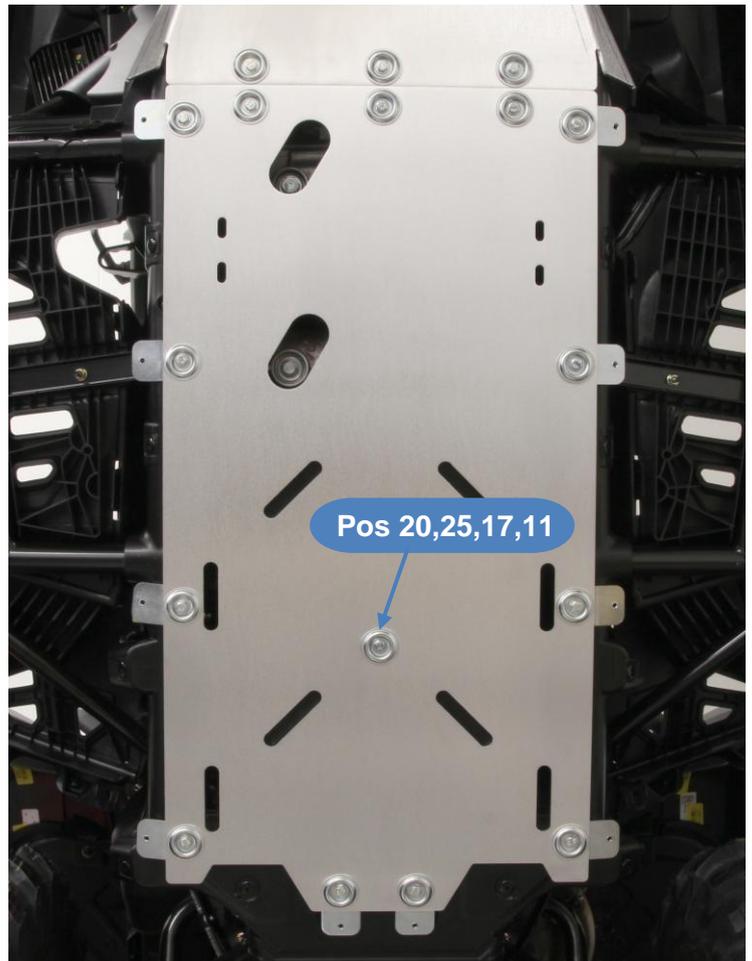

## Step 8

Install rear protection 02.33505 (Pos. 5) and drill 7mm holes in the original plastic (in the center of the skid plate lower mounting points).

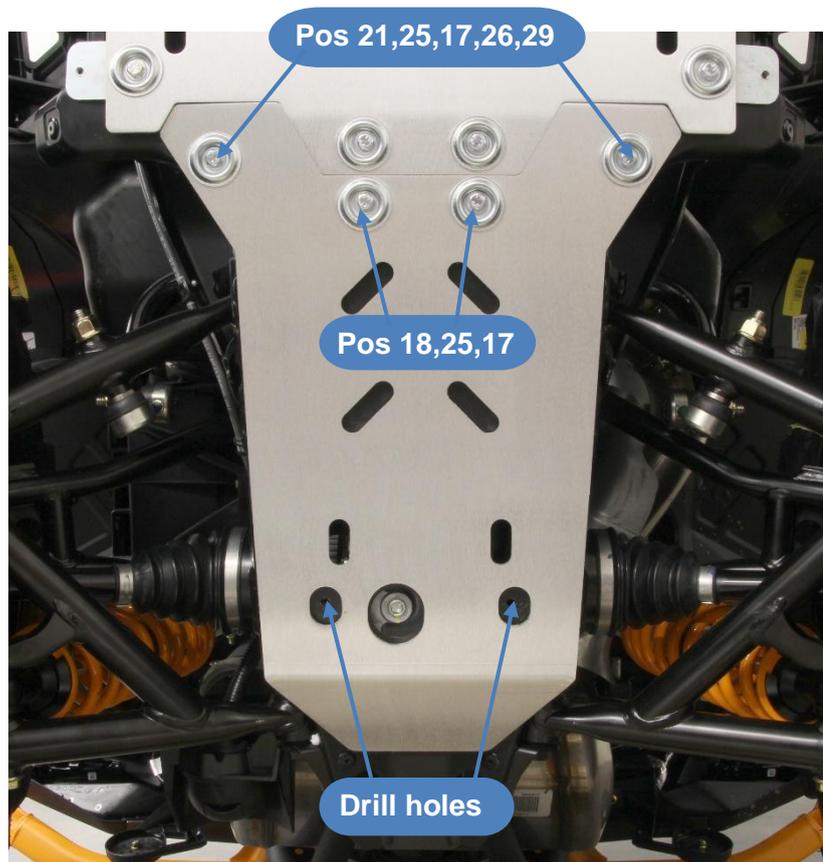


## Step 9


Install brackets 02.5710 (Pos. 12).



## Step 10



Install brackets 02.18805 (Pos. 15) and 03.1502 (Pos. 16). Then install right side protection 02.33503 (Pos. 3) and left side protection 02.33504 (Pos. 4).

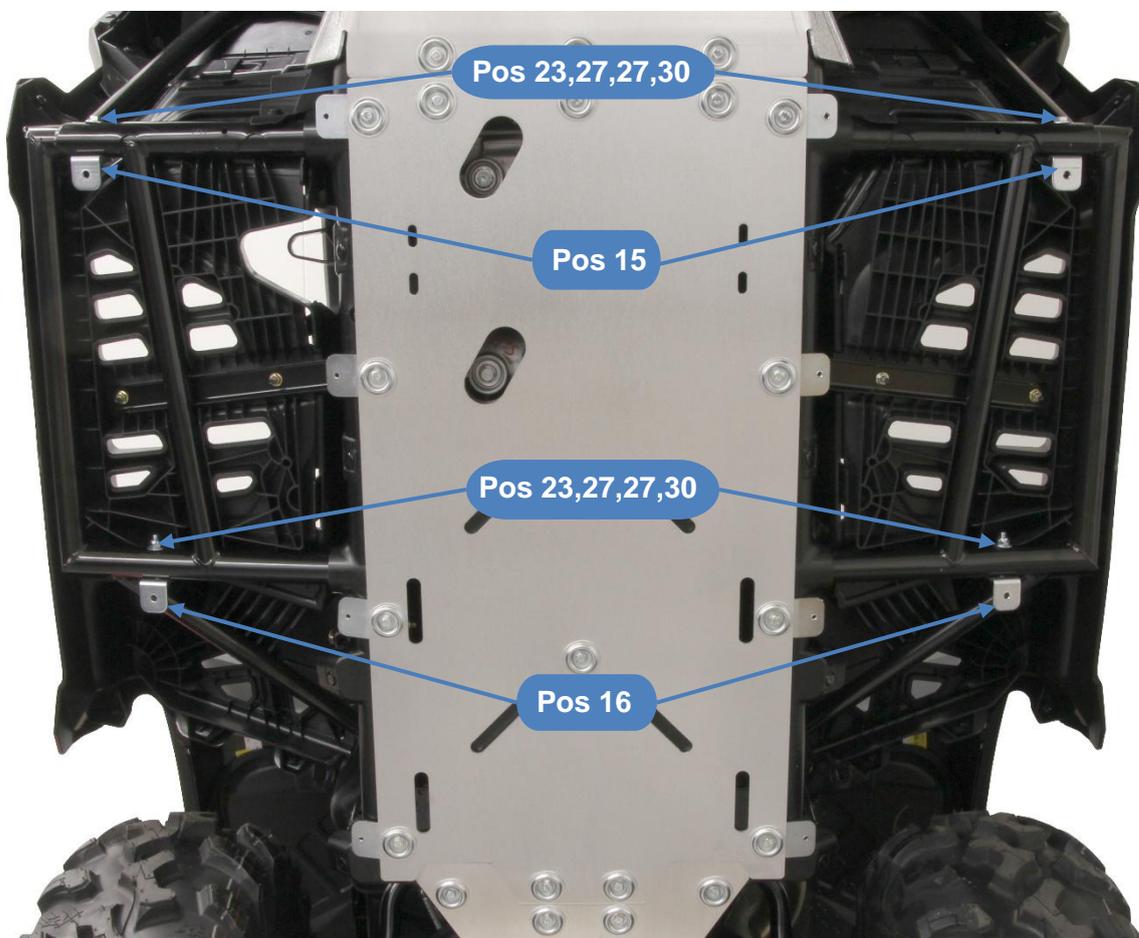

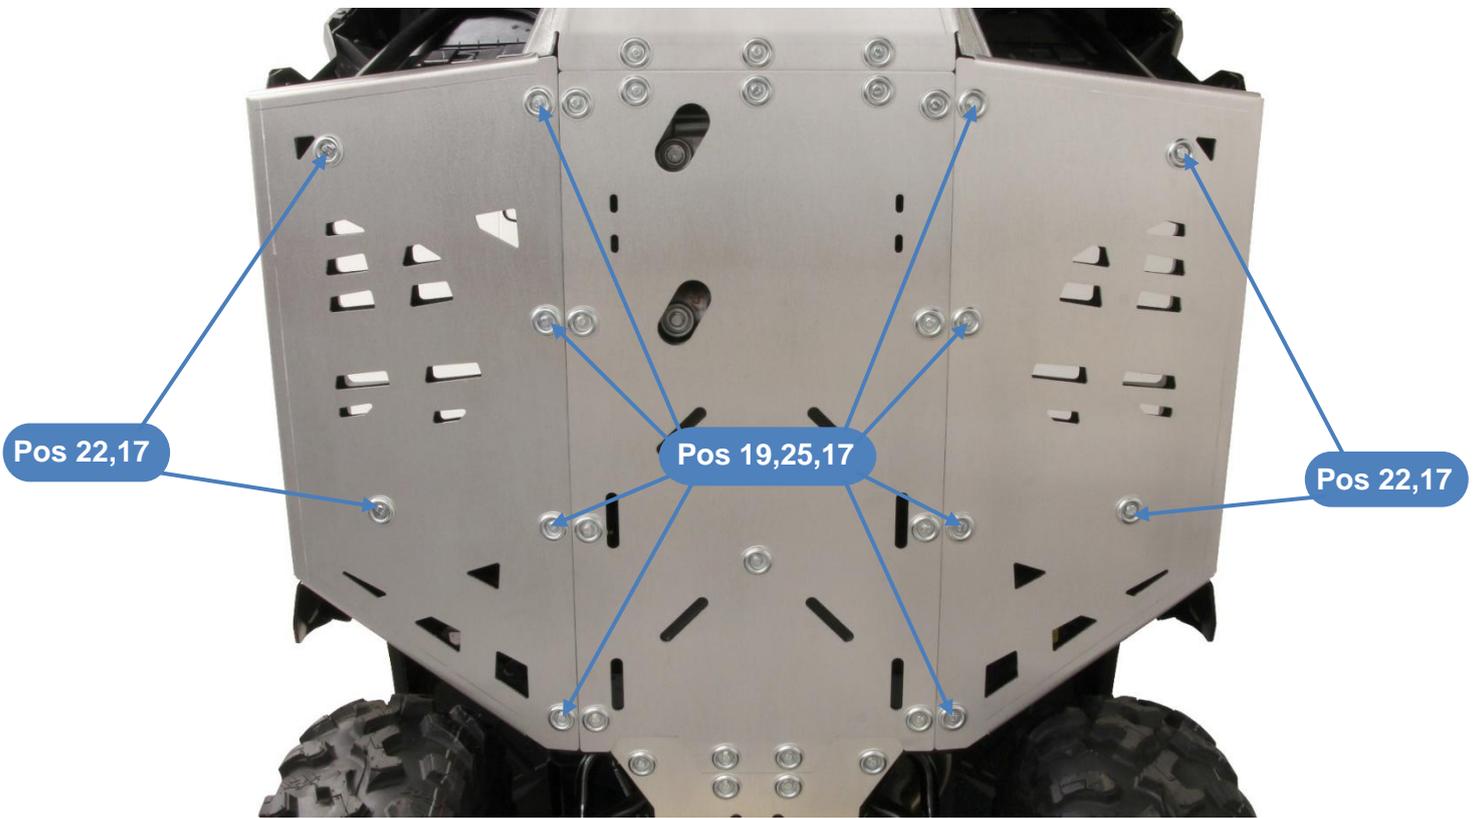


**Step 11**

Install front arm protections 02.30906 (Pos. 6) and 02.30907 (Pos. 7). For installing use brackets 02.8210 (Pos. 13).

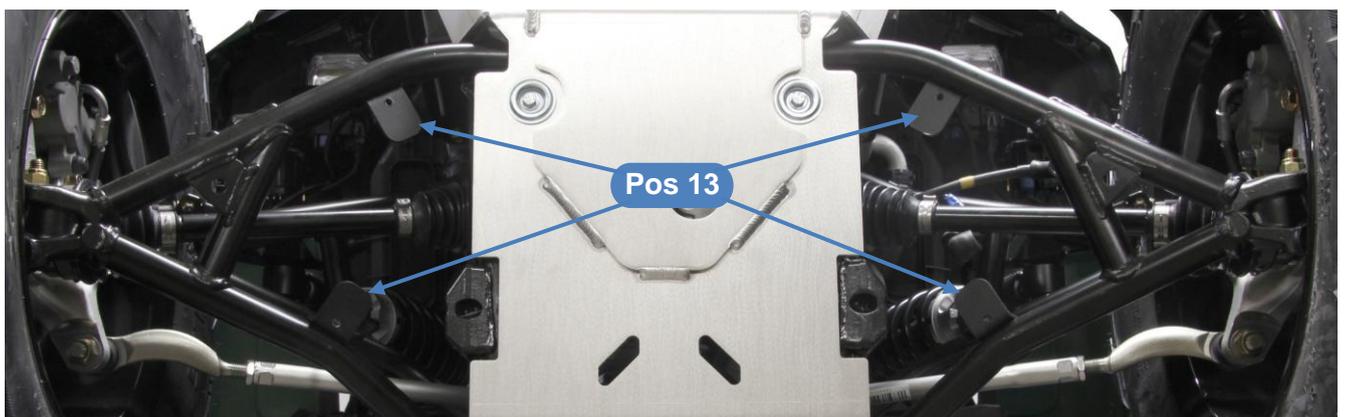
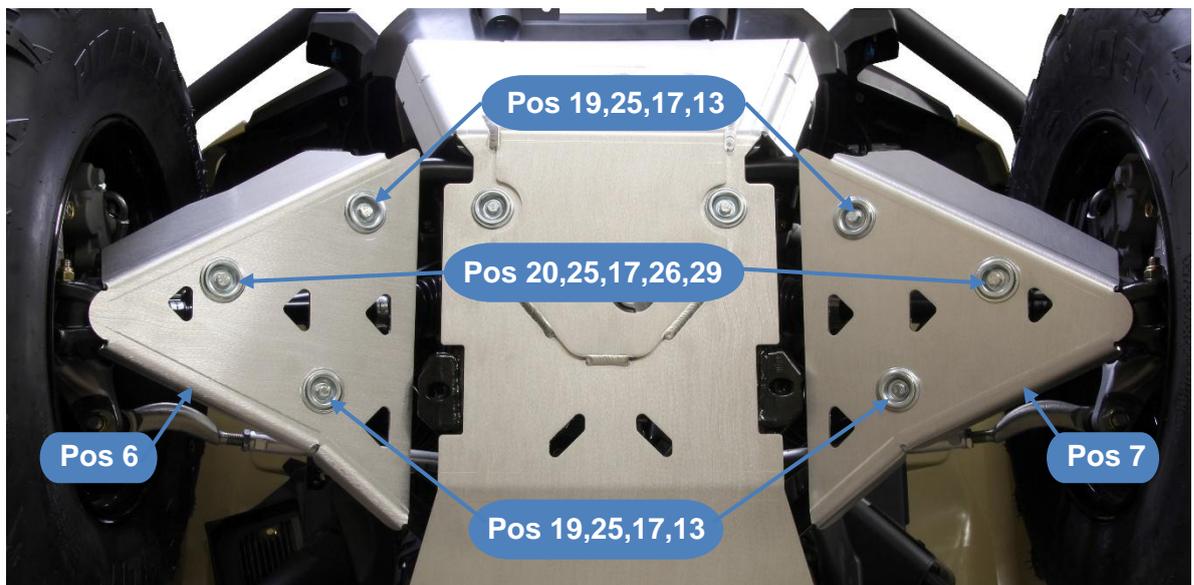


**OPTIONAL!** If you want to use skid plate with the original Can-Am snow plow adapter, make cutouts to the front arm protections as shown in the picture.

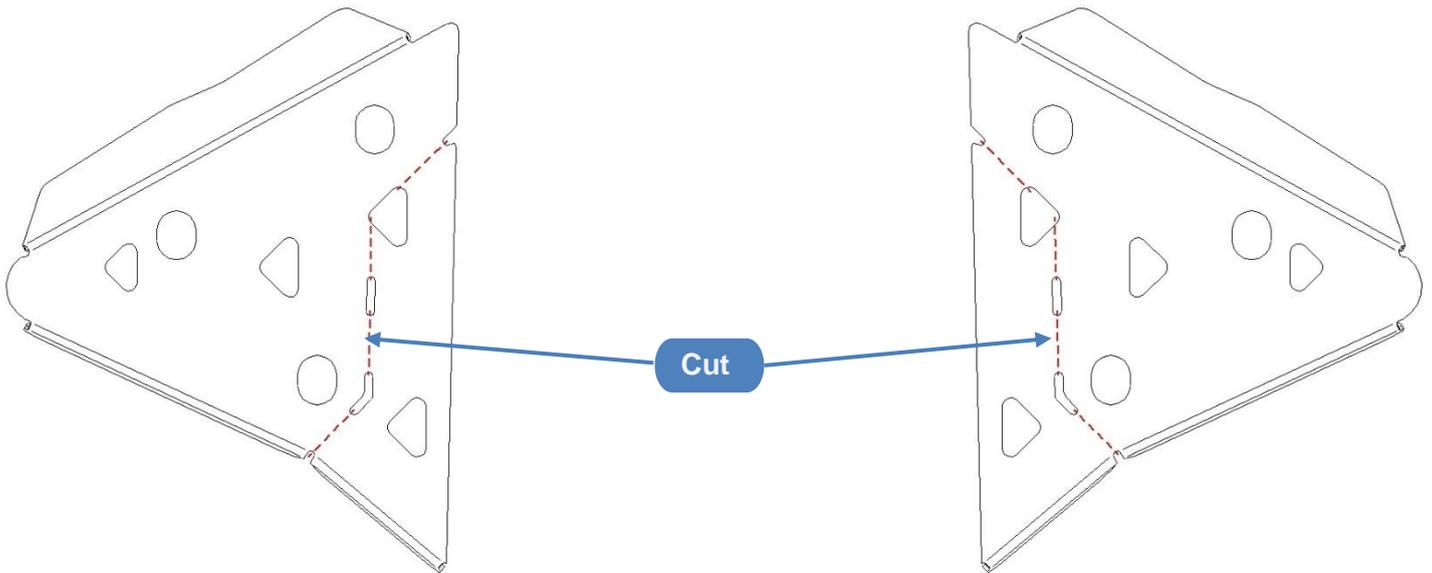

### Step 12

Install rear arm protections 02.30908 (Pos. 8) and 02.30909 (Pos. 9). For installing use brackets 02.5710 (Pos. 12).

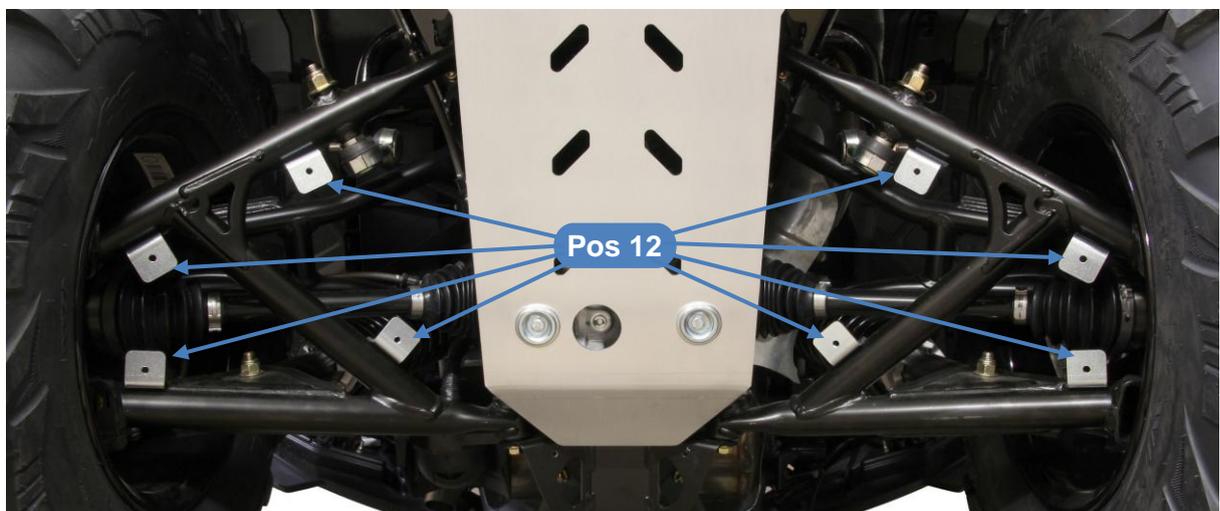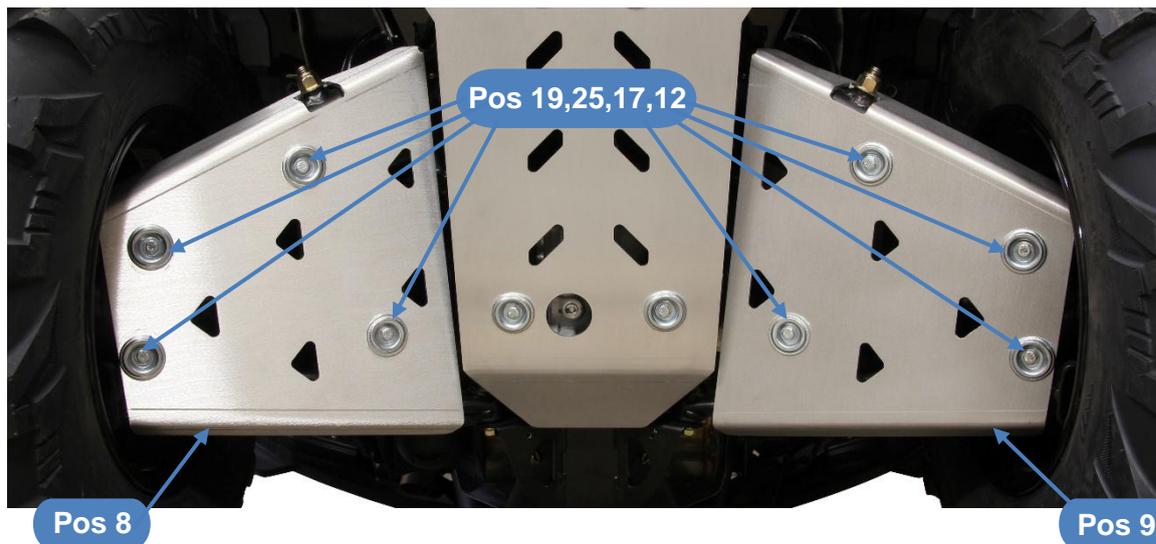

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

