

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/1ZaPWird

ALUMINIUM SKID PLATE

SEGWAY SNARLER AT10 L

Code 02.34200

Version 30052025



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION



Pos.	Description	Code	Amount
1	Front protection (1)	02.34201K	1
2	Front protection (1) reinforcement	02.34202	1
3	Front protection (2)	02.34203K	1
4	Middle protection	02.34204	1
5	Oil filter cover plate	02.27505K	1
6	Rear protection	02.34205K	1
7	Right side protection	02.34206K	1
8	Left side protection	02.34207K	1
9	Front right arm protection	02.34208	1
10	Front left arm protection	02.34209	1
11	Rear right arm protection	02.34210	1
12	Rear left arm protection	02.34211	1
13	Connecting plate	02.5006	12
14	Installation bracket	02.6408	6
15	Clamp for front arm protection	02.8210	2
16	Conical washer Ø6	14.502	8
17	Dished washer	14.503	63
18	Bolt M6x12 DIN933	OT.02.02.030	24
19	Bolt M6x16 DIN933	OT.02.02.050	24
20	Bolt M6x20 DIN933	OT.02.02.060	14
21	Bolt M6x25 DIN933	OT.02.02.070	5
22	Bolt M6x40 DIN933	OT.02.02.100	2
23	Bolt M8x50 DIN931	OT.02.01.011	2
24	Bolt M6x20 DIN7991	OT.02.04.030	8
25	Bolt M10x1,25-30 DIN912 ZP	OT.02.06.055	2
26	Washer Ø6/15 SFS3738	OT.04.03.020	69
27	Washer Ø6/18 DIN9021	OT.04.02.020	12
28	Washer Ø8/20 SFS3738	OT.04.03.030	2
29	Nyloc nut M6 DIN985	OT.03.02.030	12

- Designing the skid plate, original/factory tires were taken into consideration (front: 27x9.00-14 and rear: 27x11.00-14).



TOOLS REQUIRED FOR INSTALLATION:

- Hex key 4 mm
- Hex key 5 mm
- Hex key 8 mm
- Spanner 10 mm
- Spanner 13 mm
- Socket wrench 10 mm
- Socket wrench 13 mm

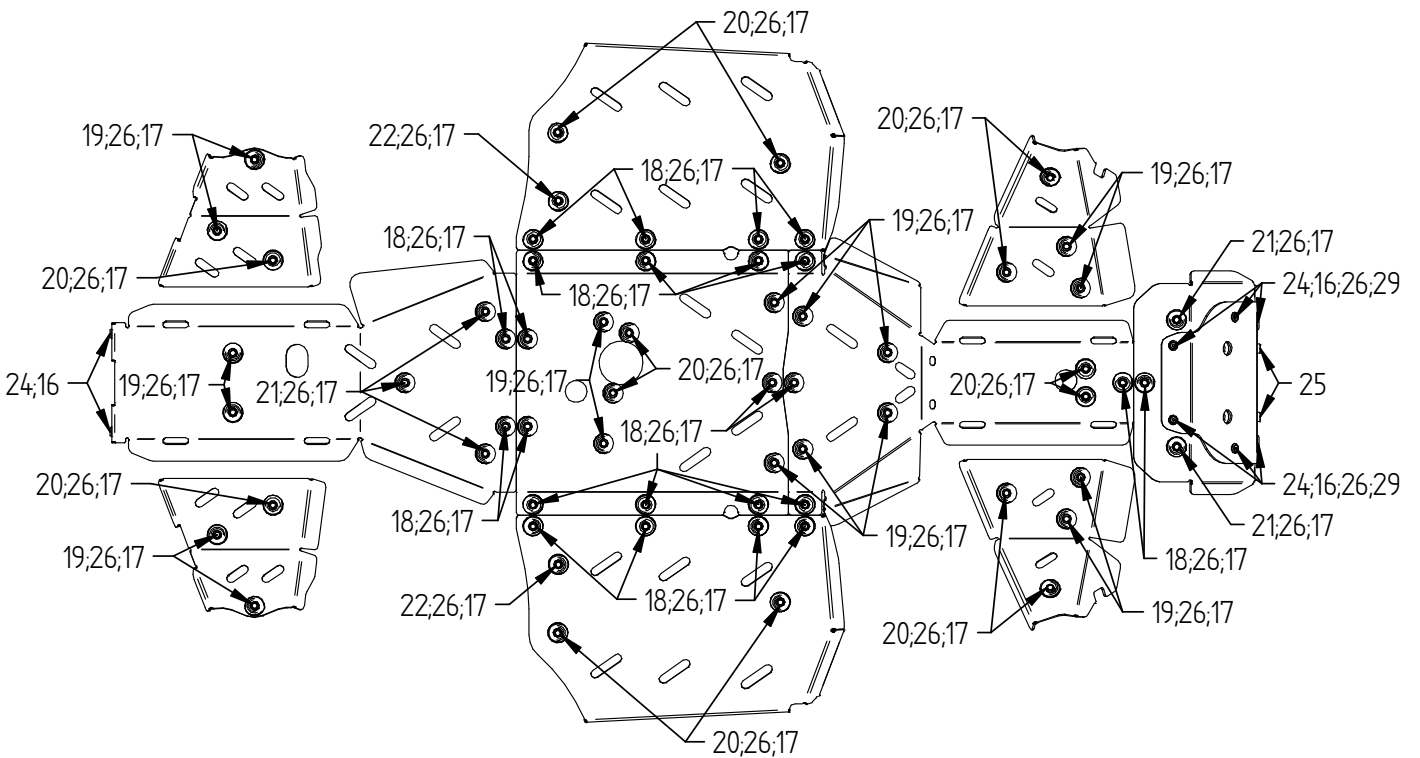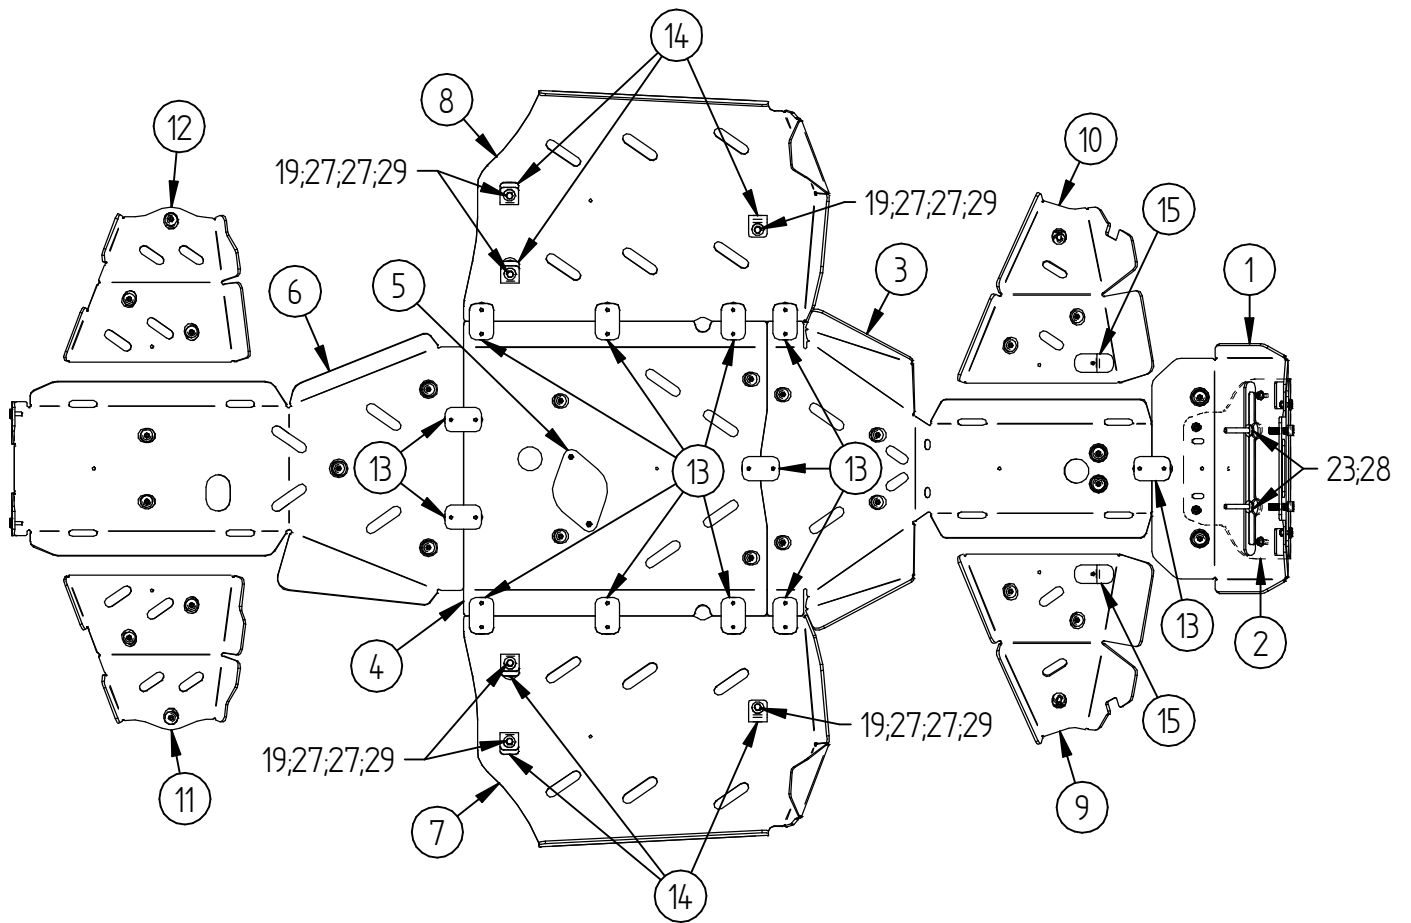

* Numbers on drawing correspond to Pos numbers on specification table.

FITTING INSTRUCTIONS




NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

All pictures in this manual are for illustration purposes only and may differ from real product due to the changes made to the product during improvements!





Step 1

Remove original skid plate parts and control arm protections. Also remove two lower original winch fixing bolts with washers and use M8x50 bolts (Pos.23) and Ø8 mm washers (Pos.28) instead.

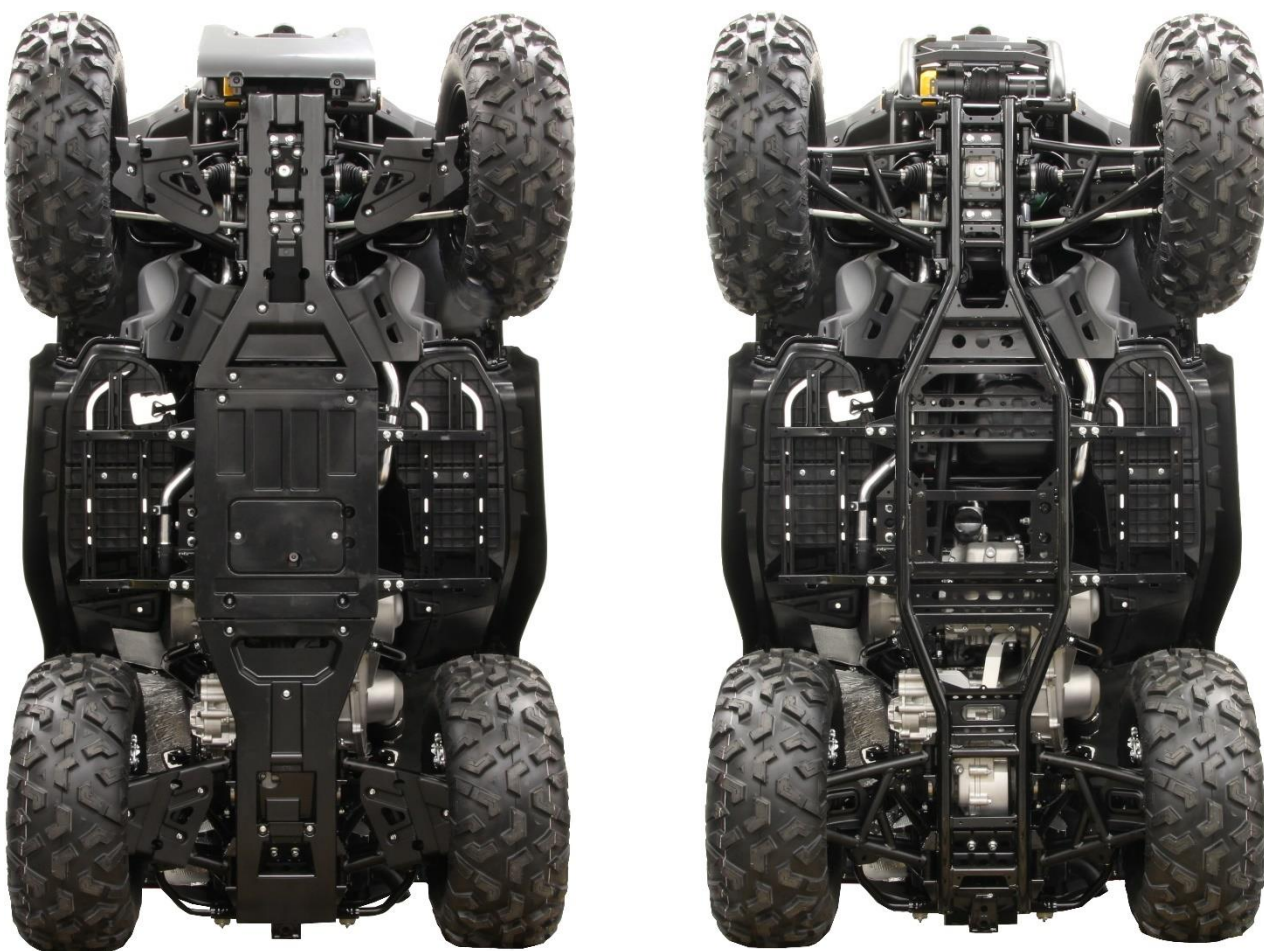

Step 2


Install the installation brackets (Pos.14). For fastening use M6x16 bolts (Pos.19), Ø6/18 mm washers (Pos.27) and M6 nyloc nuts (Pos.29). When installing the upper bracket, you may need more space. Remove the original plastic bolts and push the plastic cover aside. Afterward, reinstall original bolts.

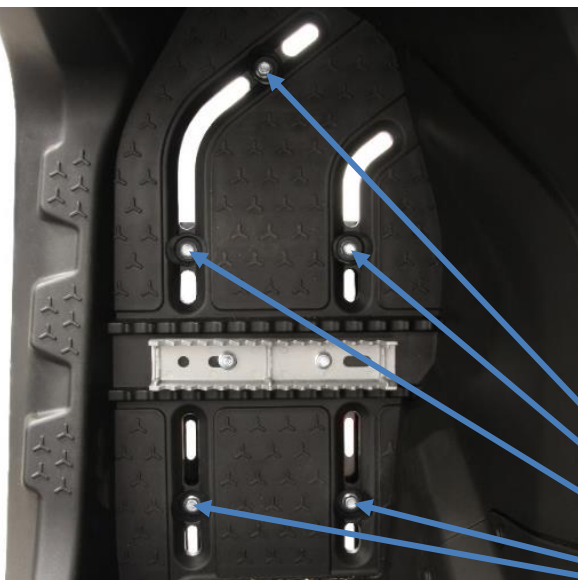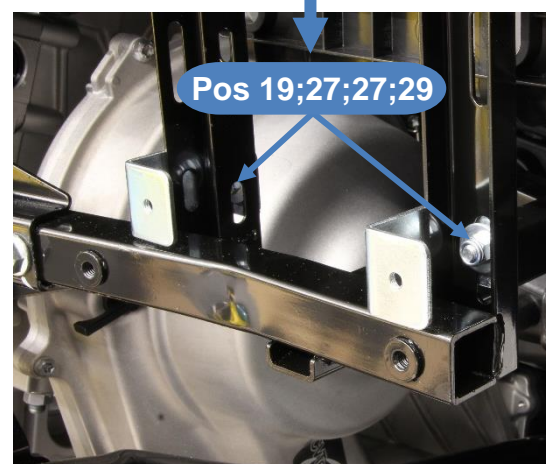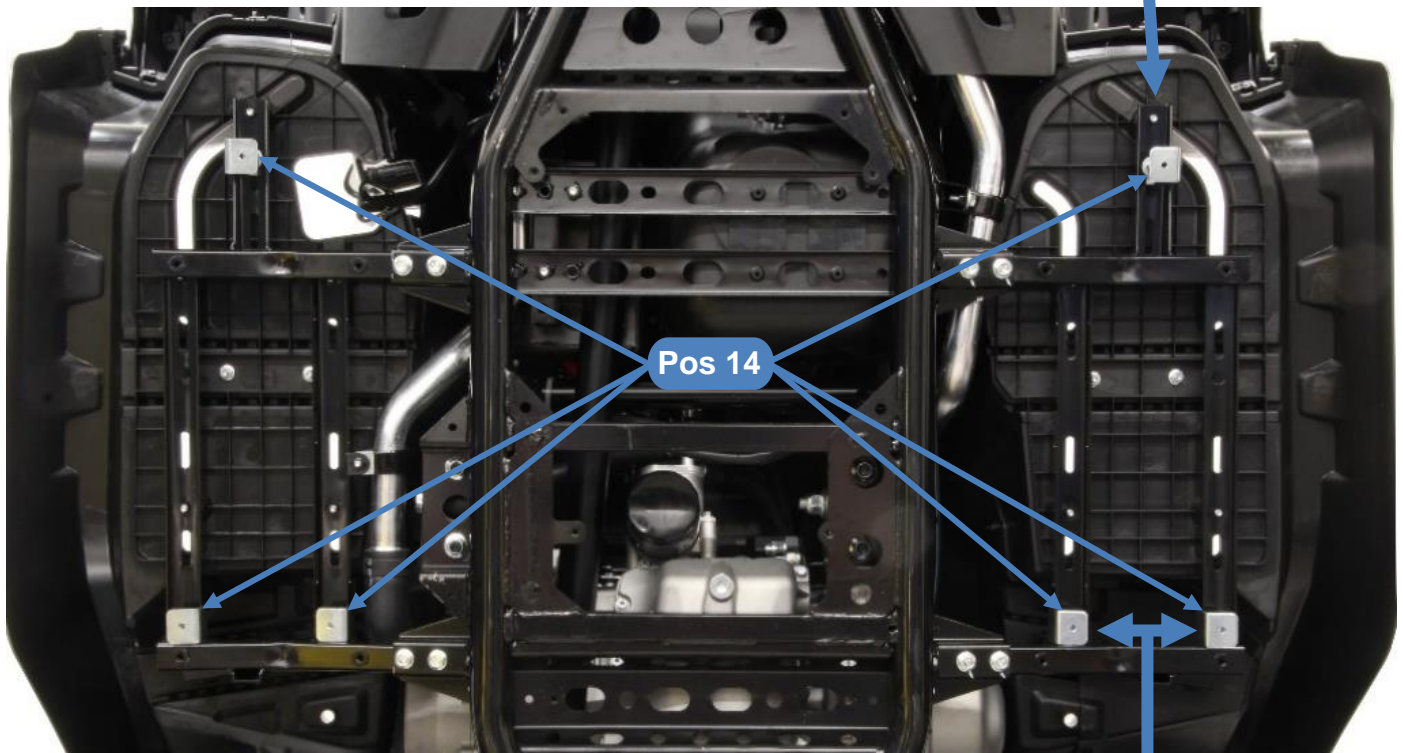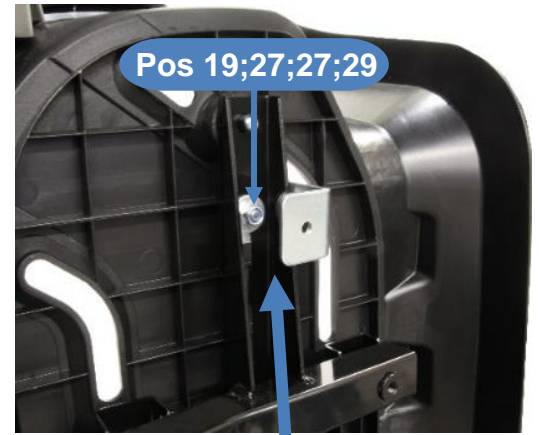

Remove
(if necessary)


Step 3

Install the oil filter plate (Pos.5) to the middle protection (Pos.4). For fastening use M6x20 bolts (Pos.20), Ø6 mm washers (Pos.26) and dished washers (Pos.17).

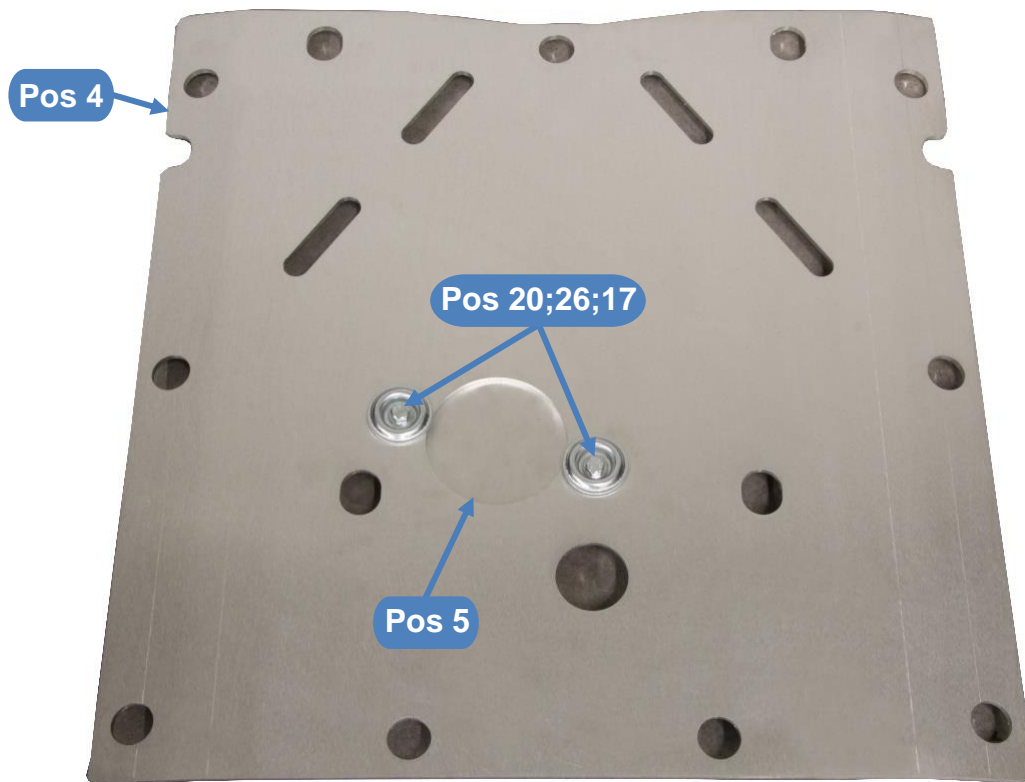


Step 4

Install the front protection 2 (Pos.3). For fastening use M6x16 bolts (Pos.19), M6x20 bolts (Pos.20), Ø6 mm washers (Pos.26) and dished washers (Pos.17).

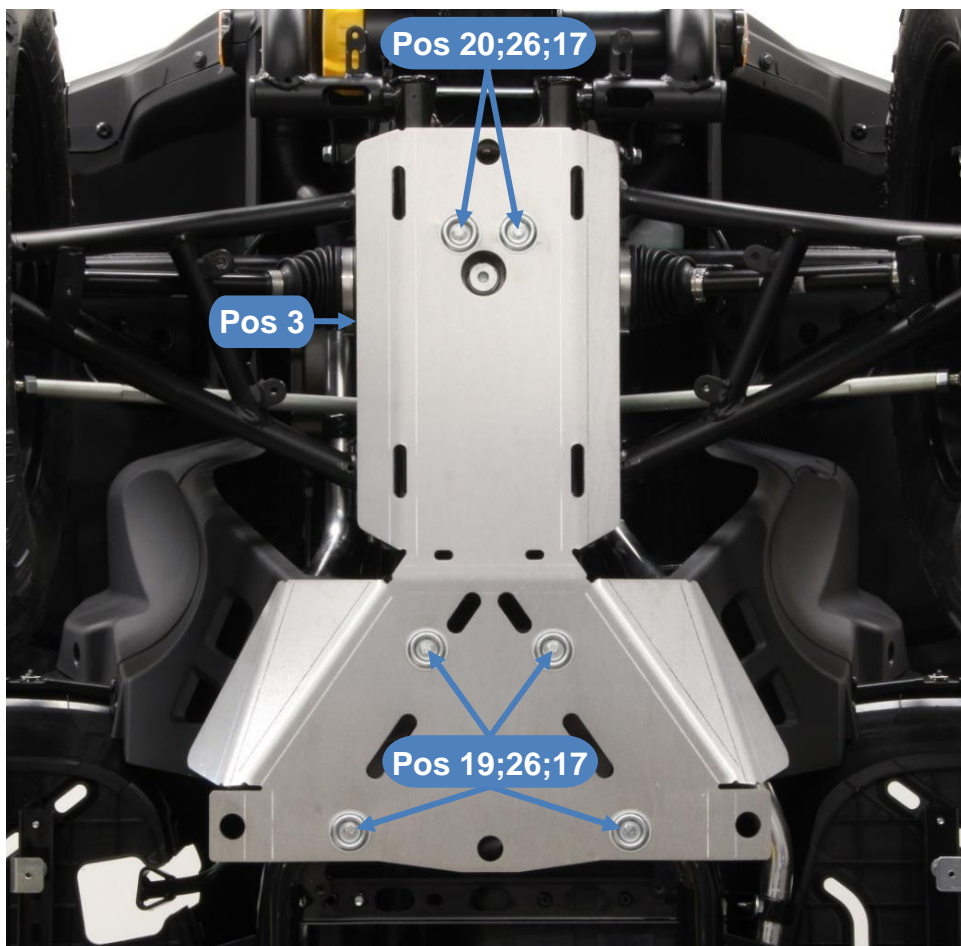


Step 5

Install the connecting plates (Pos.13) to the front protection. For fastening use M6x12 bolts (Pos.18), Ø6 mm washers (Pos.26) and dished washers (Pos.17).

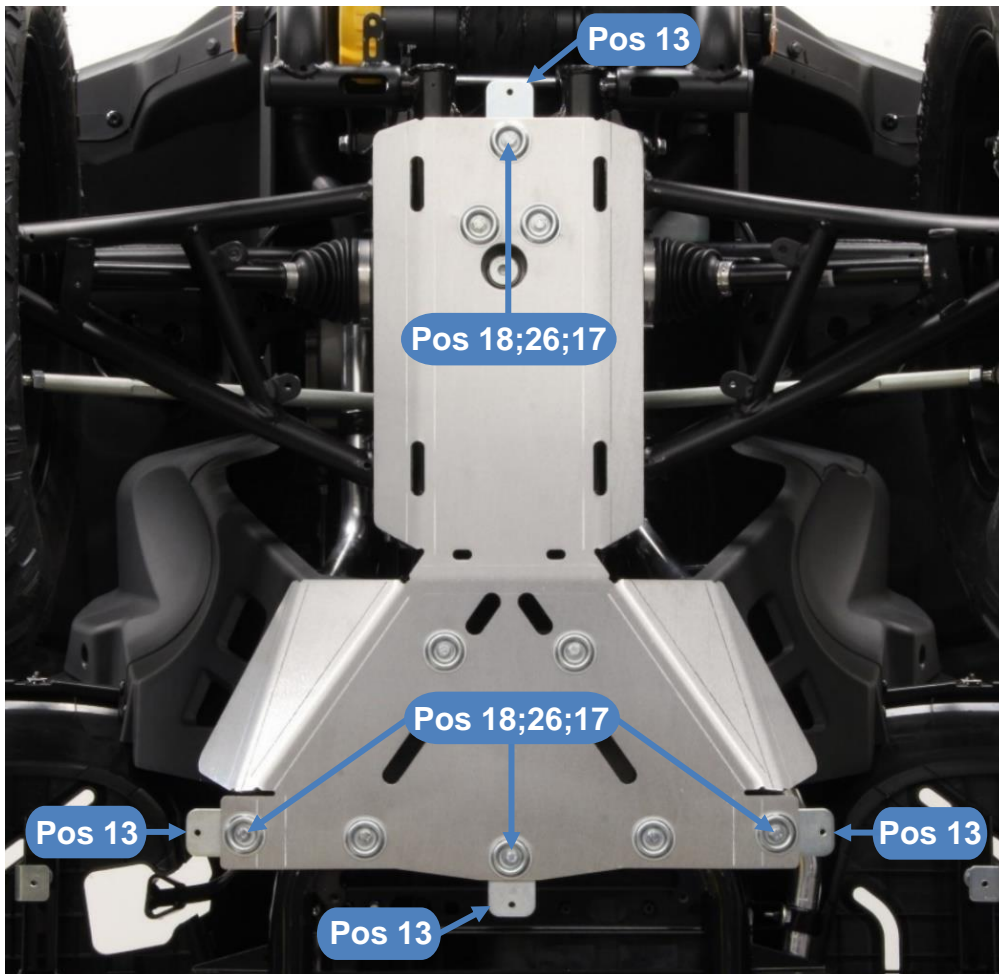

Step 6



Install the front protection reinforcement (Pos.2) to the front protection (Pos.1). For fastening use M6x20 bolts (Pos.24), Ø6 mm washers (Pos.26), Ø6 mm conical washers (Pos.16) and M6 nyloc nuts (Pos.29).

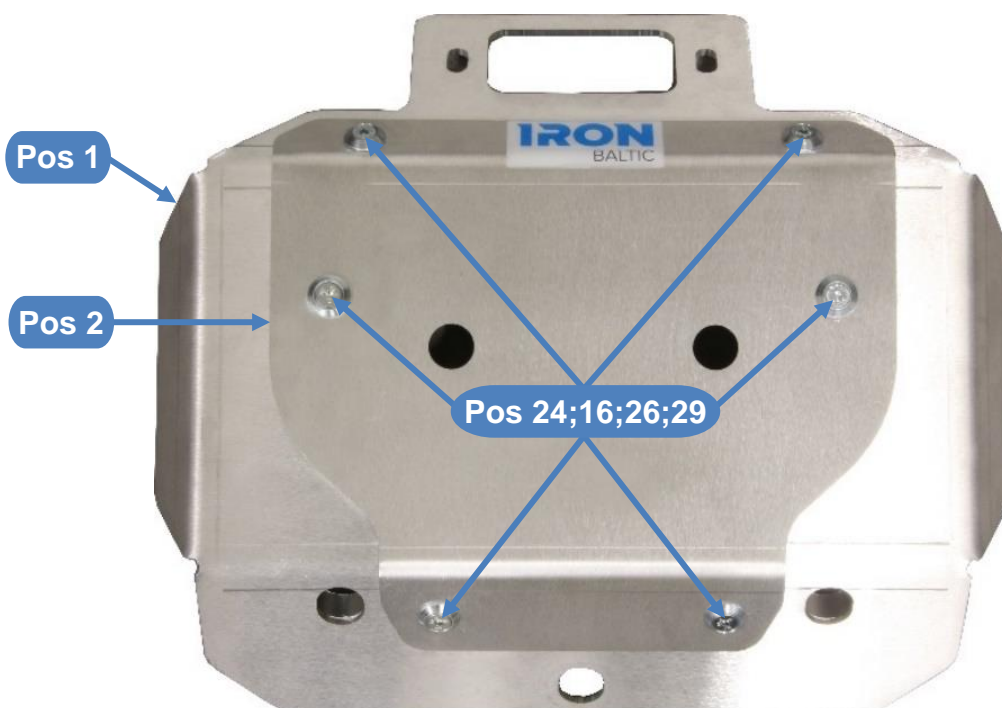

Step 7


Install the front protection and winch fairlead. For fastening use M6x12 bolt (Pos.18), M6x25 bolts (Pos.21), M10x30 bolts (Pos.25), Ø6 mm washers (Pos.26) and dished washers (Pos.17).

NB! Install all bolts in place before tightening them!

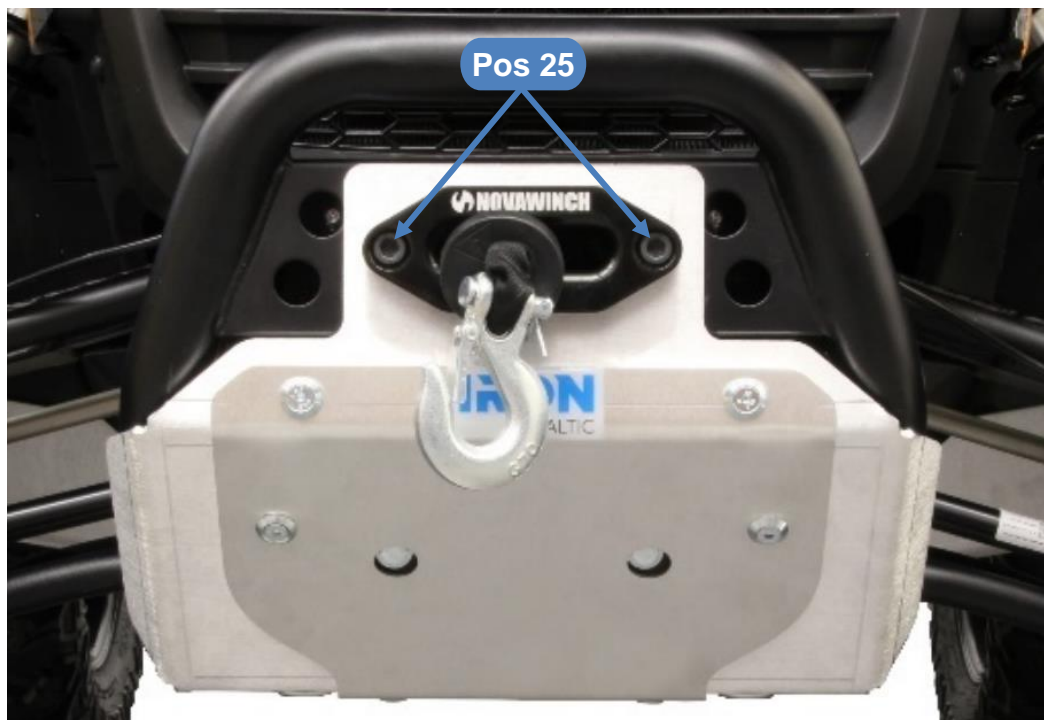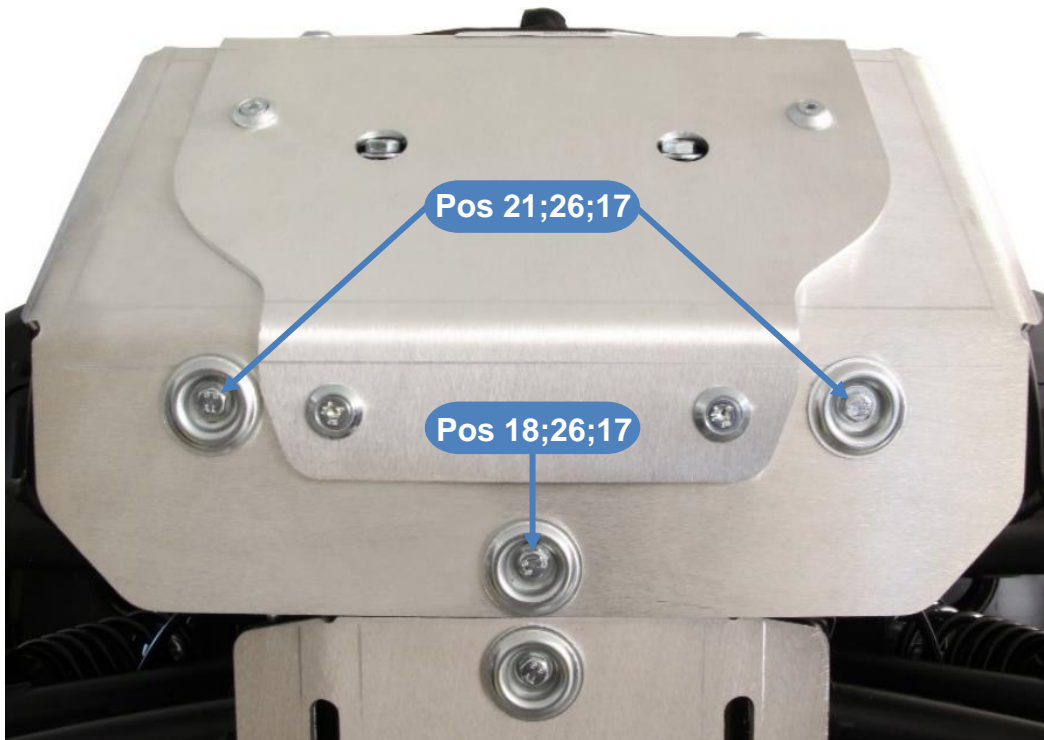


Step 8

Install the middle protection (Pos.4). For fastening use M6x12 bolt (Pos.18), M6x16 bolts (Pos.19), Ø6 mm washers (Pos.26) and dished washers (Pos.17).

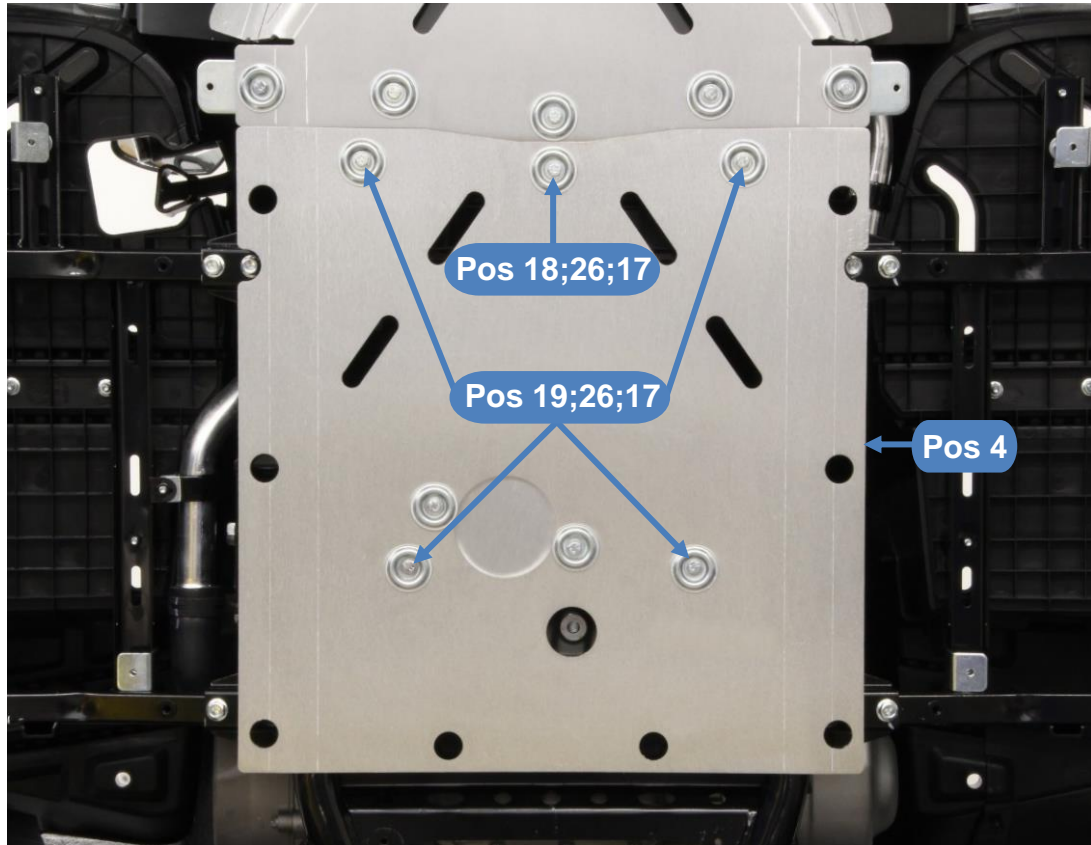



Step 9

Install the connecting plates (Pos.13) to the middle protection. For fastening use M6x12 bolts (Pos.18), Ø6 mm washers (Pos.26) and dished washers (Pos.17).

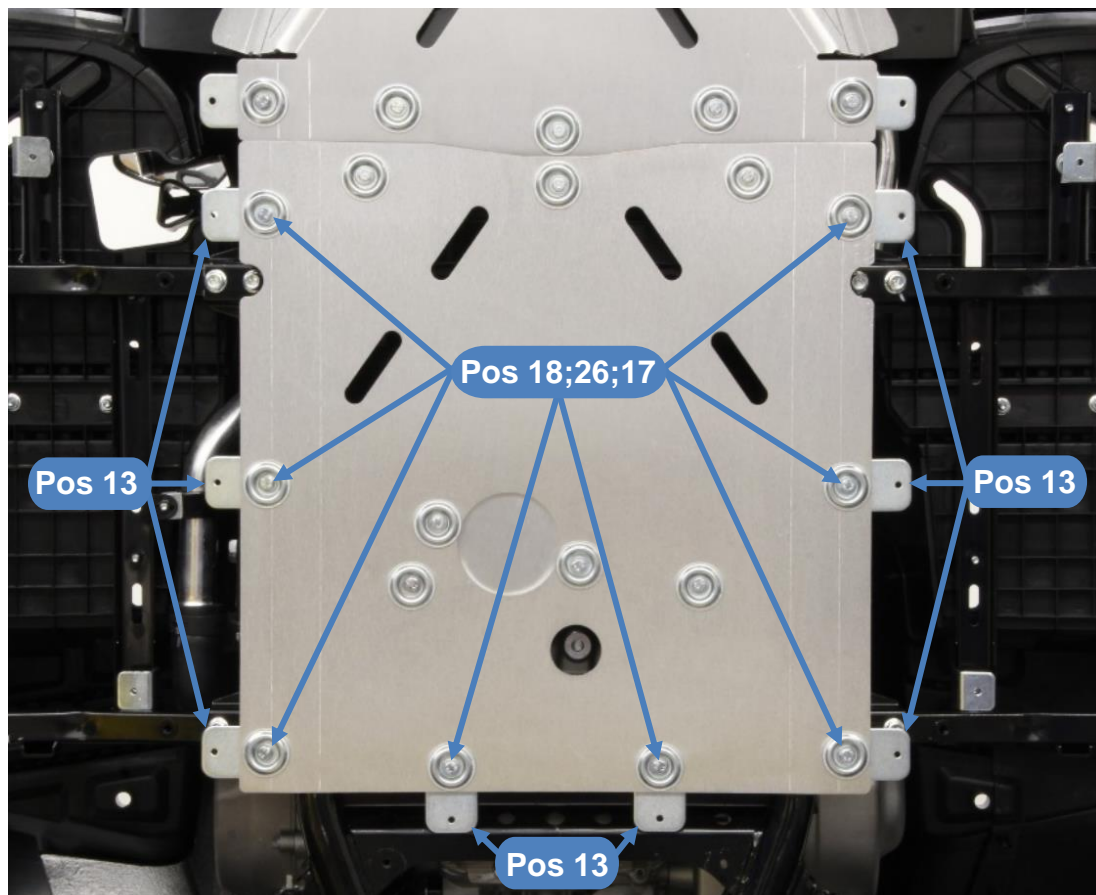



Step 10

Install the rear protection (Pos.6). For fastening use M6x12 bolts (Pos.18), M6x16 bolts (Pos.19), M6x20 bolts (Pos.24), M6x25 bolts (Pos.21), Ø6 mm washers (Pos.26), Ø6 mm conical washers (Pos.16) and dished washers (Pos.17).

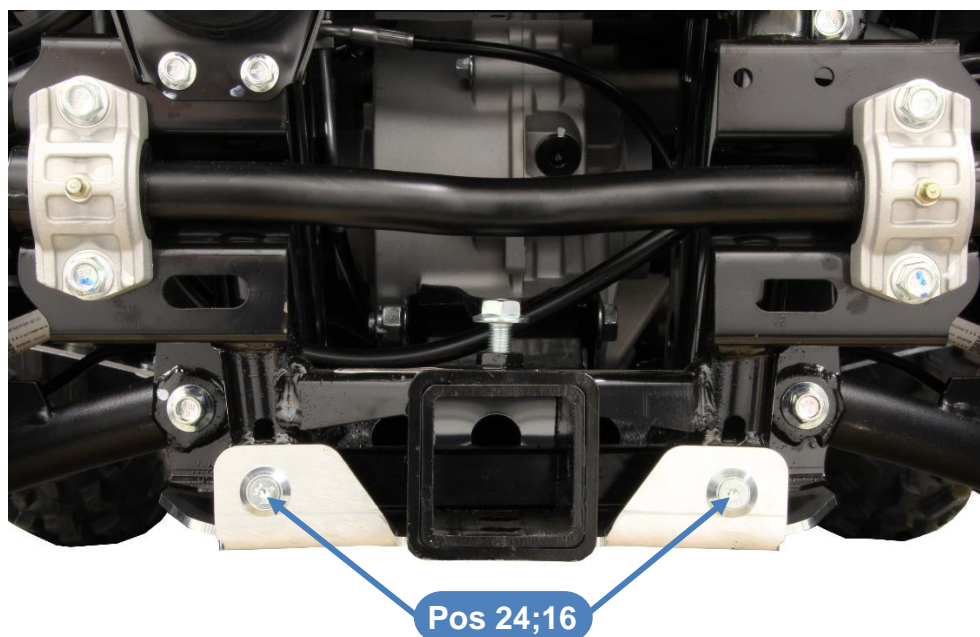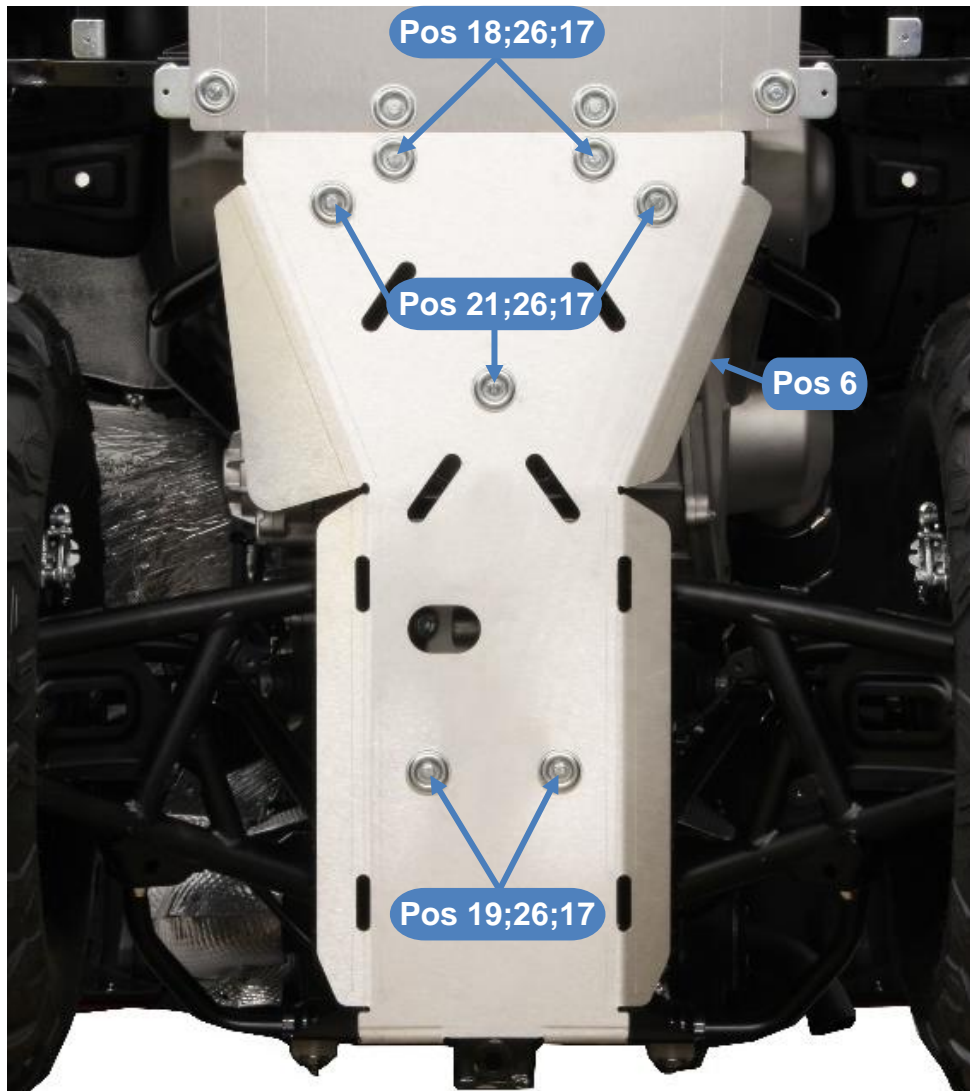



Step 11

Install the side protections (Pos.7; Pos.8). For fastening use M6x12 bolts (Pos.18), M6x20 bolts (Pos.20), M6x40 bolts (Pos.22), Ø6 mm washers (Pos.26) and dished washers (Pos.17). The edges of skid plate edge go outwards. If necessary, press the side protection or the edge of the ATV's original plastic inward to ensure proper fit.

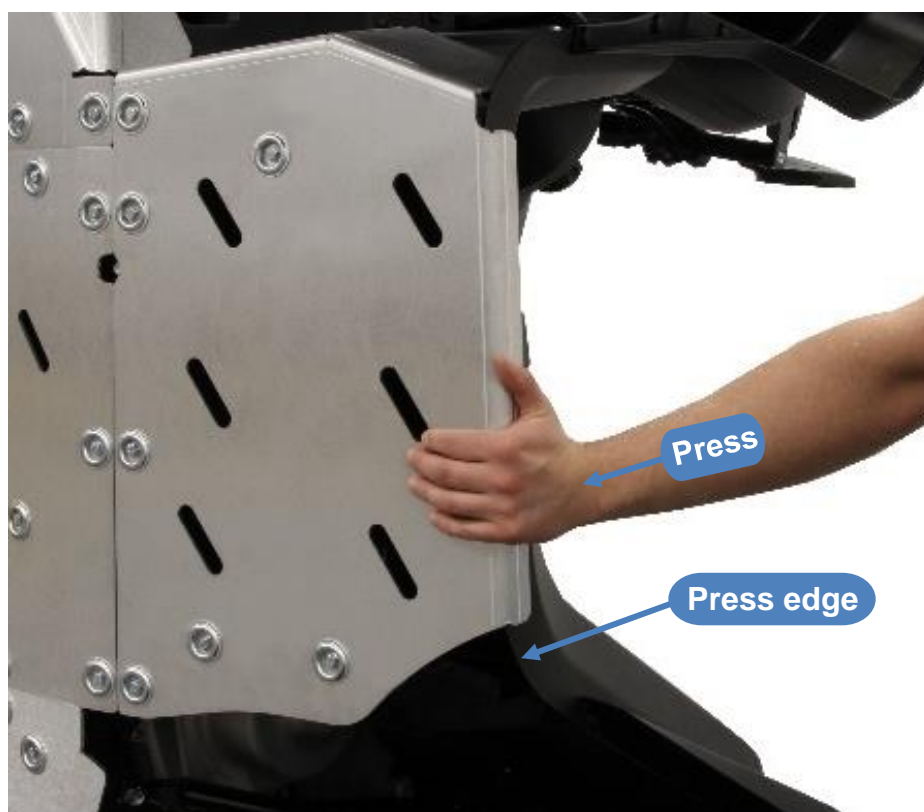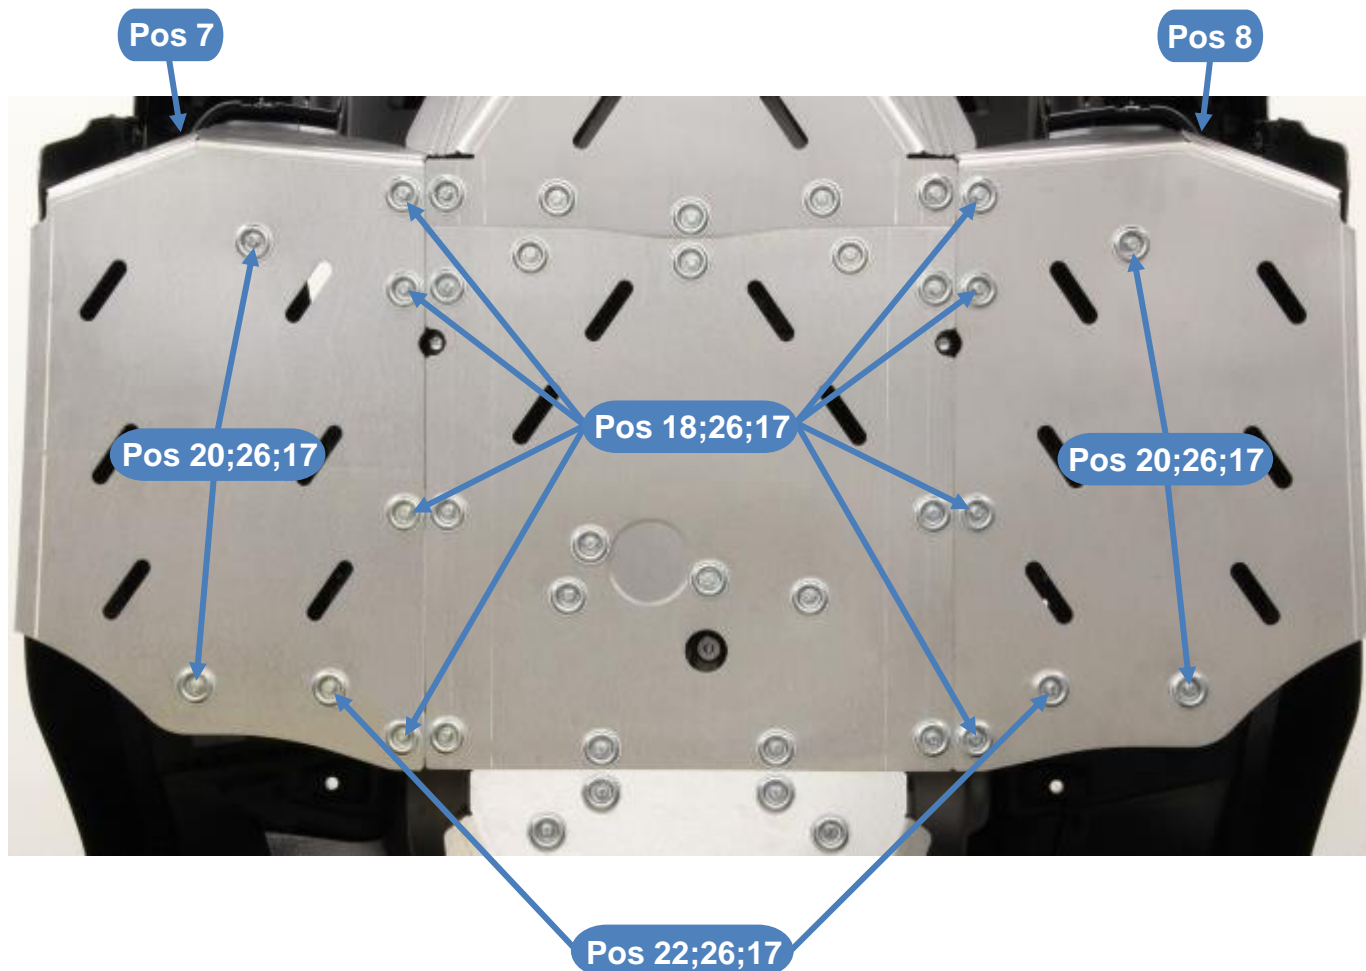

Step 12



Install front arm protections (Pos.9; Pos.10). For fastening use M6x16 bolts (Pos.19), M6x20 bolts (Pos.21), Ø6 mm washers (Pos.26), dished washers (Pos.17) and clamps (Pos.15).

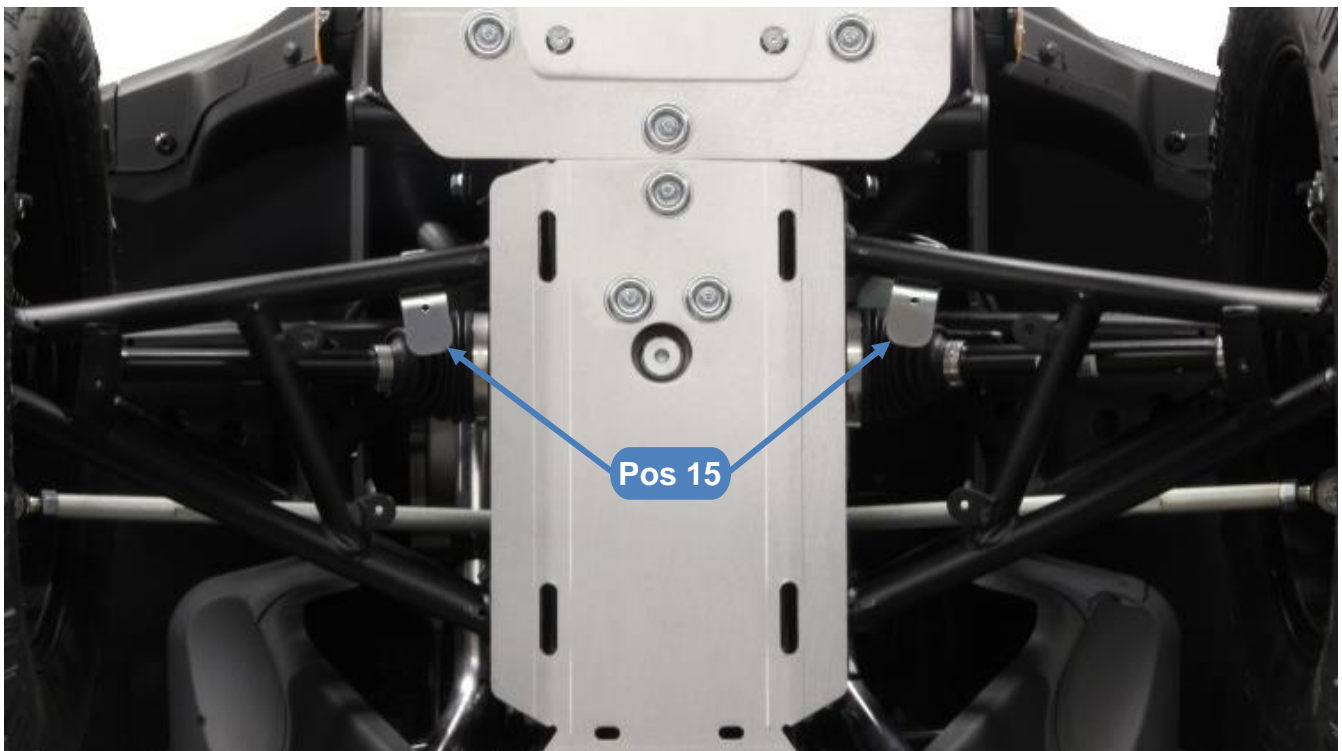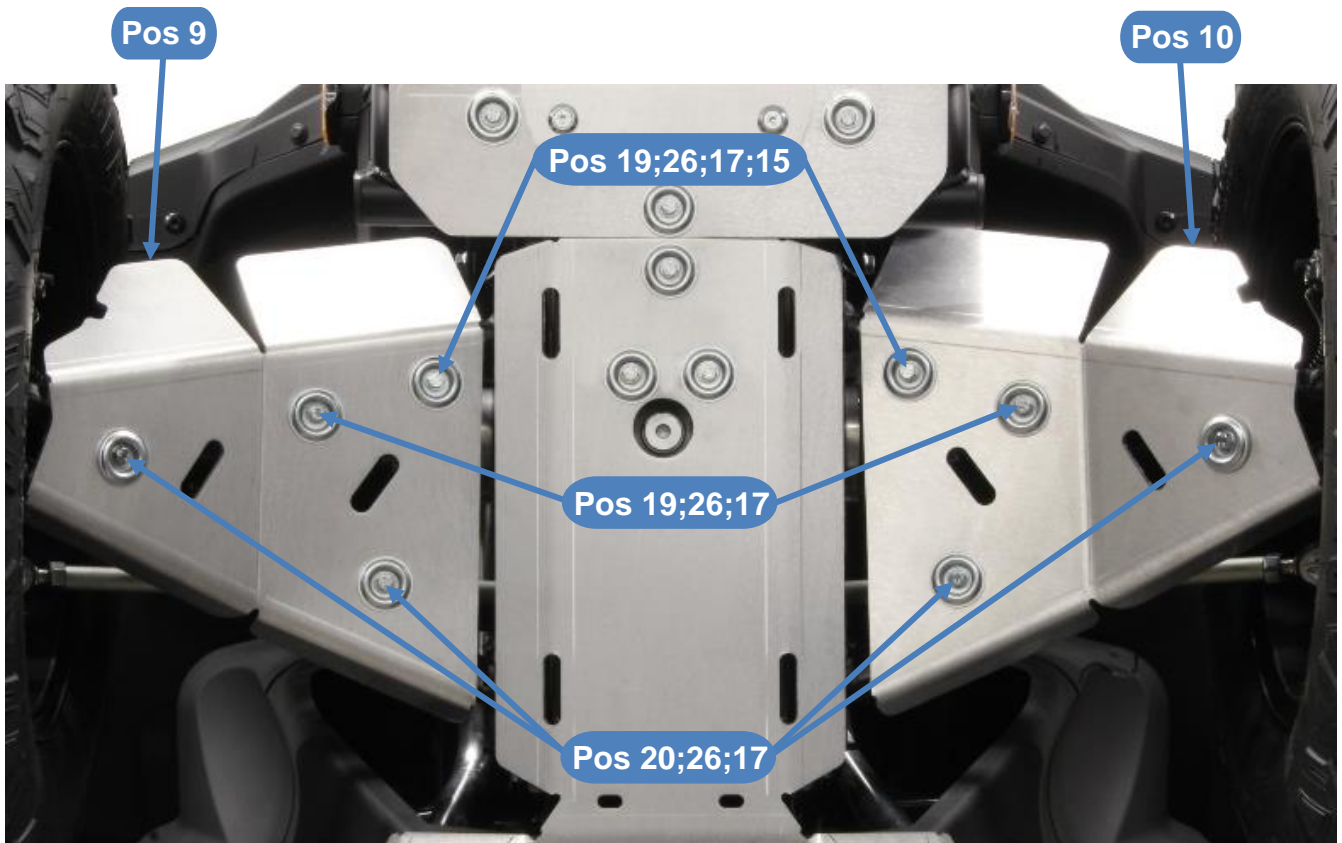

Step 13



Install rear arm protections (Pos.11; Pos.12). For fastening use M6x16 bolts (Pos.19), M6x20 bolts (Pos.20), Ø6 mm washers (Pos.26) and dished washers (Pos.17).

Remove the bolt holding the brake hose clamp, rotate the clamp 180 degrees so that the hose runs along the control arm tube, as shown in the picture, and then reinstall the bolt.

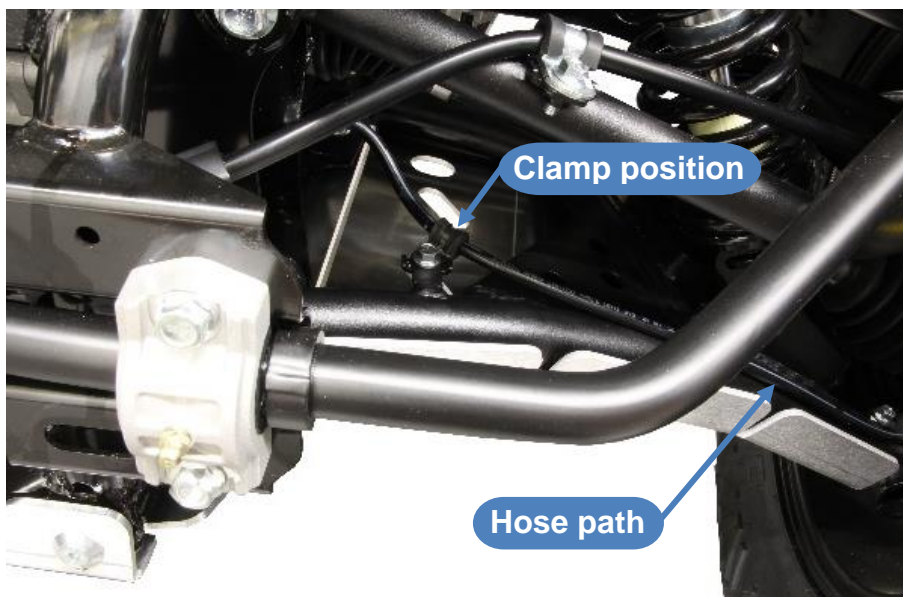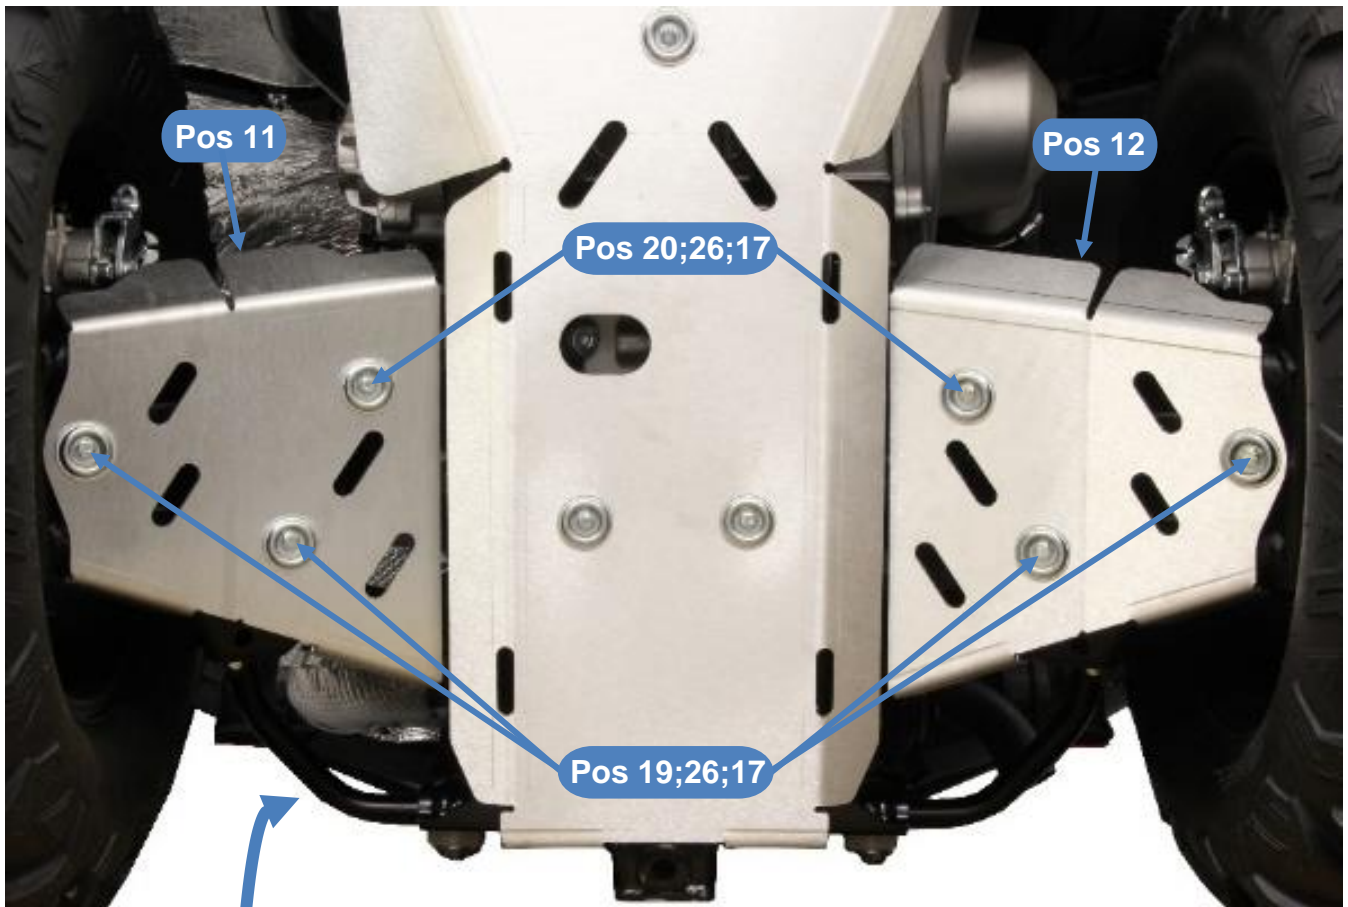



Step 14-1a
(Loosen only)

To loosen the oil filter cover plate, remove the bolts indicated by the arrows and loosen the other bolts. Then slide the plate clockwise. If this does not provide enough access, you can fully remove the oil cover plate (see Step 14-1b).

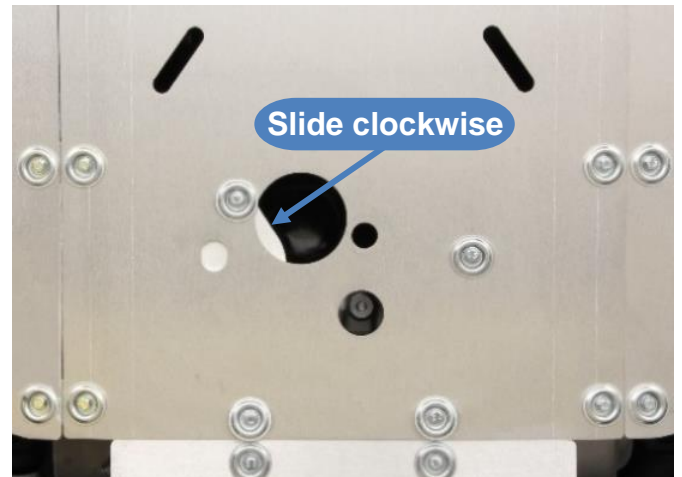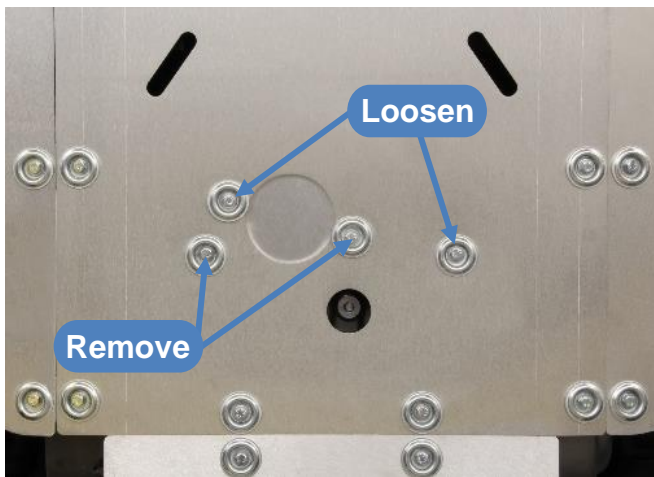

Step 14-1b
(Fully remove)

To fully remove the oil filter cover plate, remove the bolts indicated by the arrows and loosen the other bolts. Then remove the plate from the right side of ATV, as shown in the picture.

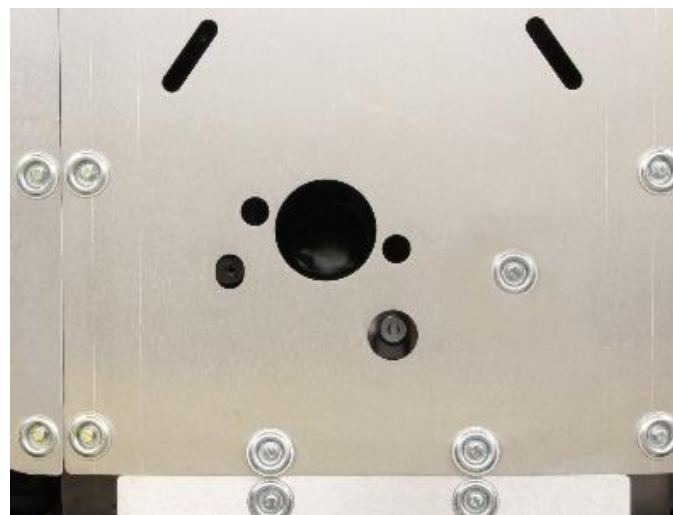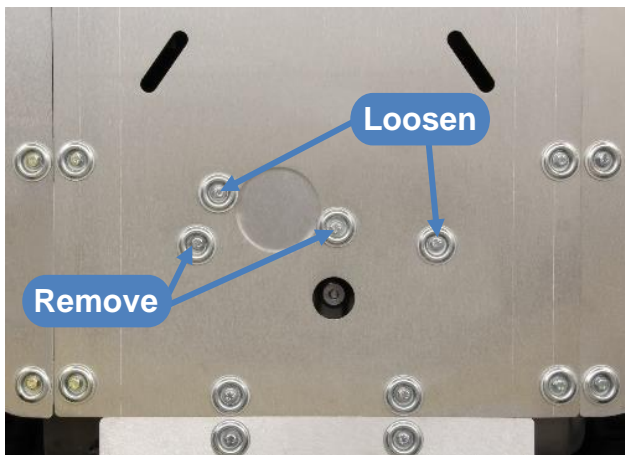

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld