

IRON BALTIC

ALUMINIUM SKID PLATE

GOES

625


Code 02.5100

Version 23102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/7DQ0FEVW

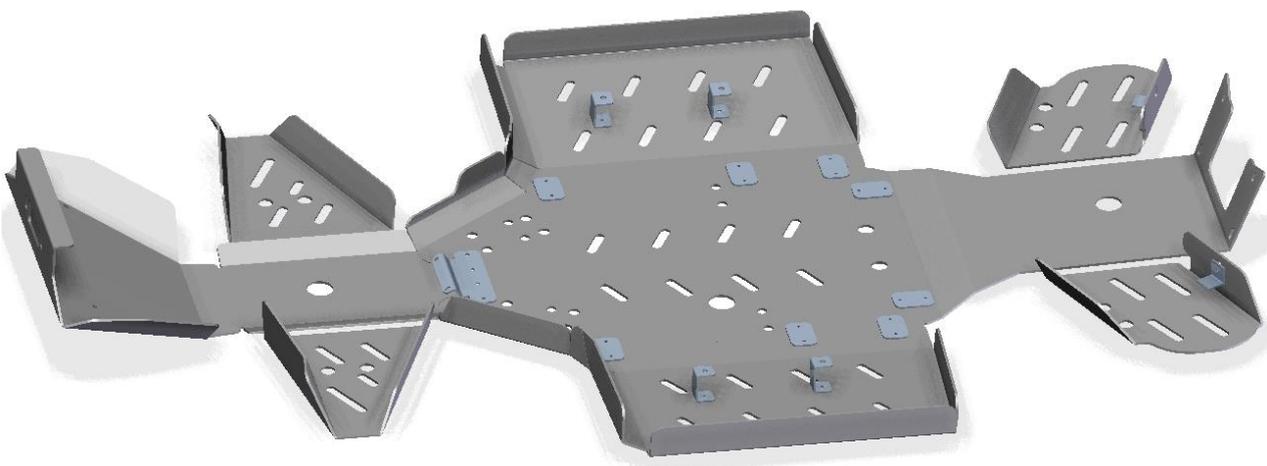



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.5102	1
2	Front part	02.5002	1
3	Rear part	02.5103	1
4	Left side protection	02.5105K	1
5	Right side protection	02.5104K	1
6	Front left arm protection	02.1075V+	1
7	Front right arm protection	02.1075P+	1
8	Rear left arm protection	02.1076V+	1
9	Rear right arm protection	02.1076P+	1
10	Installation plate	02.1072+	1
11	Plate	02.5006	8
12	Bracket	02.6408	4
13	Angle	03.1502	2
14	Clamp 38mm	OT.05.01.030	2
15	Screw 3,5x22 DIN7981	OT.01.02.004	2
16	Bolt M6x12 DIN 933	OT.02.02.030	4
17	Bolt M6x16 DIN 7991	OT.02.04.020	16
18	Bolt M6x16 DIN 933	OT.02.02.050	12
19	Bolt M6x25 DIN 933	OT.02.02.070	2
20	Bolt M6x70 DIN 933	OT.02.02.150	4
21	Bolt M8x16 DIN 933	OT.02.02.170	6
22	Bolt M8x20 DIN 933	OT.02.02.180	2
23	Conical washer Ø6	14.502	16
24	Dished washer	14.503	18
25	Washer Ø5/15 DIN 9021	OT.04.02.010	2
26	Washer Ø6/15 SFS 3738	OT.04.03.020	30
27	Washer Ø8/20 SFS 3738	OT.04.03.030	4
28	Nyloc nut M6 DIN 985	OT.03.02.030	8

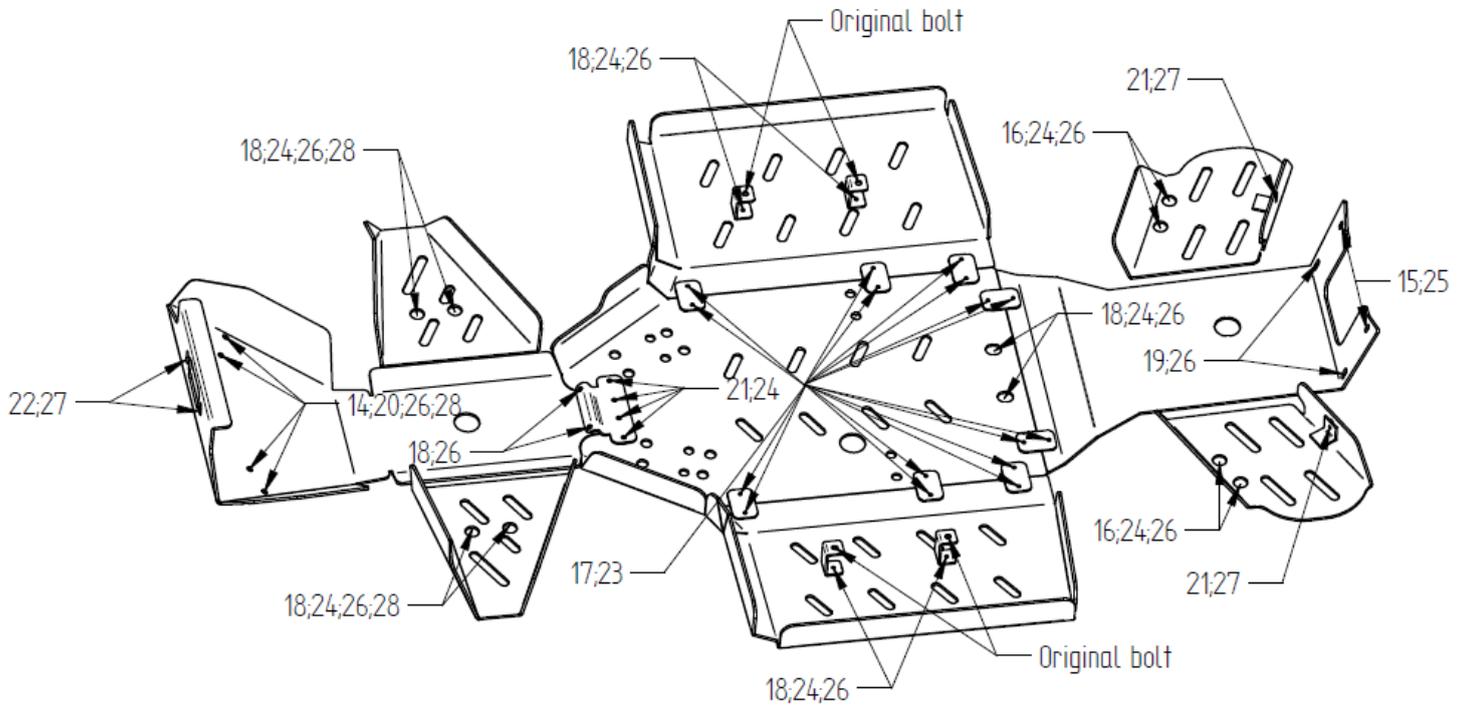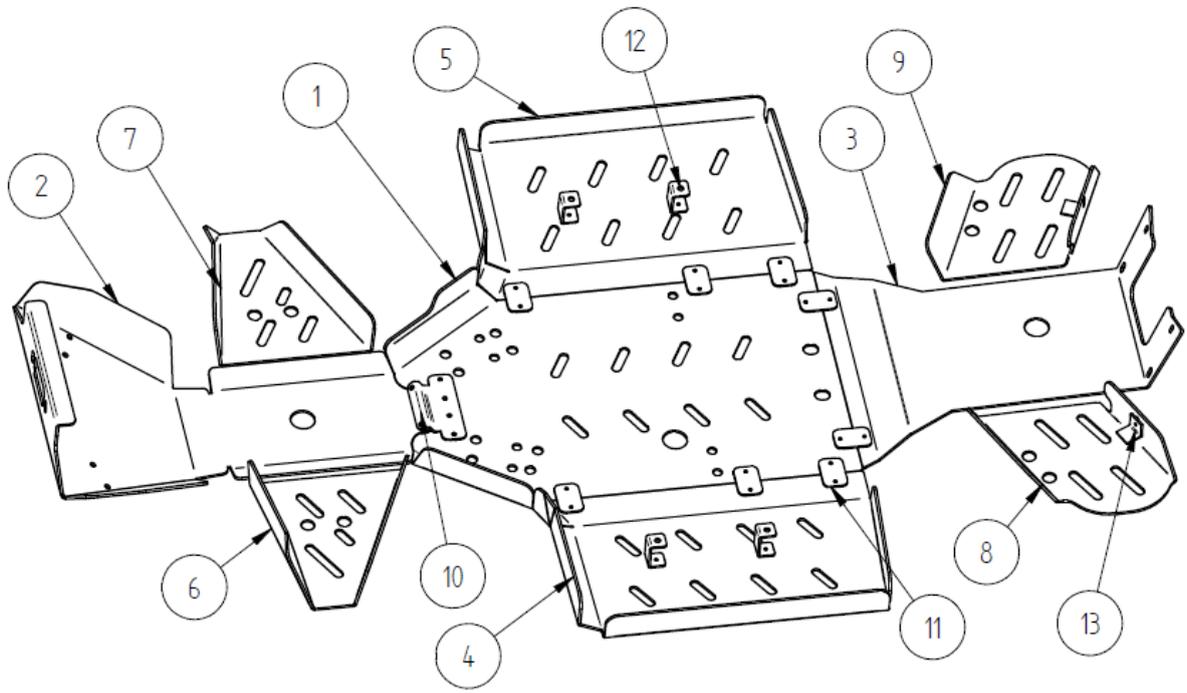


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers and roller.

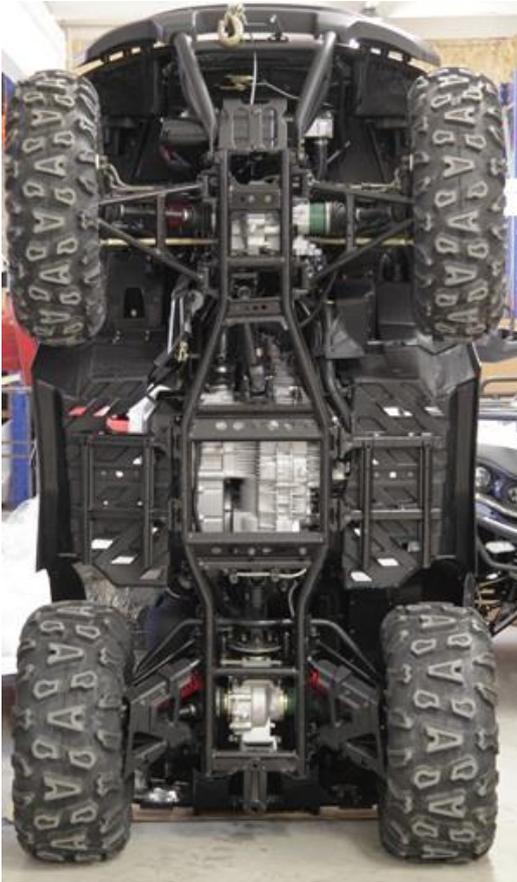


Step 2 Install installation plates 02.1072+ and 02.6408.

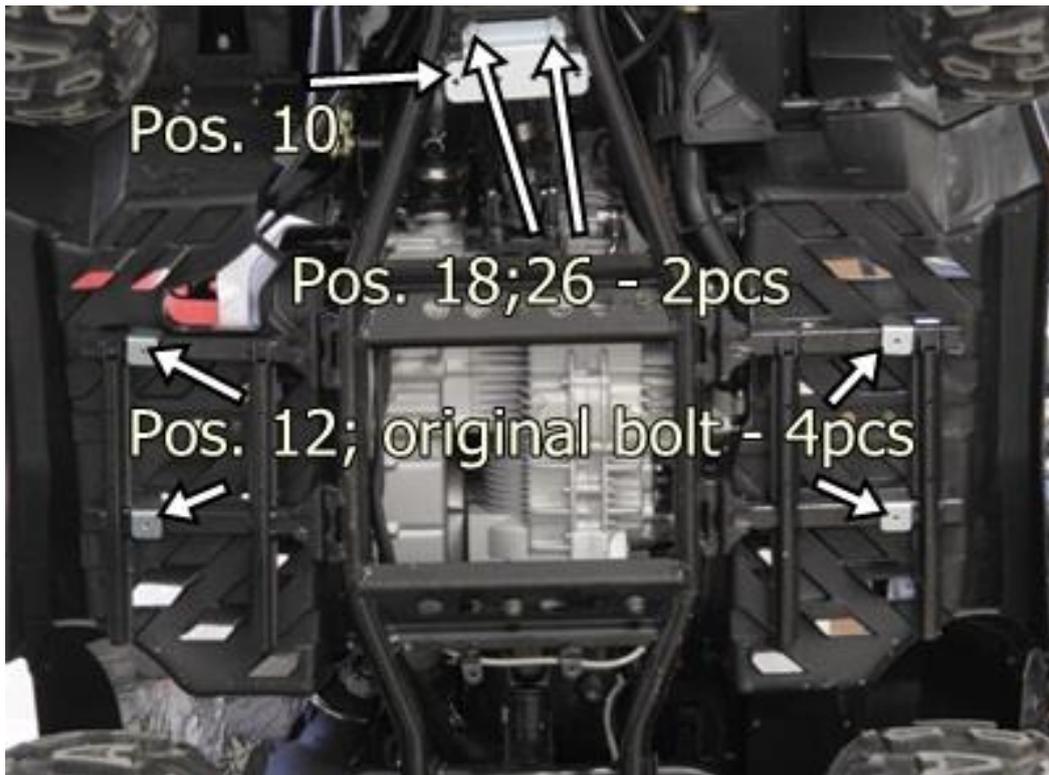


Step 3

Install middle part 02.5102.

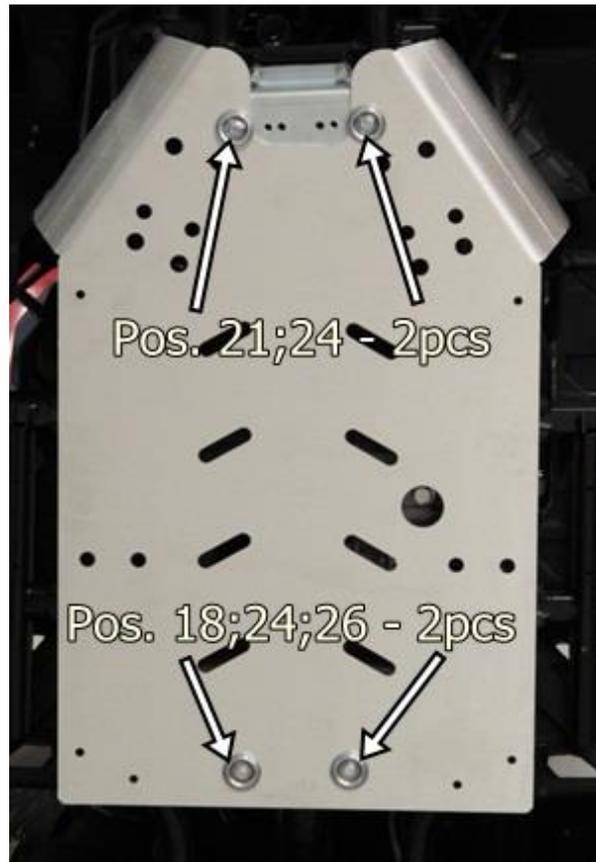


Step 4

Install plates 02.5006.

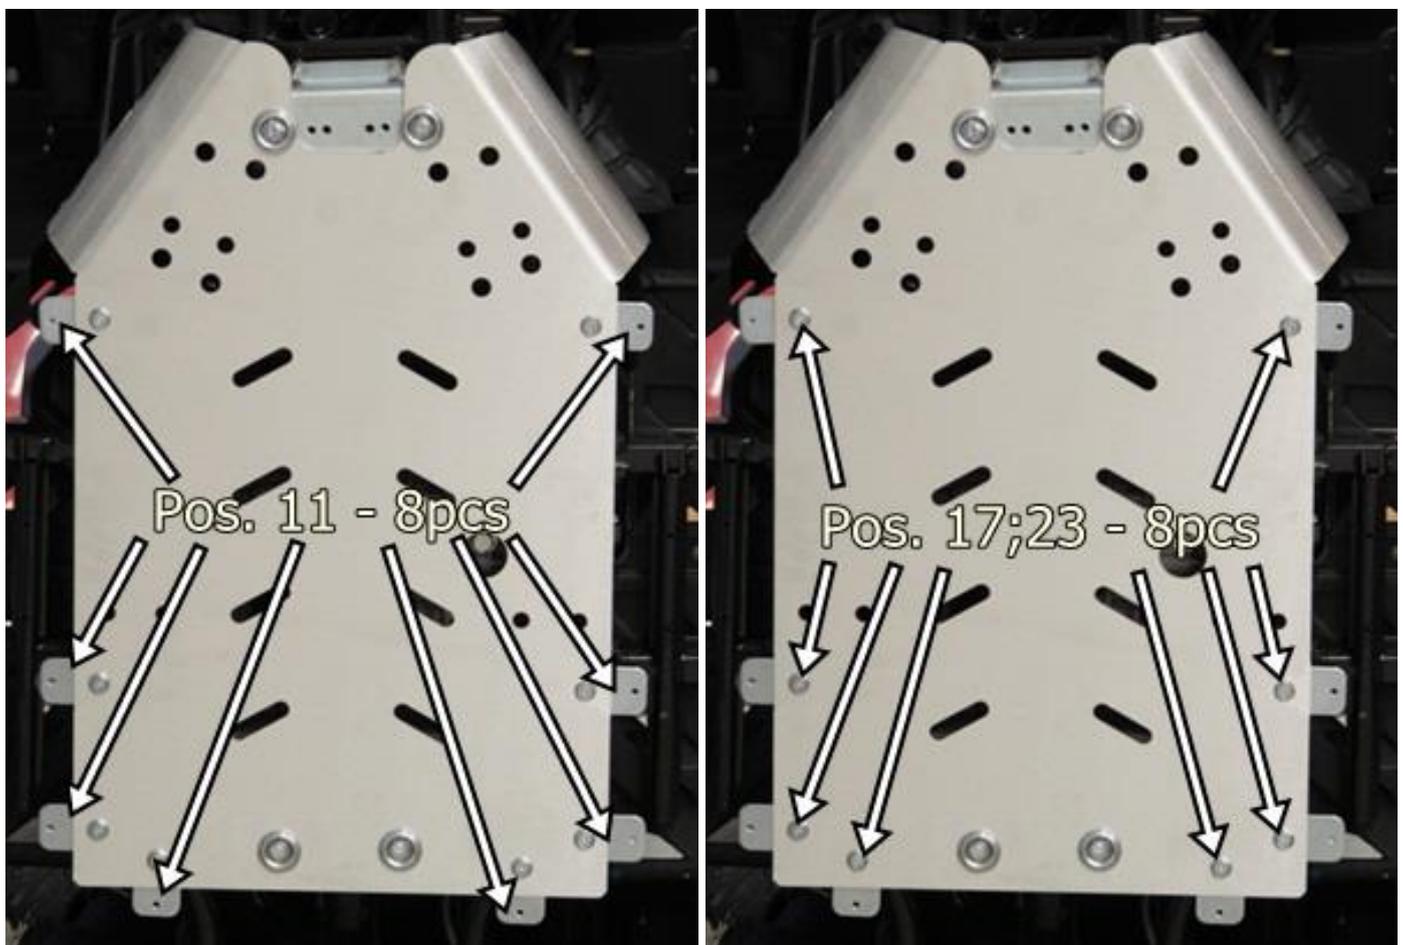


Step 5

Install side protections 02.5104K, 02.5105K.

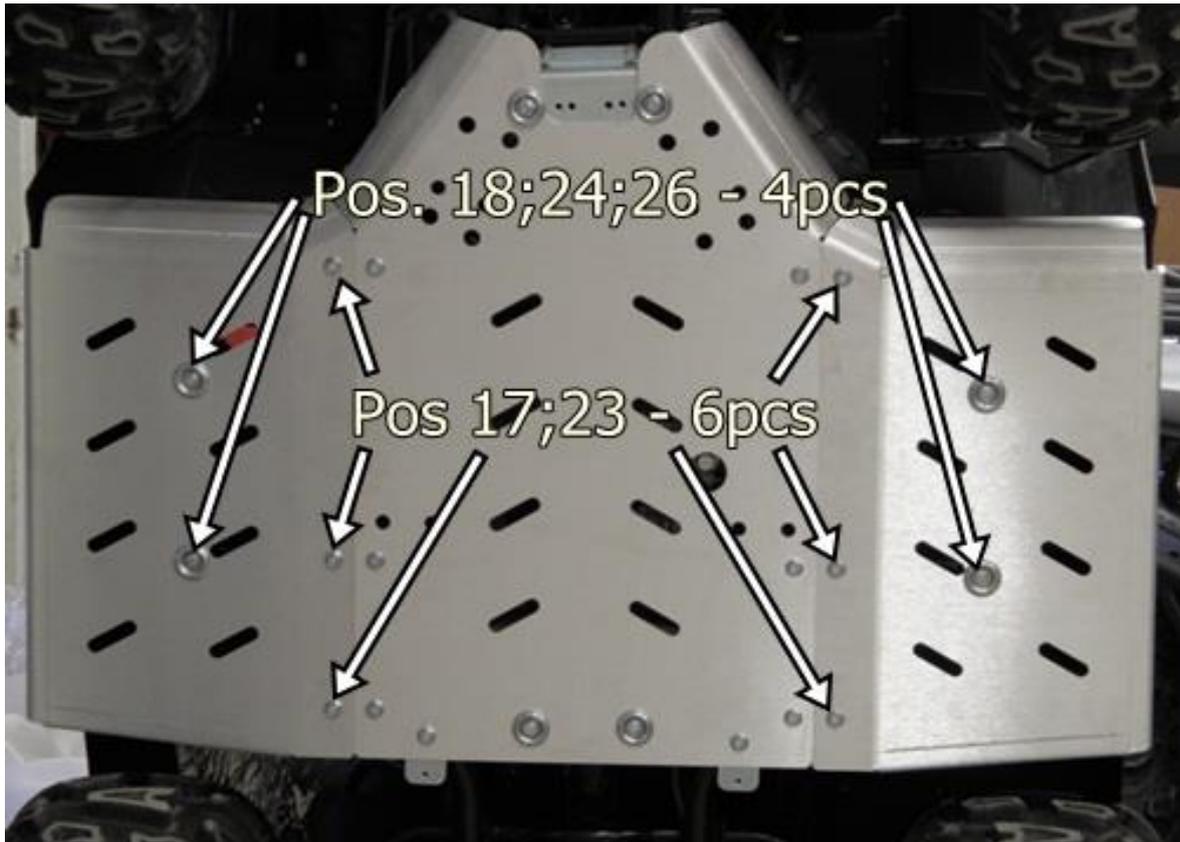



Step 6

Install rear part 02.5103.

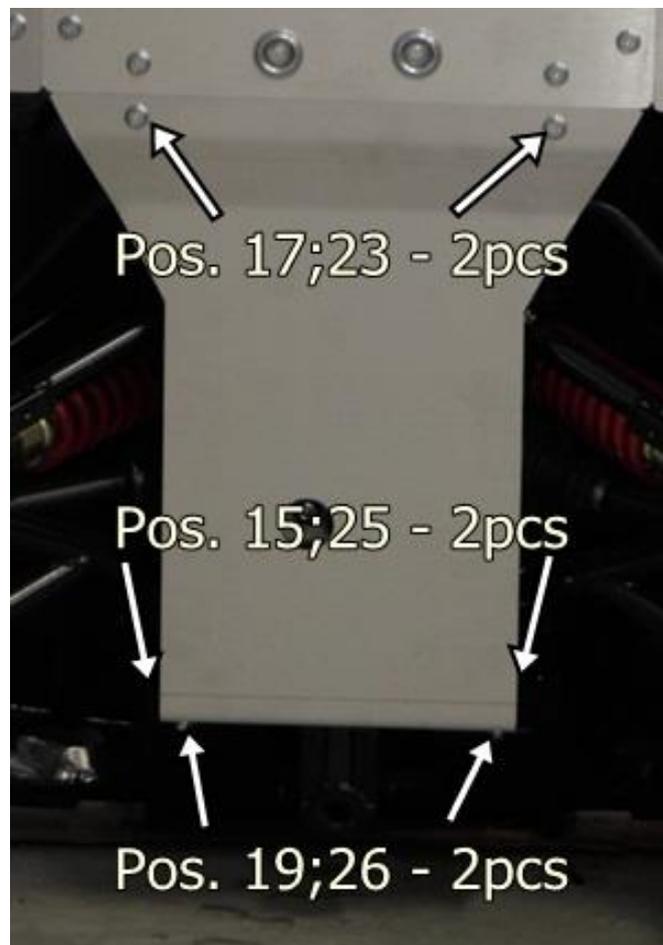


Step 7

Install front part 02.5002. Install roller back.

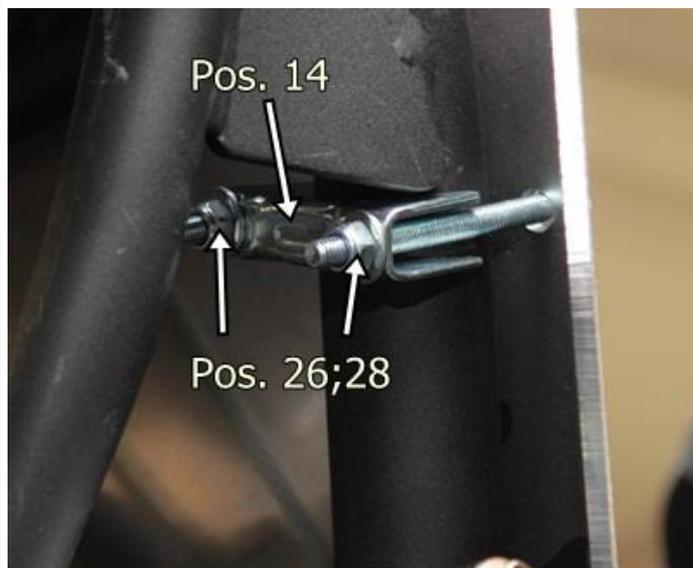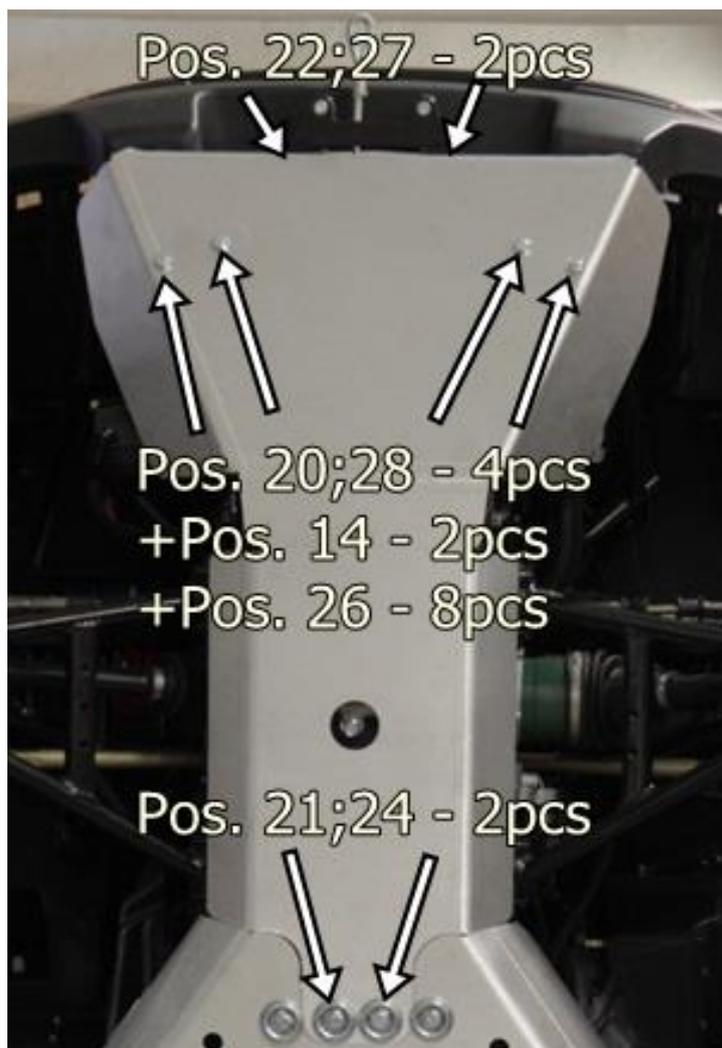



Step 8

Install front arms protections 02.1075P+, 02.1075V+.

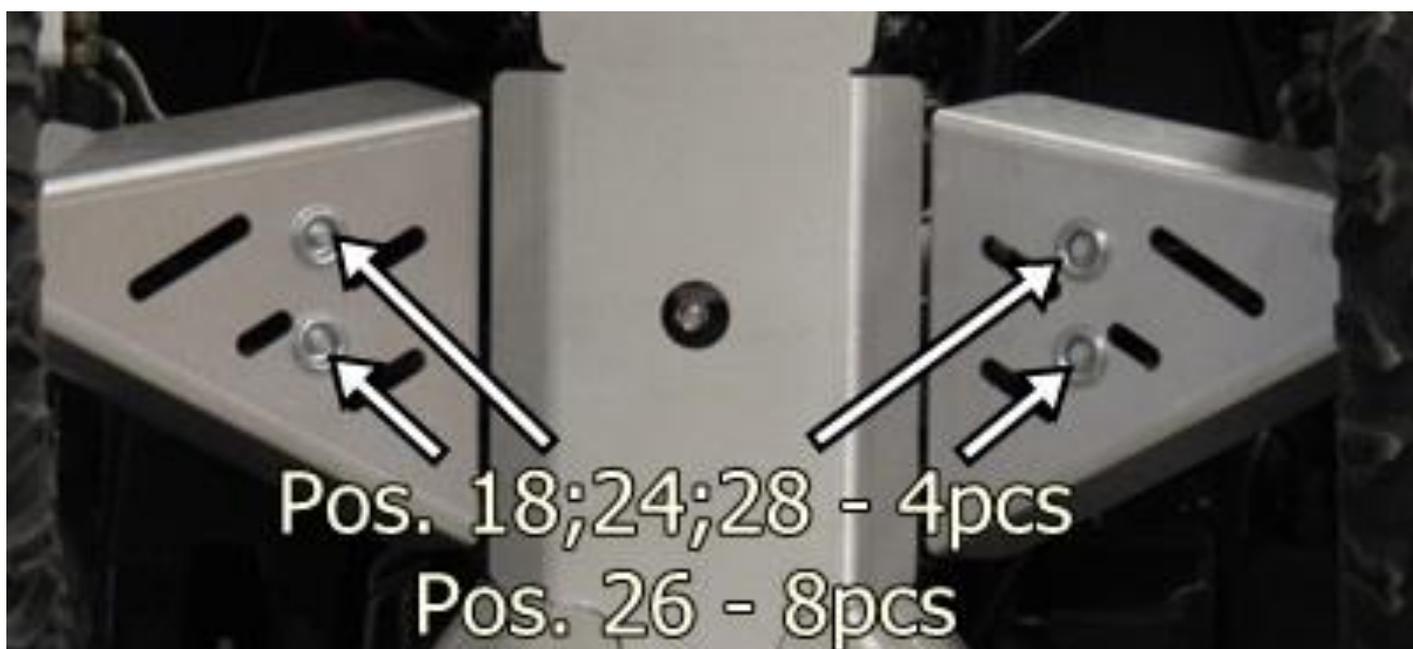

Step 9

Install rear arms protections 02.1076P+, 02.1076V+, use angles 03.1502.

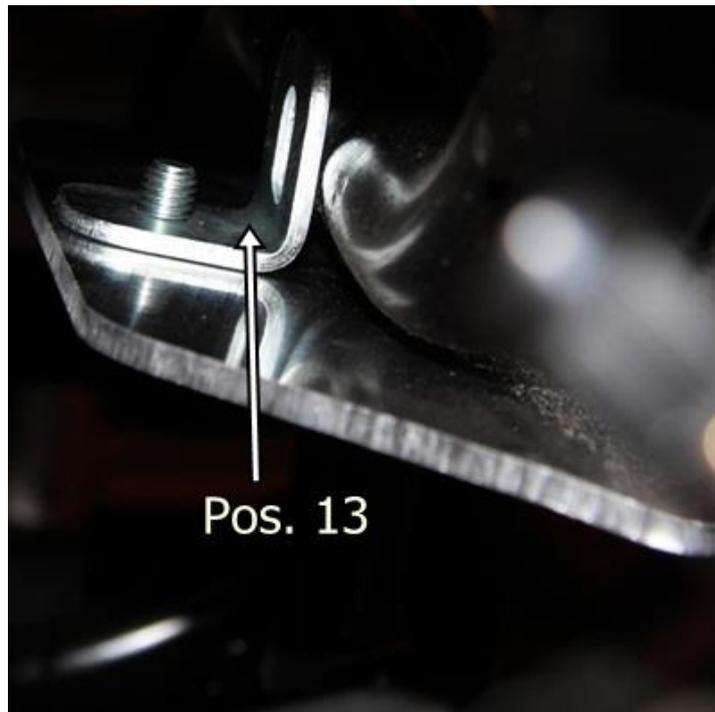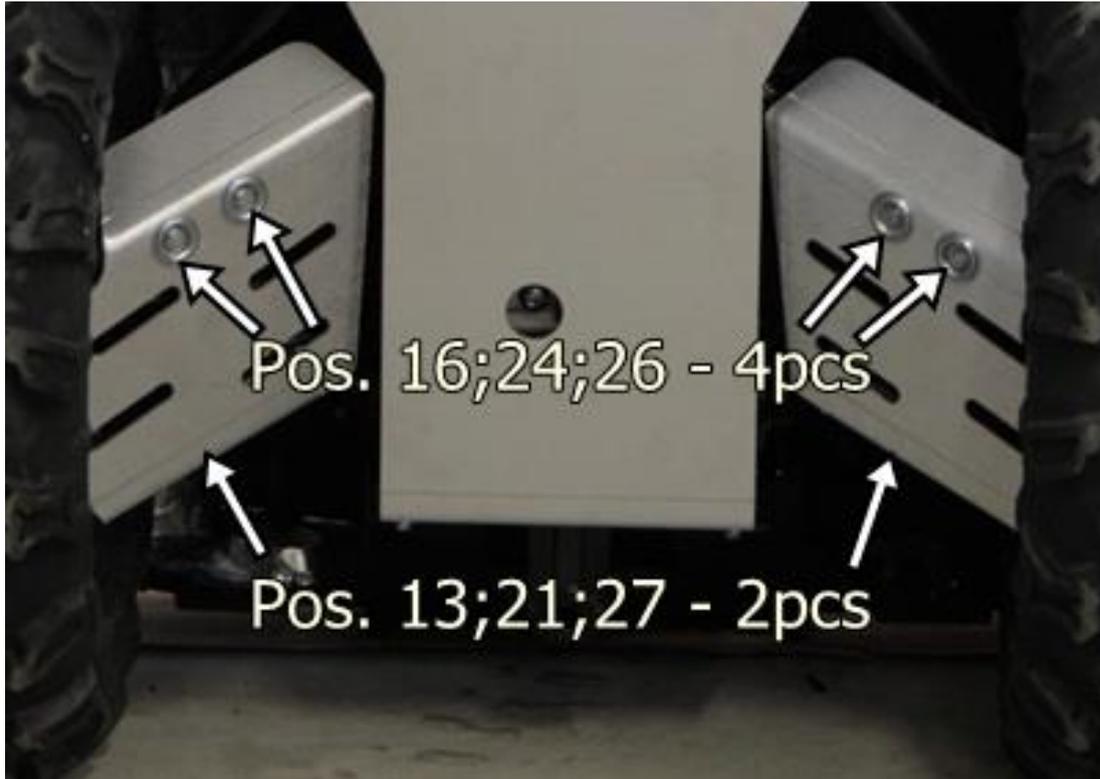

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

