

# IRON BALTIC

## SKID PLATE

## CF MOTO

### X5 / X6


Code 02.6400

Version 27102023

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/R5i70Ogu](https://code.ironbaltic.com/u/R5i70Ogu)

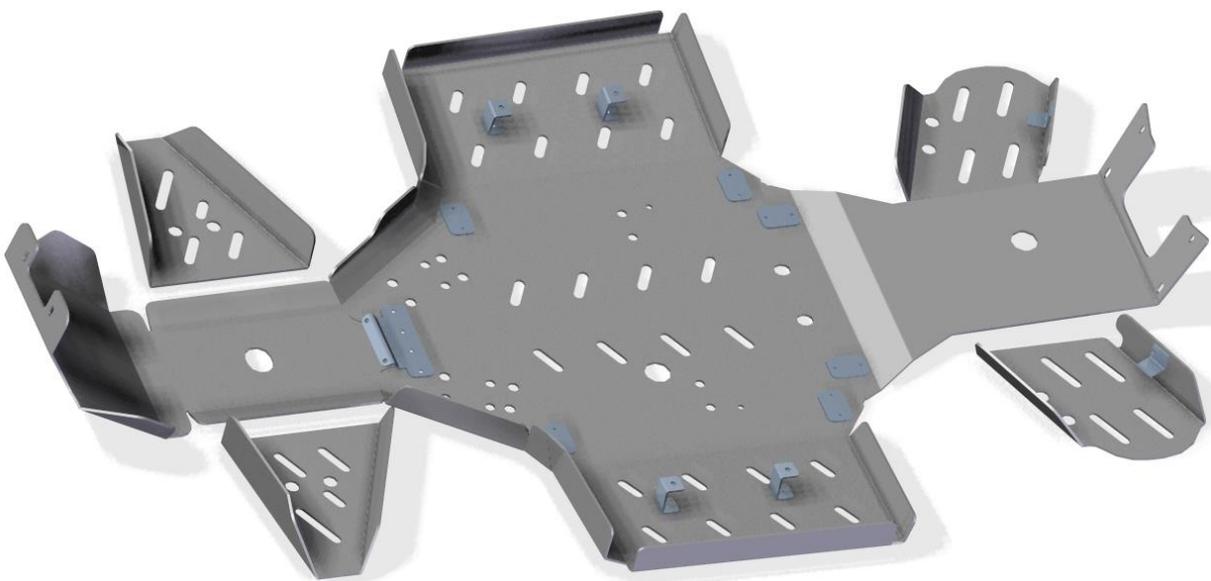



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.5102	1
2	Front part	02.6102	1
3	Rear part	02.5103	1
4	Left side protection	02.6405K	1
5	Right side protection	02.6404K	1
6	Front left arm protection	02.1075V+	1
7	Front right arm protection	02.1075P+	1
8	Rear left arm protection	02.1076V+	1
9	Rear right arm protection	02.1076P+	1
10	Intallation plate	02.1072+	1
11	Plate	02.5006	6
12	Bracket	02.6408	4
13	Angle	03.1502	2
14	Screw 3,5x22 DIN7981	OT.01.02.004	2
15	Bolt M6x12 DIN 933	OT.02.02.030	4
16	Bolt M6x16 DIN 7991	OT.02.04.020	12
17	Bolt M6x16 DIN 933	OT.02.02.050	12
18	Bolt M6x25 DIN 933	OT.02.02.070	2
19	Bolt M8x16 DIN 933	OT.02.02.170	6
20	Bolt M8x20 DIN 933	OT.02.02.180	2
21	Conical washer Ø6	14.502	12
22	Dished washer	14.503	18
23	Washer Ø5/15 DIN 9021	OT.04.02.010	2
24	Washer Ø6/15 SFS 3738	OT.04.03.020	22
25	Washer Ø8/20 SFS 3738	OT.04.03.030	4
26	Nyloc nut M6 DIN 985	OT.03.02.030	4

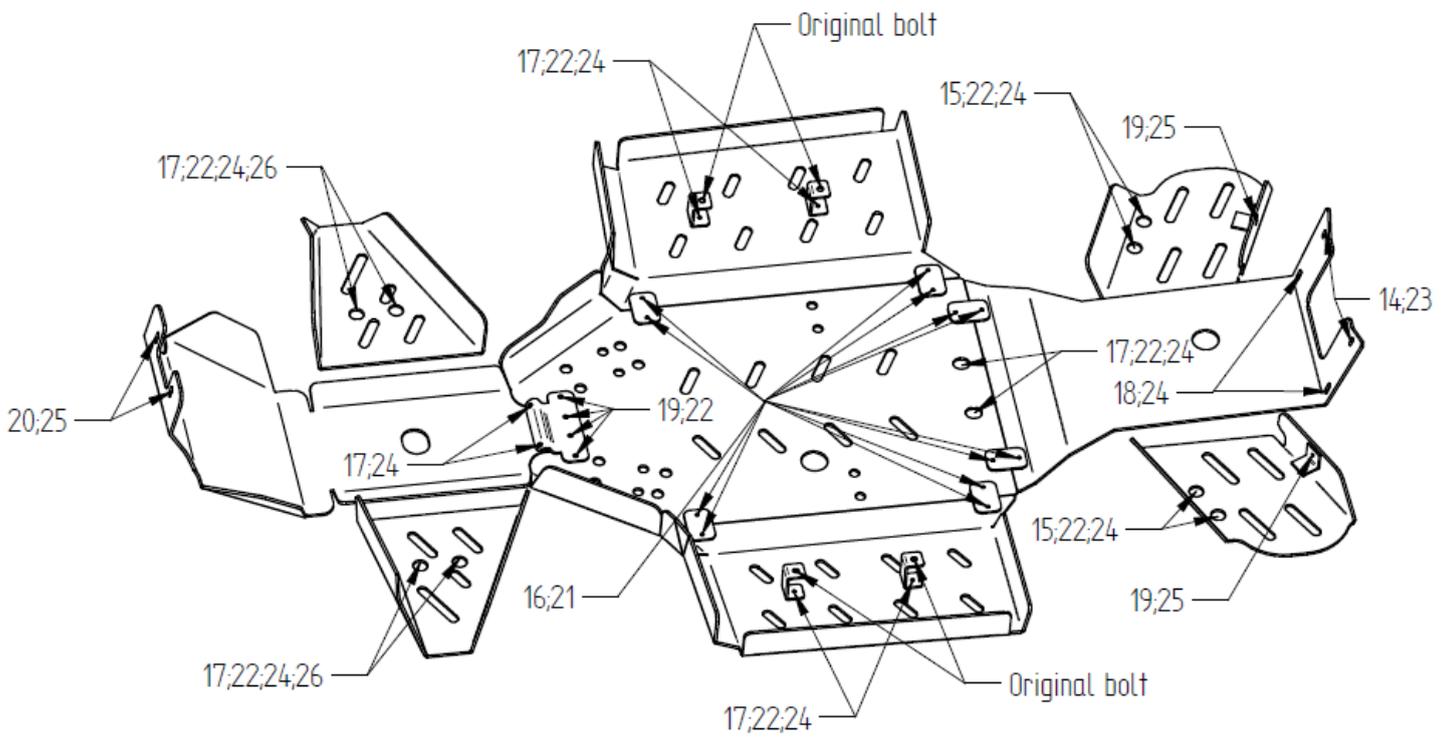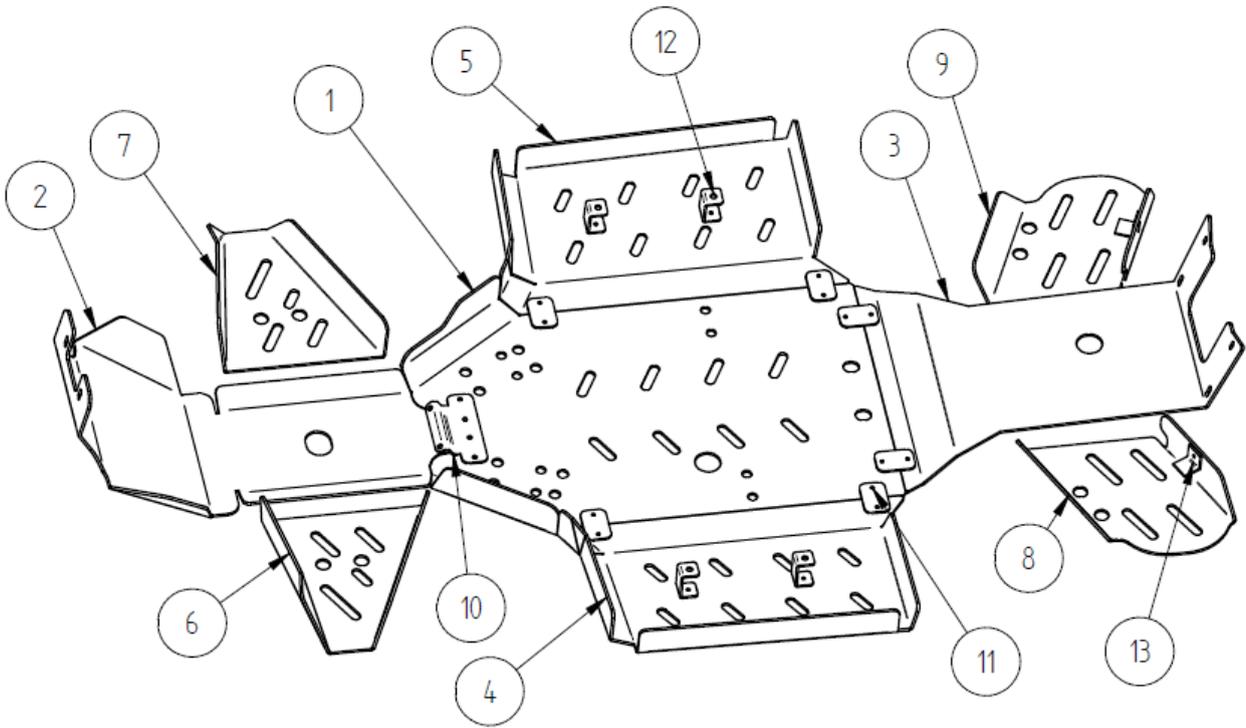


# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers and roller.




**Step 2** Install installation plates 02.1072+ and 02.6408.

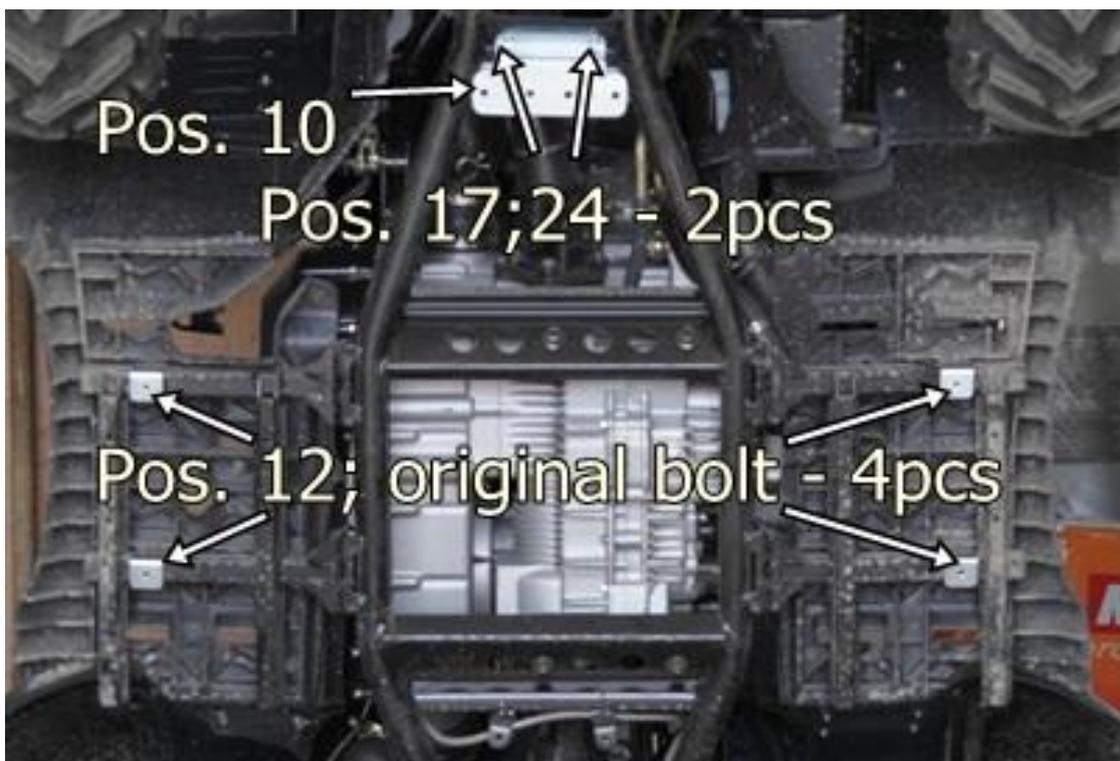


### Step 3

Install middle part 02.5102.

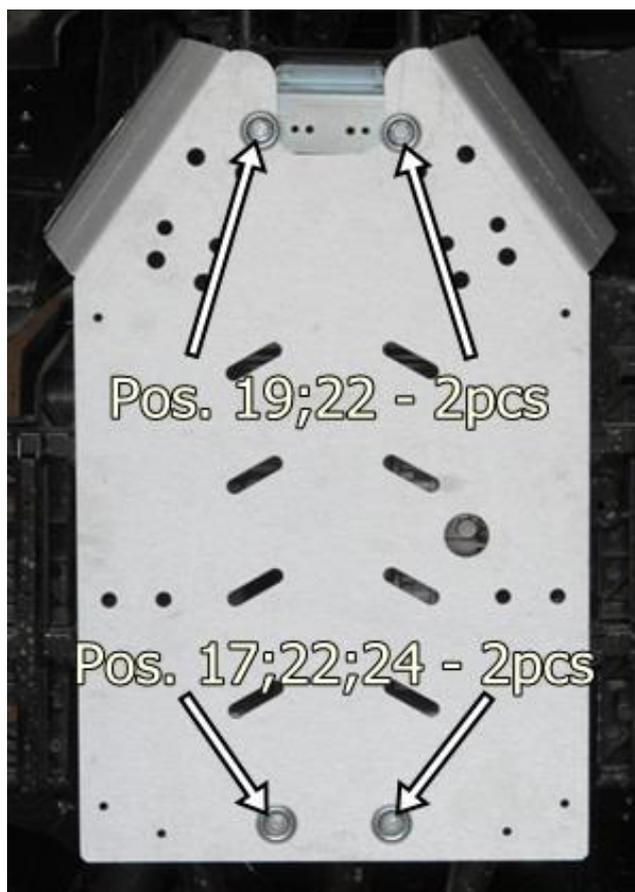


### Step 4

Install plates 02.5006.

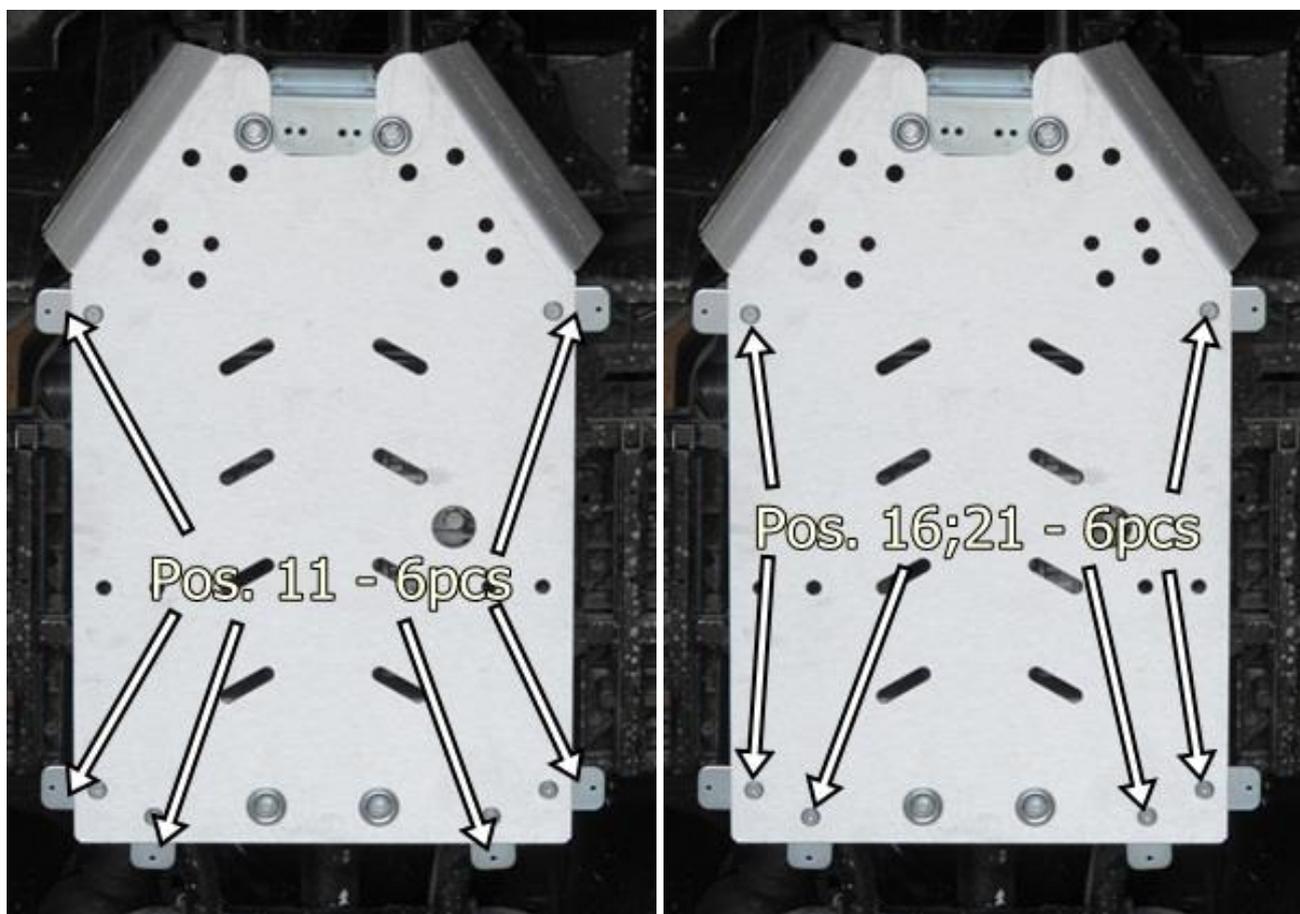


## Step 5

Install side protections 02.6404K, 02.6405K.

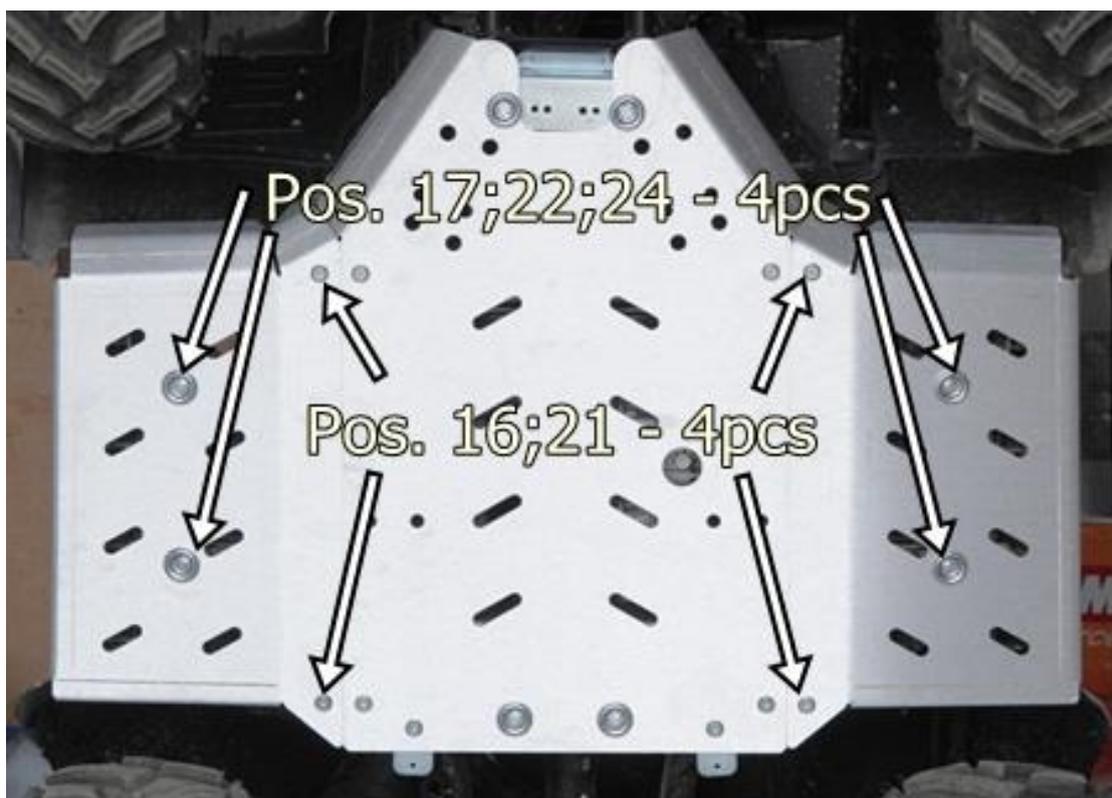


## Step 6

Install rear part 02.5103.

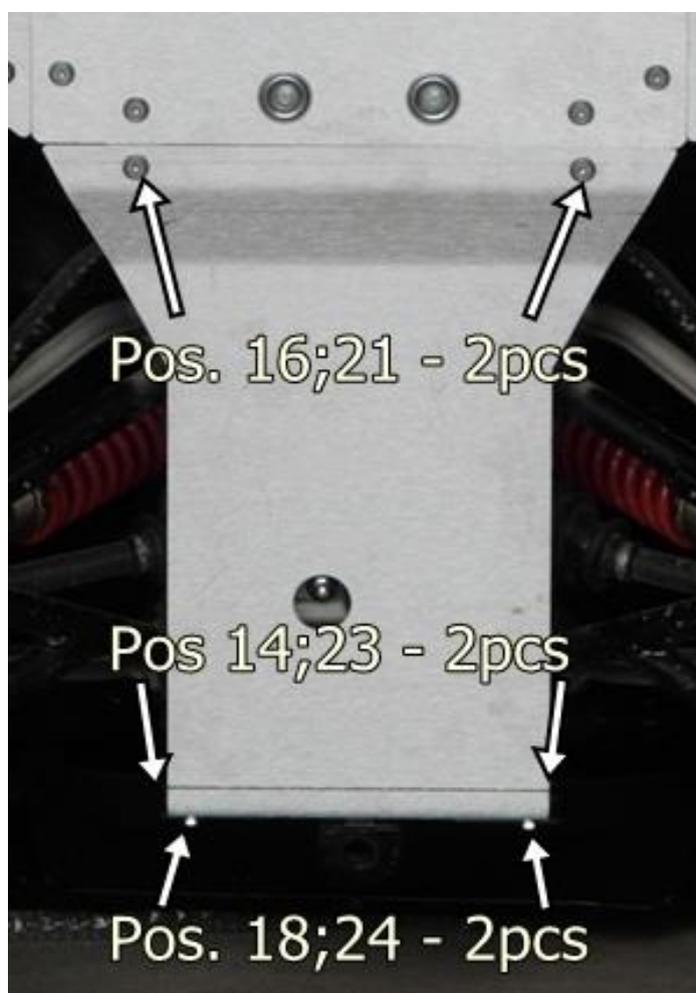


**Step 7**

Install front part 02.6102. Install roller back.

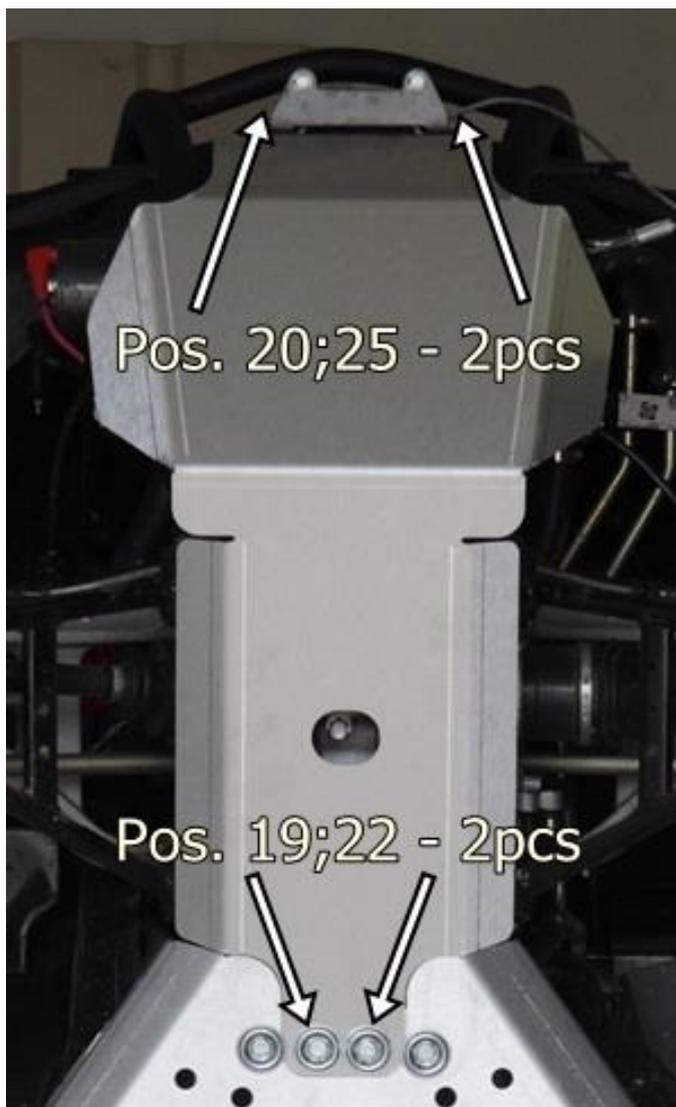

**Step 8**



Install front arms protections 02.1075P+, 02.1075V+.

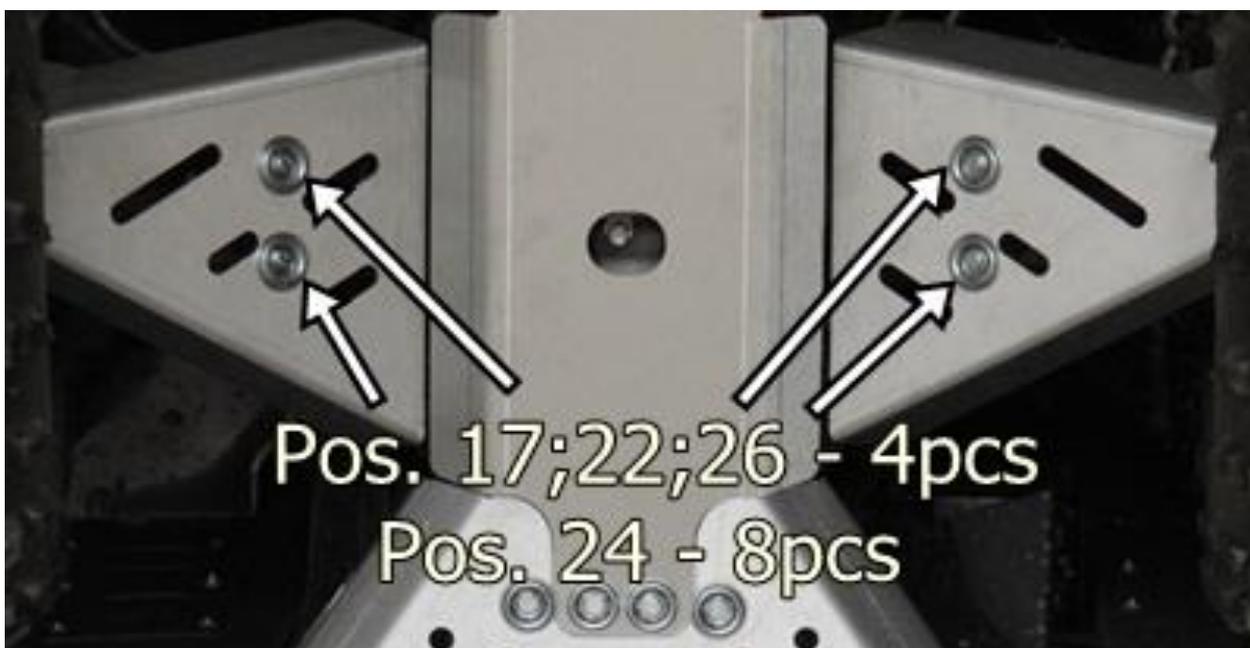

## Step 9

Install rear arms protections 02.1076P+, 02.1076V+.

First install the bracket 03.1502 (Pos.13) to the arm protection (do not tighten the bolt). Then place the protection on to the ATV's A-arm. Press the guard against the A-arm tube and tighten the bracket bolt so that the side of the bracket is against the A-arm tube. Finally, attach the other side of the A-arm protection.

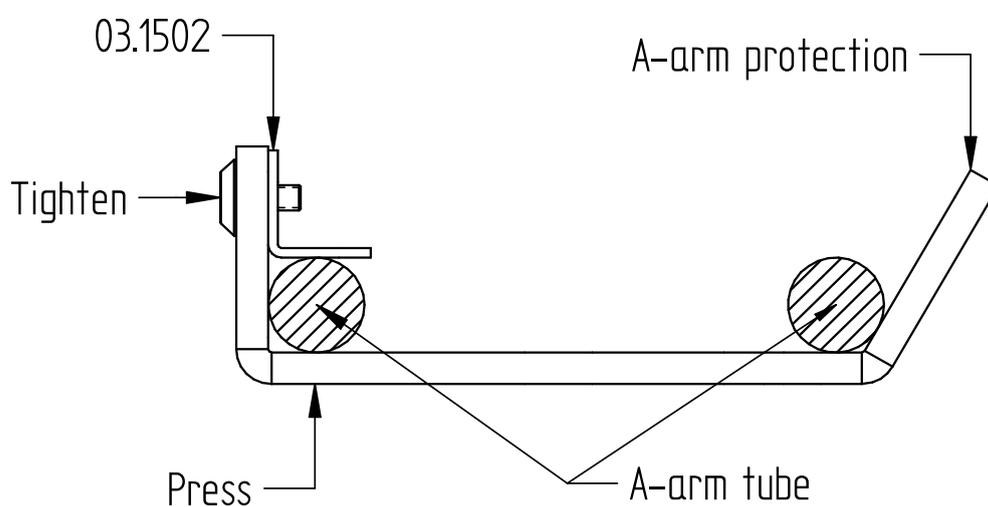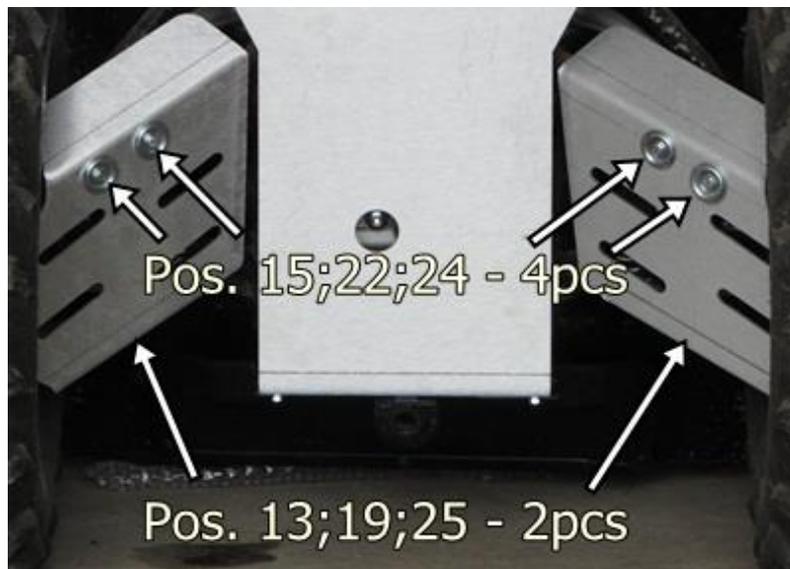







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

