

IRON BALTIC

MID-MOUNT ADAPTER

POLARIS RZR PRO XP

Code 03.12000

Version 12112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/8VI3gGNT

SPECIFICATION


Pos.	Description	Code	Amount
1	Plow adapter	03.12001K	1
2	Rear installation bracket	03.12002K	1
3	Front installation bracket	03.12004	2
4	Bush	05.7102	2
5	Dished washer	14.503	1
6	Pin 10x40 mm	14.003	2
7	Locking pin 2 mm	OT.07.01.010	2
8	Bolt M8x16 DIN933	OT.02.02.170	3
9	Bolt M8x25 DIN933	OT.02.02.190	2
10	Bolt M8x30 DIN933	OT.02.02.200	2
11	Washer Ø8/20 SFS3738	OT.04.03.030	4

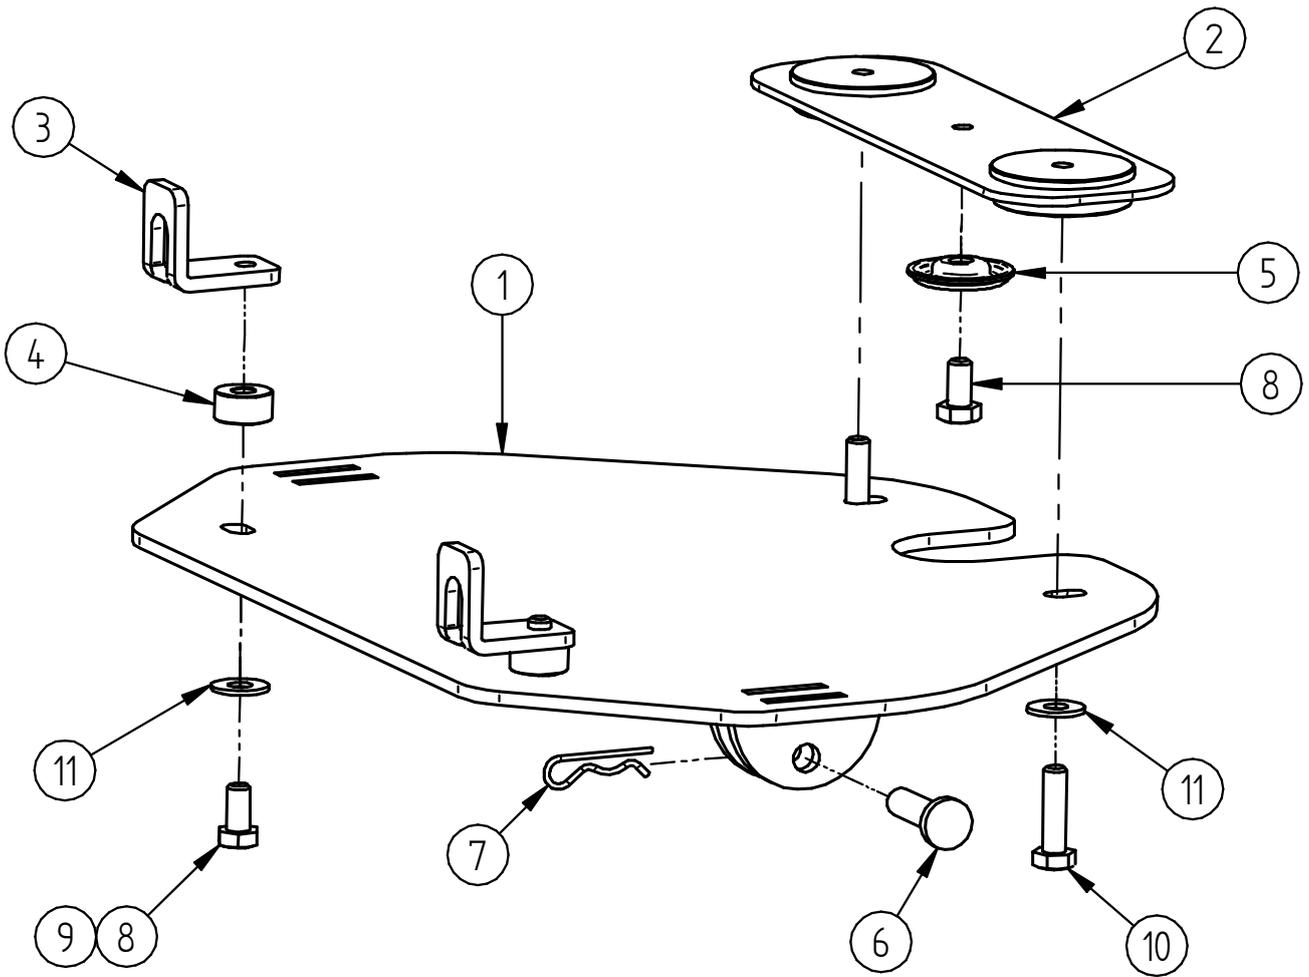

FITTING INSTRUCTIONS



Step 1

Remove front A-arms rear fastening nuts and original skid plate or if installing with Iron Baltic skid plate, remove skid plate front and middle part.

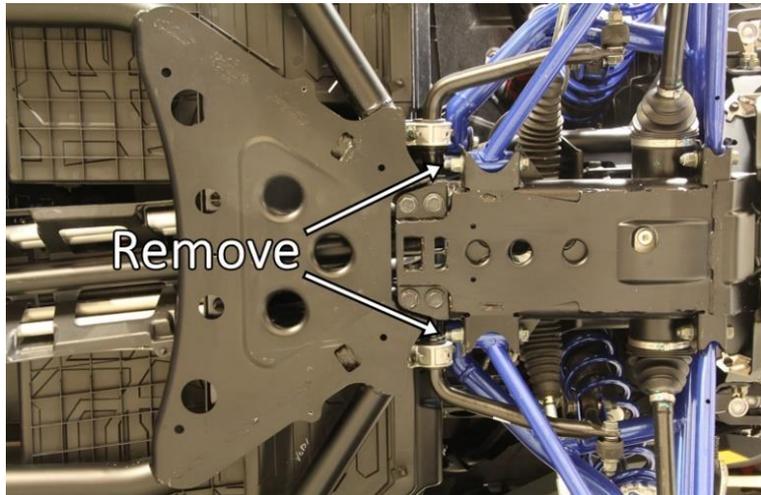


Step 2

Install rear installation bracket (Pos.2).
For fastening use M8x16 bolt (Pos.8) and washer (Pos.5).

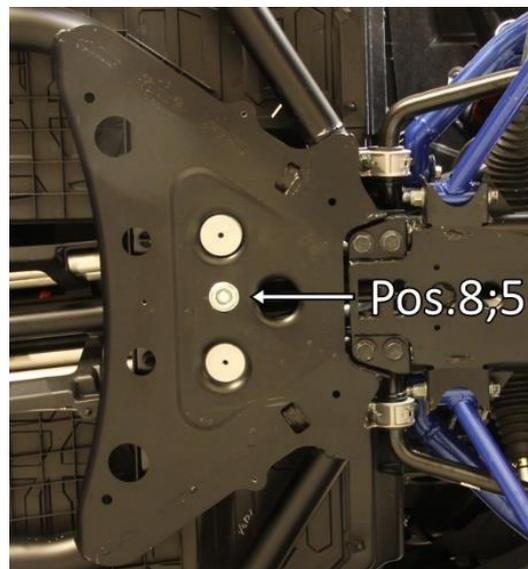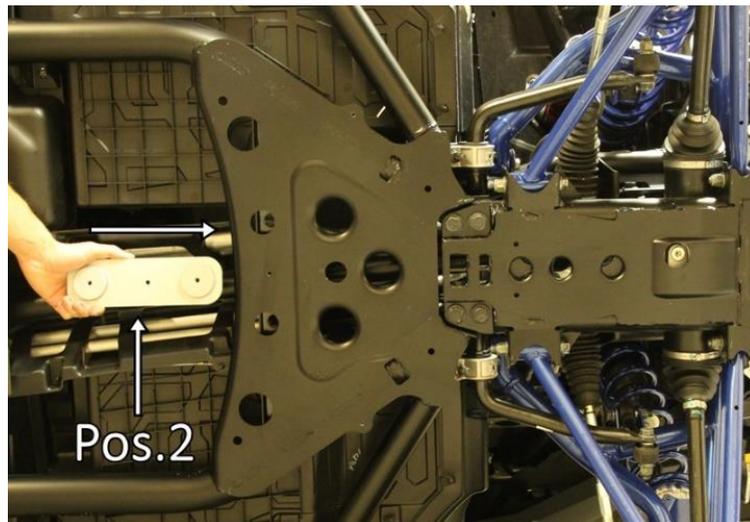



Step 3

Install front installation brackets (Pos.3).
For fastening use removed A-arm nuts (see step 1).

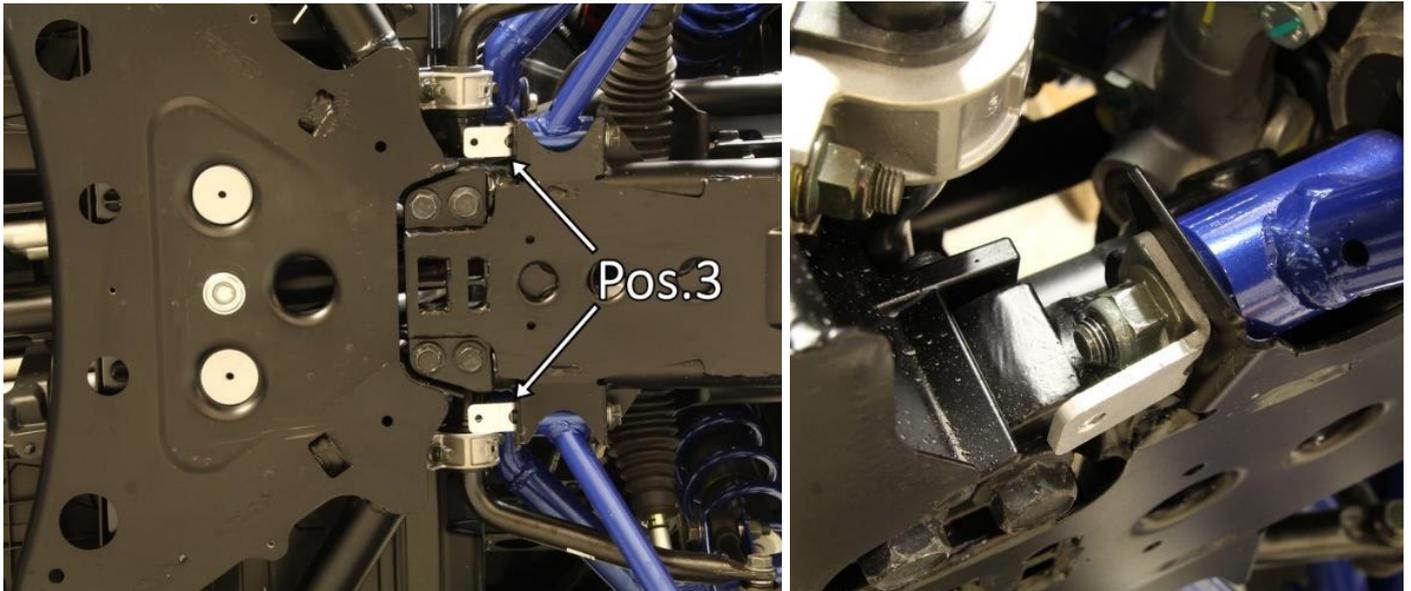

Step 4

Reinstall original skid plate or Iron Baltic skid plate front and middle part
(without two front and middle part connecting plates)

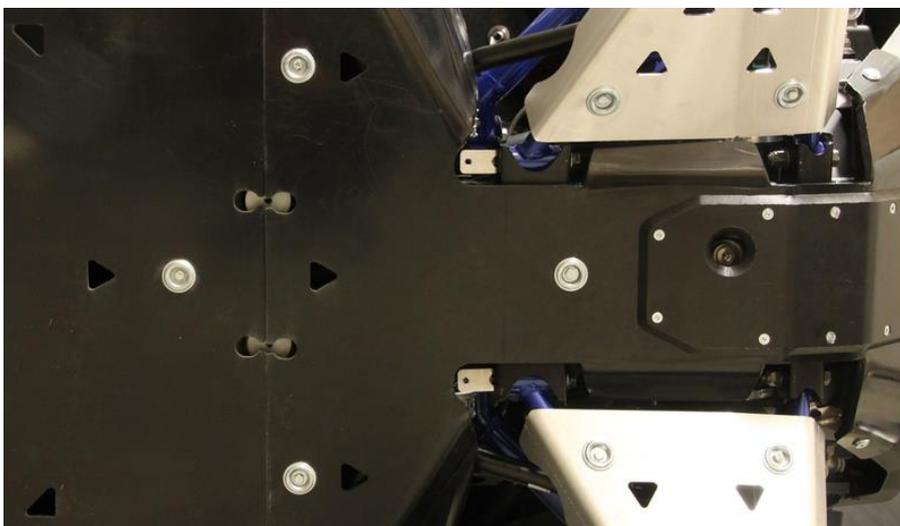
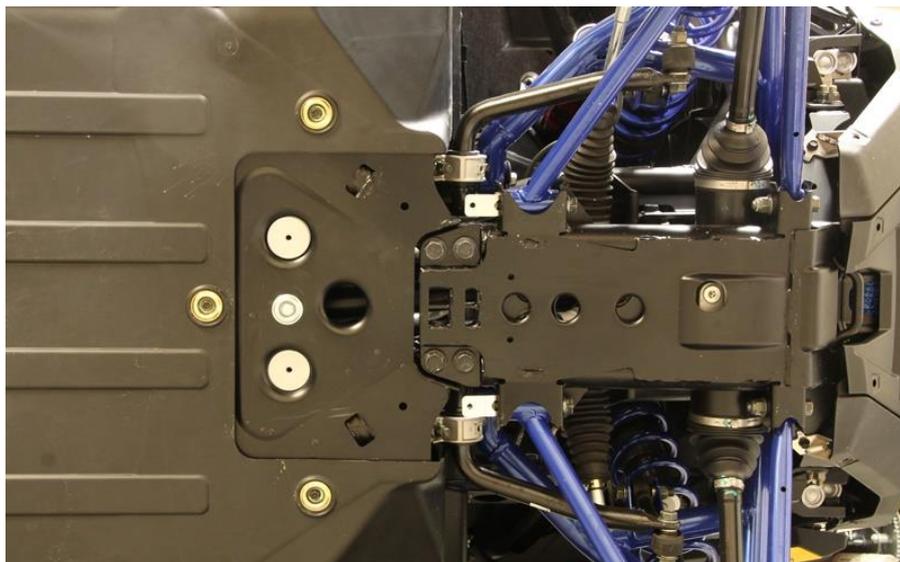


Step 5

Install plow adapter (Pos.1).

Installing with original skid plate, use M8x16 bolts (Pos.8), M8x30 bolts (Pos.10) and Ø8/20 washers (Pos.11) for fastening.

Installing with Iron Baltic skid plate, use M8x25 bolts (Pos.9), M8x30 bolts (Pos.10) and Ø8/20 washers (Pos.11) for fastening. Between adapter and front installation brackets install bushings (Pos.4).

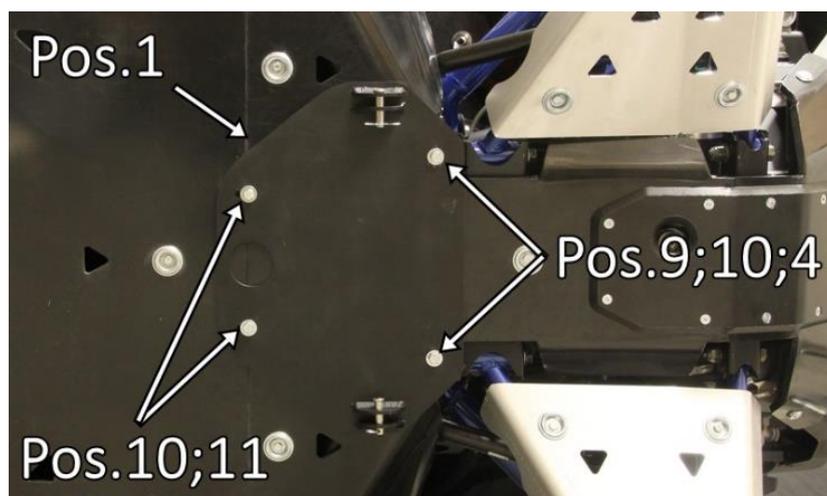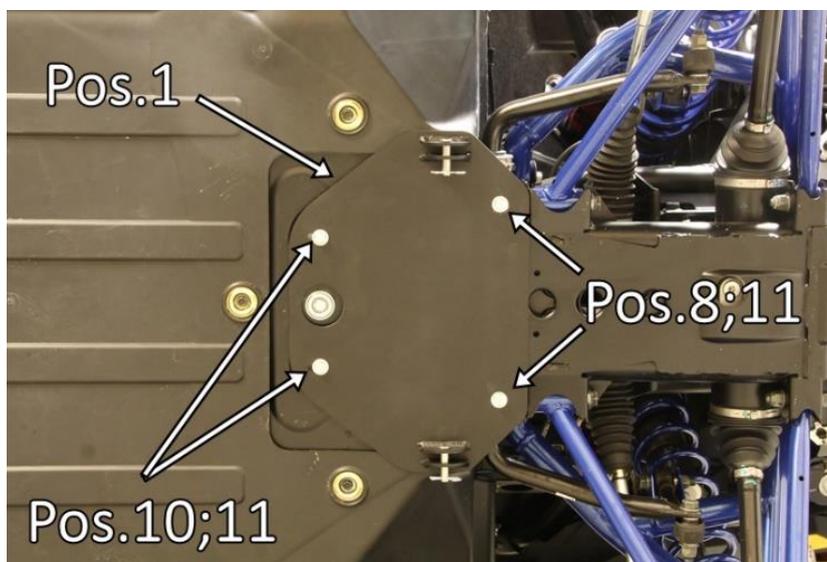

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

