

# IRON BALTIC

## MID-MOUNT ADAPTER

# CORVUS

## Terrain DX4

Code 03.12200

Version 13112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/6sFaJbnr](http://code.ironbaltic.com/u/6sFaJbnr)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Plow adapter	03.12201K	1
2	Installation plate	03.8407	2
3	Pin 10x40 mm	14.003	2
4	Locking pin 2mm	OT.07.01.010	2
5	U-bolt M8x42	OT.05.01.040	2
6	Bolt M8x25 DIN933	OT.02.02.190	2
7	Bolt M8x90 DIN931	OT.02.01.018	4
8	Washer Ø8/20 SFS3738	OT.04.03.030	6
9	Nut M8 Nyloc DIN985	OT.03.02.040	4

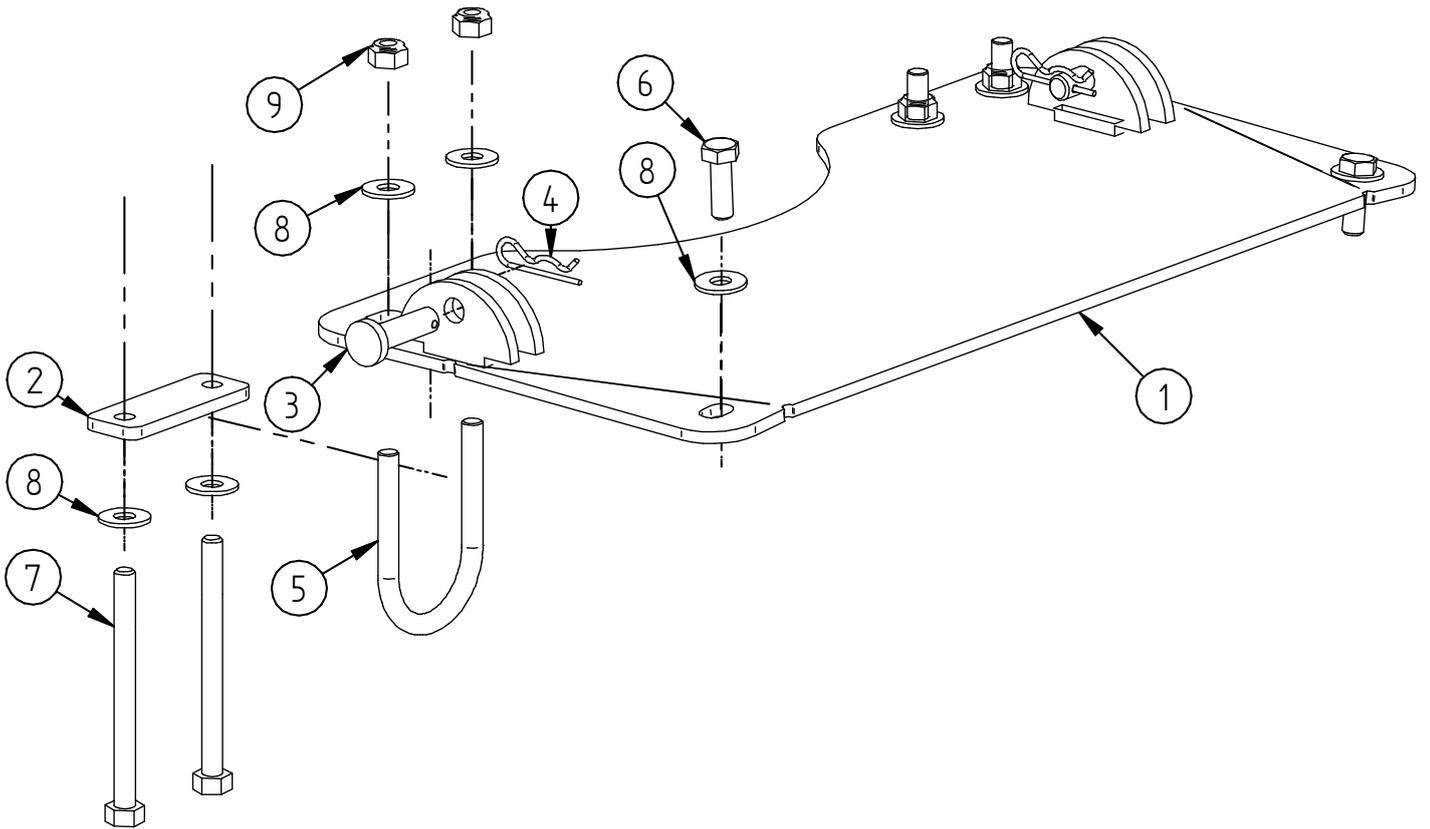


# FITTING INSTRUCTIONS

## Installation up to MY2020

### Step 1

Install plow adapter 03.12201K. Pos.5 bolts use threaded holes on the UTV frame. When fitting adapter with original plastic skid plate, it is necessary to drill holes for U-bolts (Pos.4). Watch out for wires and hoses when placing U-bolts in place!


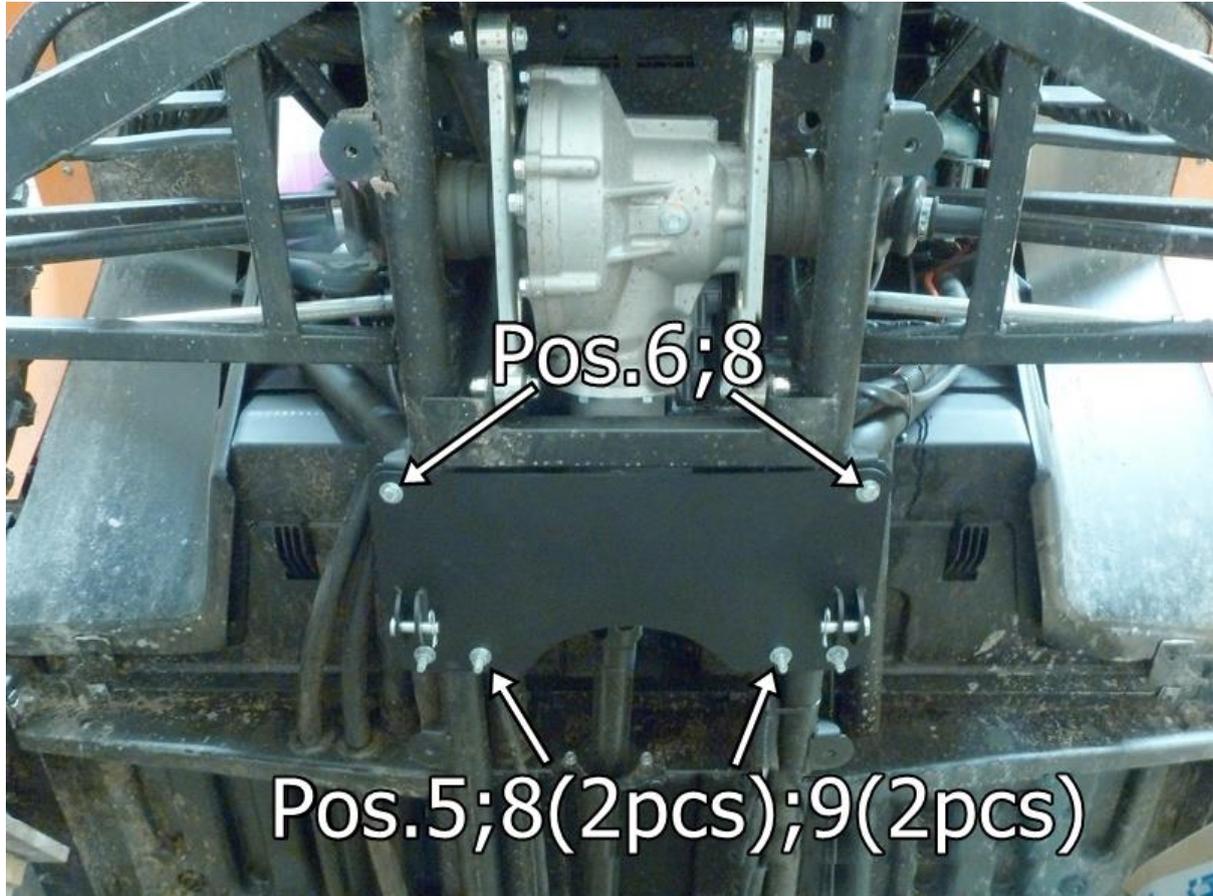


# FITTING INSTRUCTIONS

## Installation from MY2021

### Step 1

Install plow adapter 03.12201K. Pos.6 bolts use threaded holes on the UTV frame. When fitting adapter with original plastic skid plate, it is necessary to drill holes for bolts (Pos.7). Watch out for wires and hoses when placing bolts in place!

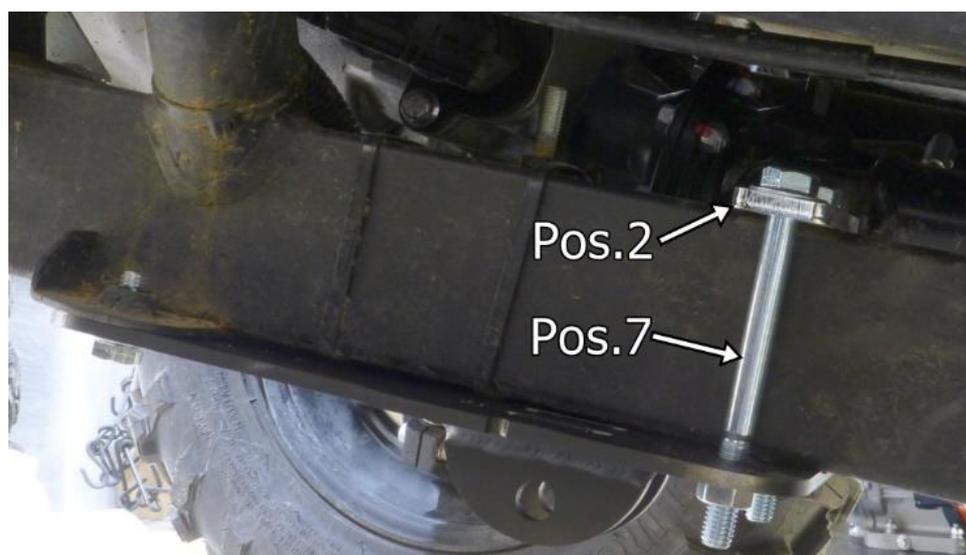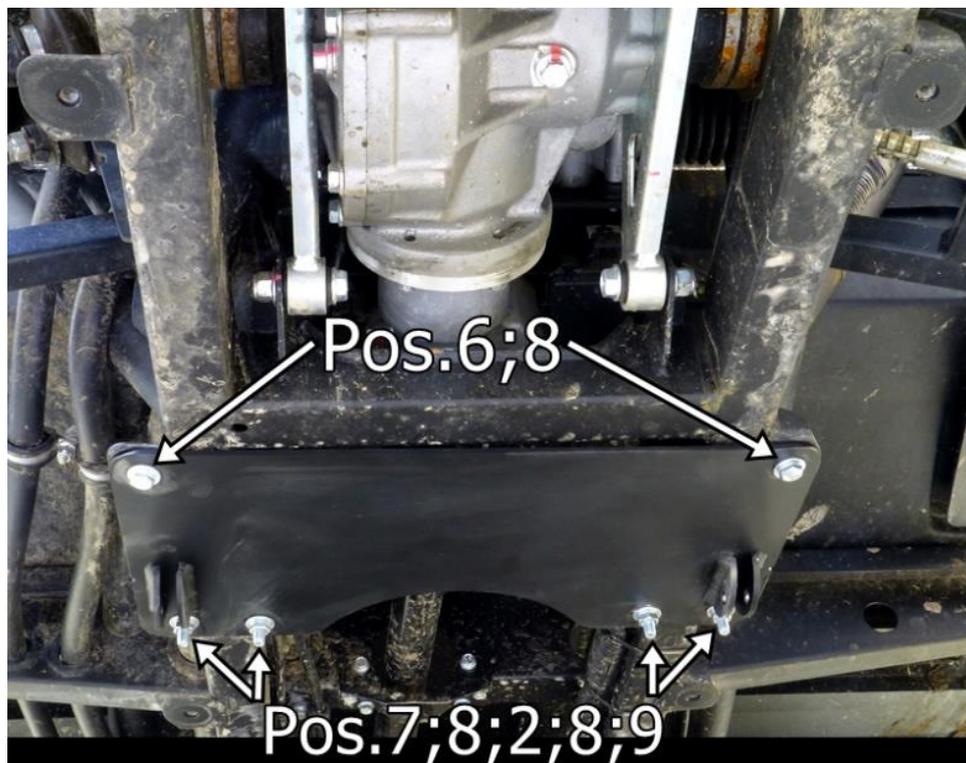





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

