



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/KMjMhOP4

FRONT MOUNT ADAPTER

SEGWAY

Snarler AT6 2023+

Code 03.14800

Version 17112023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Snow plow adapter	03.14801K	1
2	Lower bracket	03.12405	1
3	Lifting plate	03.12406	2
4	Distance bushing	02.707	2
5	Distance plate	05.3902	1
6	Lifting eye bolt M12 DIN580	OT.19.01.010	1
7	Bolt M8x20 DIN933	OT.02.02.180	2
8	Bolt M8x30 DIN933	OT.02.02.200	2
9	Bolt M8x60 DIN931	OT.02.01.015	4
10	Bolt M10x35 DIN961	OT.02.08.345	2
11	Washer Ø8/20 SFS3738	OT.04.03.030	12
12	Washer M10 DIN125	OT.04.01.040	2
13	Washer M12 DIN125	OT.04.01.050	1
14	Nyloc nut M8 DIN985	OT.03.02.040	4
15	Nyloc nut M12 DIN985	OT.03.02.060	1

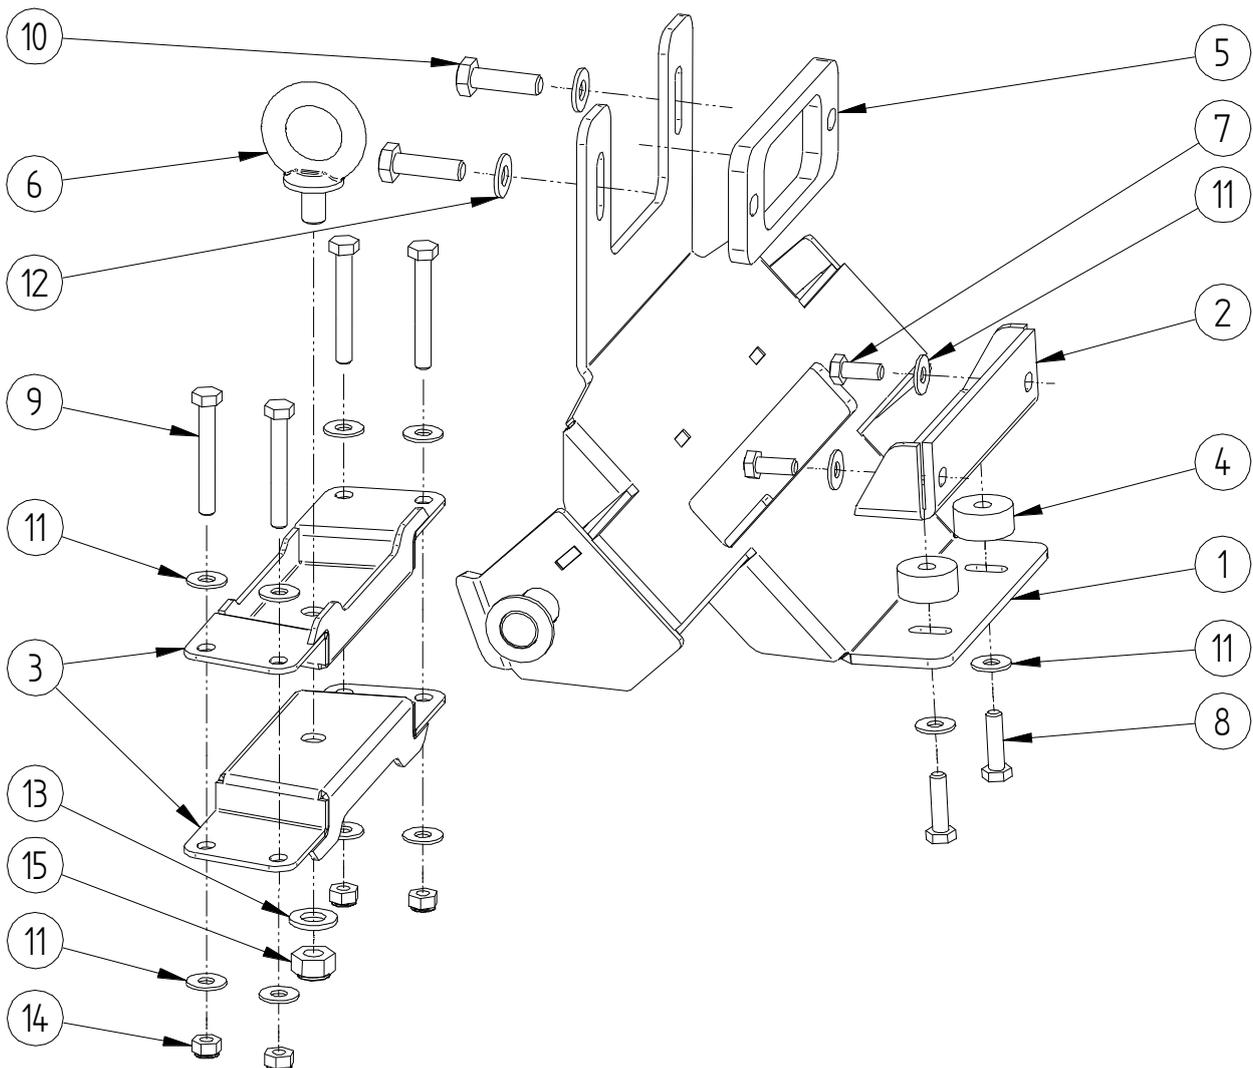

FITTING INSTRUCTIONS

Step 1

Remove winch fairlead and the plastic on the front of the ATV. When using the Iron Baltic skid plate, then remove the skid plate front part and reinforcement from the front part.




Iron Baltic skid plate front part:




Step 2

Install lower bracket (Pos.2). For fastening use M8x20 bolts (Pos.7) and Ø8 mm washers (Pos.11).

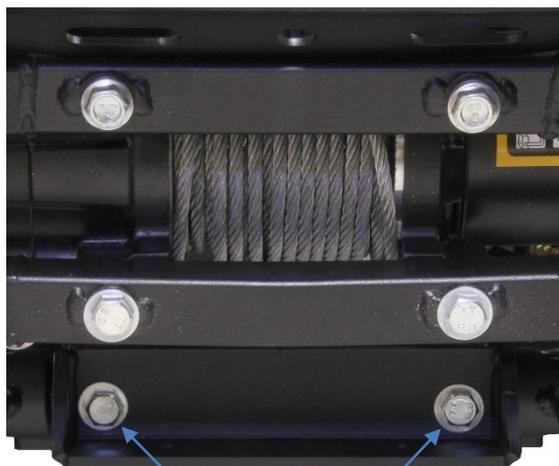

Pos 7,11


Pos 2

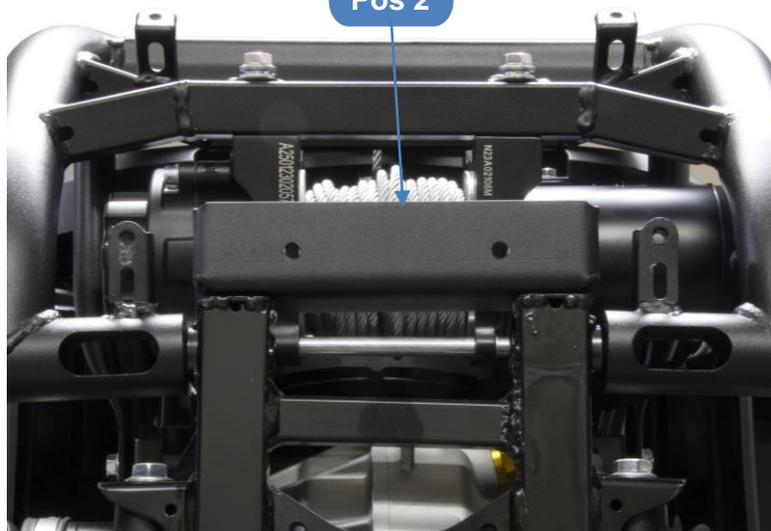

Step 3

Reinstall front plastic / skid plate front part. When installing adapter with original front plastic, make cut-outs for the distance bushings. When installing adapter with Iron Baltic skid plate, do not install upper mounting bolts for front part.

Original front plastic:

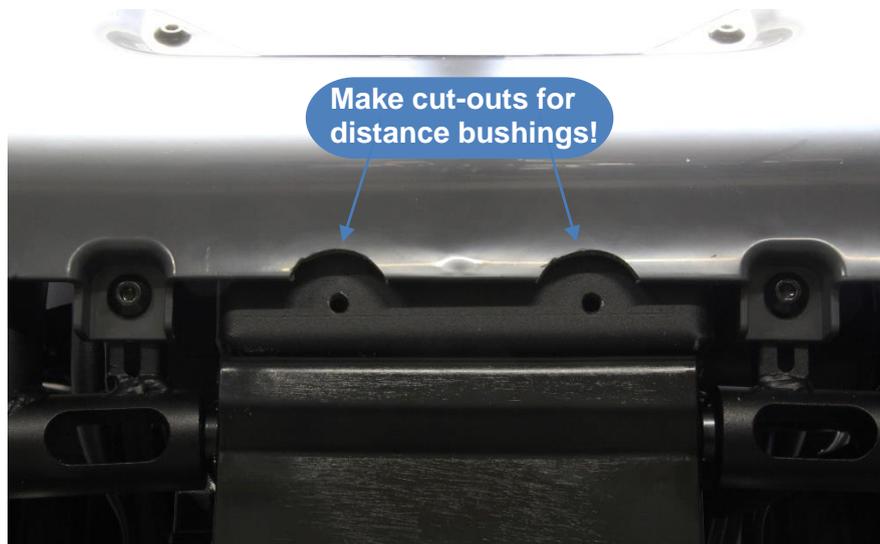



Iron Baltic skid plate front part:





Step 4

Install adapter (Pos.1) together with winch fairlead. For fastening use M10x35 bolts (Pos.10), Ø10 mm washers (Pos.12), M8x30 bolts (Pos.8) and Ø8 mm washers (Pos.11). NB! If you are installing adapter with original skid plate, then install distance bushings (Pos.4) between the adapter (Pos.1) and lower bracket (Pos.2). Use distance plate (Pos.5) when fixing the upper part of the adapter. **When installing with Iron Baltic skid plate, then distance bushings (Pos.4) are not needed!**

Installation with original skid plate:

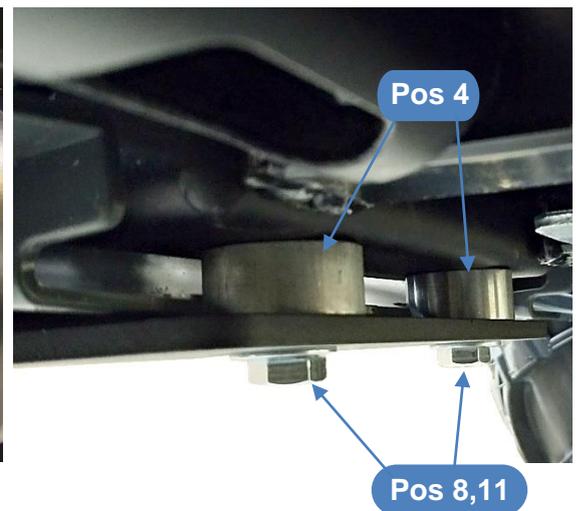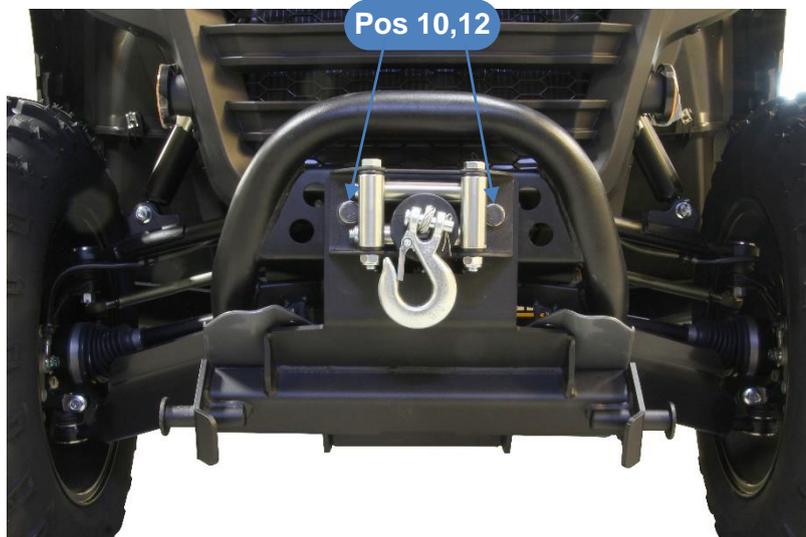


Installation with Iron Baltic skid plate:

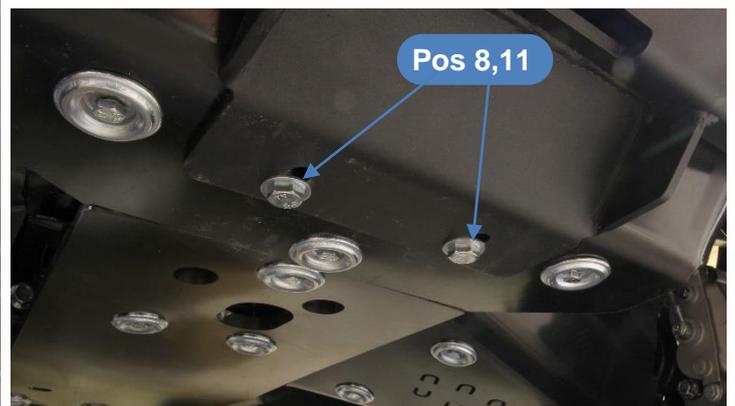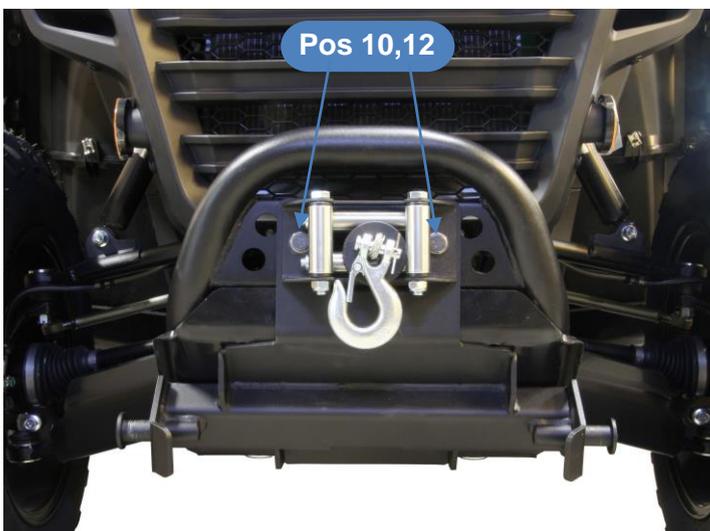

Step 5

Install lifting plates (Pos.3) to the snow plow frame and lifting eye bolt (Pos.6) to lifting plate. For fastening the lifting plates use M8x60 bolts (Pos.9), Ø8 mm washers (Pos.11) and M8 nyloc nuts (Pos.14). For fastening the lifting eye use Ø12 mm washer (Pos.13) and M12 nyloc nuts (Pos.15).

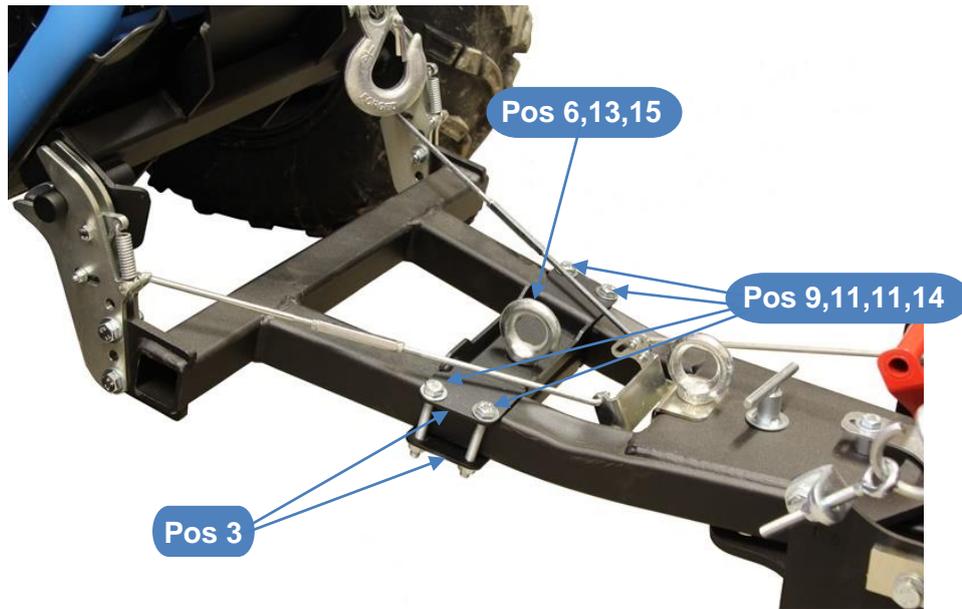

IRON BALTIC

IRON BALTIC OÜ
Põldmäe tee 1
Vatsla 76915
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

