

IRON BALTIC

MID-MOUNT ADAPTER

SEGWAY Snarler AT5

Code 03.15000

Version 18122023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



<https://code.ironbaltic.com/u/0z0cDN9g>

SPECIFICATION

| Pos. | Description | Code | Amount |
|------|--------------------------|--------------|--------|
| 1 | Adapter | 03.15001K | 1 |
| 2 | Bracket | 03.15002K | 1 |
| 3 | Mounting plate | 03.15004 | 1 |
| 4 | Pin 10x30 DIN1444 | 14.003 | 2 |
| 5 | Cotter pin 2 mm DIN11024 | OT.07.01.010 | 2 |
| 6 | U-clamp M8 x 38 | OT.05.01.030 | 2 |
| 7 | Bolt M8x16 DIN933 | OT.02.02.170 | 2 |
| 8 | Bolt M8x25 DIN933 | OT.02.02.190 | 2 |
| 9 | Washer Ø8/20 SFS3738 | OT.04.03.030 | 10 |
| 10 | Nyloc nut M8 DIN985 | OT.03.02.040 | 4 |

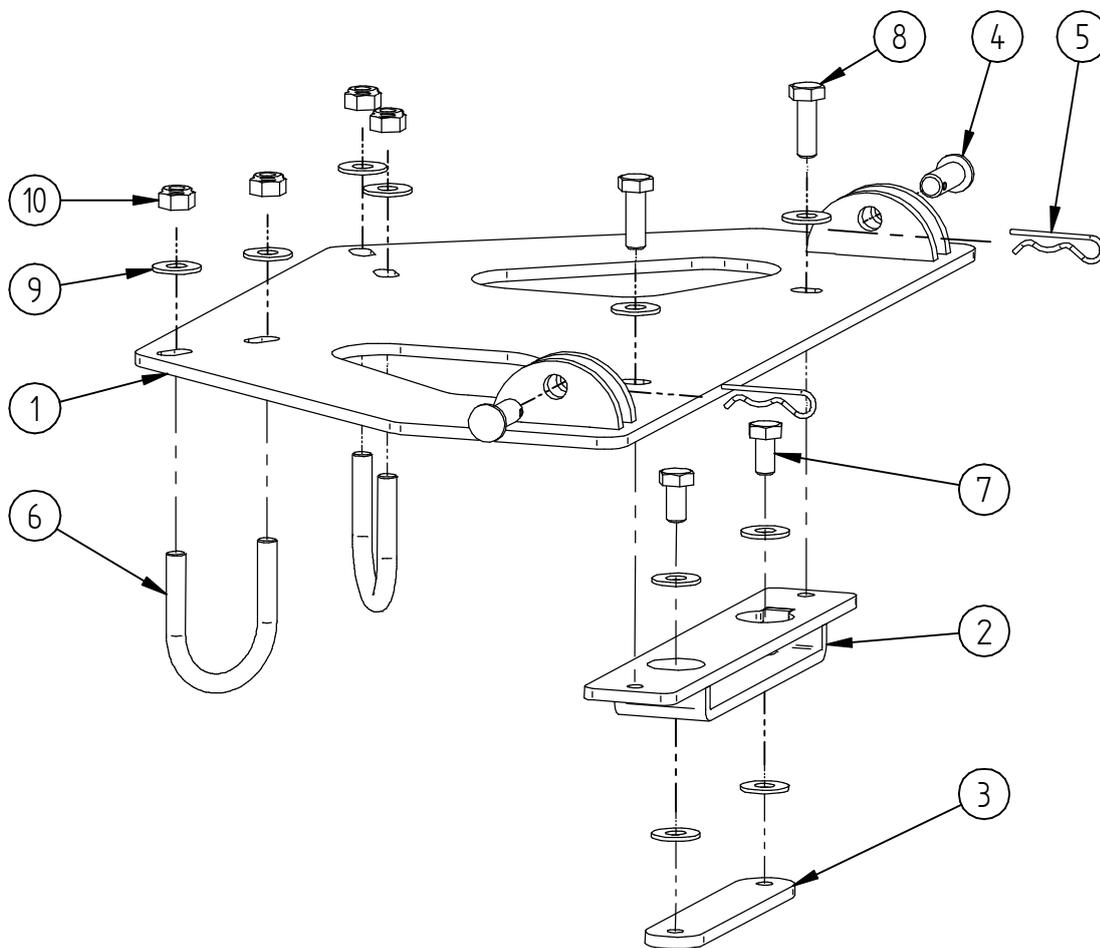



TOOLS REQUIRED FOR INSTALLATION:

- Spanner 13mm
- Socket wrench 10mm
- Socket wrench 13mm

FITTING INSTRUCTIONS


Step 1

Remove original middle protection. If using adapter with Iron Baltic skid plate, then remove front and middle protections.

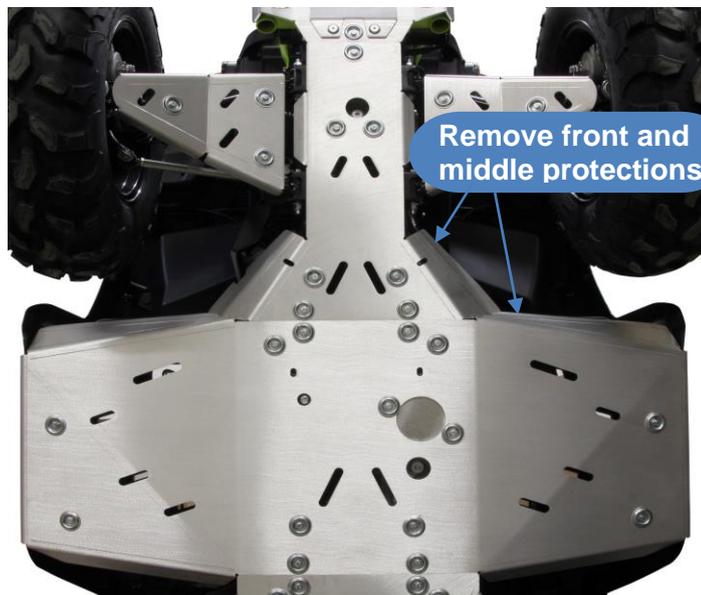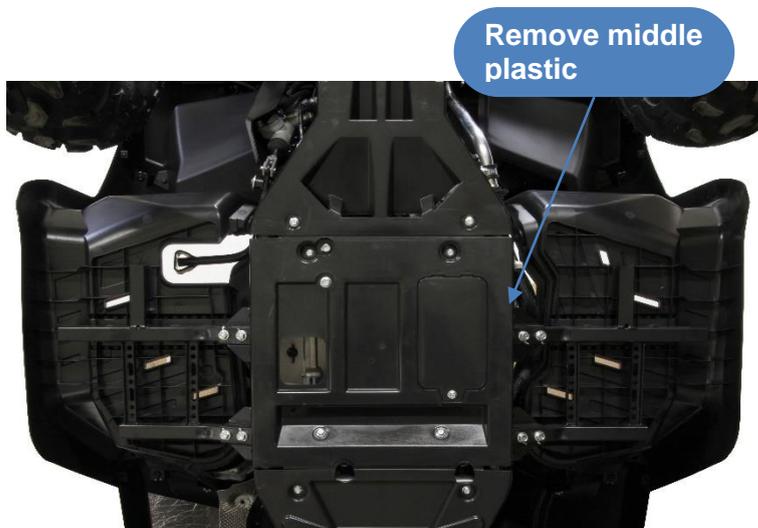

Step 2




Install bracket (Pos. 2). For fastening use M8x16 bolts (Pos. 7), Ø8 mm washers (Pos. 9) and mounting plate (Pos. 3). NB! Install washers (Pos. 9) to the holes in the ATV frame between the bracket and mounting plate.

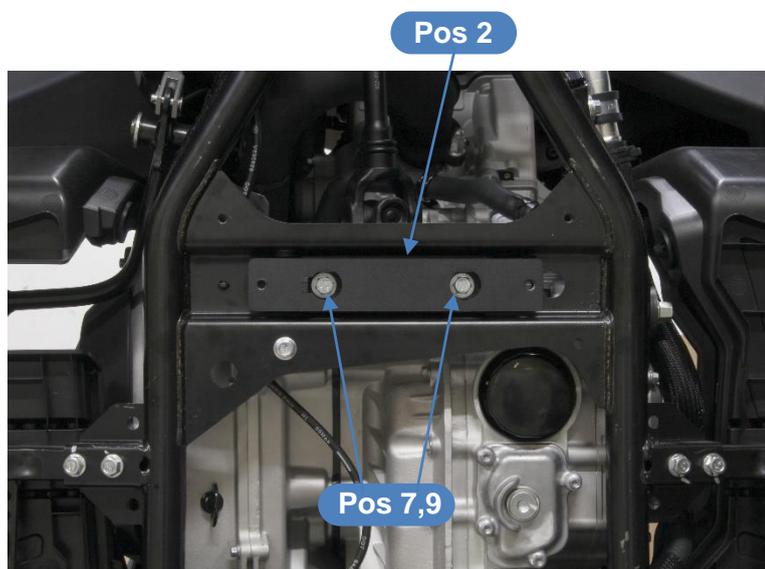

Step 3



If you are using adapter with the original skid plate, then cut holes as shown in the picture and reinstall the middle protection.

If you are using adapter with the Iron Baltic skid plate, then reinstall the front and middle protection. Do not install brackets shown in the picture. When installing middle protection, make sure that the threaded holes in the bracket and holes in the middle protection align.

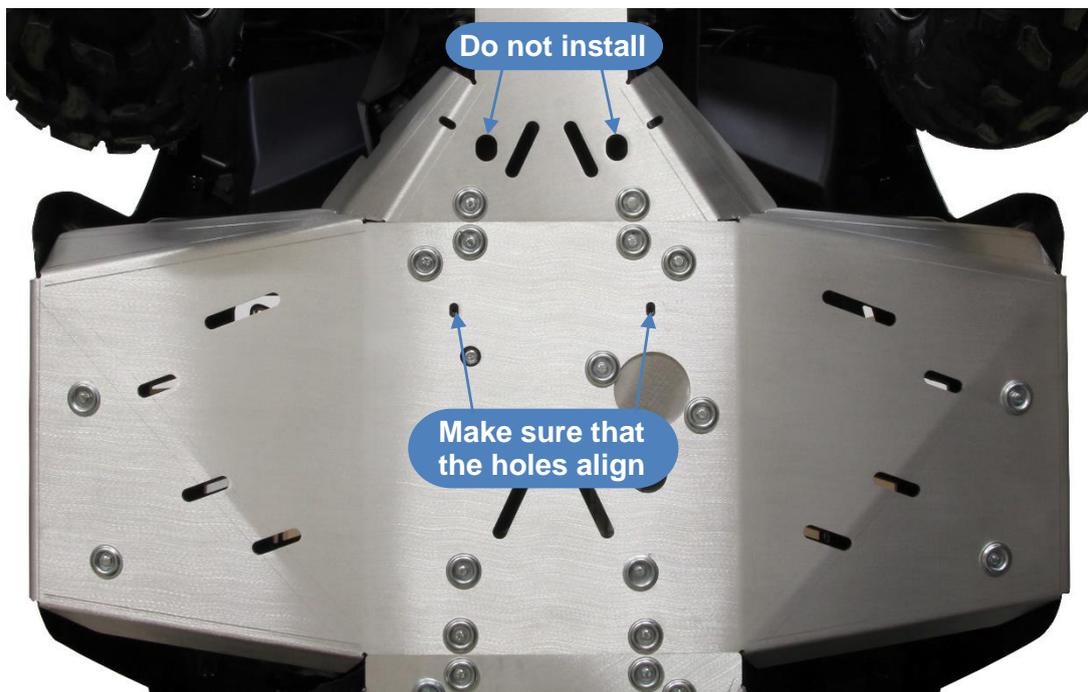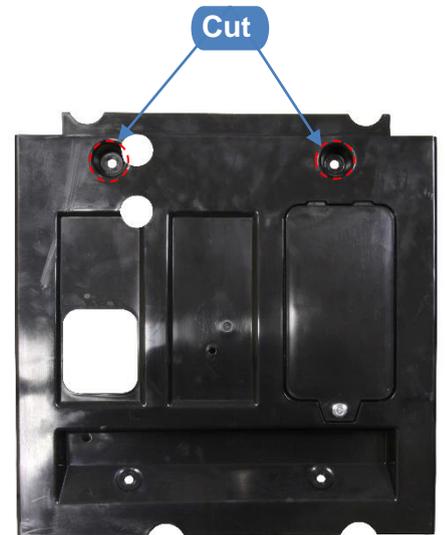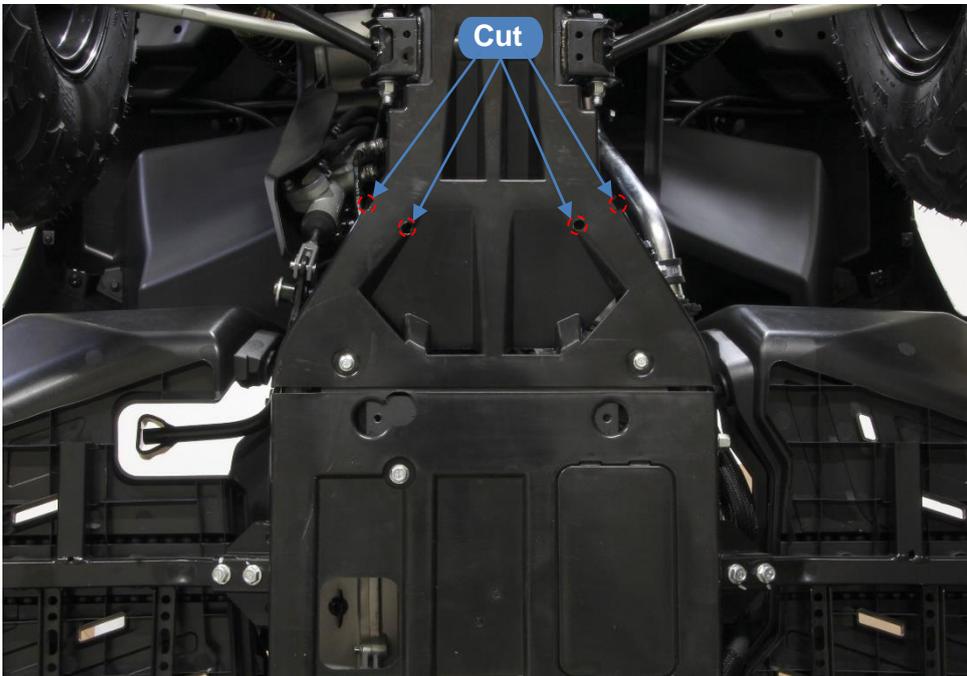

Step 4

Install adapter. For fastening use M8x25 bolts (Pos. 8), M8x38 U-clamps (Pos. 6), Ø8 mm washers (Pos. 9) and M8 nyloc nuts (Pos. 10). Install pins (Pos. 4) to the adapter. Use cotter pins (Pos. 5) to fix the pins.

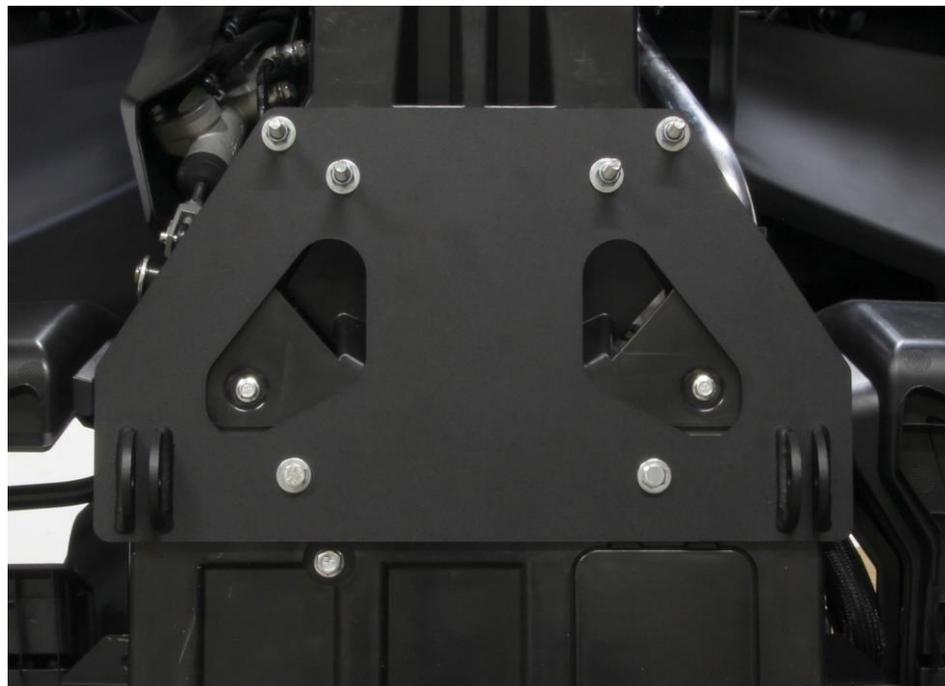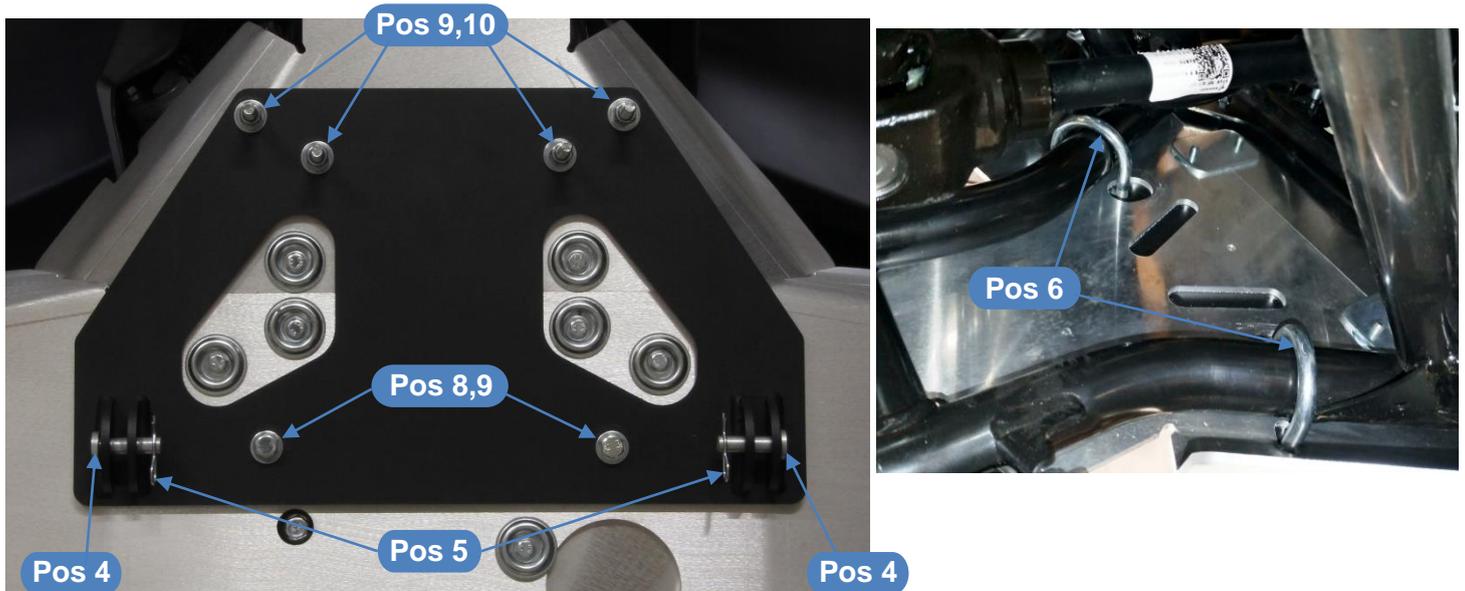

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

