

# IRON BALTIC

## QUICK RELEASE CLAMP (TIE DOWN ANCHOR)

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/MYapFjSz](https://code.ironbaltic.com/u/MYapFjSz)

Code 14.10860

Version 01122023




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Clamp	14.10830	1
2	Fixator	14.11003	1
3	Plastic bush	14.10001	1
4	Rubber bush	14.10002	1
5	Nut	14.10003	1
6	Bolt M6x45 DIN933	OT.02.02.110	1

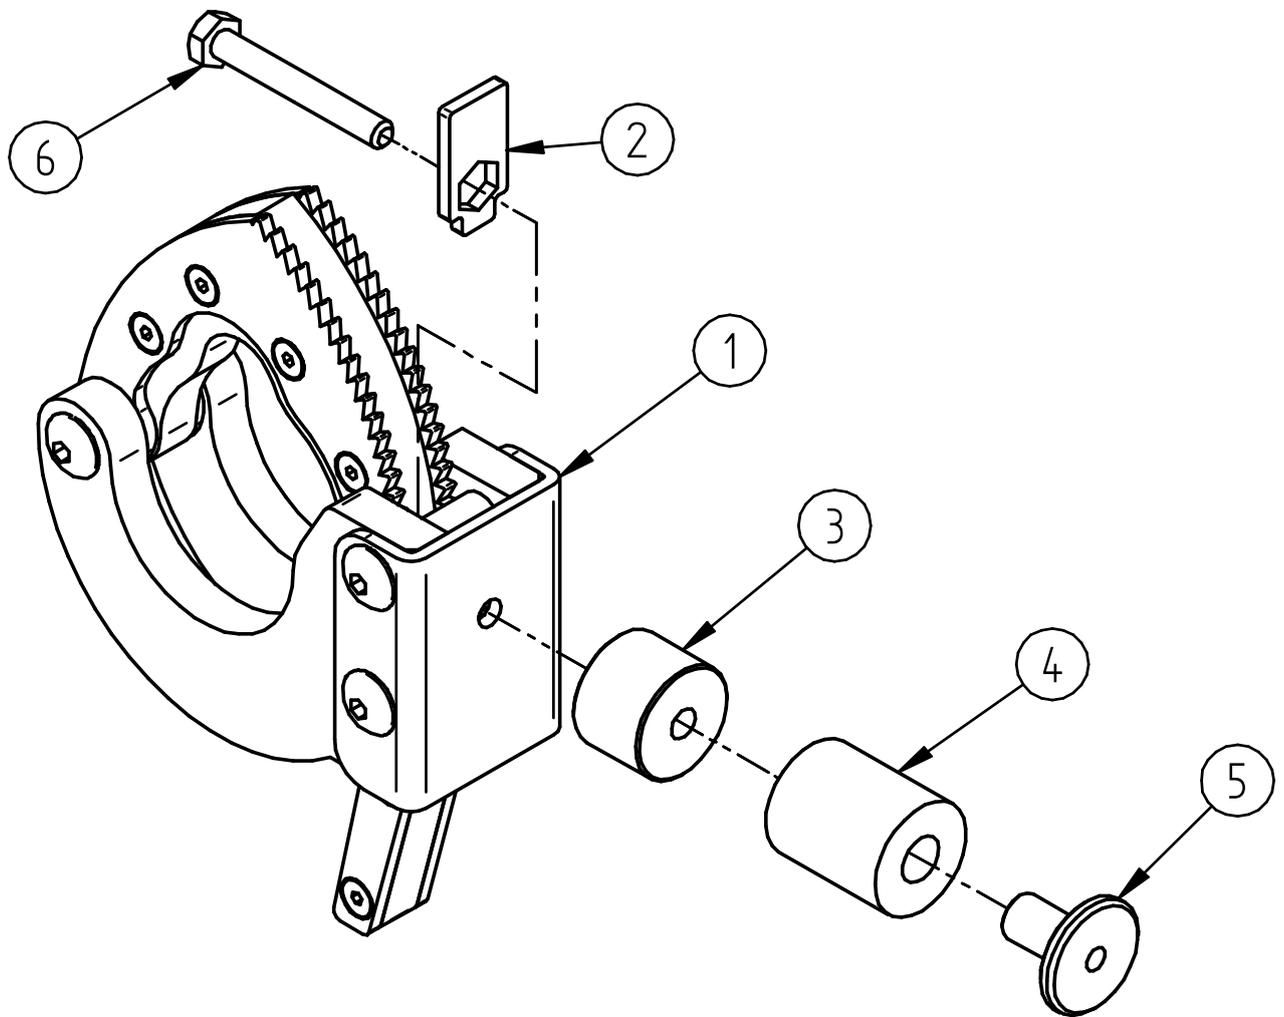


# FITTING INSTRUCTIONS

**Installation:** Push the clamp into the hole.  
Turn the clamp clockwise until the clamp is secured in the hole.

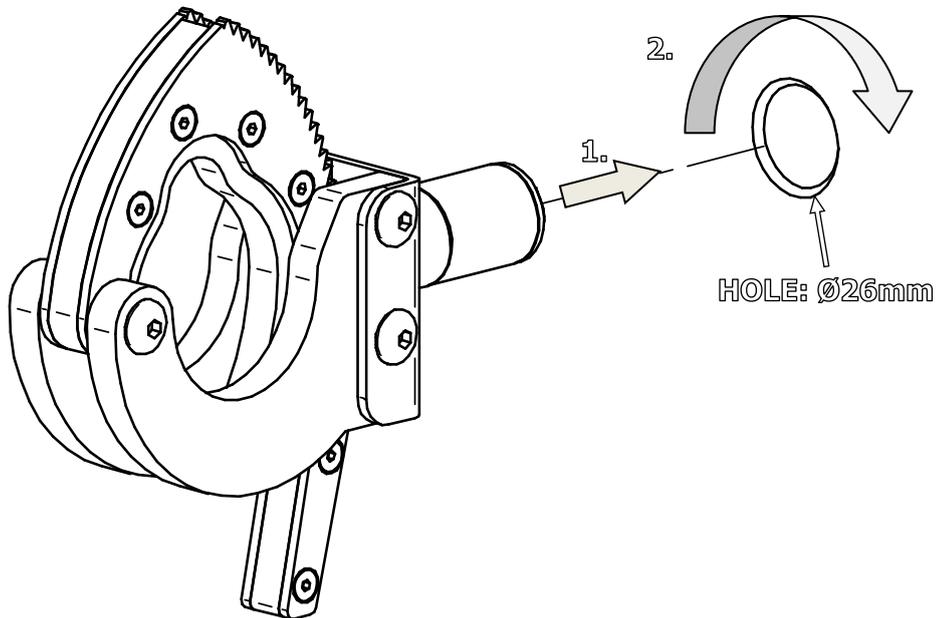


**Removal:** Turn the clamp counterclockwise until you can pull the clamp out.

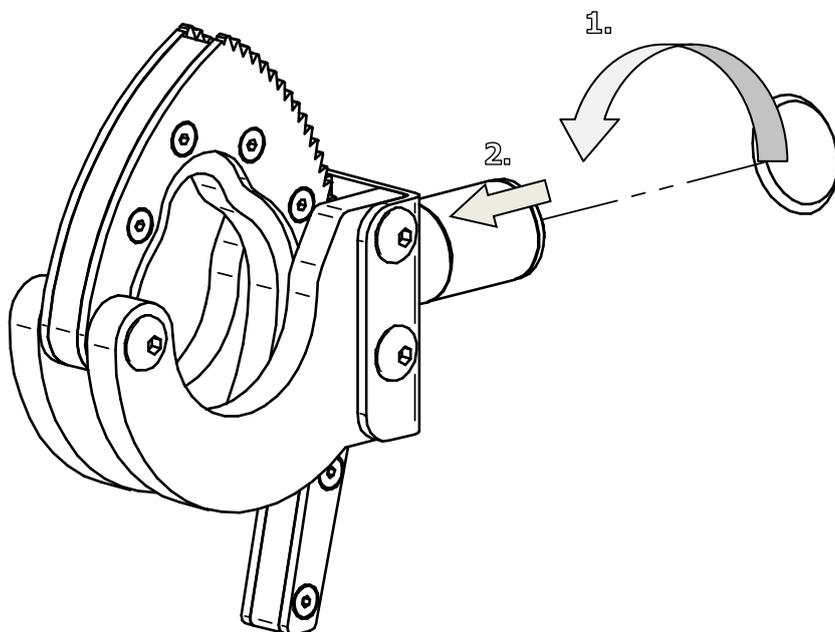


# CLAMP INSTRUCTIONS FOR USE


Clamps can be used to fasten tools with diameter 5-50mm in and weighing 10kg per clamp. Use two clamps to secure 20kg of tools.

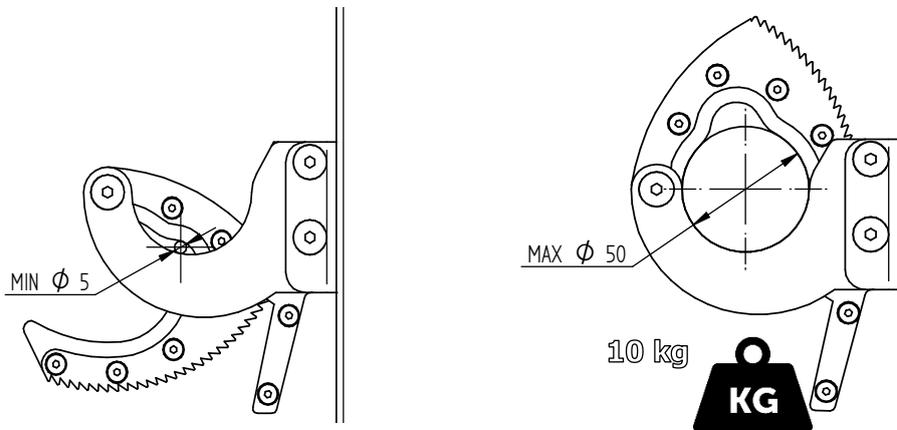


You can secure the tools and other objects also by turning the clamp offset up to 80° clockwise and counter clockwise from horizontal 0° position. To secure tools at angle, the surfaces must be clean and dry. Be sure that tools are correctly fixed without free play in between the clamp and secured object.

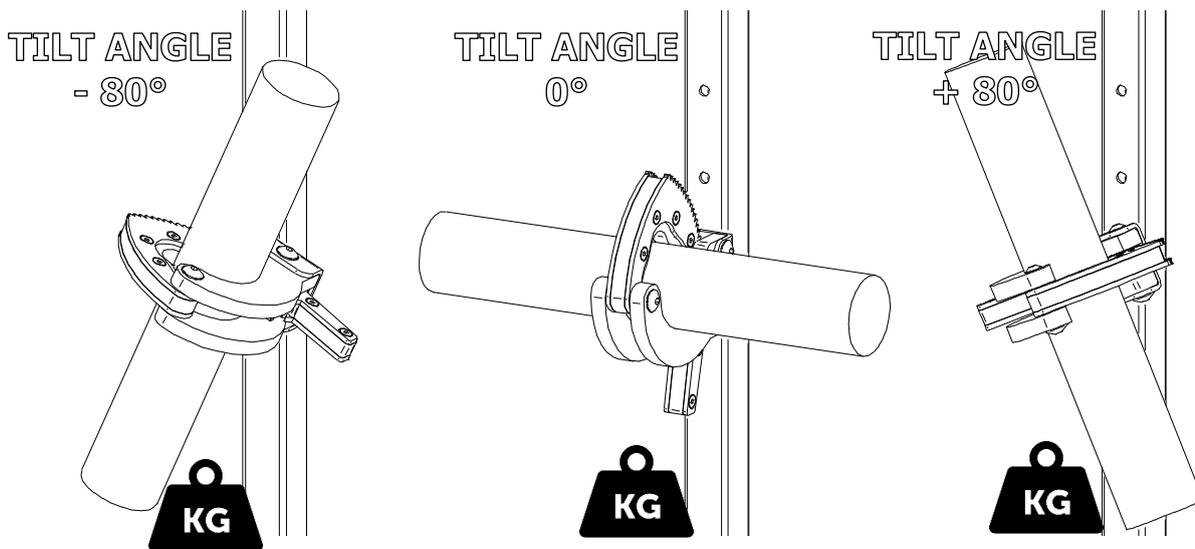

**Closing**

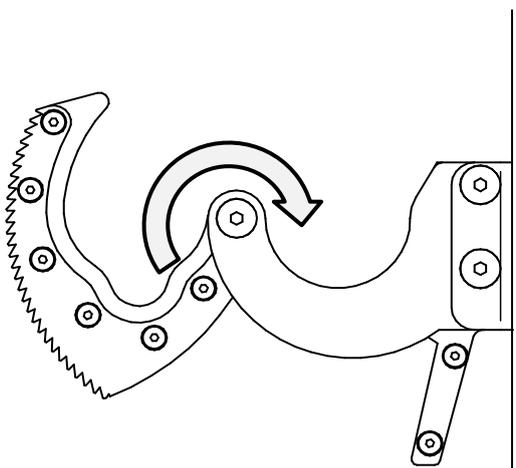

**Release**

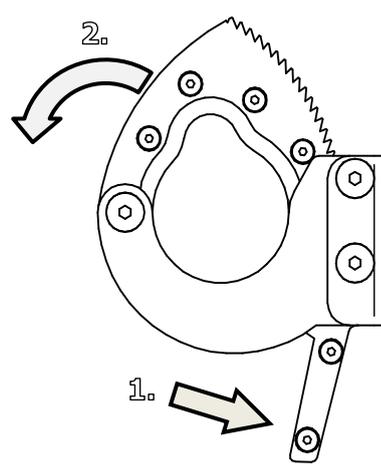





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

