



## MULTI-MOUNT WINCH

Code 14.11500

Version 30012023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Winch X-Winch 2500lbs (L=200mm)	06.001-1	1
2	Winch relay	06.001-2	1
3	Fairlead	06.001-3	1
4	Remote control	06.001-4	1
5	Wired remote	06.001-5	1
6	Relay installation clamp	06.001-7	2
7	Cable extension(plug-plug)	14.11510	1
8	Cable (battery-plug) L=3000mm	IB_1	1
9	Remote battery A23 12V	OT.13.01.042	2
10	Pin Quicklock	OT.53.00.045	1
11	Receiver mount 2"	14.11501K	1
12	Winch mounting plate	14.11503	1
13	Handle mounting plate	14.11504	4
14	Handle	14.11505	2
15	Distance plate for plug	14.11506	1
16	Frame attachment	14.11507	1
17	U-Bolt M8 x 32	OT.05.01.020	4
18	Bolt M3x30 DIN 933	OT.02.02.004	2
19	Bolt M8x20 DIN 933	OT.02.02.180	4
20	Bolt M8x25 DIN 933	OT.02.02.190	4
21	Bolt M6x20 ISO 7380	OT.02.03.030	12
22	Bolt M8x20 ISO 7380	OT.02.03.080	4
23	Carriage bolt M10x25 DIN603	OT.02.05.105	2
24	Washer Ø 6/15 SFS 3738	OT.04.03.020	12
25	Washer Ø 8/20 SFS 3738	OT.04.03.030	20
26	Washer Ø 3 DIN 125	OT.04.01.004	4
27	Washer Ø 10 DIN 125	OT.04.01.040	2
28	Nyloc nut M3 DIN 985	OT.03.02.005	2
29	Nyloc nut M6 DIN 985	OT.03.02.030	12
30	Nyloc nut M8 DIN 985	OT.03.02.040	12
31	Nyloc nut M10 DIN 985	OT.03.02.050	2

## TOOLS REQUIRED FOR INSTALLATION:



- Spanner 6mm
- Spanner 13mm
- Spanner 17mm
- Socket wrench 6mm
- Socket wrench 13mm
- Allen wrench 4mm
- Allen wrench 5mm


# FITTING INSTRUCTIONS

## Step 1

Install batteries to remote. Remove 7 screws from back of the remote. Install batteries. Notice the polarity of the batteries! Negative side of battery goes against the spring in the remote.

**NB! Installing batteries wrong way may damage the remote!**

To turn on the remote, hold down ON/OFF button until LED light turns on. Remote will turn off automatically after some time when not used.

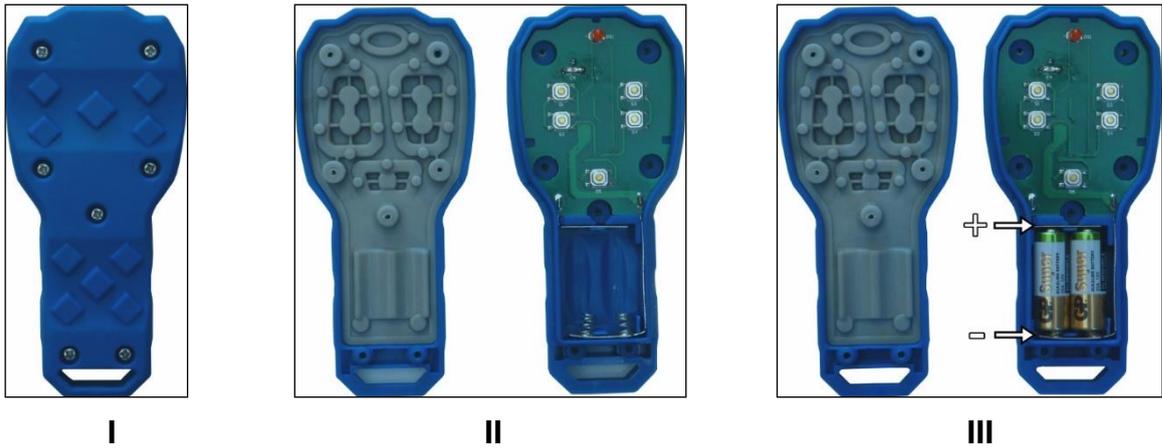


## Step 2

Install relay on top of the winch motor, use relay installation clamps. Connect relay wires to winch: red wire to red terminal on the winch, black wire to white terminal on the winch




### Step 3

Install fairlead (Pos.3) to the winch mounting plate (Pos.12). For fastening use M10x25 carriage bolts (Pos.23), Ø10 mm washers (Pos.27) ja M10 nyloc nuts (Pos.31).

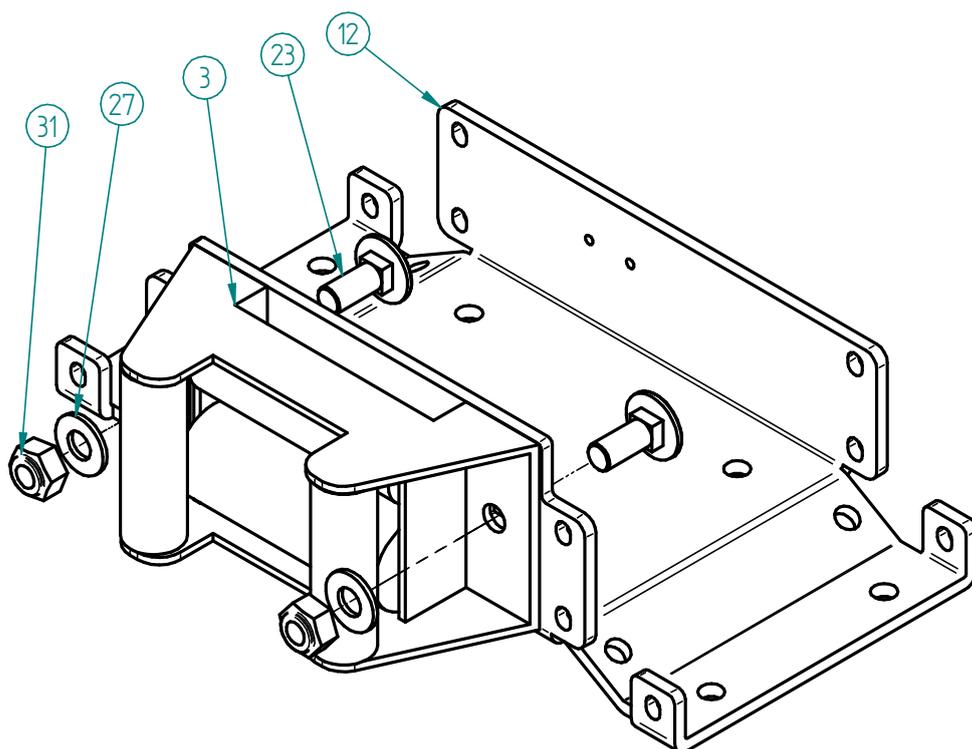


### Step 4

Install handle mounting plates (Pos.13) and handles (Pos.14). Use M6x20 bolts (Pos.21), Ø6 mm washers (Pos.24) and M6 nyloc nuts (Pos.29) to install handle mounting plates. Use M8x20 bolts (Pos.22) to fasten handles.

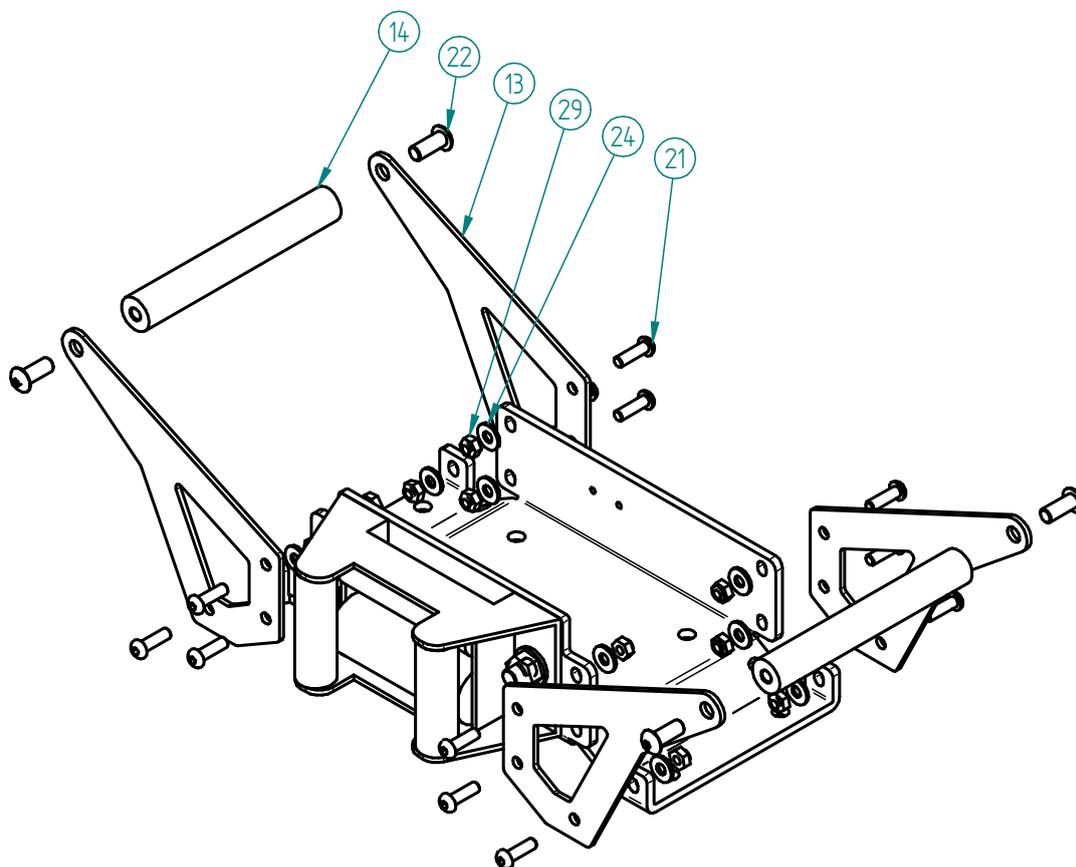


## Step 5

Install distance plate (Pos.15) for winch plug. Use M3x30 bolts (Pos.18) ja Ø3 mm washers (Pos.26).

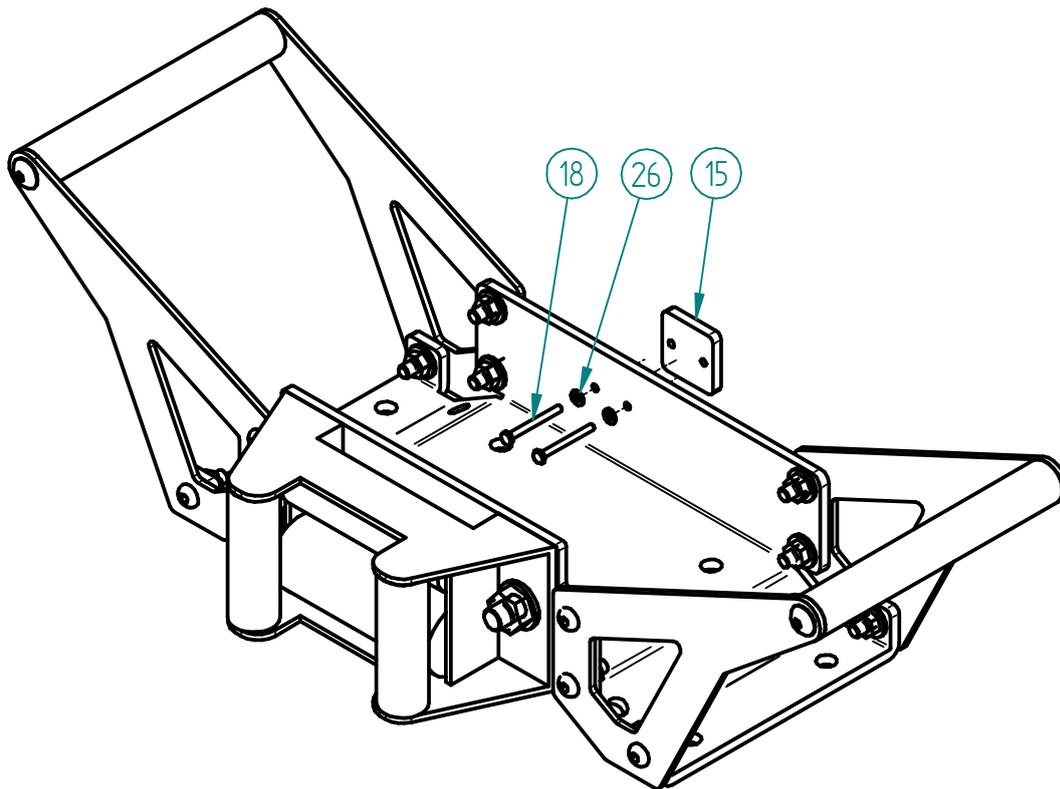



## Step 6

Install winch assembly. Mount plug to the distance plate. Use M8x20 bolts (Pos.19) and Ø8 mm washers (Pos.25) to install the winch assembly. Use Ø3 mm washers (Pos.26) and M3 nyloc nuts (Pos.28) to fix the plug.

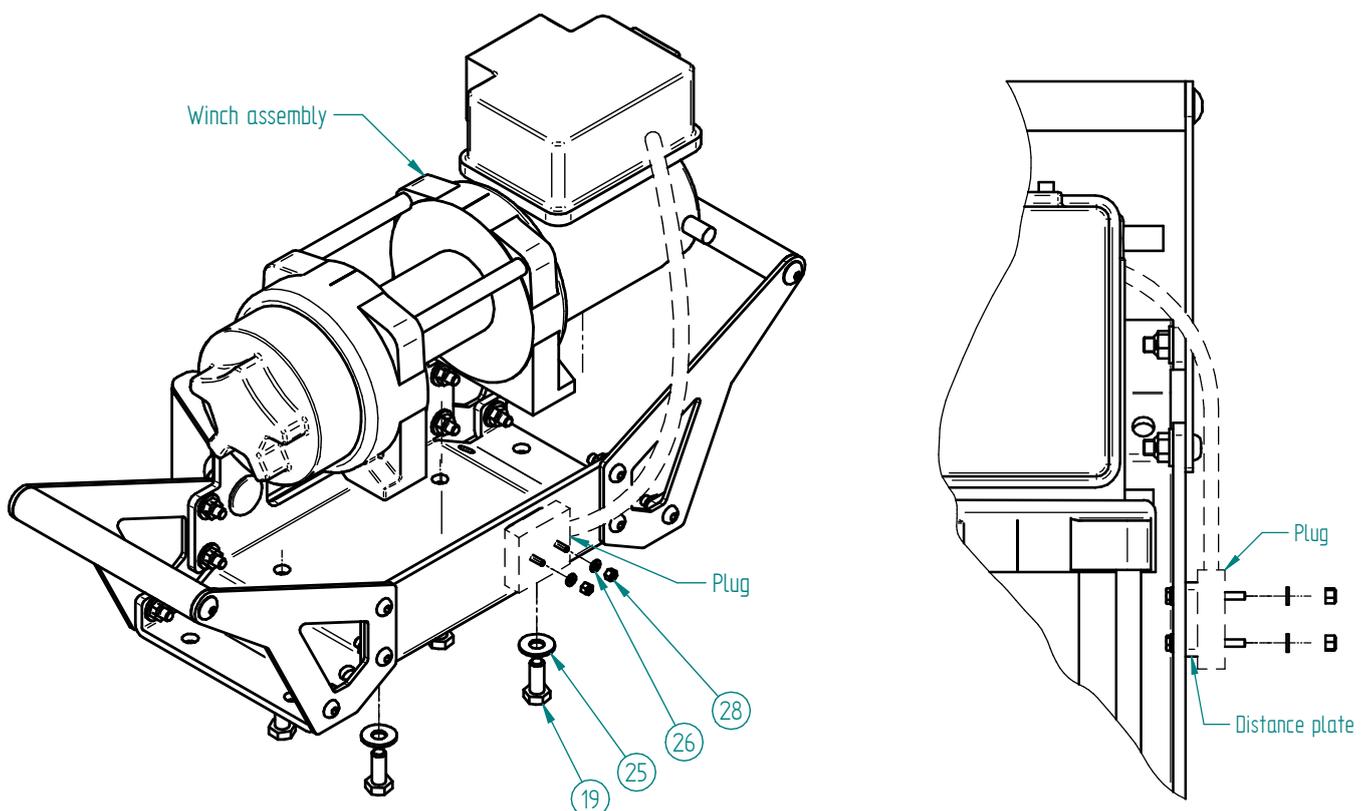

## Step 7

Install assembly to the receiver mount (Pos.11) or to the frame attachment (Pos.16). For fastening use M8x25 bolts (Pos.20), Ø8 mm washers (Pos.25) and M8 nyloc nuts (Pos.30). Use M8x32 U-bolts (Pos.17), Ø8 mm washers (Pos.25) and M8 nyloc nuts (Pos.30) to install frame attachment to the frame.

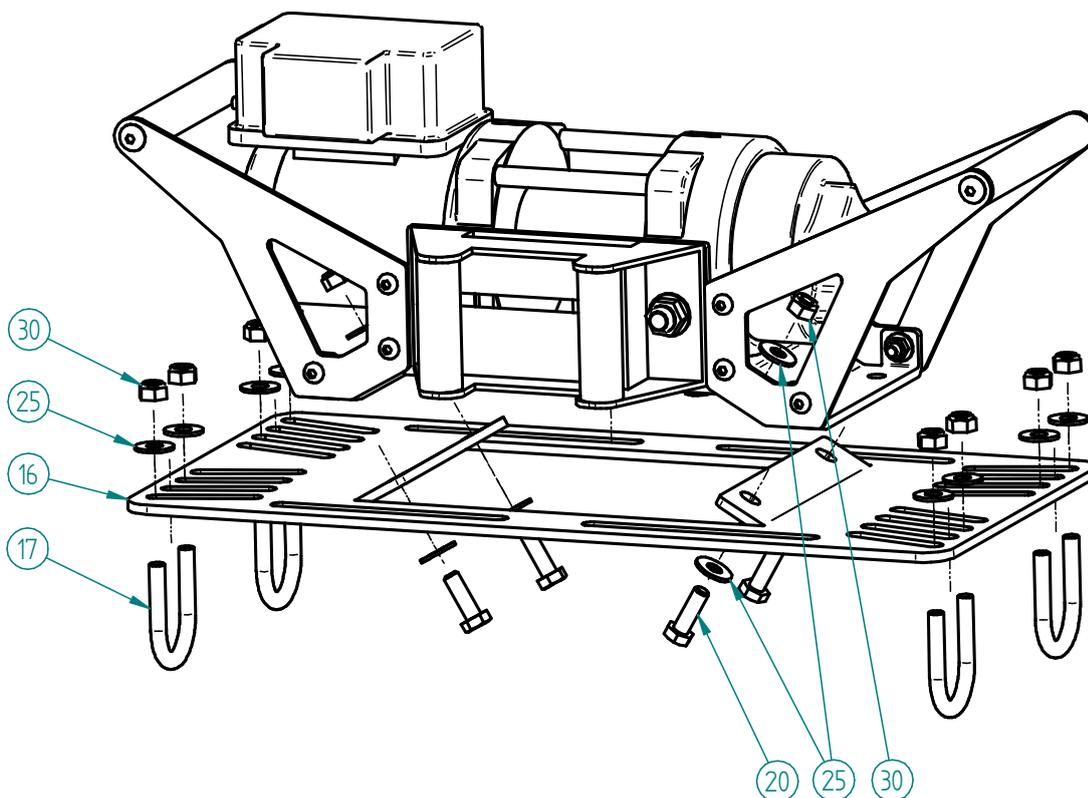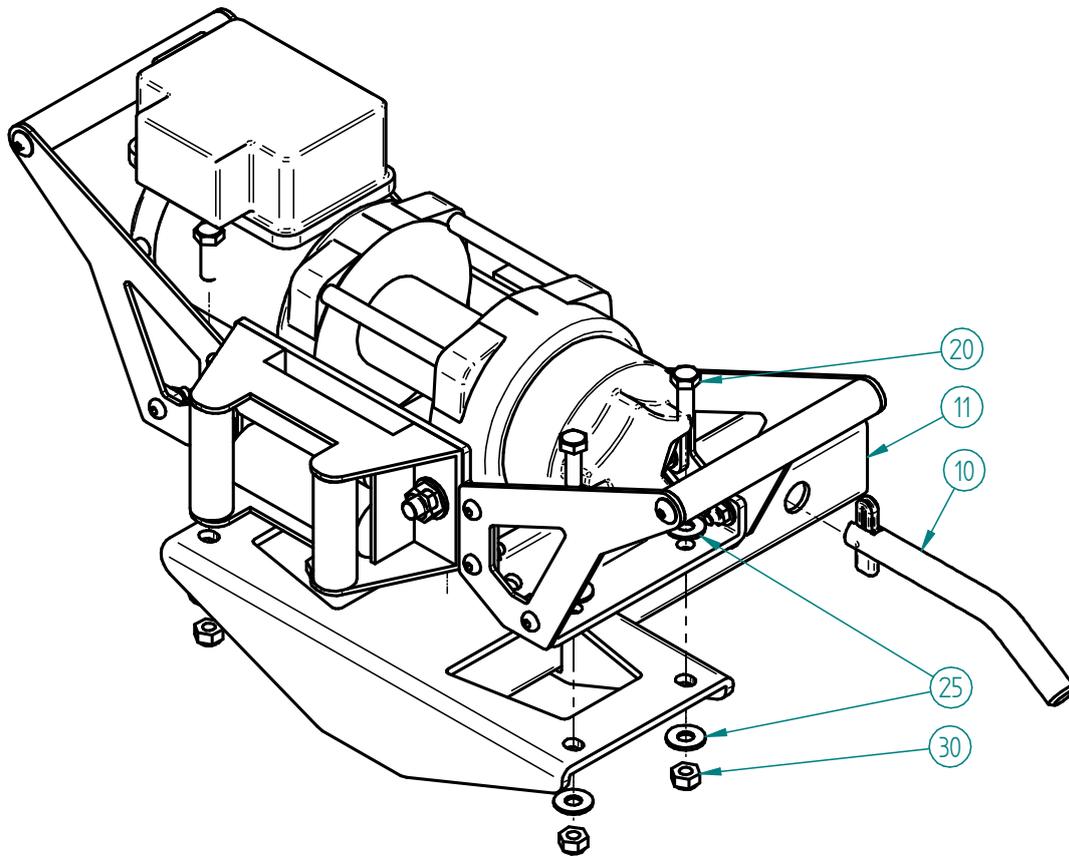



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticld](https://www.youtube.com/user/ironbalticld)

