



PLASTIC PLOW BLADE 1520mm

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/NeRVrDeO

Code 20.7700

Version 04122023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Plastic plow	20.7710S	1
2	Bottom plow mount	20.7701K	1
3	Blade	20.7702	1
4	Left plow mount	20.7703	1
5	Right plow mount	20.7704	1
6	Plate	20.7705	1
7	Bush	20.7706	2
8	Height adjuster	20.700	2
9	Set screw M12x12 DIN916	OT.01.03.010	2
10	Carriage bolt M8x45 DIN603	OT.02.05.072	10
11	Carriage bolt M10x25 DIN603	OT.02.05.105	4
12	Carriage bolt M10x65 DIN603	OT.02.05.125	2
13	Washer Ø8/20 SFS3738	OT.04.03.030	10
14	Washer Ø10 DIN125	OT.04.01.040	6
15	Nyloc nut M8 DIN985	OT.03.02.040	10
16	Nyloc nut M10 DIN985	OT.03.02.050	6

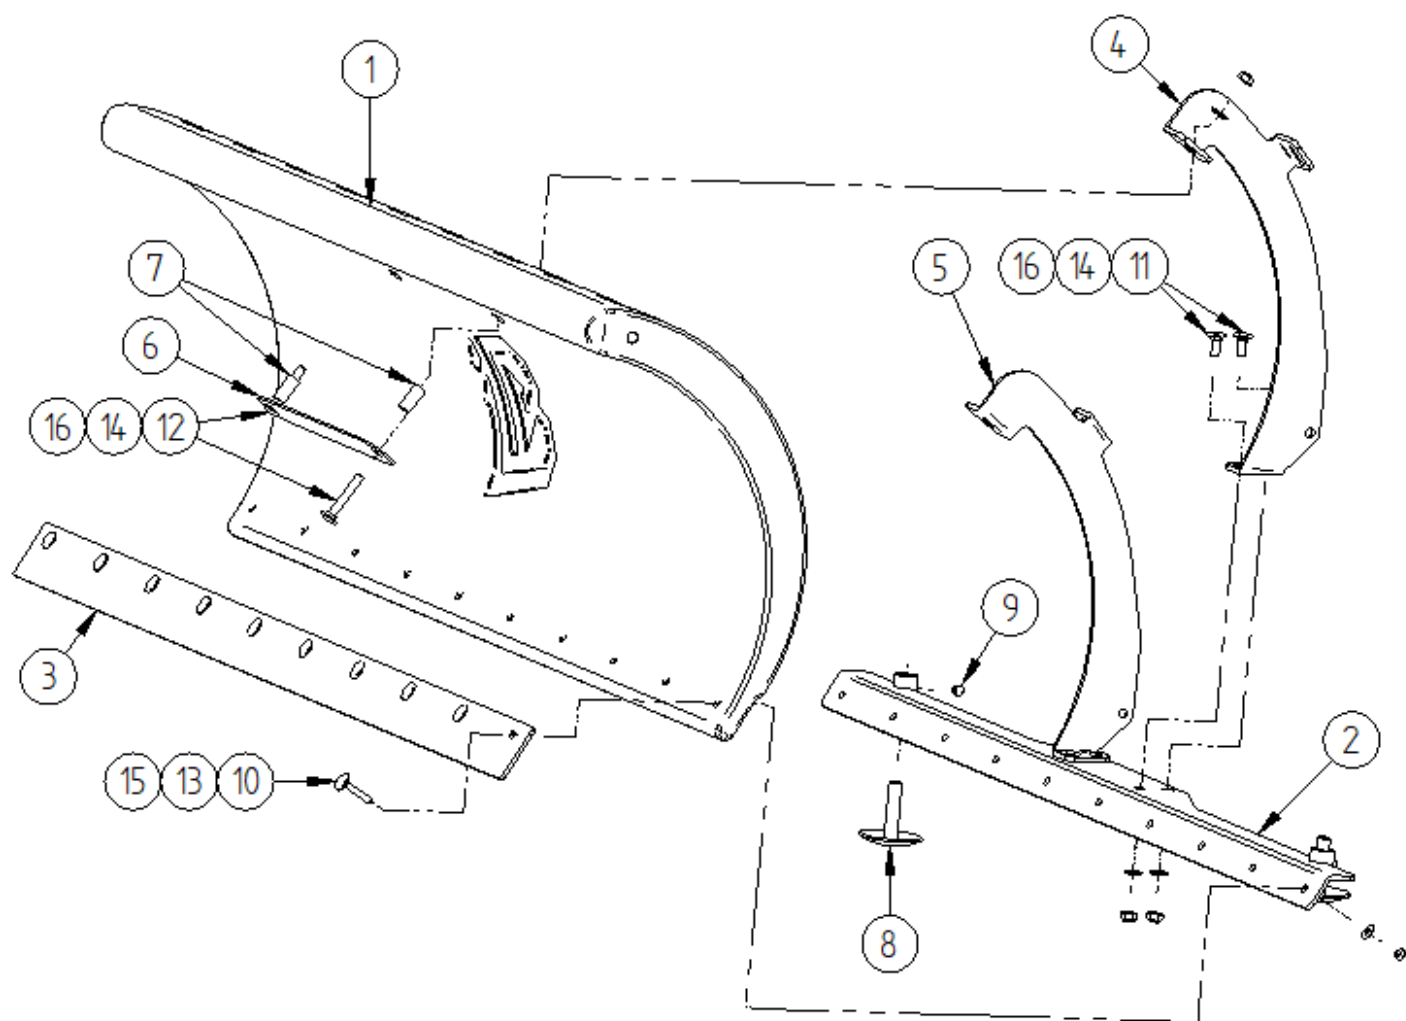

FITTING INSTRUCTIONS

Step 1

Install bottom mount (Pos.2) and blade (Pos.3) to the plastic plow (Pos.1). For fastening use M8x45 bolts (Pos.10), Ø8 mm washers (Pos.13) and M8 nyloc nuts (Pos.15). **NB! Do not tighten the bolts/nuts!**

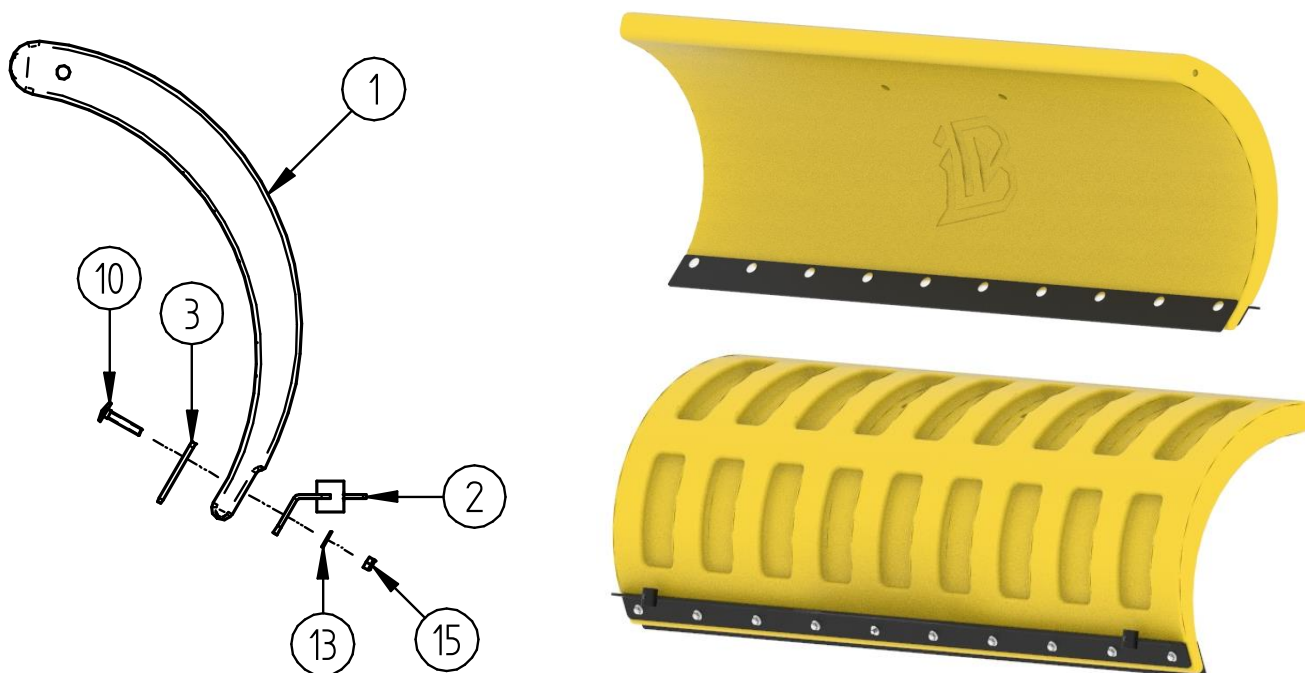

Step 2


Install left plow mount (Pos.4) and right plow mount (Pos.5).

NB! Distance between left and right plow mount must be 266mm!

Use M10x65 bolts (Pos.12), Ø10 mm washers (Pos.14) and M10 nyloc nuts to fasten the mounts to the plastic plow. Install the plate (Pos.6) to the front of the plow and the bushings (Pos.7) inside of the plow.

Use M10x25 bolts (Pos.11), Ø10 mm washers (Pos.14) and M10 nyloc nuts (Pos.16) to fasten left and right mounts to the bottom mount.



NB! Tighten also the bolts / nuts shown in the previous step!

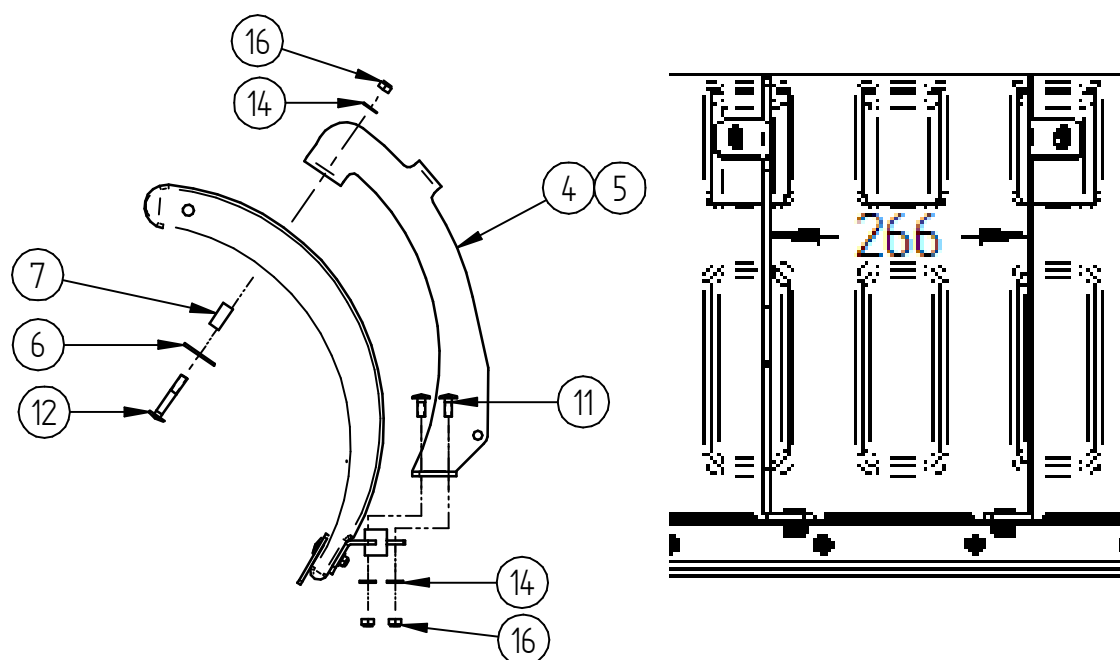



Step 3

Install high adjusters (Pos.8). For fastening use M12 set screws (Pos.9).

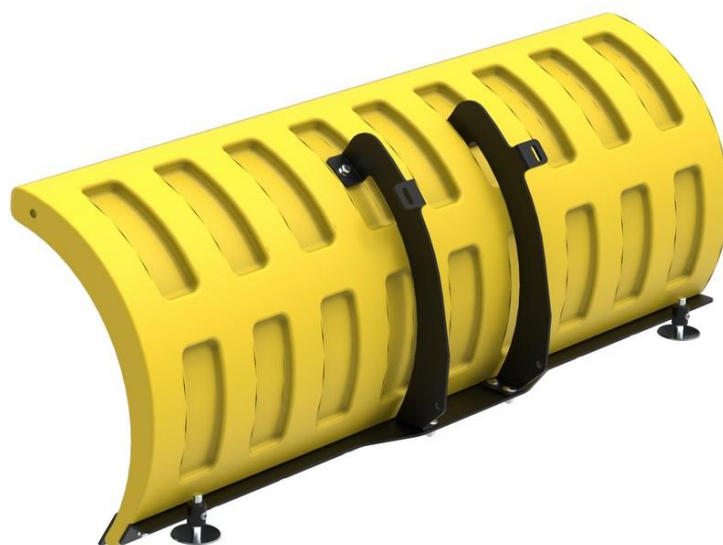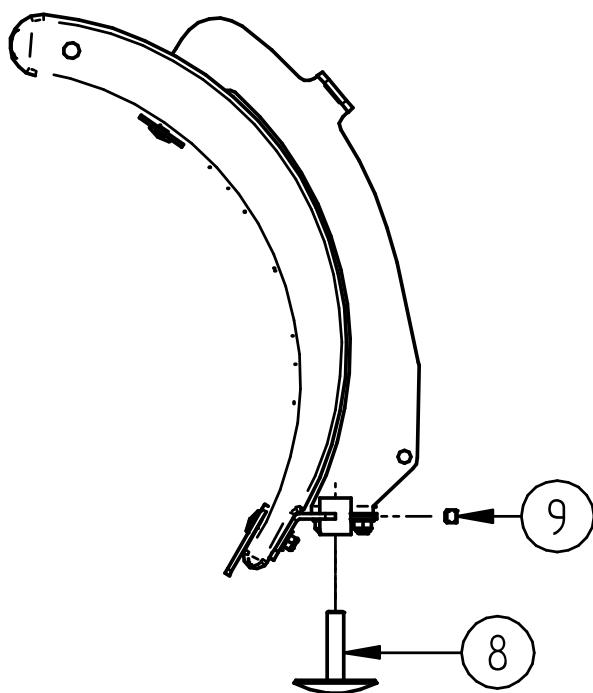

IRON BALTIC

IRON BALTIC OÜ
Põldmäe tee 1
Vatsla 76915
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

