

IRON BALTIC

PLASTIC PLOW BLADE 1520mm

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/NeRVrDeO

Code 20.7700

Version 17032025




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Plastic plow	20.7710S	1
2	Bottom plow mount	20.7701K	1
3	Blade	20.7702	1
4	Left plow mount	20.7703	1
5	Right plow mount	20.7704	1
6	Plate	20.7705	1
7	Bush	20.7706	2
8	Upper mounting plate	20.7707	1
9	Height adjuster	20.700	2
10	Spring 8x50x200mm	OT.11.01.050	2
11	Set screw M12x12 DIN916	OT.01.03.010	2
12	Carriage bolt M8x25 DIN603	OT.02.05.072	4
13	Carriage bolt M8x45 DIN603	OT.02.05.072	10
14	Carriage bolt M10x25 DIN603	OT.02.05.105	4
15	Carriage bolt M10x65 DIN603	OT.02.05.125	2
16	Washer Ø8/20 SFS3738	OT.04.03.030	14
17	Washer Ø10 DIN125	OT.04.01.040	6
18	Nyloc nut M8 DIN985	OT.03.02.040	14
19	Nyloc nut M10 DIN985	OT.03.02.050	6

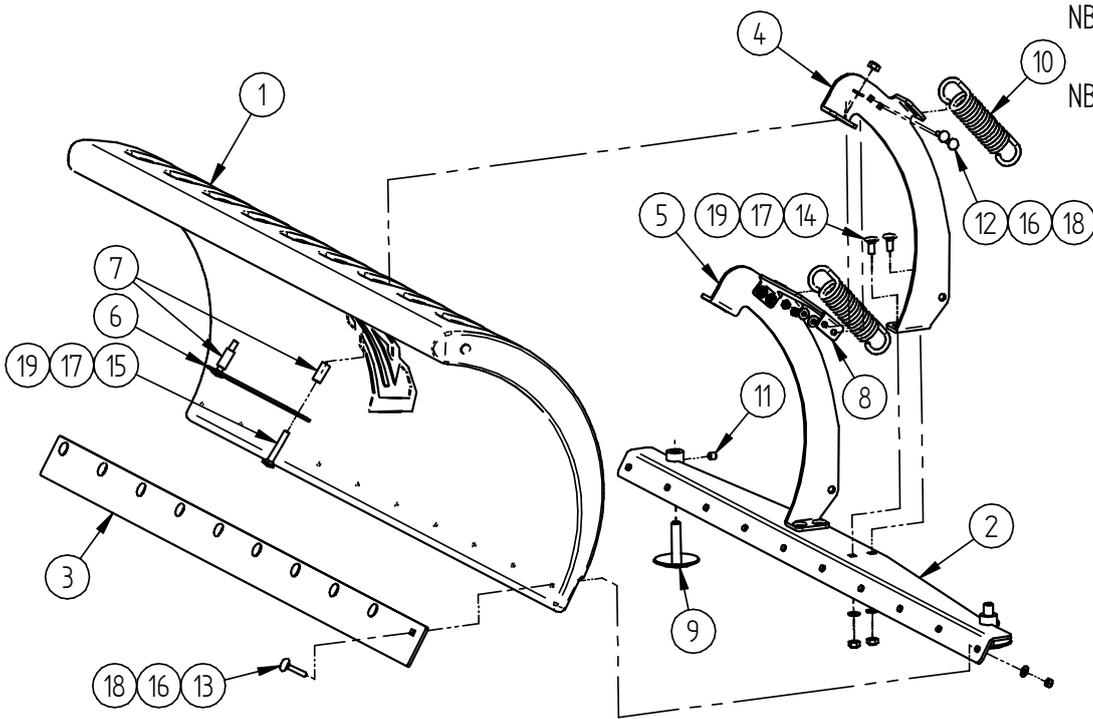


NB! Use instead of springs
supplied with push tubes!
NB! Kasuta raamiga kaasas
olevate vedrude asemel!

FITTING INSTRUCTIONS

Step 1

Install bottom mount (Pos.2) and blade (Pos.3) to the plastic plow (Pos.1). For fastening use M8x45 bolts (Pos.13), Ø8 mm washers (Pos.16) and M8 Nyloc nuts (Pos.18). **NB! Do not tighten the bolts/nuts!**

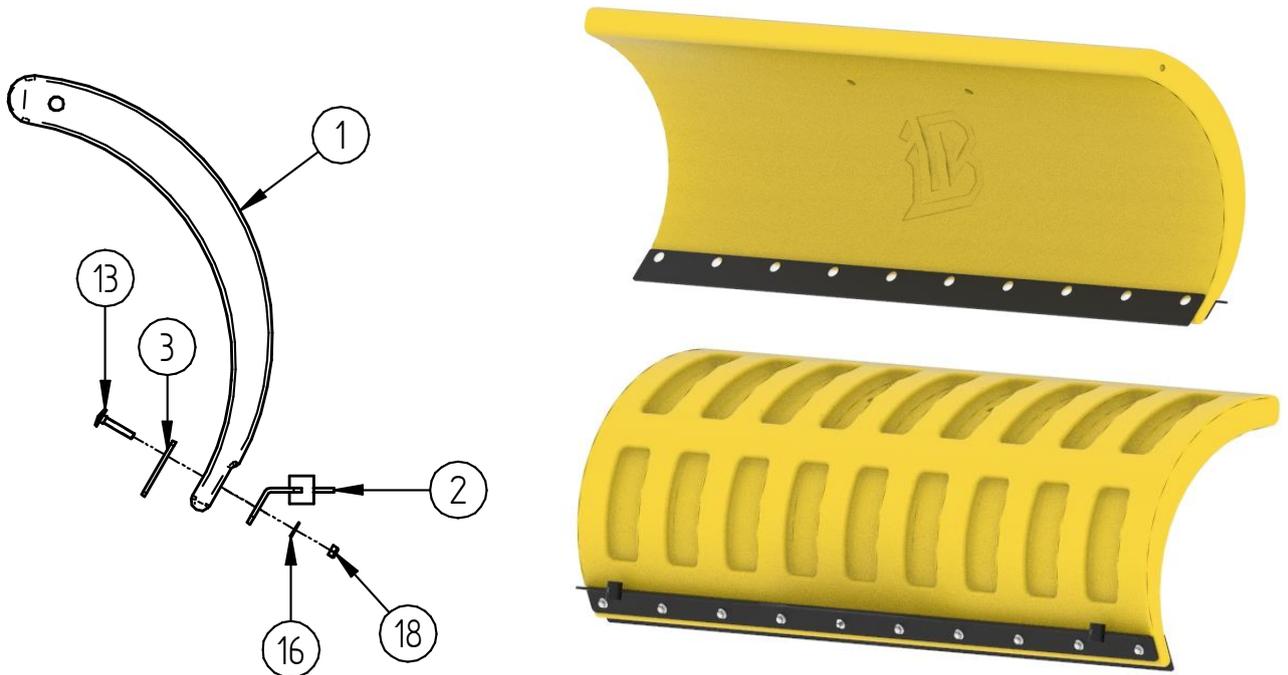

Step 2

Install left plow mount (Pos.4) and right plow mount (Pos.5).


NB! Distance between left and right plow mount must be 266mm!

Use M10x65 bolts (Pos.15), Ø10 mm washers (Pos.17) and M10 nyloc nuts (Pos.19) to fasten the mounts to the plastic plow. Install the plate (Pos.6) to the front of the plow and the bushings (Pos.7) inside of the plow.

Use M10x25 bolts (Pos.14), Ø10 mm washers (Pos.17) and M10 nyloc nuts (Pos.19) to fasten left and right mounts to the bottom mount.

Between left and right mount install upper mounting plate (Pos.8). For fastening use M8x25 bolts (Pos.12), Ø8 mm washers (Pos.16) and M8 nyloc nuts (Pos.18).


NB! Tighten also the bolts / nuts shown in the previous step!

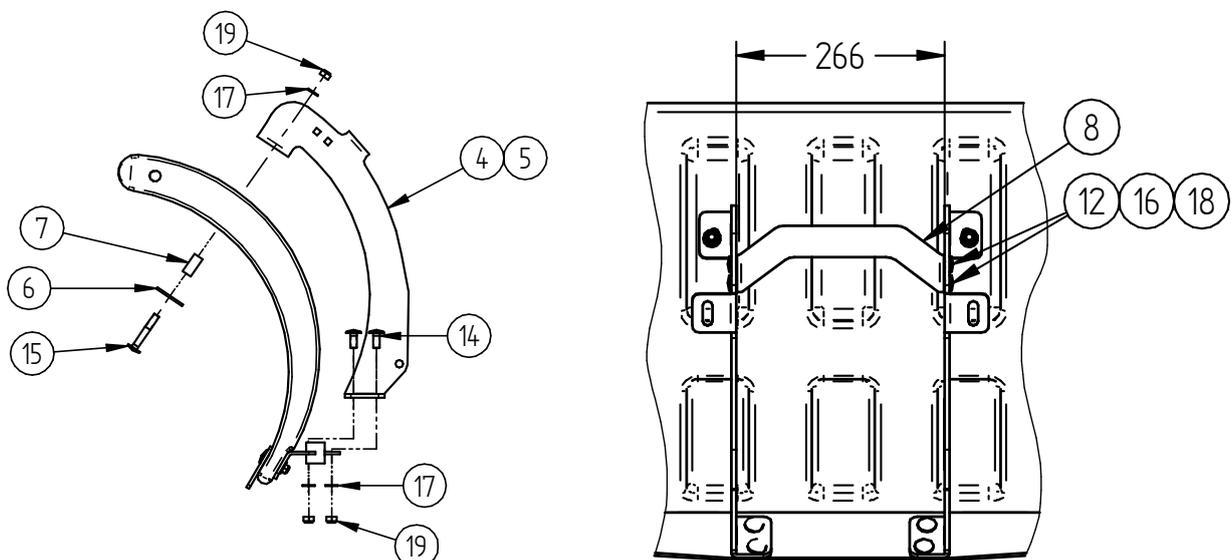




Step 3

Install high adjusters (Pos.9). For fastening use M12 set screws (Pos.11).

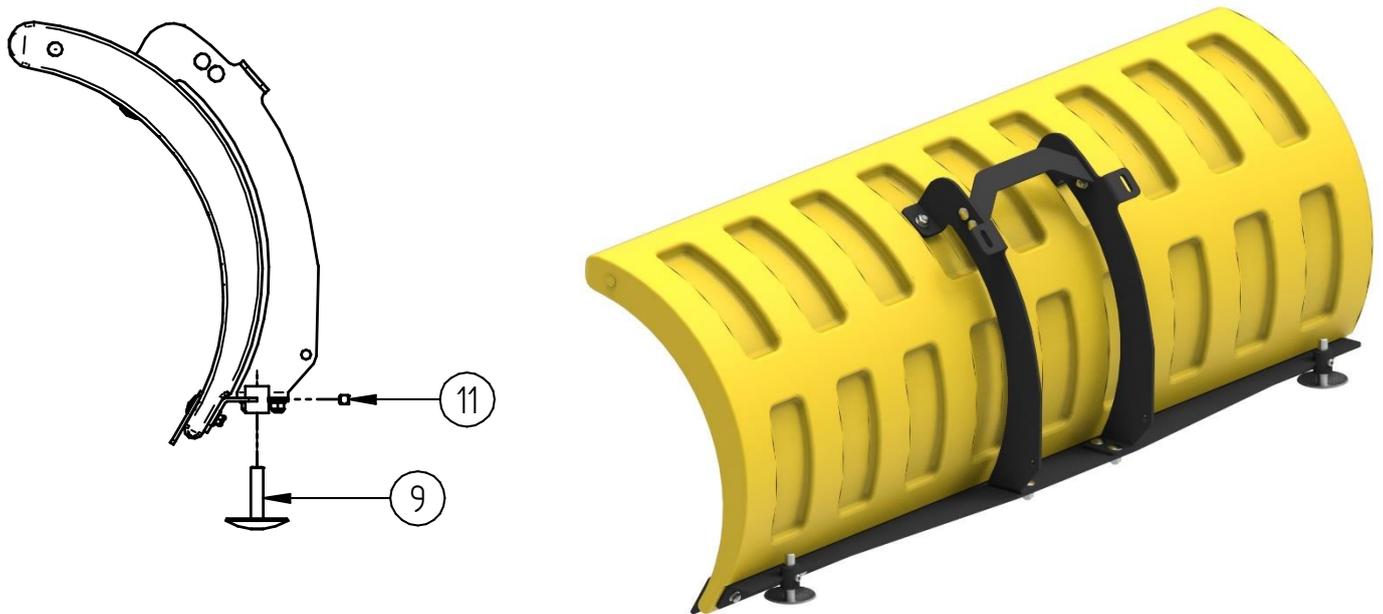

Step 4

Install springs (Pos.10) to the left plow mount (Pos.4) and right plow mount (Pos.5). **NB! Use these instead of springs supplied with push tubes.**

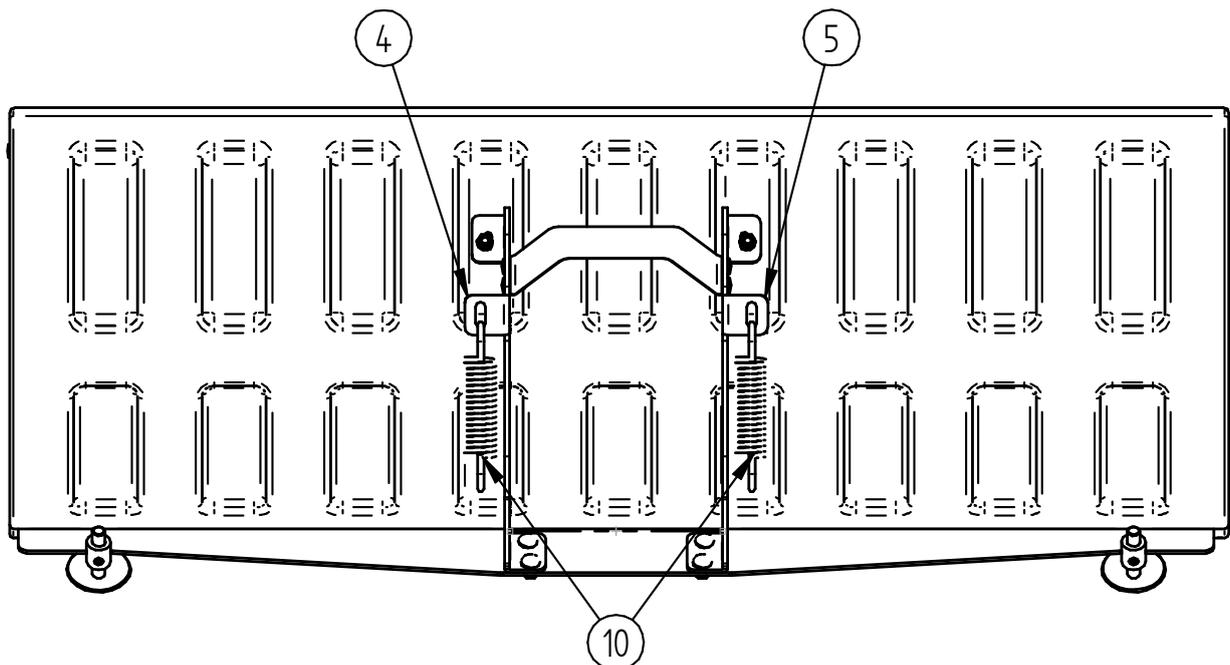

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

