

IRON BALTIC

LIFTING CRANE

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/Ntf3Q4zC

IB 1200 / OFFROAD PRO 1200

Code 23.4000

Version 06122023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION


| Pos. | Description | Code | Amount |
|------|----------------------|--------------|--------|
| 1 | Frame | 23.4001K | 1 |
| 2 | Lower telescope | 23.4006K | 1 |
| 3 | Upper telescope | 23.4010K | 1 |
| 4 | Roller | 23.4012 | 1 |
| 5 | U-Bolt 60x60 | 23.1006 | 4 |
| 6 | Pin Quick lock | OT.53.00.045 | 2 |
| 7 | Bolt M8x25 DIN933 | OT.02.02.190 | 3 |
| 8 | Bolt M10x45 DIN931 | OT.02.01.040 | 1 |
| 9 | Bolt M12x110 DIN931 | OT.02.01.125 | 1 |
| 10 | Washer Ø8/20 SFS3738 | OT.04.03.030 | 6 |
| 11 | Washer Ø10 DIN125 | OT.04.01.040 | 10 |
| 12 | Washer Ø12 DIN125 | OT.04.01.050 | 2 |
| 13 | Nyloc nut M8 DIN985 | OT.03.02.040 | 3 |
| 14 | Nyloc nut M10 DIN985 | OT.03.02.050 | 9 |
| 15 | Nyloc nut M12 DIN985 | OT.03.02.060 | 1 |

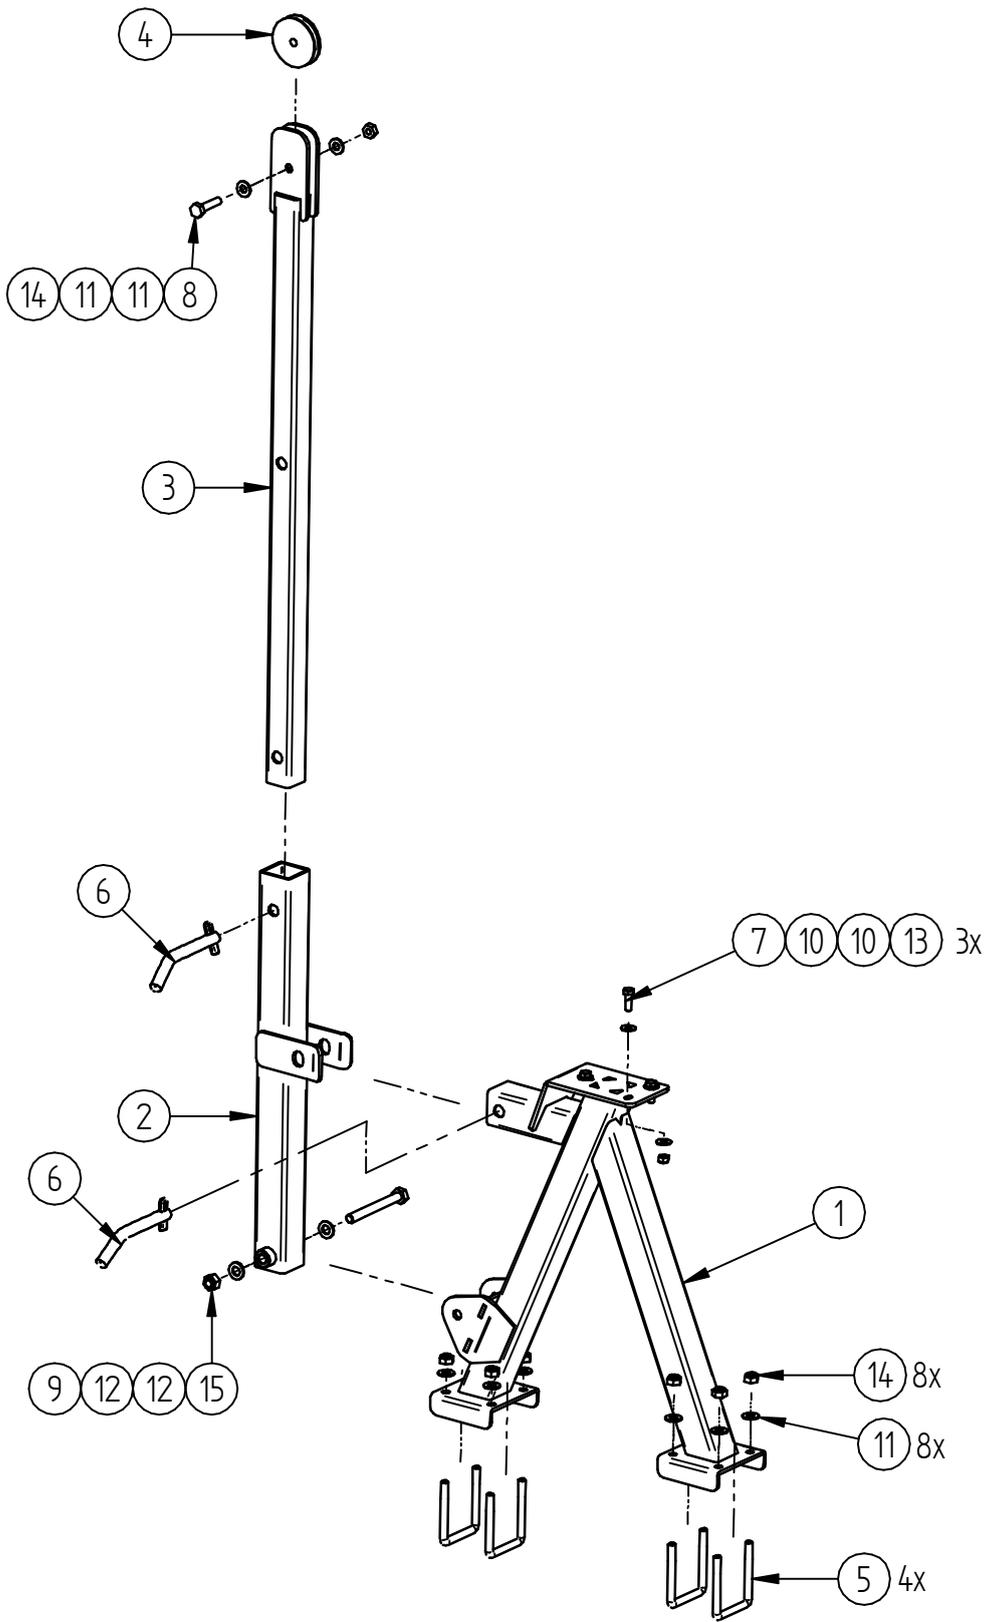

FITTING INSTRUCTIONS


Step 1

Install tilting mechanism frame (Pos.1) to drawbar. For fastening use U-bolts (Pos.5), Ø10 mm washers (Pos.11) and M10 nyloc nuts (Pos.14).

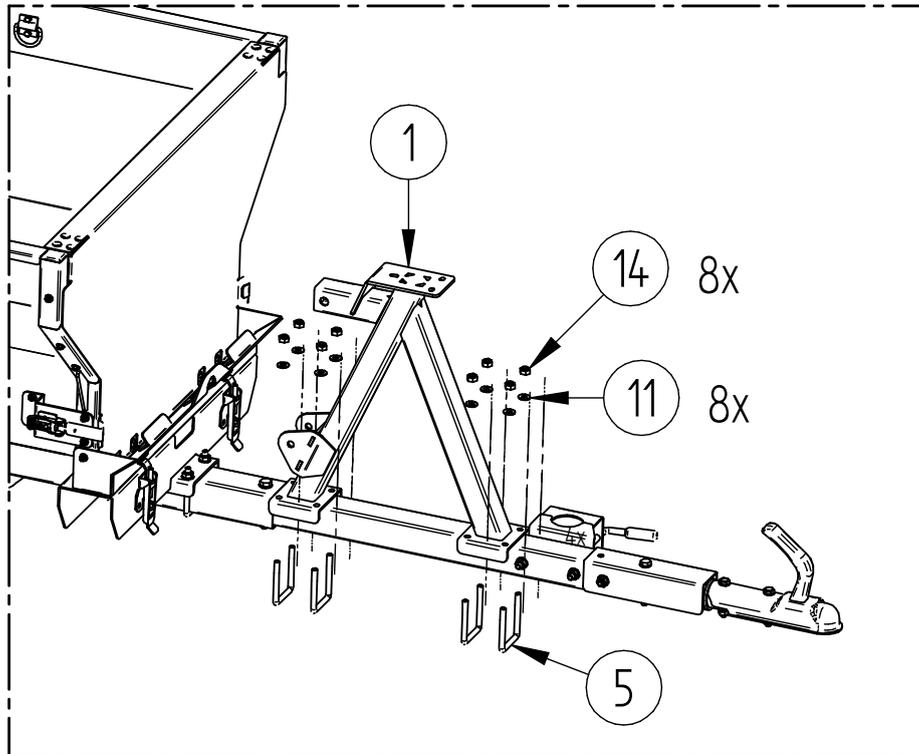


Step 2

Install lower telescope (Pos.2). For fastening use M12x110 bolt (Pos.9), Ø12 mm washers (Pos.12) and M12 nyloc nut (Pos.15). Fix the position with pin (Pos.6).

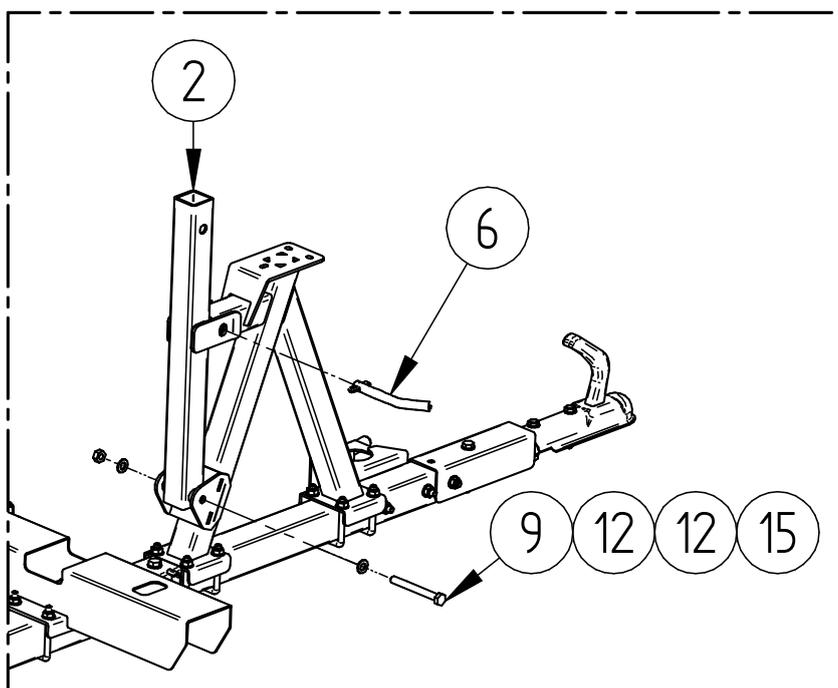


Step 3

Install upper telescope (Pos.3). Fix the position with pin (Pos.6).

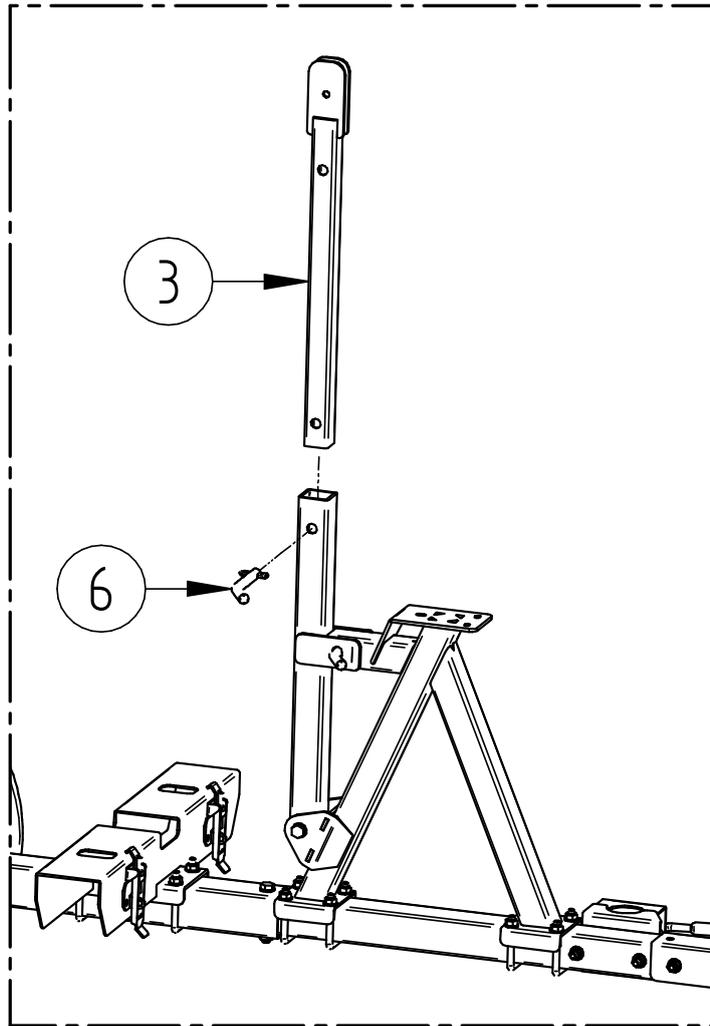



Step 4

Install roller (Pos.4). For fastening use M10x45 bolt (Pos.8), Ø10 mm washers (Pos.11) and M10 nyloc nuts (Pos.14).

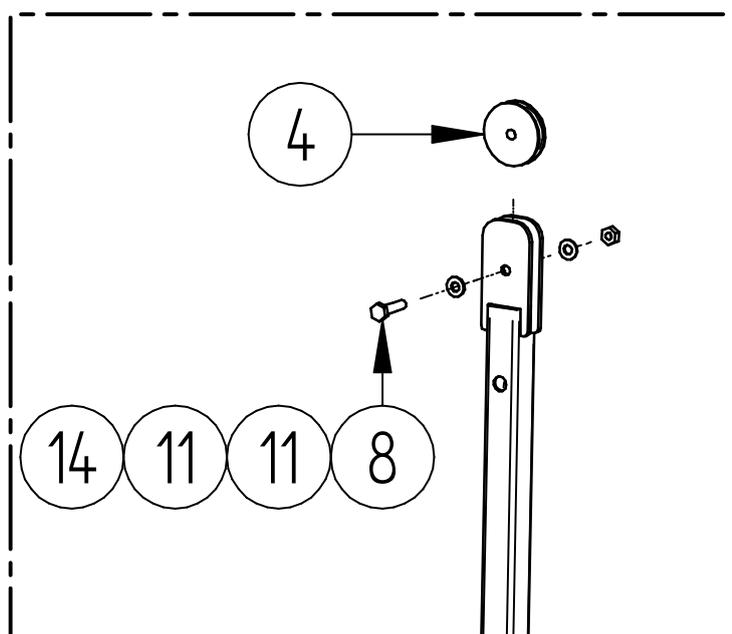

Step 5

Install manual winch (OT.13.01.010) or electrical winch kit (23.3100).
For fastening use M8x25 bolts (Pos.7), Ø8 mm washers (Pos.10) and M8 nyloc nuts (Pos.13). NB! Manual winch / electrical winch kit is an optional extra and must be purchased separately!

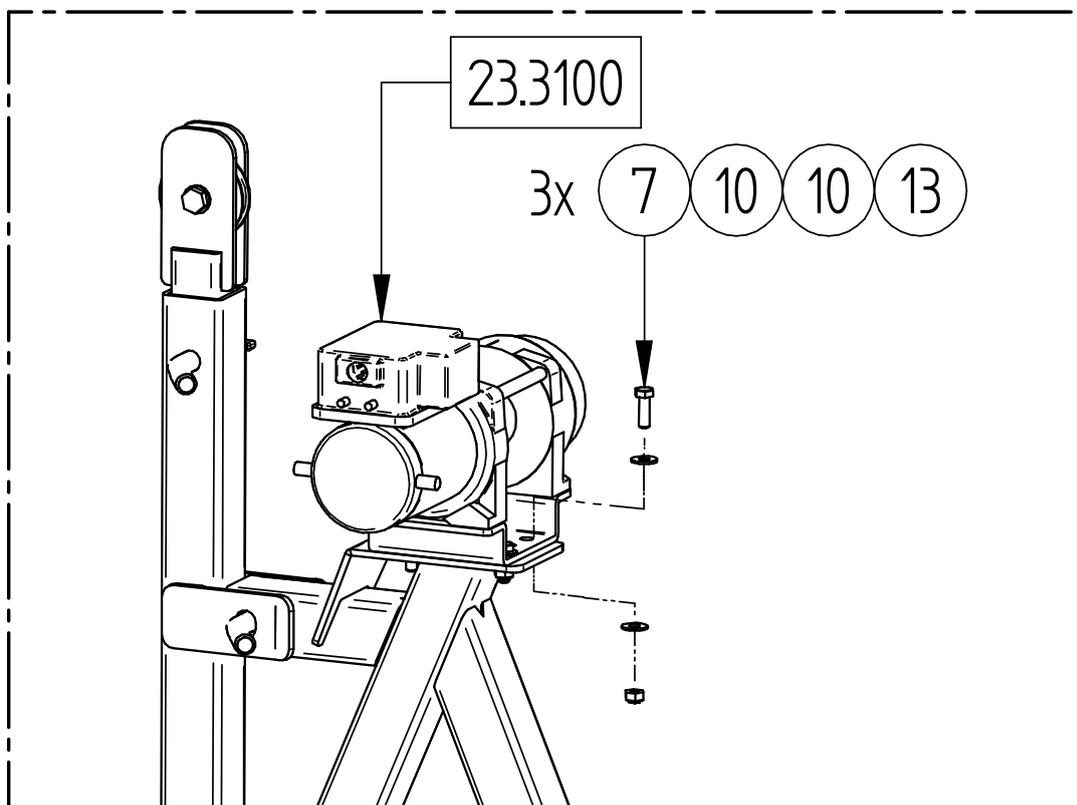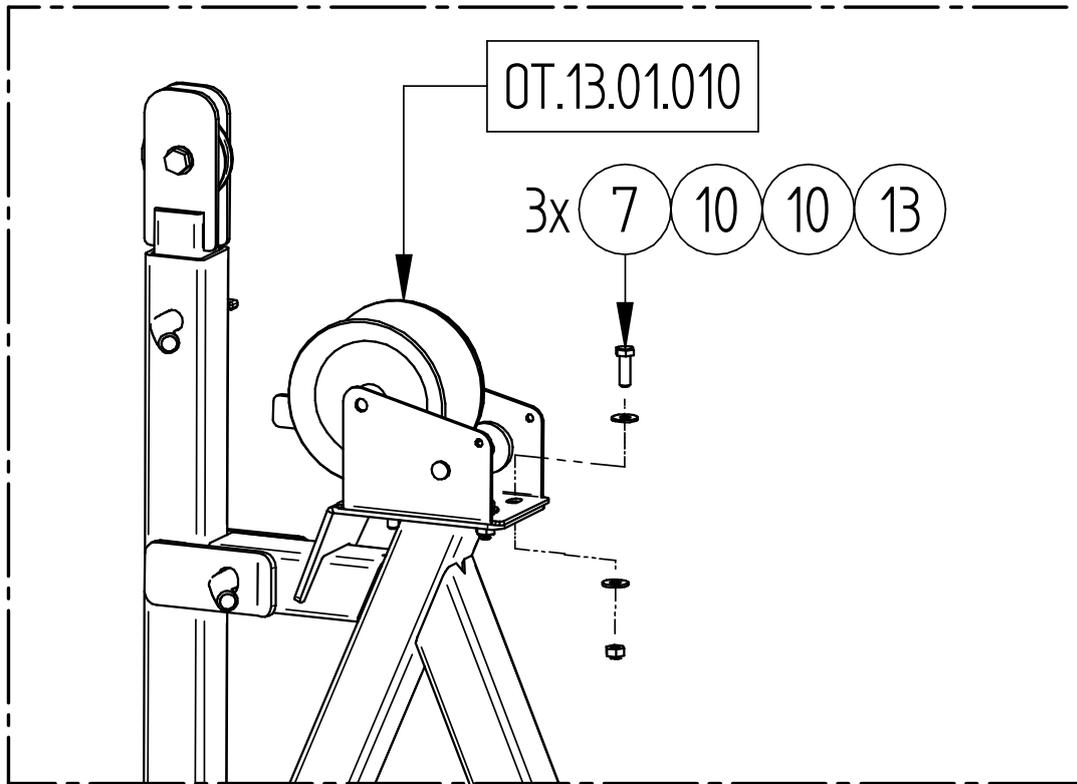

USER GUIDE

Step 1 For transportation, inner telescope is down and locked with pins (Picture 1).

Step 2 For lifting, lift inner telescope up and lock with pin (Picture 2).



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

