

IRON BALTIC

BRUSH DISCS SET

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/xkBFmIOJ

Code 48.500

Version 18122023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Brush disc	OT.22.02.010	43

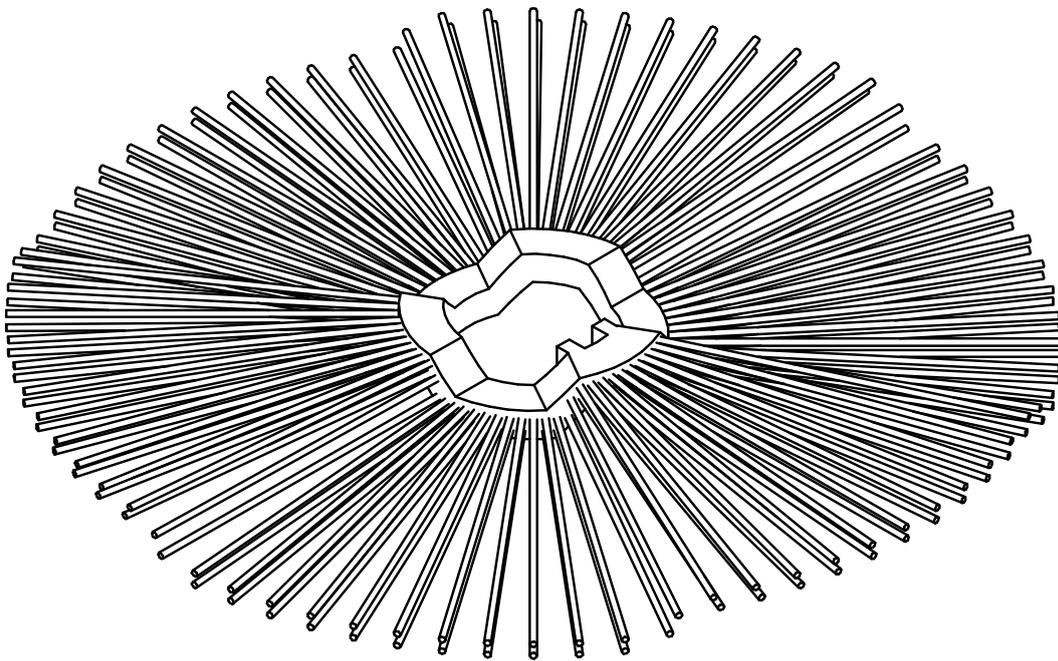

BRUSH DISCS REPLACEMENT

Step 1

Loosen the bolts and remove the cover.




Step 2

Remove the roller and the smaller sprocket's washer.




Step 3

Remove the chain together with the smaller sprocket and the parallel key.

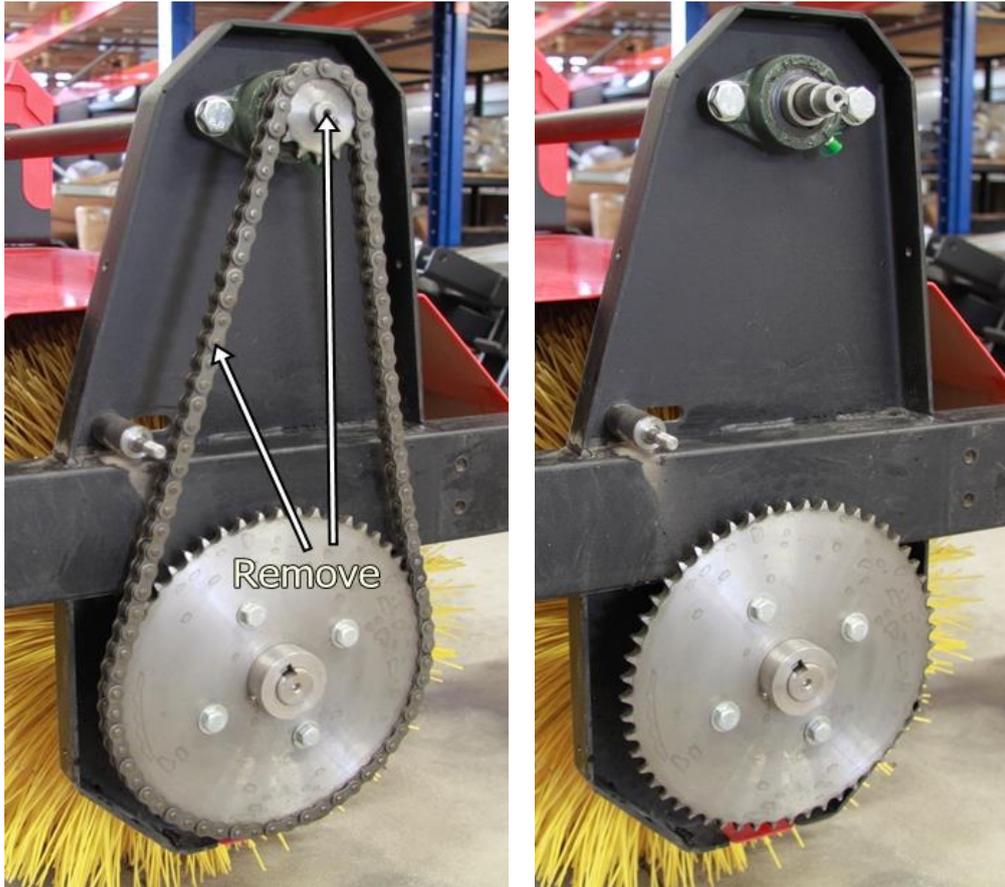

Step 4

Remove the larger sprocket. You will need to remove four bolts and two adjustment screws.

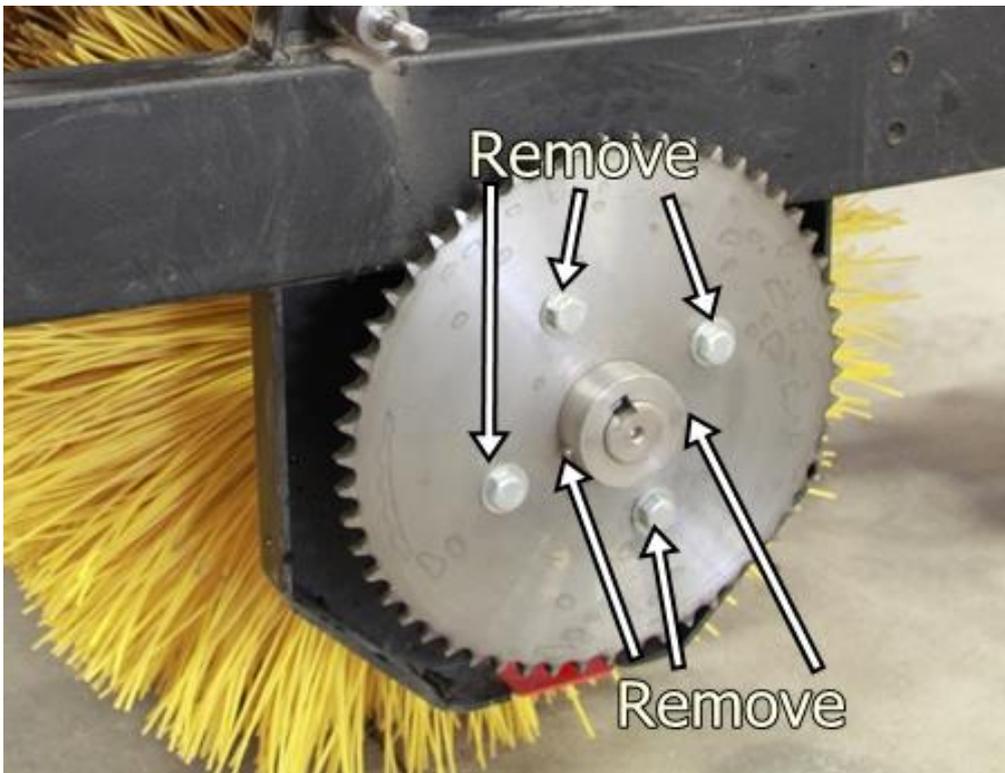

Step 5

Remove large sprocket's base plate, the parallel key and the bearing housing.



Step 6

Remove the bearing housing from the other side of the machine.



Step 7

Remove bolts and aluminium discs.



Step 8

Remove brush discs and replace them with new ones. Place every next disc mirrored to the previous one and rotated 120 degrees clockwise

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

