

# IRON BALTIC

## WIRING KIT (2 CYLINDERS)

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/vqXsiBdi](https://code.ironbaltic.com/u/vqXsiBdi)

Code 70.2600

Version 02012024



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION


Pos.	Description	Code	Amount
1	Wiring loom with remote control	OT.33.03.040	1
2	Remote control holder	70.2601	1
3	Pipe clamp 28mm	OT.05.01.010	1
3	Pipe clamp bracket 28 mm	OT.05.04.010	1
4	Cable tie 7,5x365mm	PM.11.00.005	5
5	Screw M3x14 DIN7985	OT.01.02.030	2
6	Washer M3 DIN125	OT.04.01.004	2
7	Washer Ø8/20 SFS3738	OT.04.03.030	2
8	Nyloc nut M3 DIN985	OT.03.02.005	2
9	Nyloc nut M8 DIN985	OT.03.02.040	2



# FITTING INSTRUCTIONS

## Step 1

Install remote control to holder. Use M3 screws, washers and nyloc nuts.

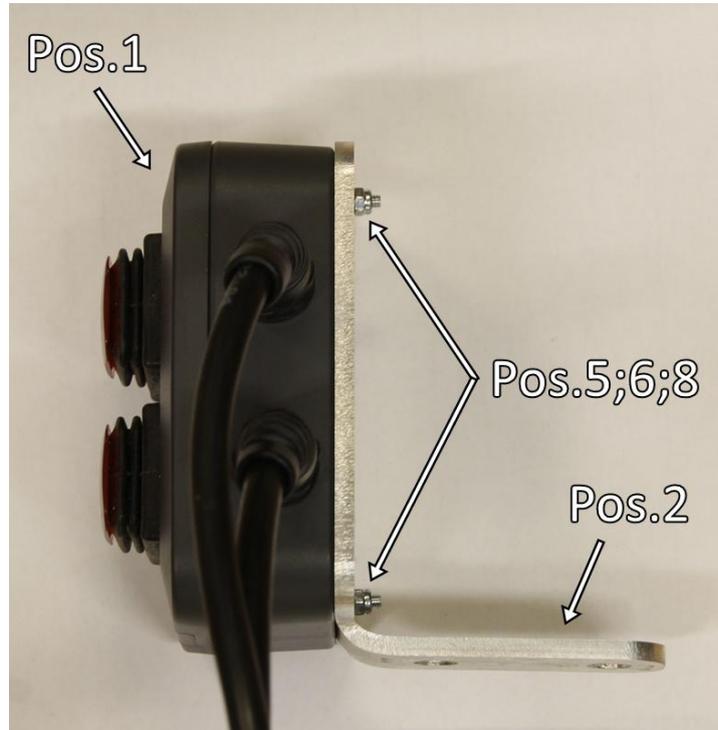

## Step 2

Find suitable place for the remote control (under the rear view mirror, to the luggage rack, etc). To install on the luggage rack, use pipe clamp.




### Step 3

Install wires to ATV battery.  
Wire with fuse holder goes under battery + terminal.



### Step 4

Connect plugs to cylinder wires.

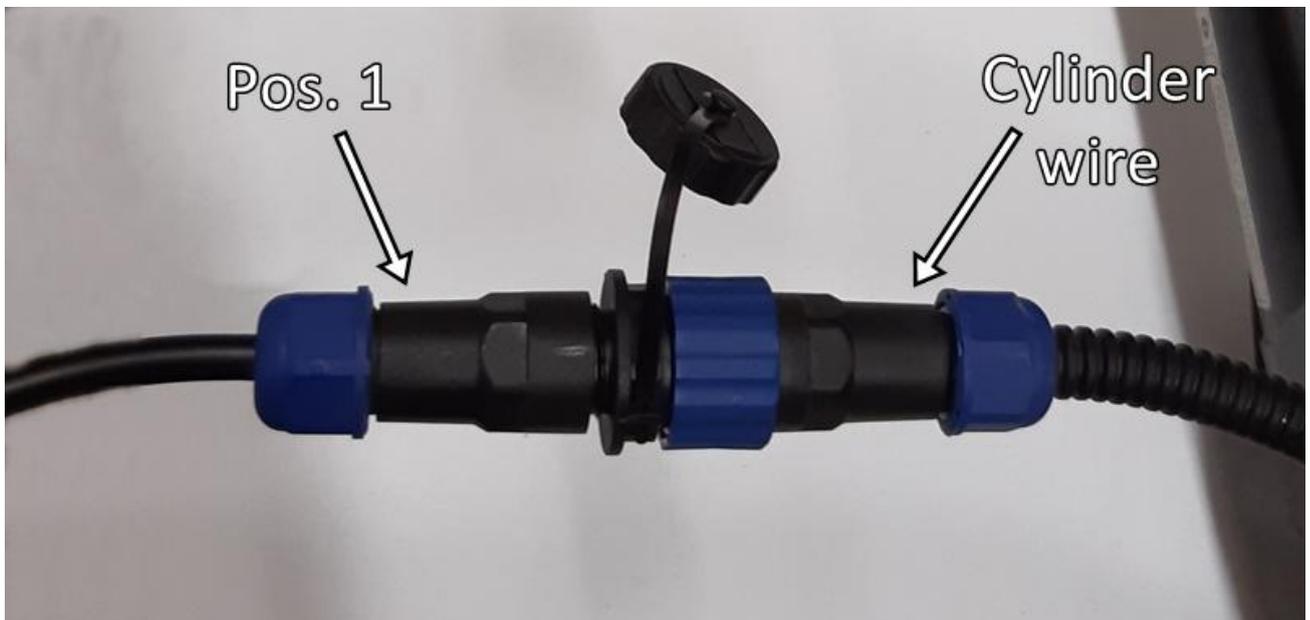

### Step 5

Use cable ties to organize wires.

**NB! When using wiring kit then DO NOT press two switches together!  
This kit is meant to control one cylinder at a time!**





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

