



LIFT CYLINDER ADAPTER

CORVUS

Terrain DX4 (PRO bumper)

Code 71.10900

Version 04012024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/vruEkER1

SPECIFICATION


Pos.	Description	Code	Amount
1	Cylinder holder	71.10901	1
2	Cylinder holder support	71.3002	1
3	Lower cylinder bracket	71.3003	1
4	Pin (longer)	71.3004	1
5	Pin (shorter)	71.3005	1
6	Bush	71.3006	2
7	U-bolt bracket 42mm	OT.05.04.040	1
8	U-bolt M8x42mm	OT.05.01.040	1
9	Cotter pin 3 DIN 11024	OT.07.01.020	2
10	Bolt M8x20 DIN 933	OT.02.02.180	4
11	Bolt M12x30 DIN 933	OT.02.02.390	1
12	Washer M8 SFS 3738	OT.04.03.030	10
13	Washer M12 DIN 125	OT.04.01.050	1
14	Nut M8 Nyloc DIN 985	OT.03.02.040	6
15	Nut M12 Nyloc DIN 985	OT.03.02.060	1

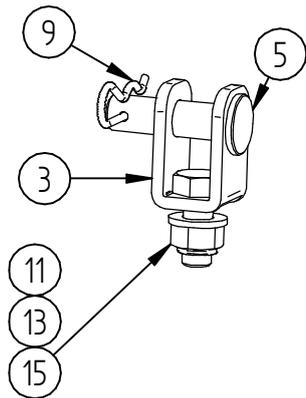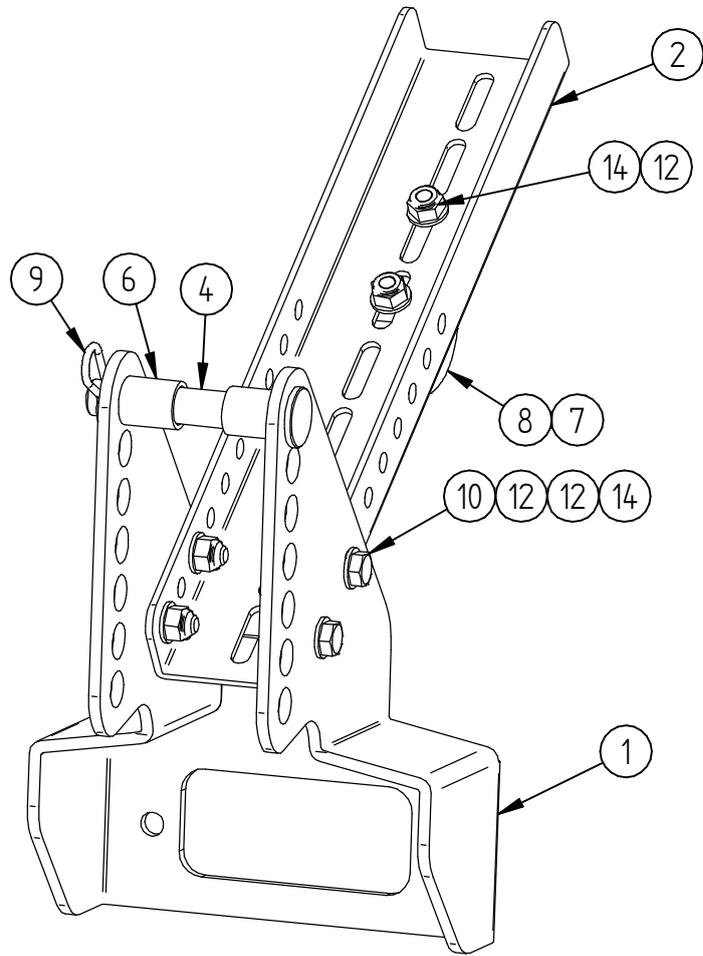

FITTING INSTRUCTIONS

Step 1

Remove winch fairlead and install cylinder holder Pos.1 between winch adapter and fairlead.

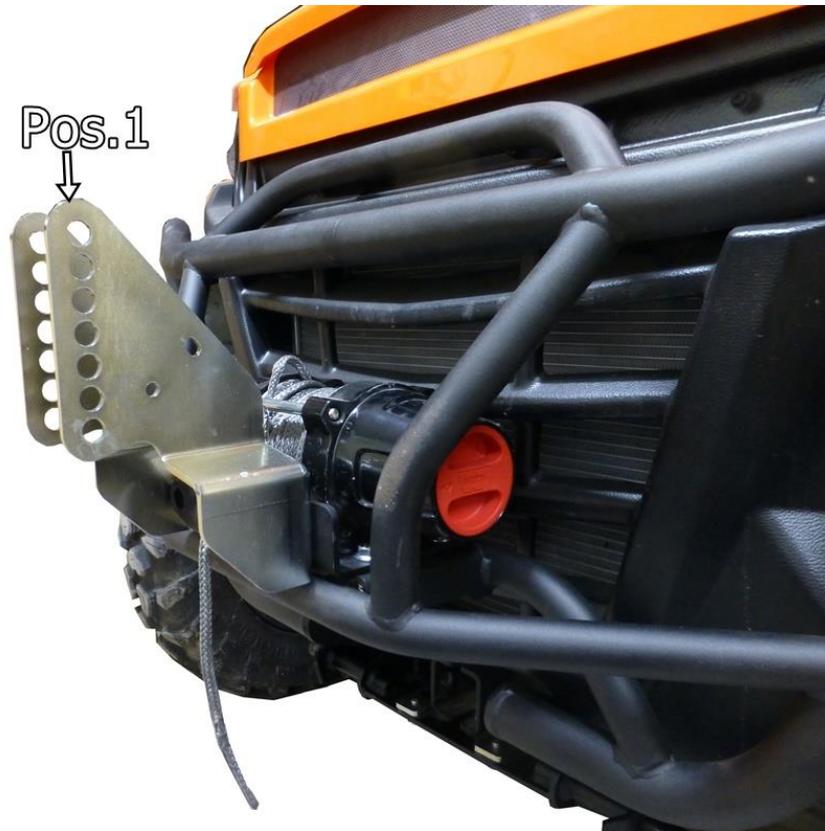


Step 2

Install cylinder holder support to cylinder holder and front bumper.



Step 3

Install cylinder bottom bracket to pushtubes.

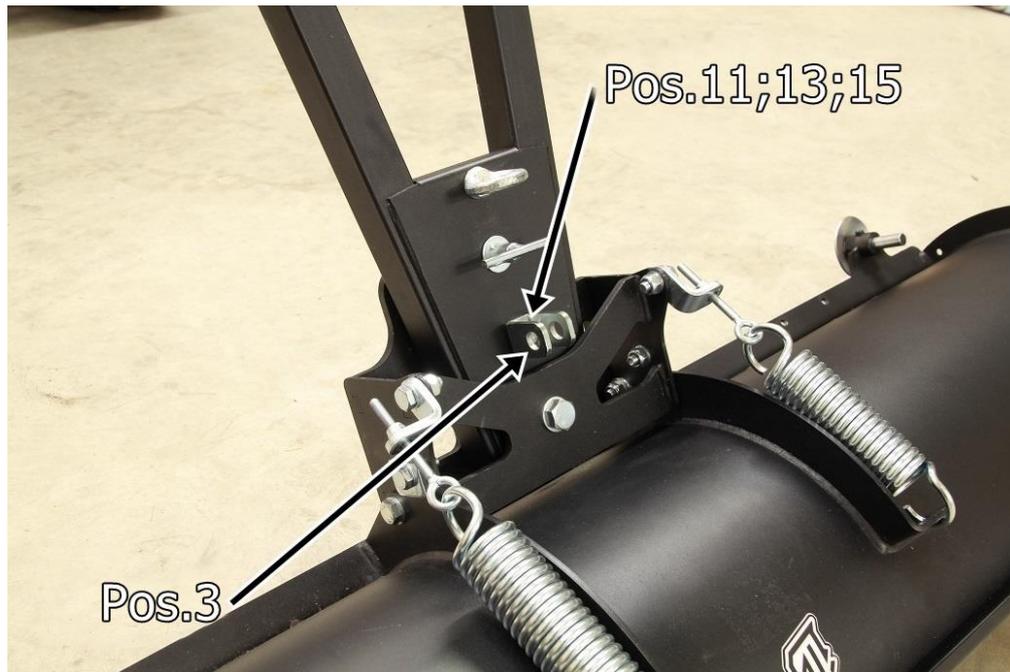

Step 4

Install cylinder. Find appropriate height for cylinder, if cylinder is in minimal position then plow frame should not touch UTV. When using hydraulic cylinder, add bushes Pos.6 between upper cylinder mount and cylinder holder.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

