

IRON BALTIC

LIFT CYLINDER ADAPTER

CFMOTO

UForce 600 (2021-...)

Code 71.11100

Version 04012024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/iCYCisQF

SPECIFICATION

Pos.	Description	Code	Amount
1	Cylinder holder lower bracket	71.11101	1
2	Cylinder holder	71.11102K	1
3	Cylinder holder support	71.11104	1
4	Cylinder lower bracket	71.3003	1
5	Cylinder upper pin	71.3004	1
6	Cylinder lower pin	71.3005	1
7	Bush	71.3006	2
8	Cotter pin 3 DIN 11024	OT.07.01.020	2
9	U-clamp M8x38	OT.05.01.030	1
10	U-clamp M8x42	OT.05.01.040	1
11	Bolt M8x25 DIN933	OT.02.02.190	8
12	Bolt M10x1,25-30 DIN961	OT.02.08.340	2
13	Bolt M12x30 DIN933	OT.02.02.390	1
14	Washer Ø8/20 SFS3738	OT.04.03.030	20
15	Washer Ø10 DIN125	OT.04.01.040	2
16	Washer Ø12 DIN125	OT.04.01.050	1
17	Nyloc nut M8 DIN985	OT.03.02.040	12
18	Nyloc nut M12 DIN985	OT.03.02.060	1


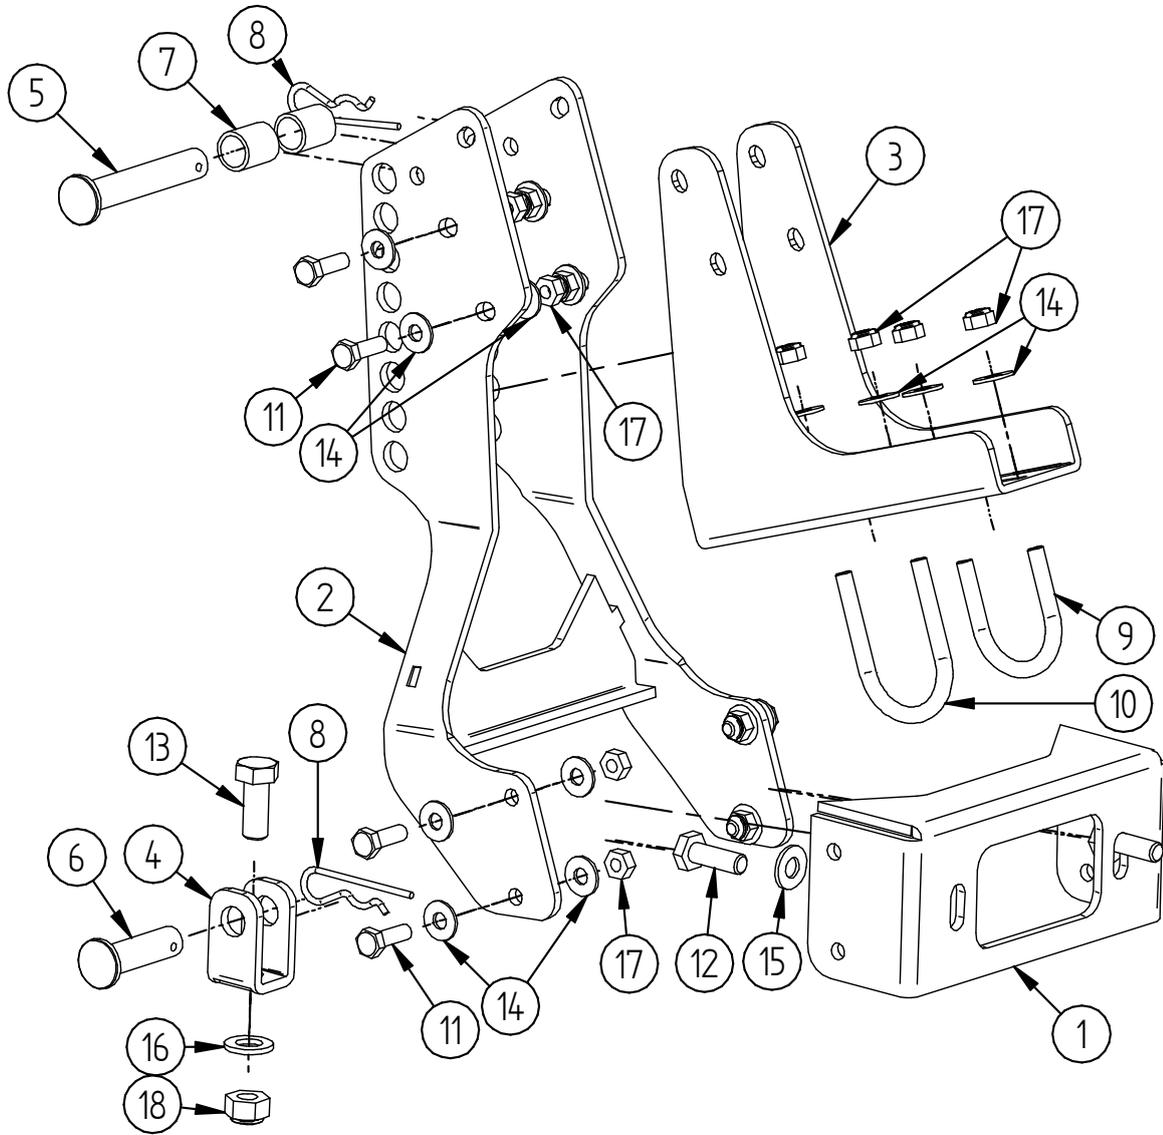


FITTING INSTRUCTIONS

Step 1


Install cylinder holder support (Pos.3). For fastening use U-bolts M8x38mm (Pos.9) and M8x42 (Pos.10), Ø8 mm washers (Pos.14) and M8 nyloc nuts (Pos.17).

For easier installation, tilt the front end forward little bit.
NB! DO NOT TIGHTEN NUTS COMPLETELY!

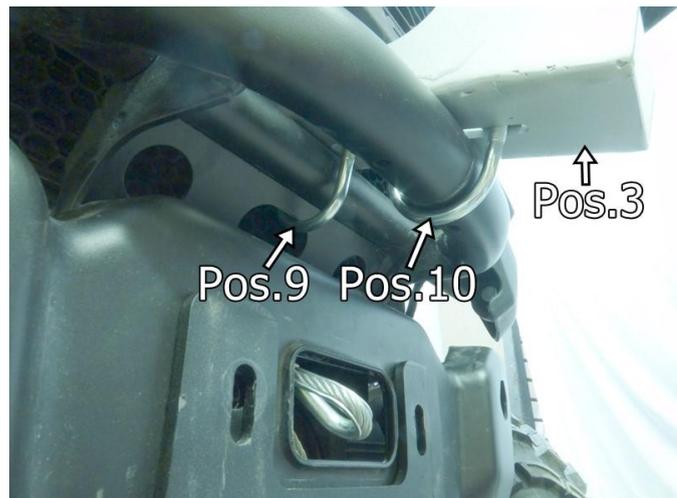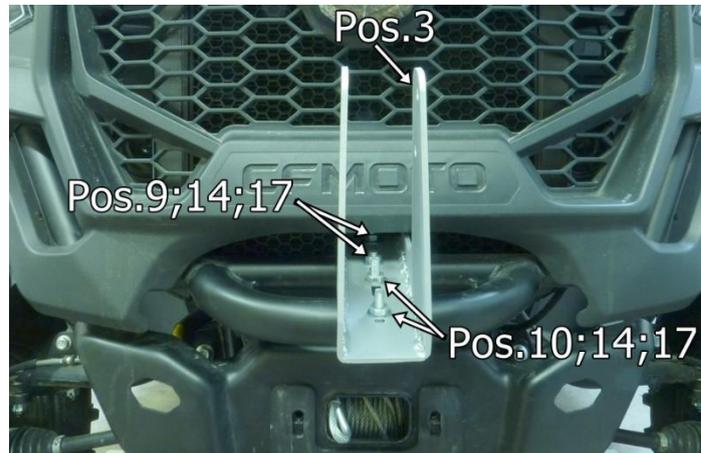



Step 2

Remove winch fairlead and install the cylinder holder lower bracket (Pos.2) under it. For fastening use M10x1,25-30 bolts (Pos.12) and Ø10 mm washers (Pos.15).

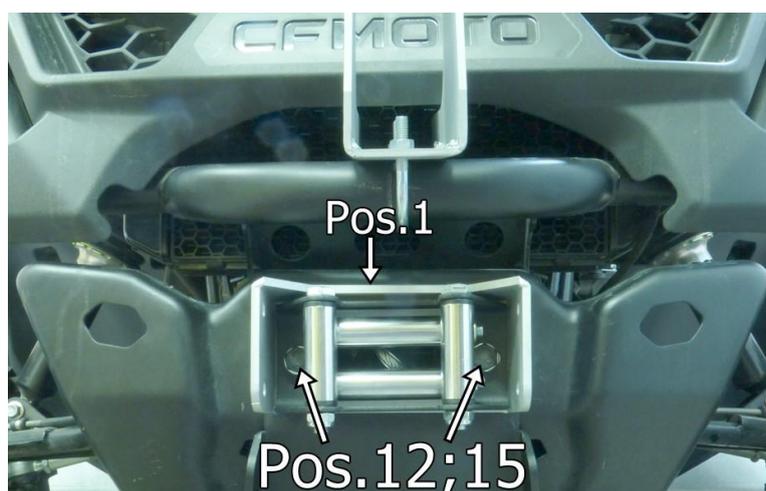


Step 3

Install cylinder holder (Pos.2). Use M8x25 bolts (Pos.11), Ø8mm washers (Pos.14) and M8 nyloc nuts (Pos.17).

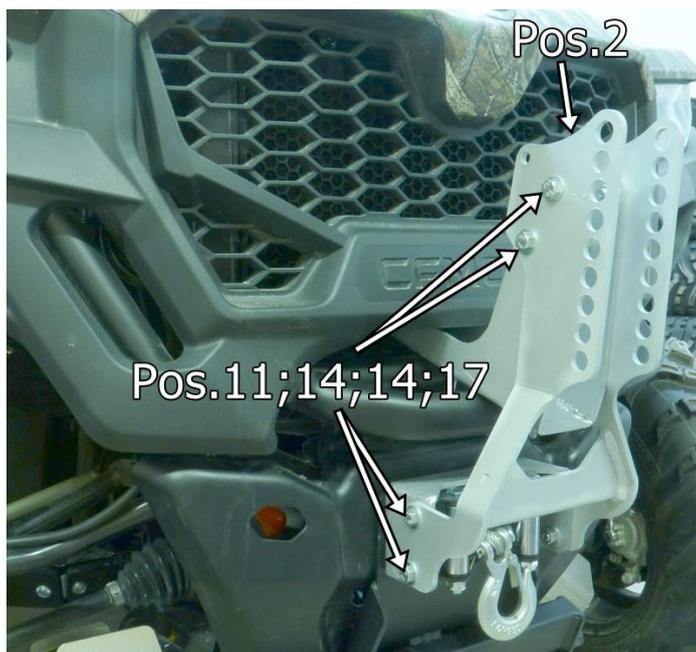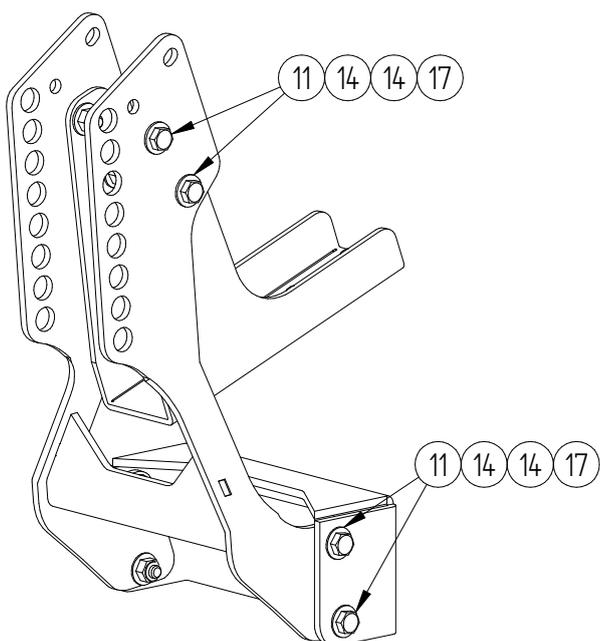

Step 4

Install cylinder lower bracket (Pos.4) to plow frame. For fastening use M12x30 bolt (Pos.13), Ø12 mm washer (Pos.16) and M12 nyloc nut (Pos.18).

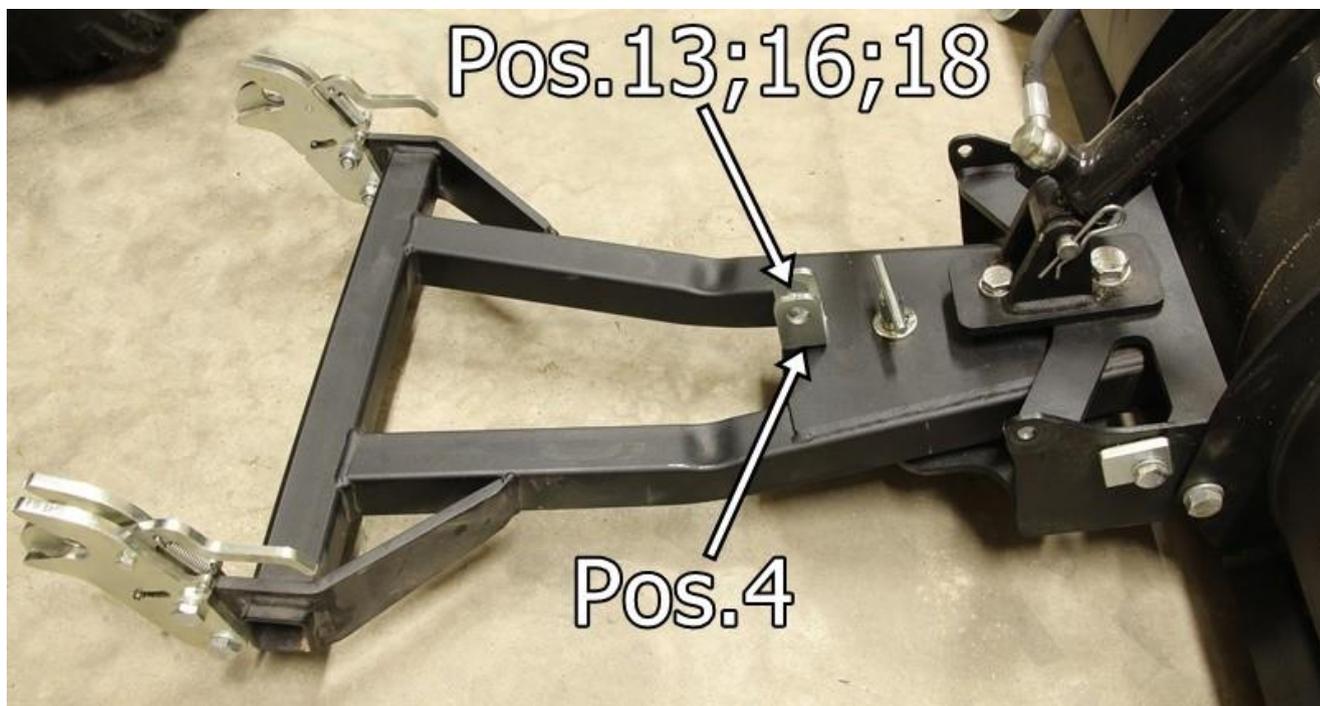

Step 5

Install cylinder. For fastening use cylinder upper pin (Pos.5), lower pin (Pos.6) and cotter pins (Pos.8). Installing with hydraulic cylinder add bushes (Pos.7) between the cylinder and cylinder holder. NB! Make sure that if the cylinder is in minimum position / the plow is in the raised position the plow and the plow frame does not touch the UTV, if necessary, change the cylinder upper position.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

