

IRON BALTIC

LIFT CYLINDER ADAPTER

CFMOTO


CForce 450 / 520 (2022-...)

Code 71.11300

Version 04012024



DOWNLOAD MULTILINGUAL
USER MANUAL

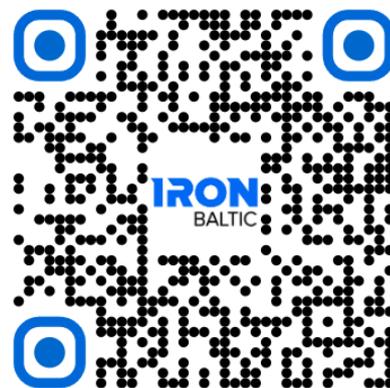

code.ironbaltic.com/u/11YNv0gD


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Rack bracket support	71.11301	1
2	Fairlead holder	71.3001	1
3	Rack bracket	71.3002	1
4	Lower cylinder bracket	71.3003	1
5	Pin	71.3004	1
6	Pin	71.3005	1
7	Bush	71.3006	2
8	Cylinder holder	71.3010	1
9	Cotter pin 3 DIN11024	OT.07.01.020	2
10	Bolt M8x20 DIN933	OT.02.02.180	3
11	Bolt M8x25 DIN933	OT.02.02.190	8
12	Bolt M10x1,25-45 DIN961	OT.02.08.349	2
13	Bolt M12x30 DIN933	OT.02.02.390	1
14	Washer ø8/20 SFS3738	OT.04.03.030	22
15	Washer ø10 DIN125	OT.04.01.040	2
16	Washer ø12 DIN125	OT.04.01.050	1
17	Nylock nuts M8 DIN985	OT.03.02.040	11
18	Nylock nuts M12 DIN985	OT.03.02.060	1

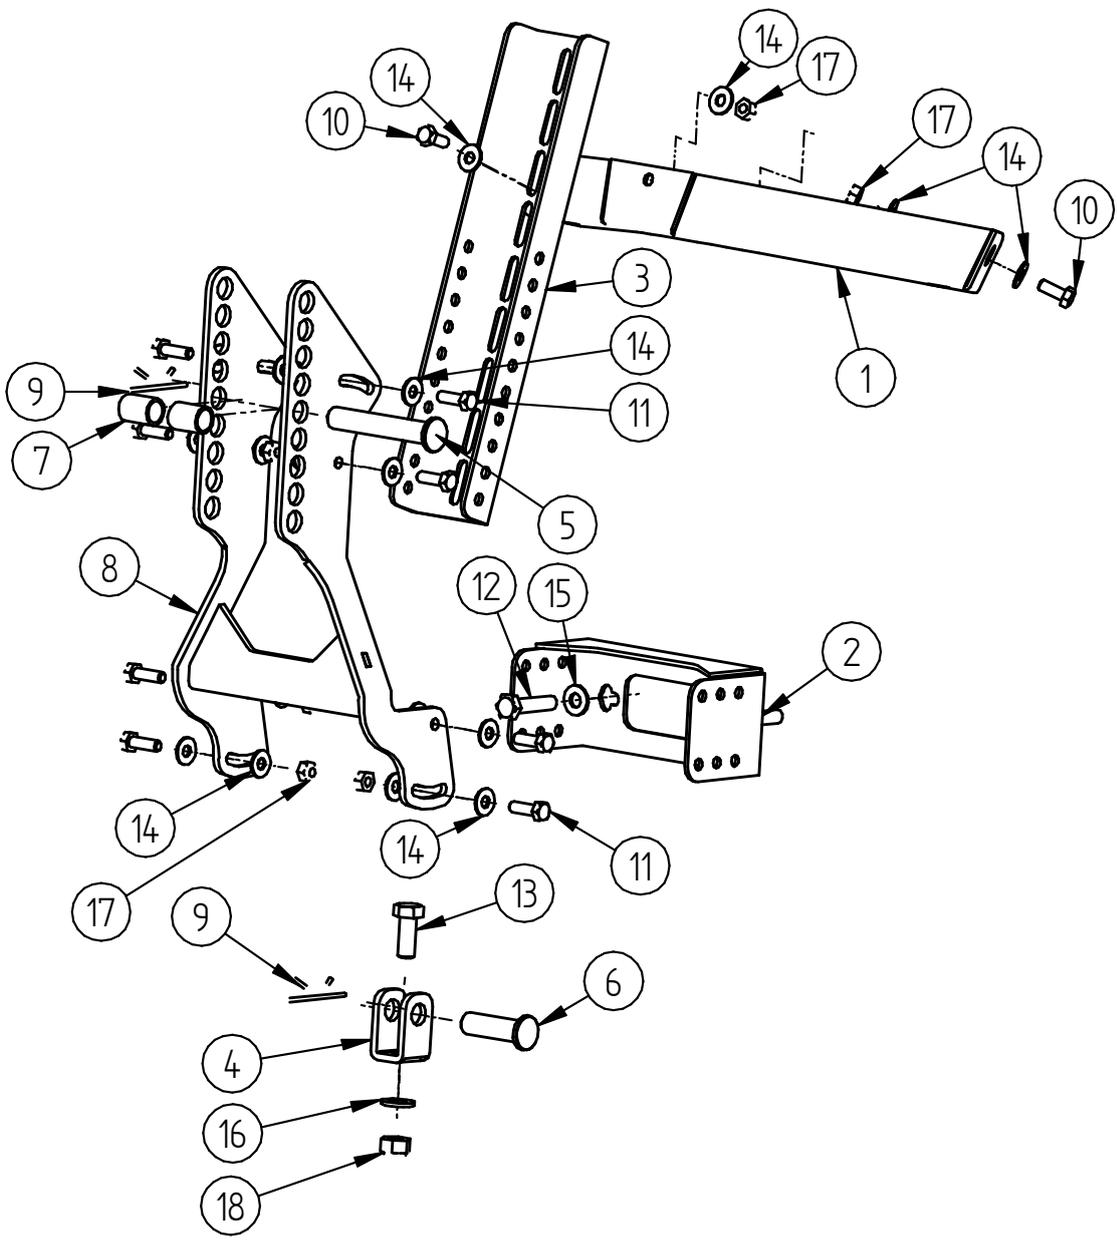

FITTING INSTRUCTIONS

Step 1

Remove rack plastics, install adapter and reinstall rack plastics.
Lift the luggage rack a little bit and place the adapter between rack and ATV frame.
Place all the bolts in place and after that tighten the bolts.

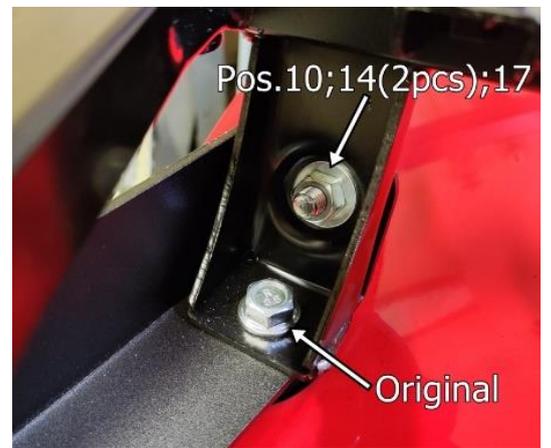


Step 2

Remove winch hook and fairlead. Install bracket and fairlead.




Step 3

Install cylinder holder and cylinder holder support.

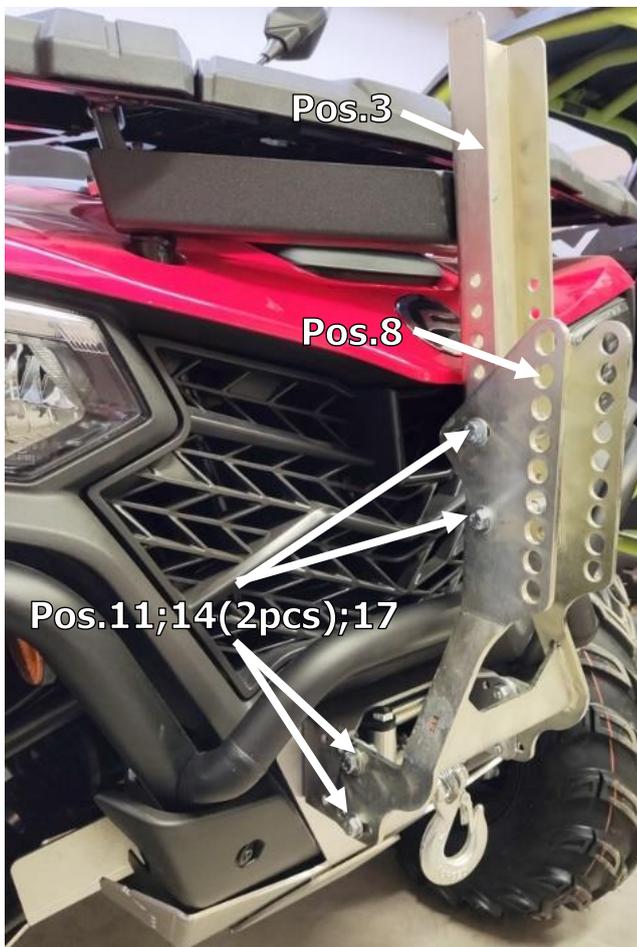


Step 4

Install cylinder holder to plow pushtubes.

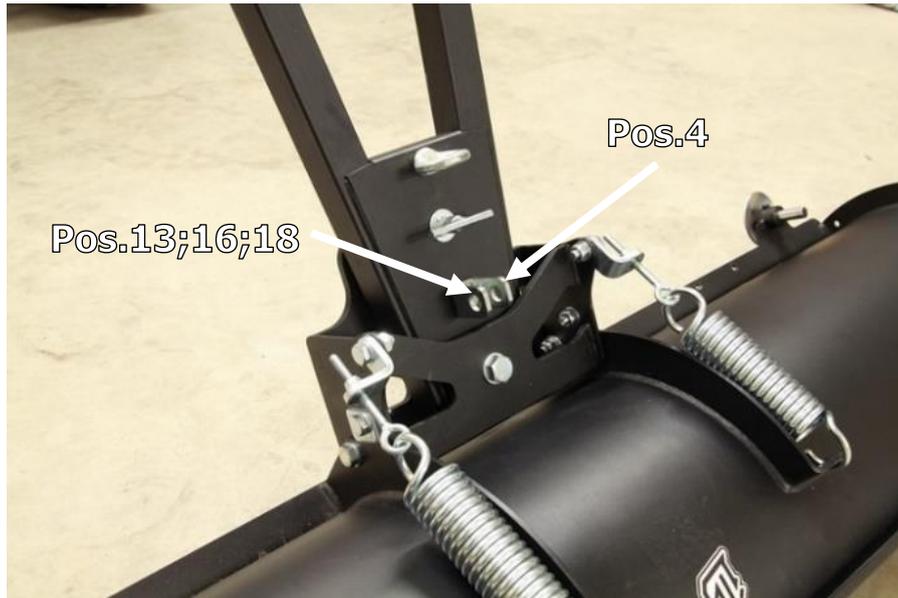

Step 5

Install cylinder. Find appropriate height for cylinder, if cylinder is in minimal position then plow frame should not touch ATV.
Pos.7 distance bushes are not needed with electrohydraulic cylinder.

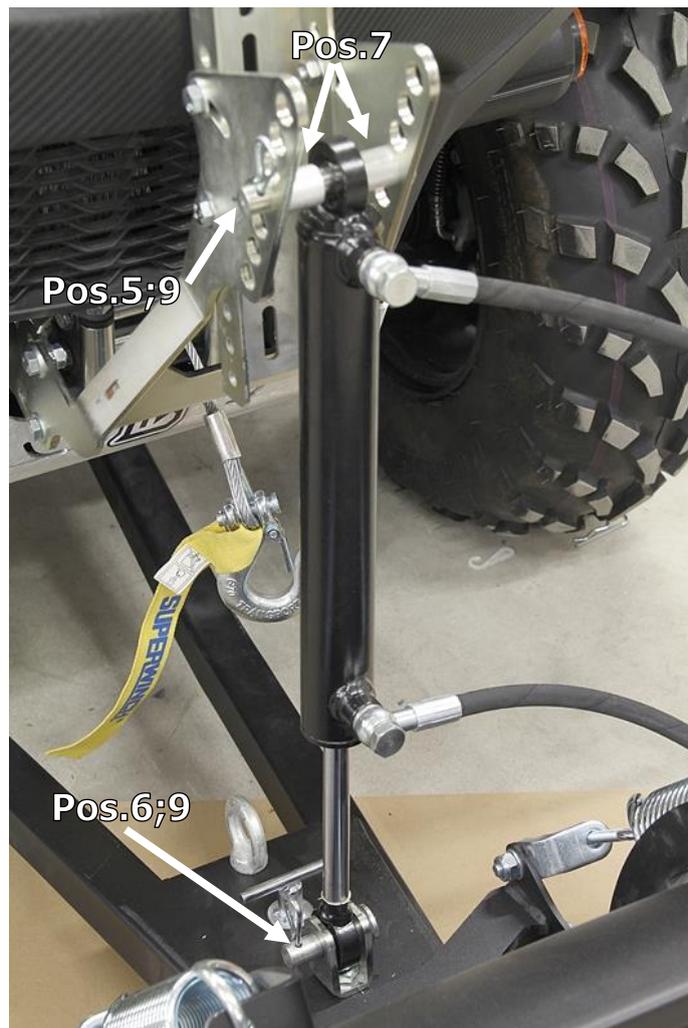

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

