

IRON BALTIC

LIFT CYLINDER MOUNT

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/wU7wQNLG

Code 71.3000

Version 03012024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



SPECIFICATION

Pos.	Description	Code	Amount
1	Cylinder holder	71.3010	1
2	Bracket	71.3001	1
3	Rack bracket	71.3002	1
4	Lower cylinder bracket	71.3003	1
5	Pin	71.3004	1
6	Pin	71.3005	1
7	Bush	71.3006	2
8	Bolt M8x25 DIN 933	OT.02.02.190	8
9	Washer 8/20 SFS 3738	OT.04.03.030	18
10	Nut M8 DIN 985	OT.03.02.040	10
11	Bolt M12x30 DIN 933	OT.02.02.390	1
12	Washer 12/24 DIN 125	OT.04.01.050	1
13	Nut M12 DIN 985	OT.03.02.060	1
14	Cotter pin 3	OT.07.01.020	2
15	U-bolt bracket 32	OT.05.04.020	1
15-1	U-bolt bracket 38	OT.05.04.030	1
15-2	U-bolt bracket 48	OT.05.04.060	1
16	U-bolt M8x32	OT.05.01.020	1
16-1	U-bolt M8x38	OT.05.01.030	1
16-2	U-bolt M8x48	OT.05.01.043	1

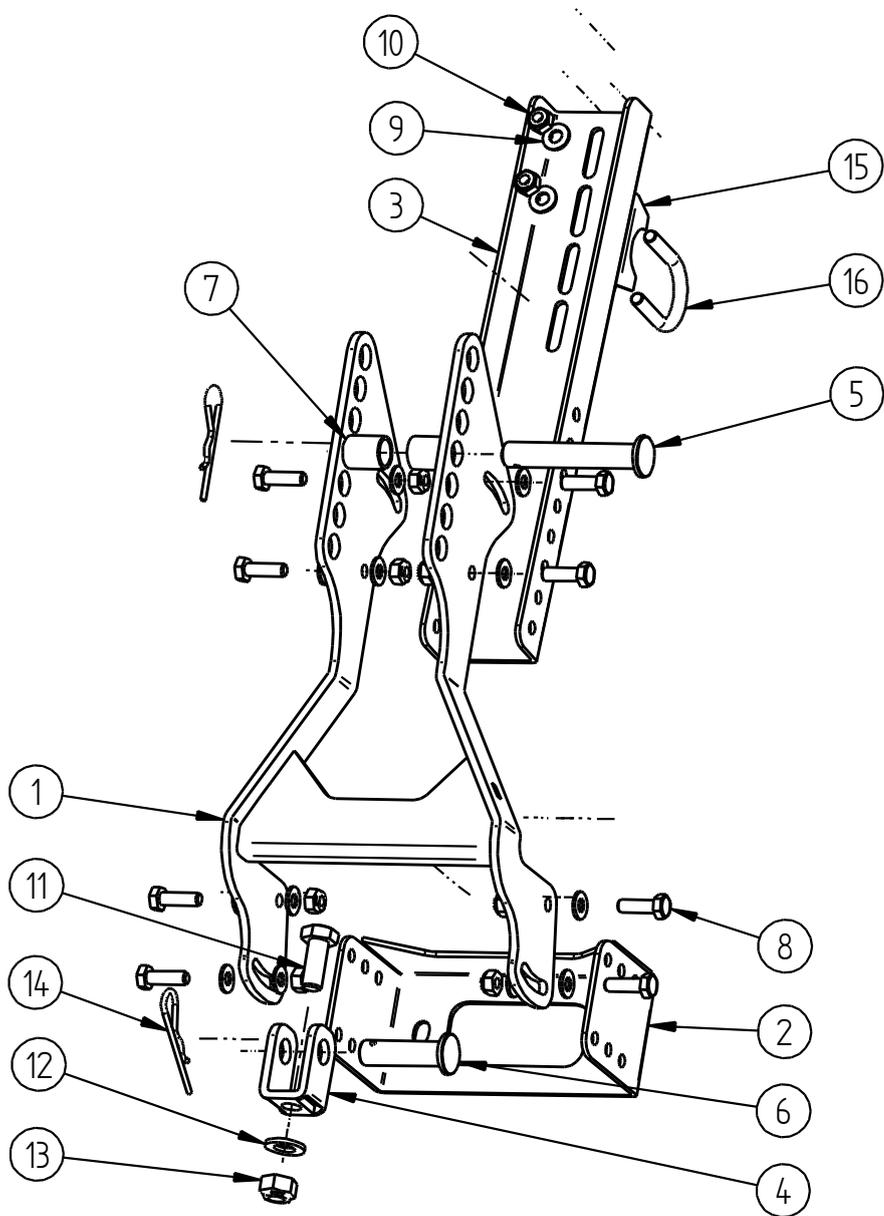


FITTING INSTRUCTIONS


Step 1 Remove winch hook and fairlead. Install bracket and fairlead.

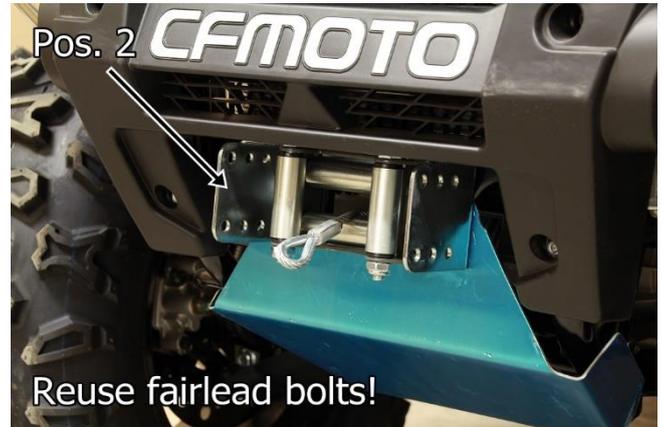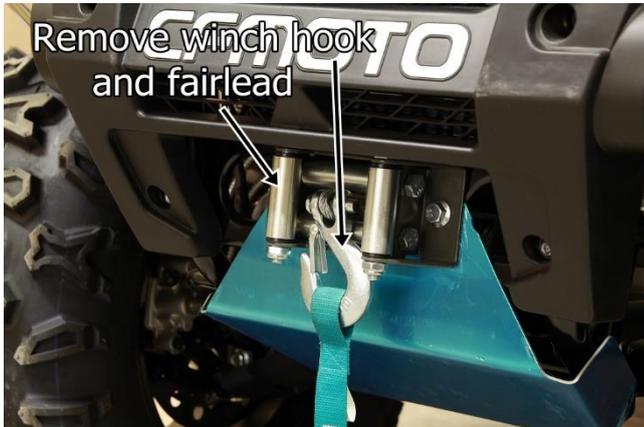

Step 2 Install cylinder holder.

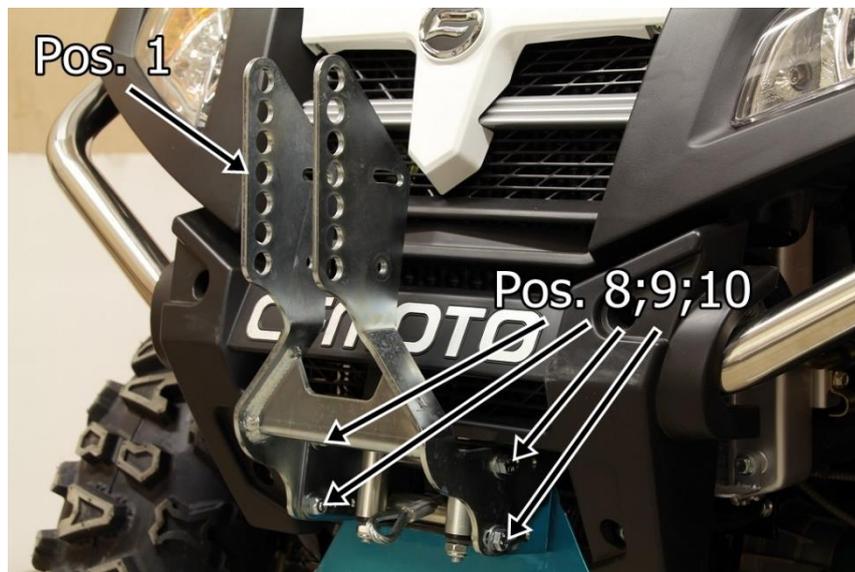


Step 3 Install rack bracket.

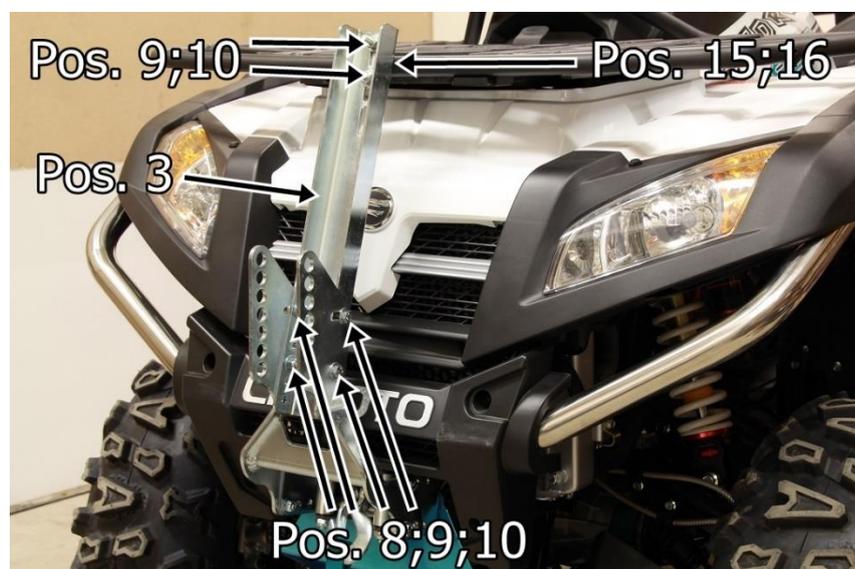


Step 4

Install bracket.

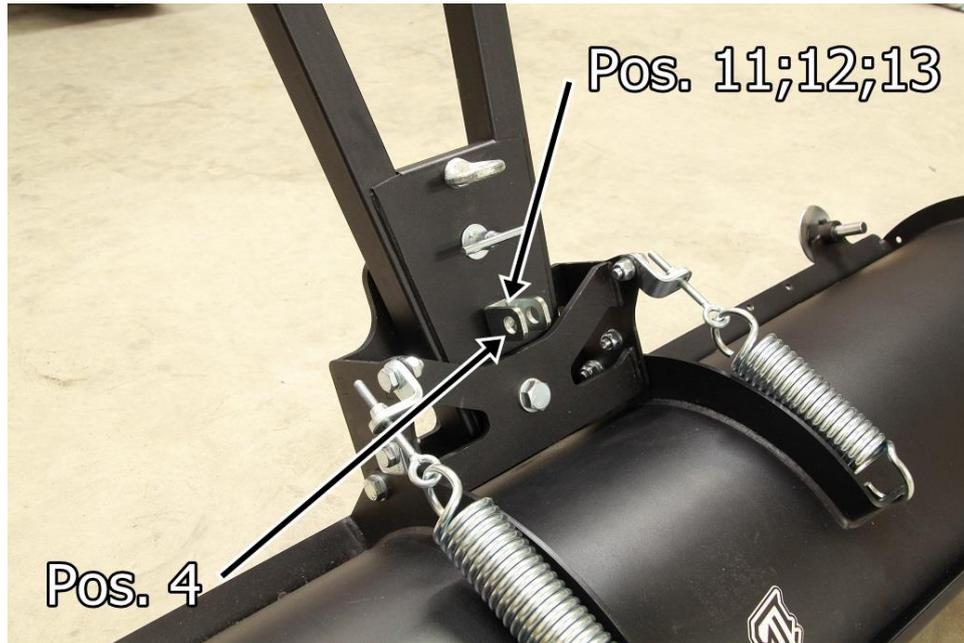

Step 5

Install cylinder. Find appropriate height for cylinder, if cylinder is in minimal position then plow frame should not touch ATV.

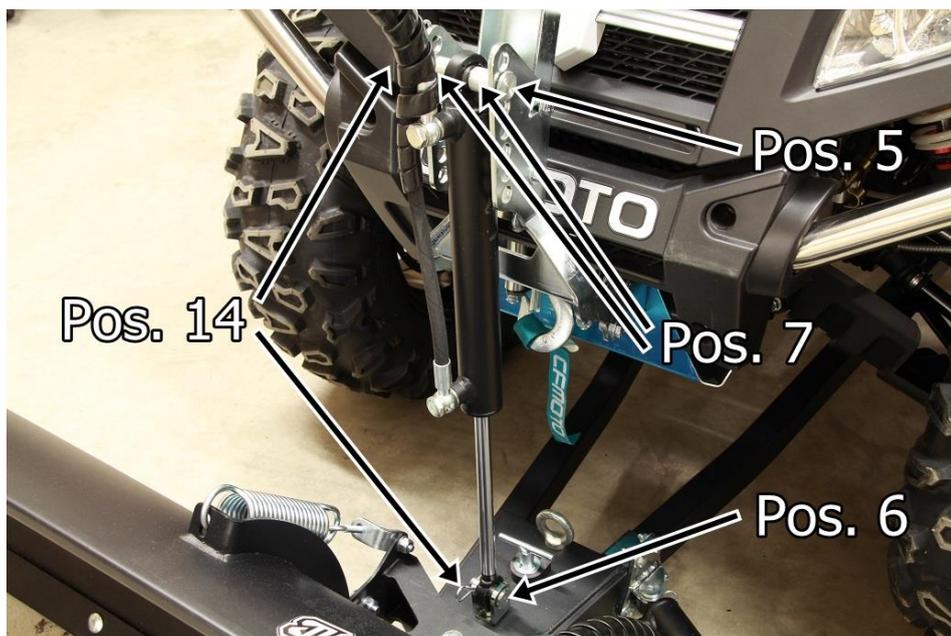

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

