

IRON BALTIC

LIFT CYLINDER MOUNT

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/UOqlvnR8

POLARIS GENERAL

Code 71.3500

Version 03012024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Bracket	71.3001	1
2	Rack bracket	71.3002	1
3	Lower cylinder bracket	71.3003	1
4	Pin	71.3004	1
5	Pin	71.3005	1
6	Bush	71.3006	2
7	Cylinder holder	71.3010	1
8	Winch fairlead	OT.13.02.010	1
9	Cotter pin 3	OT.07.01.020	2
10	Pipe clamp M8x48	OT.05.01.043	1
11	Pipe clamp bracket 48	OT.05.04.060	1
12	Bolt M8x25 DIN 933	OT.02.02.190	10
13	Bolt M12x30 DIN 933	OT.02.02.390	1
14	Washer 8/20 SFS 3738	OT.04.03.030	22
15	Washer 12/24 DIN 125	OT.04.01.050	1
16	Nut M8 DIN 985	OT.03.02.040	12
17	Nut M12 DIN 985	OT.03.02.060	1

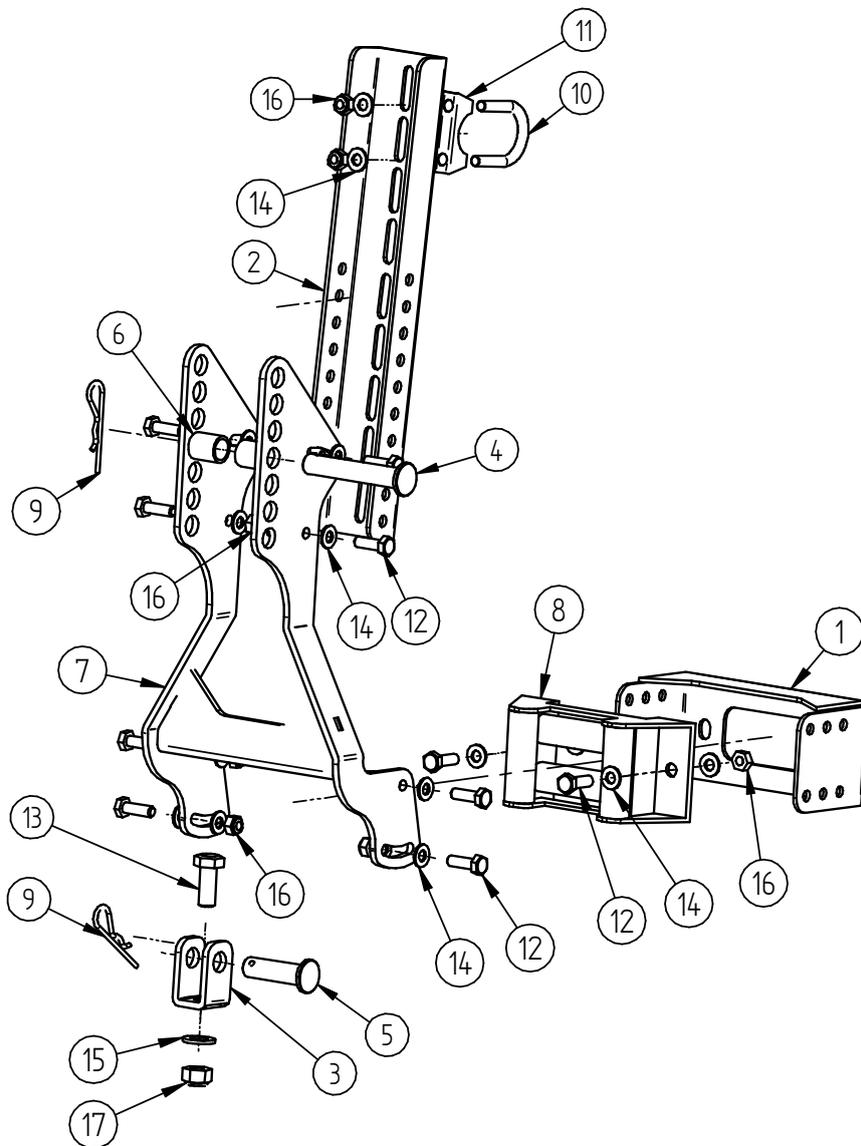


FITTING INSTRUCTIONS


Step 1 Remove winch hook and original fairlead. Install bracket and new fairlead.

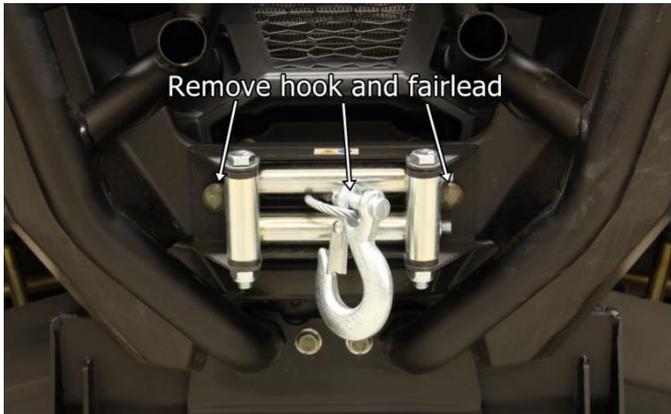

Step 2 Install cylinder holder.

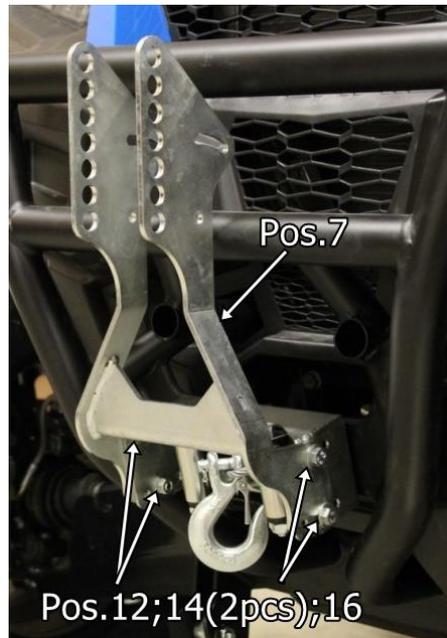

Step 3 Install rack bracket.

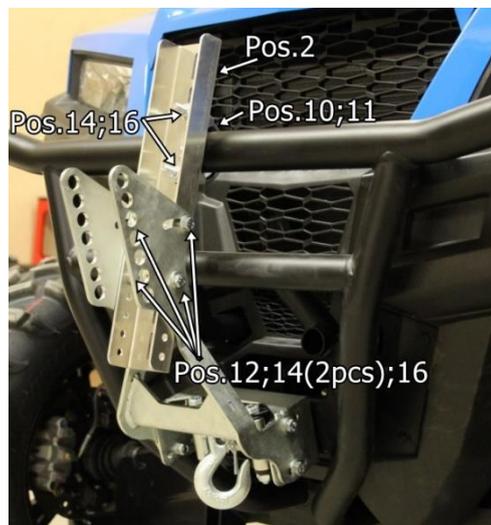

Step 4

Install bracket to plow frame.



Step 5

Install cylinder. Find appropriate height for cylinder, if cylinder is in minimal position then plow frame should not touch ATV.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

