

IRON BALTIC

ADJUSTABLE TOWBEAM

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/wYVCqzmT

Code 71.5000

Version 03012024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Bigger support	71.5001K	1
2	Longer towbeam	71.5004K	1
3	Shorter towbeam	71.5005K	1
4	Pin	71.3004	2
5	Distance bush shorter	71.5008	2
6	Limiter	71.5010	1
7	Distance bush longer	71.5011	2
8	Tow coupling 50mm	OT.10.02.030	1
9	Cotter pin 3mm	OT.07.01.020	2
10	Bolt M10x70 DIN931	OT.02.01.046	2
11	Bolt M12x90 DIN931	OT.02.01.120	2
12	Bolt M16x100 DIN931	OT.02.01.150	1
13	Washer 10/20 DIN125	OT.04.01.040	4
14	Washer 12/24 DIN125	OT.04.01.050	4
15	Washer 16/30 DIN125	OT.04.01.060	2
16	Nut M10 Nyloc DIN985	OT.03.02.050	2
17	Nut M12 Nyloc DIN985	OT.03.02.060	2
18	Nut M16 Nyloc DIN985	OT.03.02.070	1

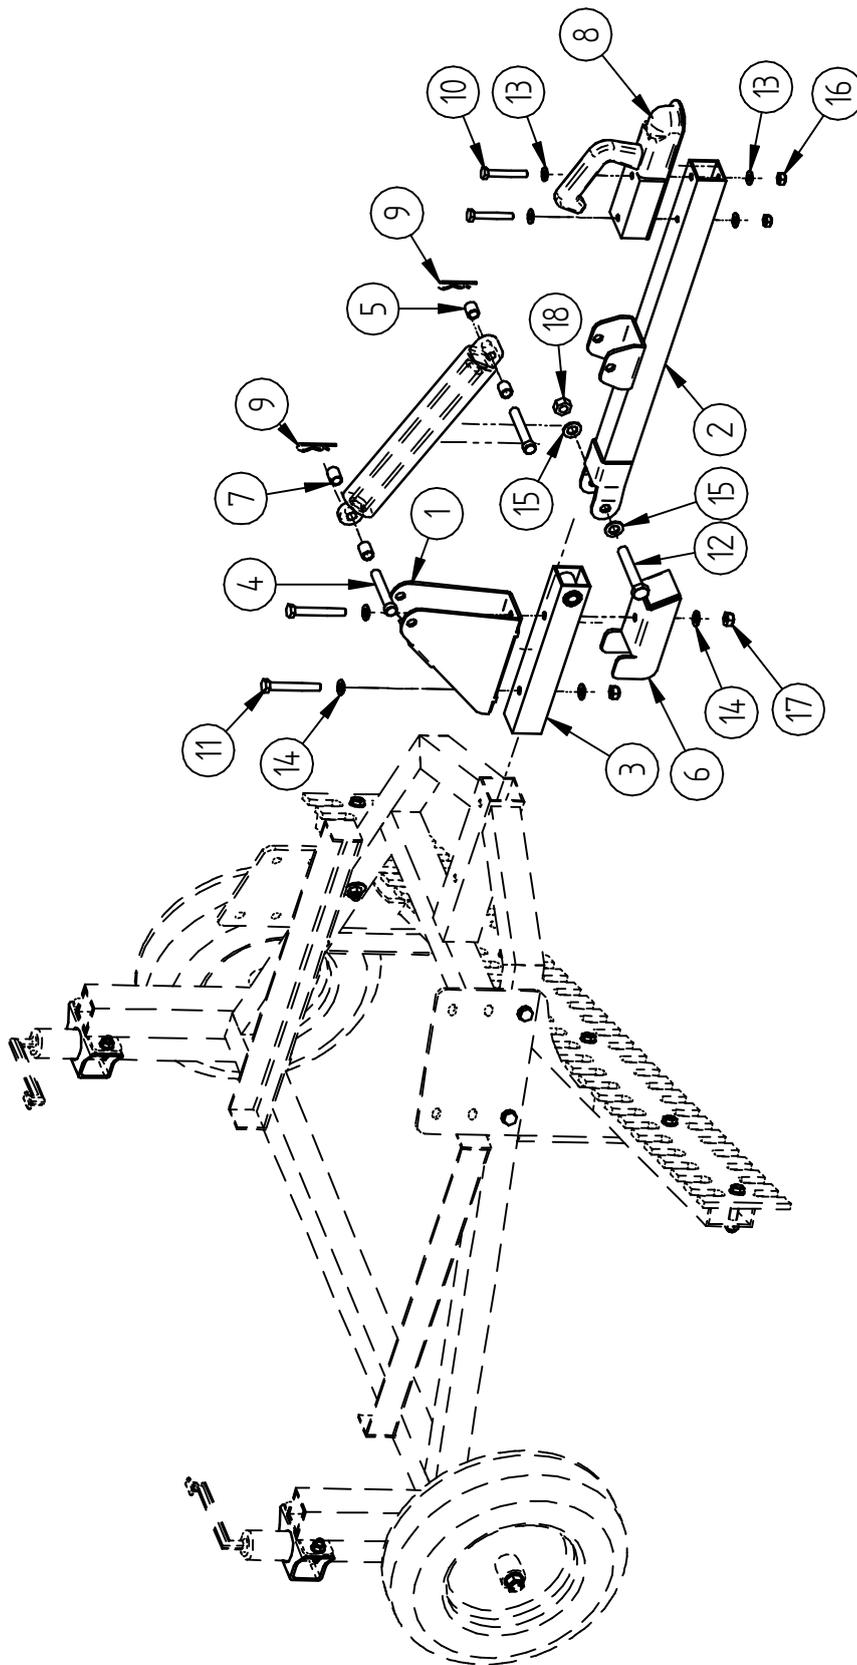


FITTING INSTRUCTIONS

Step 1 Install bigger support and shorter towbeam to the roadgrader frame.



Step 2 Install longer towbeam.

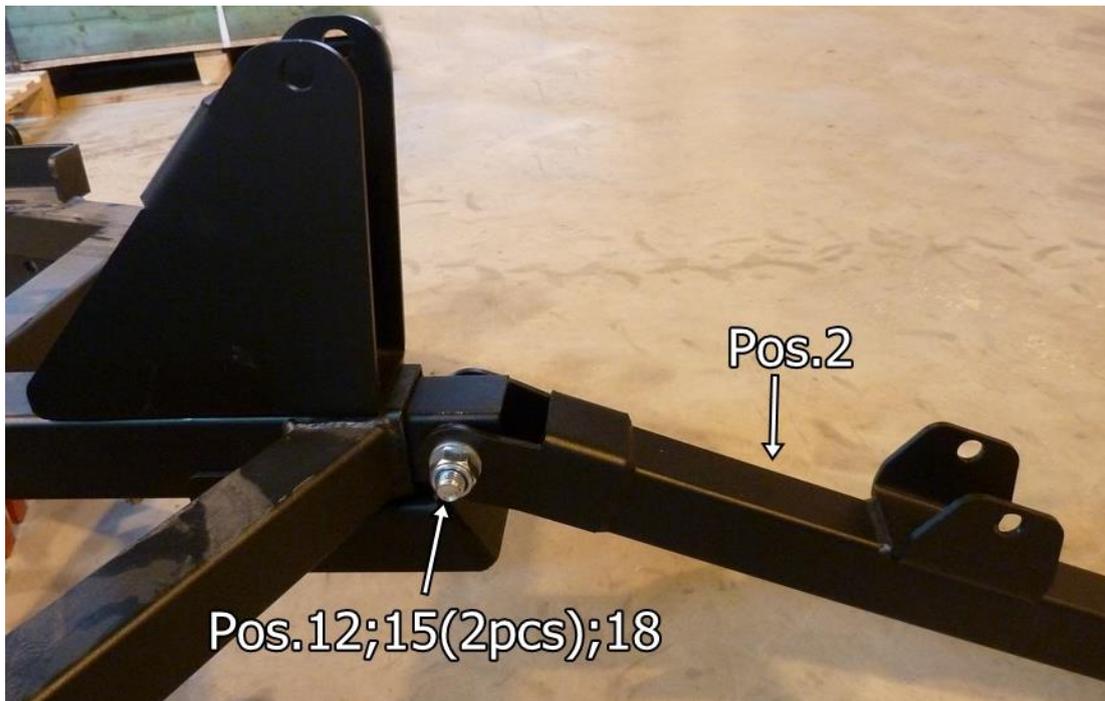


Step 3

Install tow coupling.




Step 4A

Install cylinder 71.5100. Connect the hoses to the hydraulic powerpack.
NB! Before disconnecting the hoses, lower the cylinder so that the towbeam is straight (in lower position), so that there would be no pressure in the hoses.

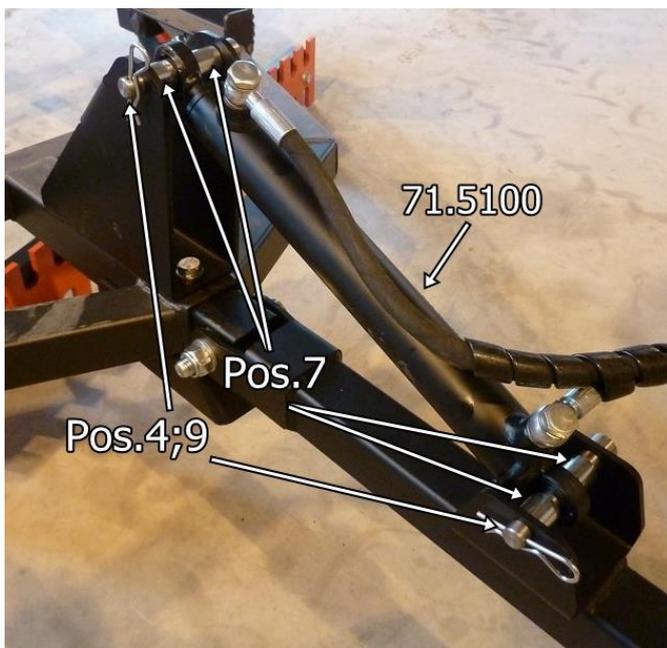

Step 4B

Install cylinder 71.1000

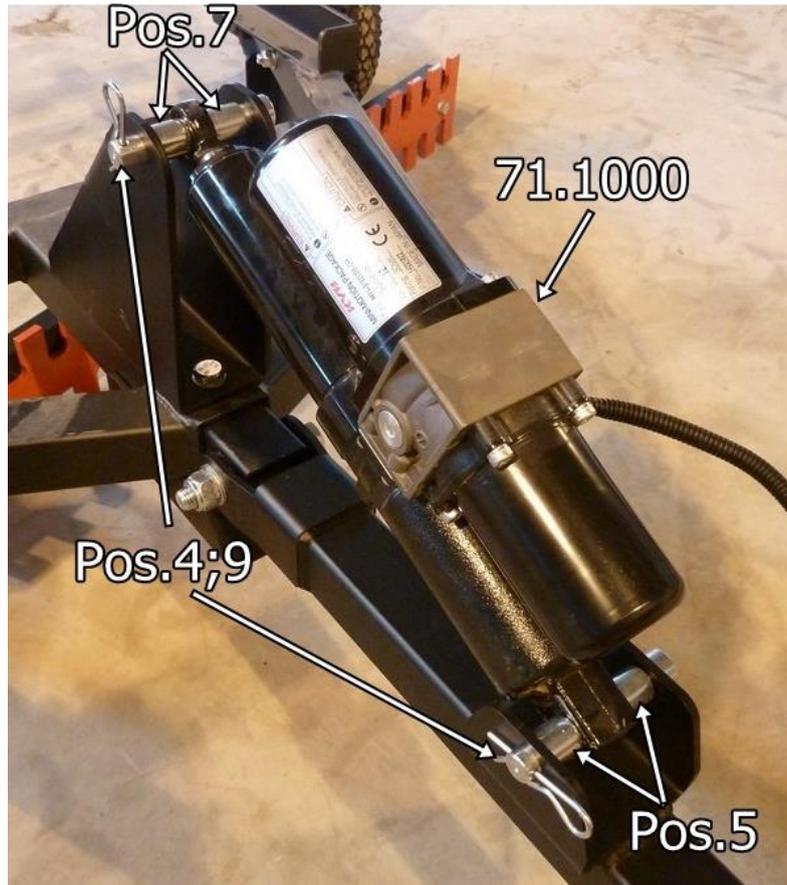

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

