

# IRON BALTIC

## LIFT CYLINDER MOUNT

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/poFDarOa](https://code.ironbaltic.com/u/poFDarOa)

## POLARIS SPORTSMAN

Code 71.6000

Version 29012025




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION


Pos.	Description	Code	Amount
1	Holder adapter	71.6001S	1
2	Bracket	71.3001	1
3	Rack bracket	71.3002	1
4	Lower cylinder bracket	71.3003	1
5	Pin	71.3004	1
6	Pin	71.3005	1
7	Bush	71.3006	2
8	Cylinder holder	71.3010	1
9	Cotter pin 3	OT.07.01.020	2
10	Pipe clamp bracket 38	OT.05.04.030	1
11	Pipe clamp M8x38	OT.05.01.030	1
12	Bolt M8x20 DIN 933	OT.02.02.180	2
13	Bolt M8x25 DIN 933	OT.02.02.190	8
14	Bolt M12x30 DIN 933	OT.02.02.390	1
15	Washer 8/20 SFS3738	OT.04.03.030	18
16	Washer large 8/24 DIN 9021	OT.04.02.040	2
17	Washer 12/24 DIN 125	OT.04.01.050	1
18	Nut M8 DIN 985	OT.03.02.040	10
19	Nut M12 DIN 985	OT.03.02.060	1

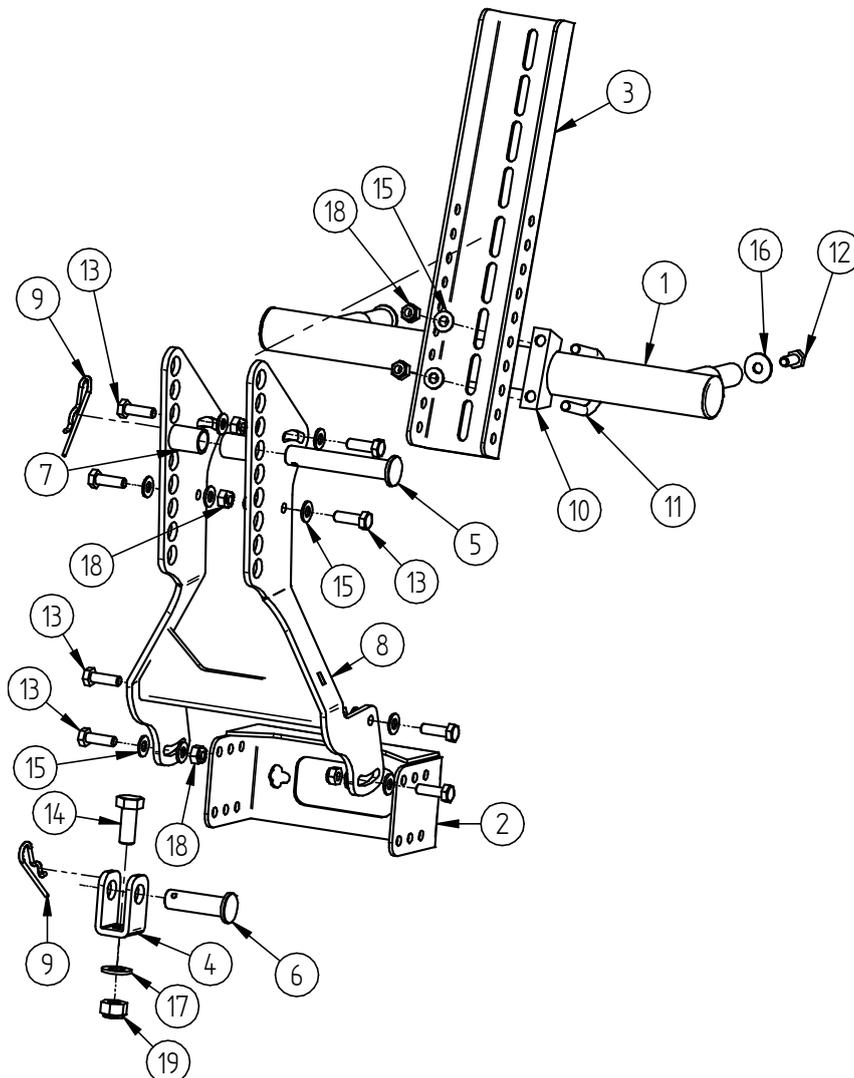

# FITTING INSTRUCTIONS

## Step 1

Install bracket under the fairlead. Use original bolts/nuts.

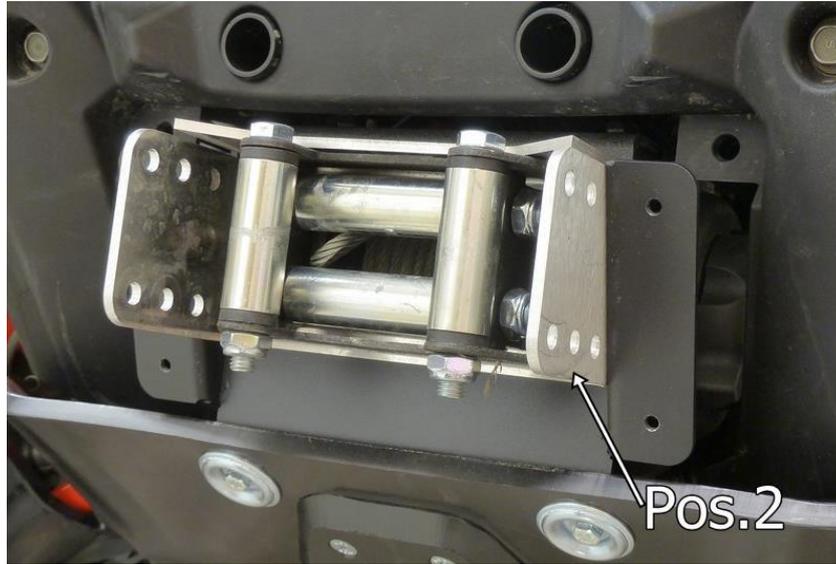

## Step 2

Install holder adapter pipe into original bumper holes.




**Step 3**

Install cylinder holder.




**Step 4**

Install rack bracket.

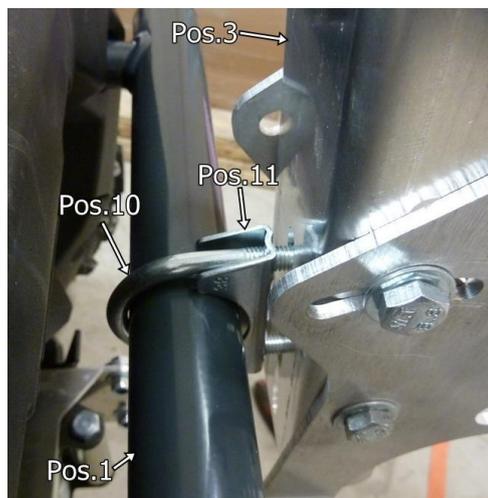


## Step 5

Install cylinder lower bracket.

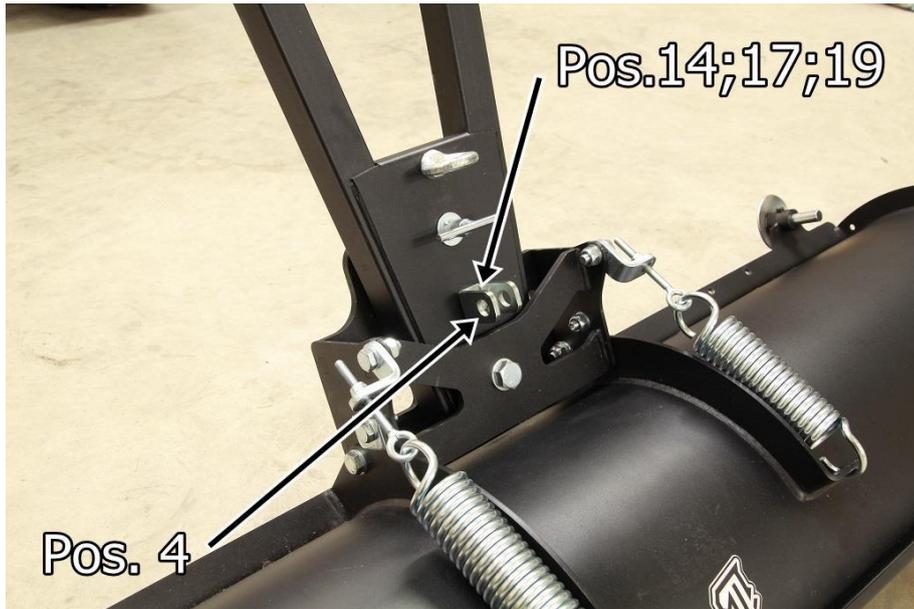

## Step 6

Find appropriate height for cylinder in minimal position, so that plow frame would'nt touch ATV.

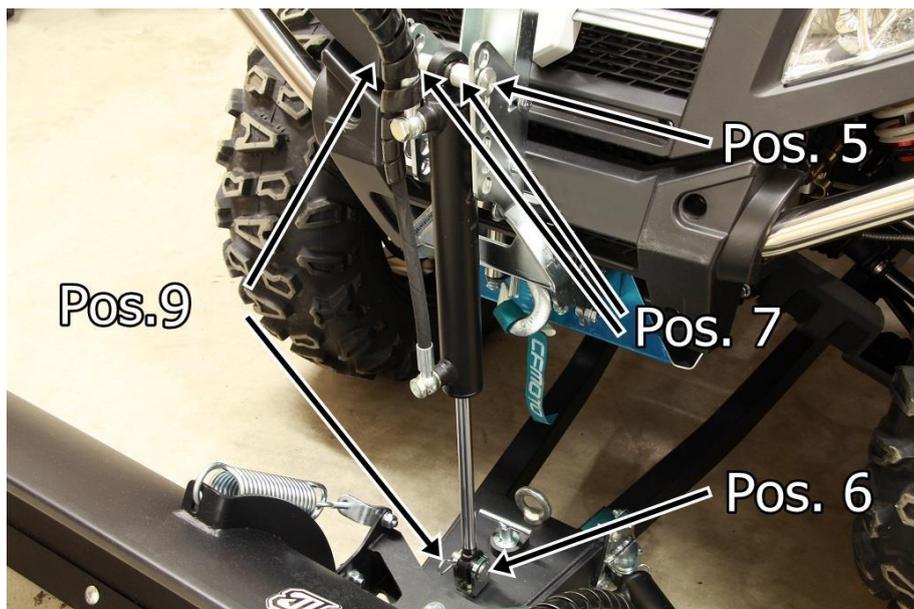





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

