



ROLLER

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/qReDUMA9

Receiver mount system

Code 84.15000

Version 08012024

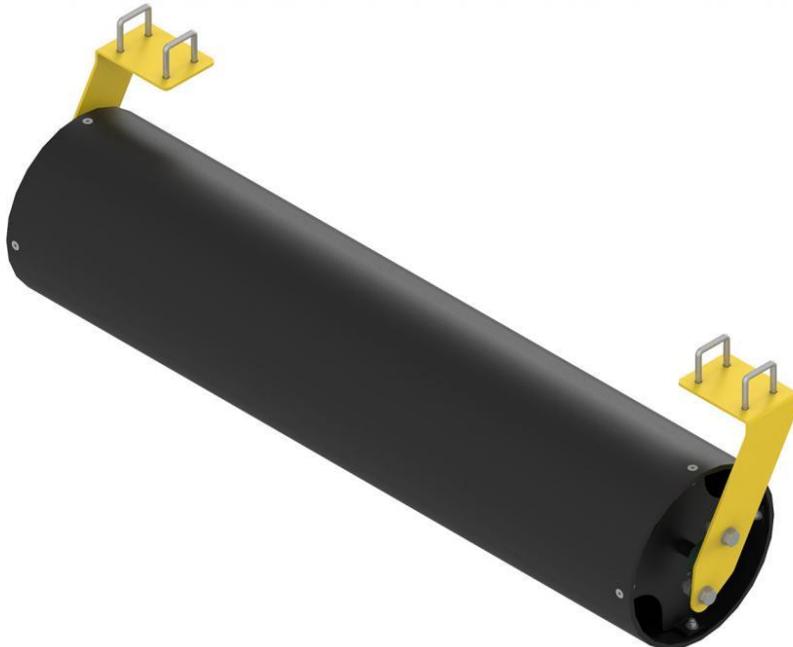


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION



Pos.	Description	Code	Amount
1	Roller	84.15001S	1
2	Right side plate	84.15005	1
3	Left side plate	84.15006	1
4	Bearing UCFL205	OT.34.00.002	2
5	U-bolt 50 mm	84.2010	4
6	Bolt M16x45 DIN933	OT.02.02.642	4
7	Washer M10 DIN125	OT.04.01.040	8
8	Washer M16 DIN125	OT.04.01.060	8
9	Nyloc nut M10 DIN985	OT.03.02.050	8
10	Nyloc nut M16 DIN985	OT.03.02.070	4

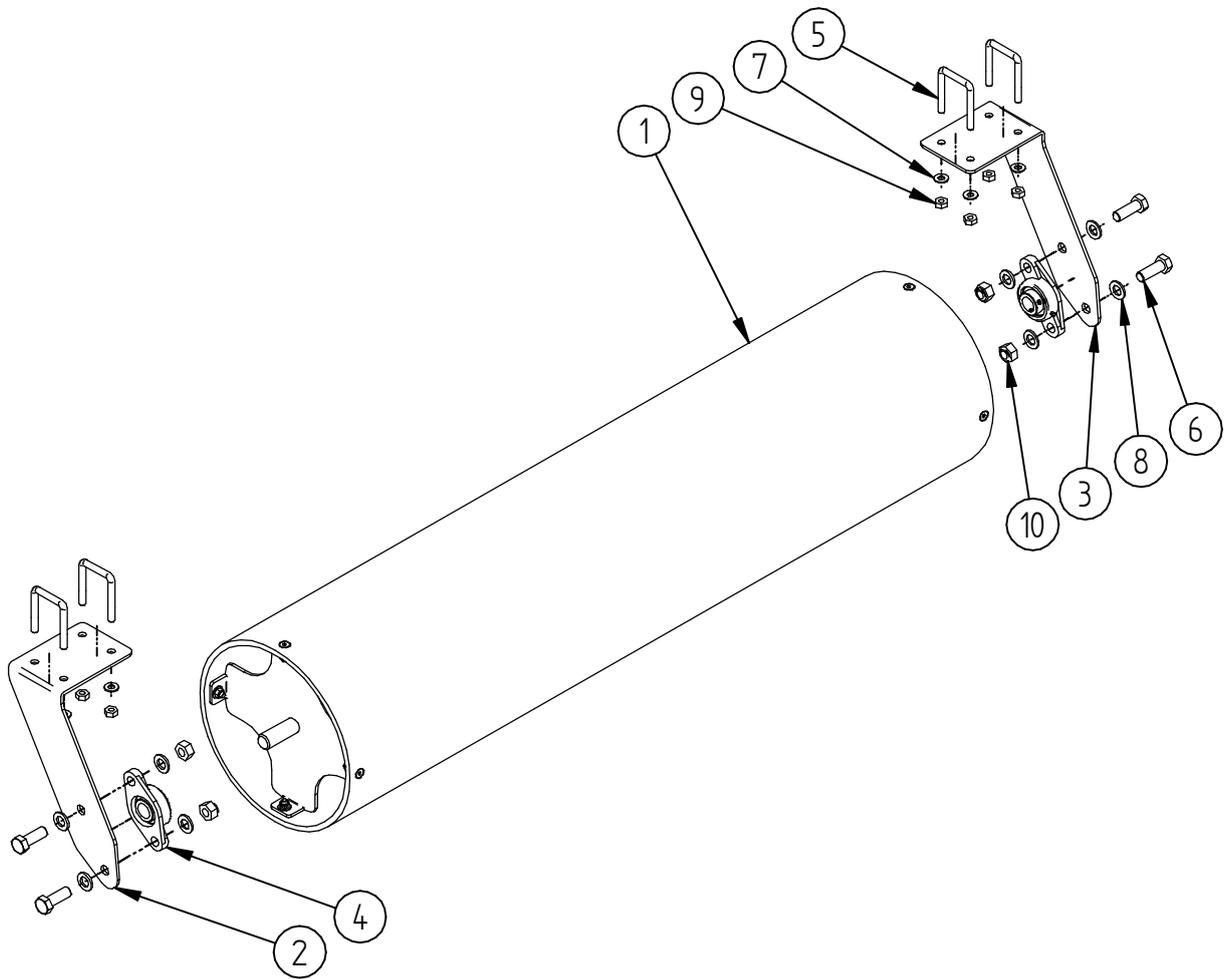

FITTING INSTRUCTIONS



Step 1

Install bearings (Pos.4) to the side plates (Pos.2, Pos.3). For fastening use M16x45 bolts (Pos.6), Ø16 washers (Pos.8) and M16 nyloc nuts (Pos.10).

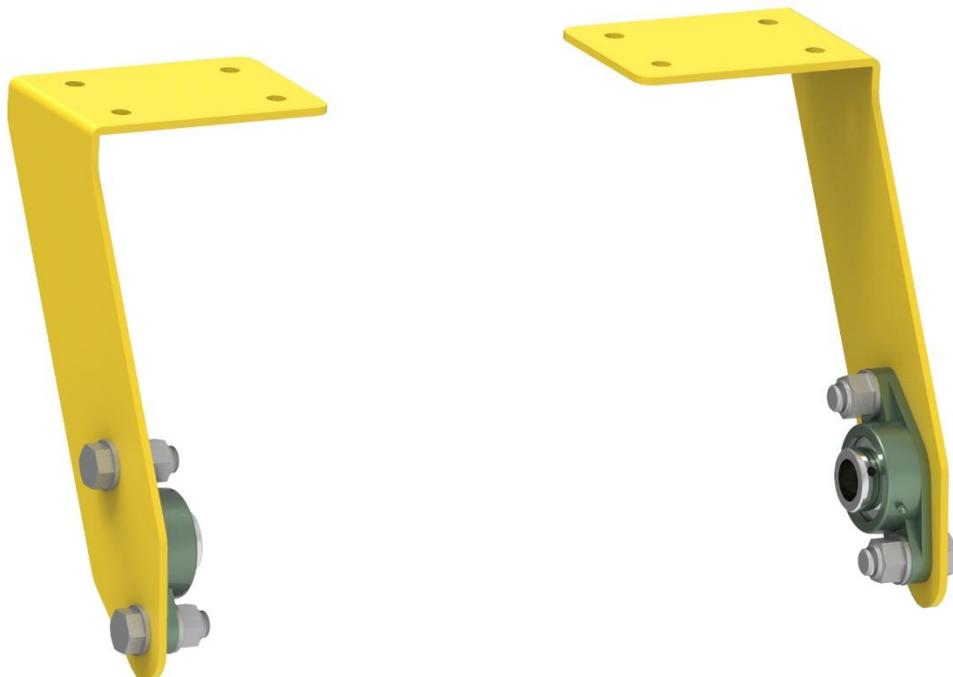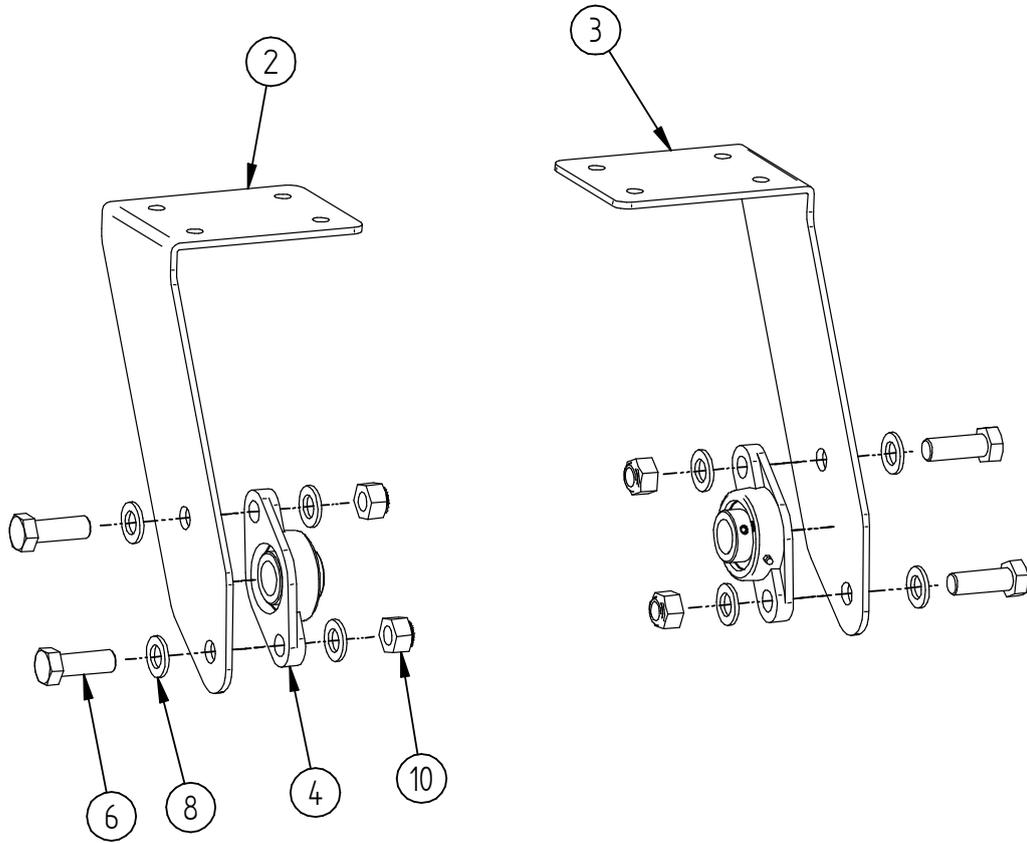


Step 2

Install side plates with bearings to the roller (Pos.1).
Use bearing set screws to hold bearing on shaft.

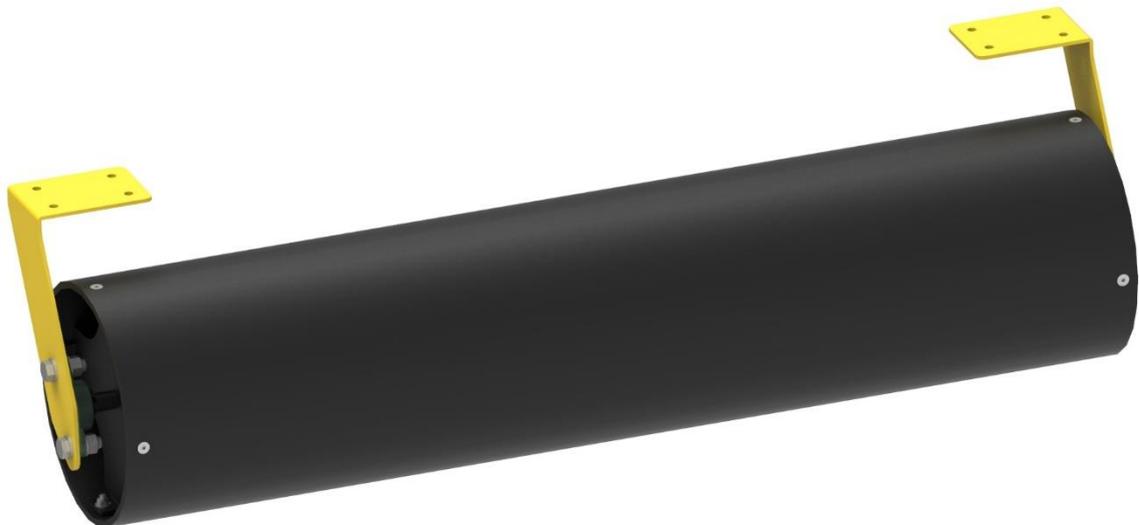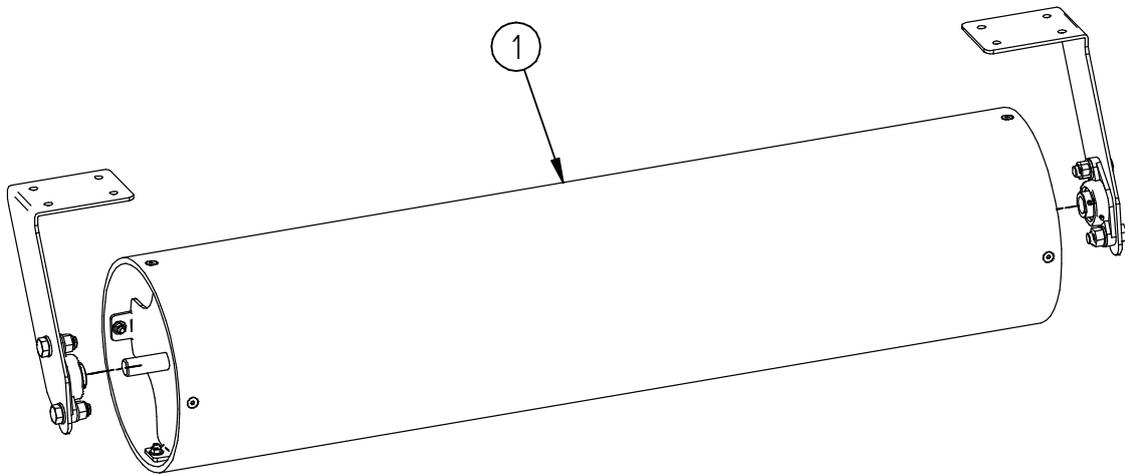

Step 3

Install roller to the receiver mount system. For fastening use U-bolts (Pos.5), Ø10 washers (Pos.7) and M10 nyloc nuts (Pos.9).

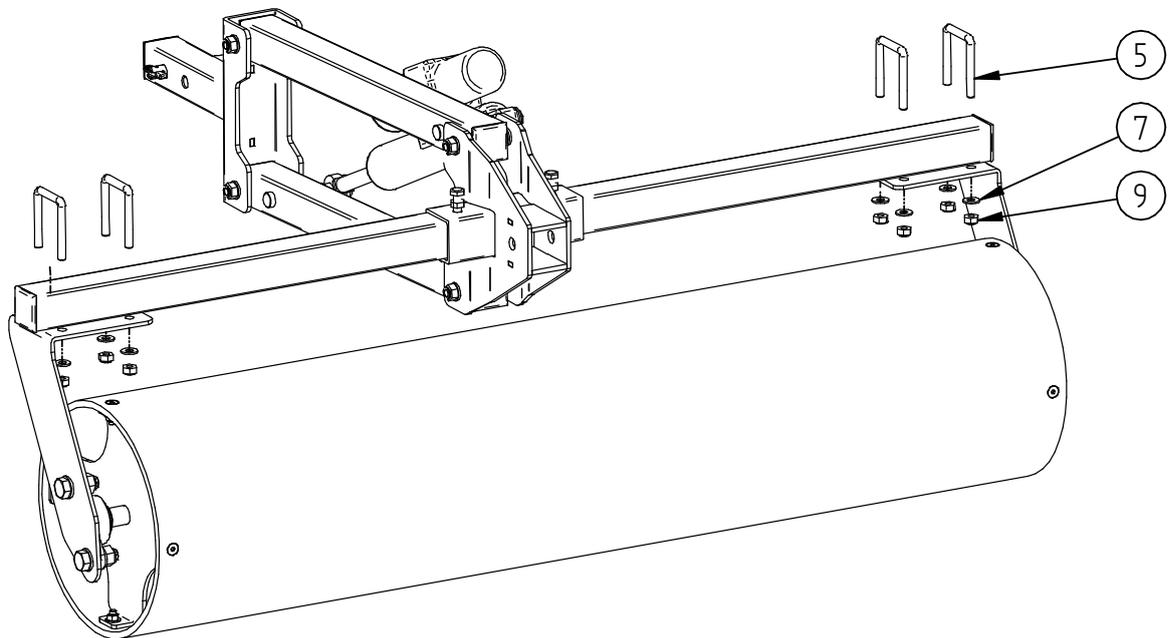

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

