

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/vIC8prTZ

POTATO HARVESTER G2

For receiver mount system

Code 84.24000

Version 10022025




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Harvester rear part	84.24001K	1
2	Mouldboard	84.24005K	1
3	Front blade	84.24008	1
4	Mounting tube	84.24009	1
5	Mounting adapter (side)	84.22001K	1
6	U-bolt 50 mm	84.2010	2
7	Spring loaded pin 10x60	OT.10.11.011	2
8	Bolt M10x20 DIN603	OT.02.05.104	6
9	Bolt M10x60 DIN933	OT.02.01.043	2
10	Washer Ø10 DIN125	OT.04.01.040	14
11	Nyloc nut M10 DIN985	OT.03.02.050	12

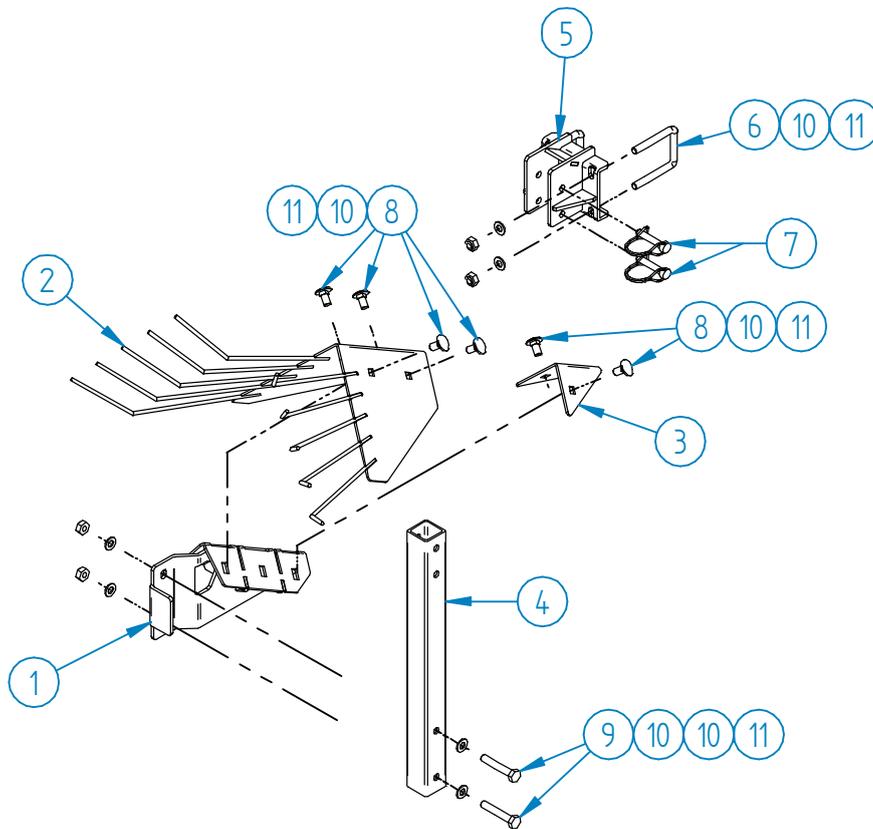


FITTING INSTRUCTIONS



Potato harvester is designed with safety in mind. In order to protect you and your ATV, certain parts of the product and/or its hardware may fail when equipment is over-stressed. For this reason, mounting adapter, adapter clamp and pin are not covered by warranty.


Step 1

Install mounting tube (Pos.4) to potato harvester rear part (Pos.1). For fastening use M10x60 bolts (Pos.9), Ø10 mm washers (Pos.10) and M10 nyloc nuts (Pos.11).

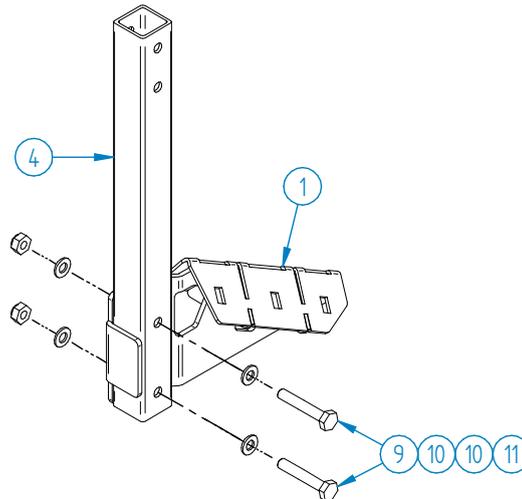


Step 2

Install blade (Pos.3) and mouldboard (Pos.2) to harvester rear part (Pos.1). For fastening use M10x20 bolts (Pos.8), Ø10 mm washers (Pos.10) and M10 nyloc nuts (Pos.11).

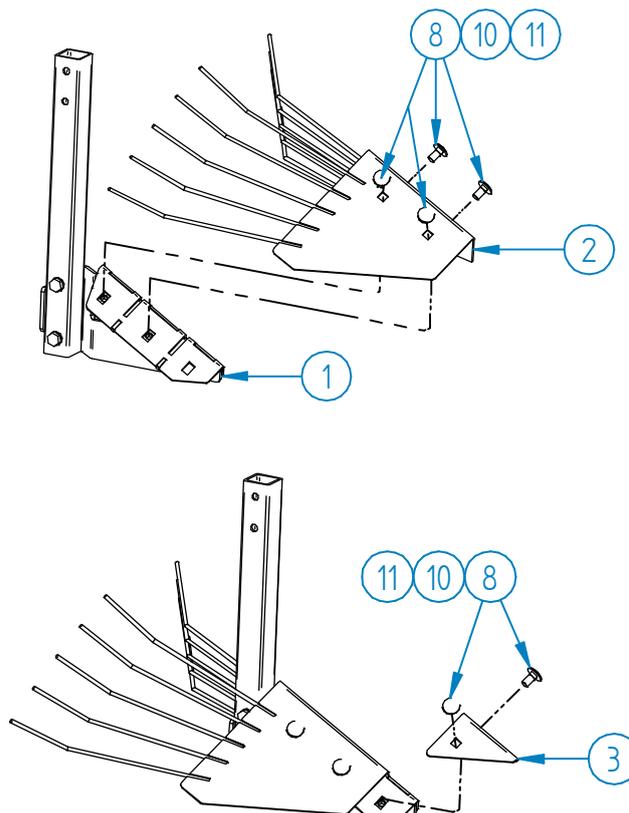

Step 3

Install the harvester to the receiver mount system. Fasten adapter (Pos.5) with u-bolts (Pos.6), Ø10 mm washers (Pos.10) and M10 nyloc nuts (Pos.11). Then fasten the plough to the adapter with spring loaded pins (Pos.7).

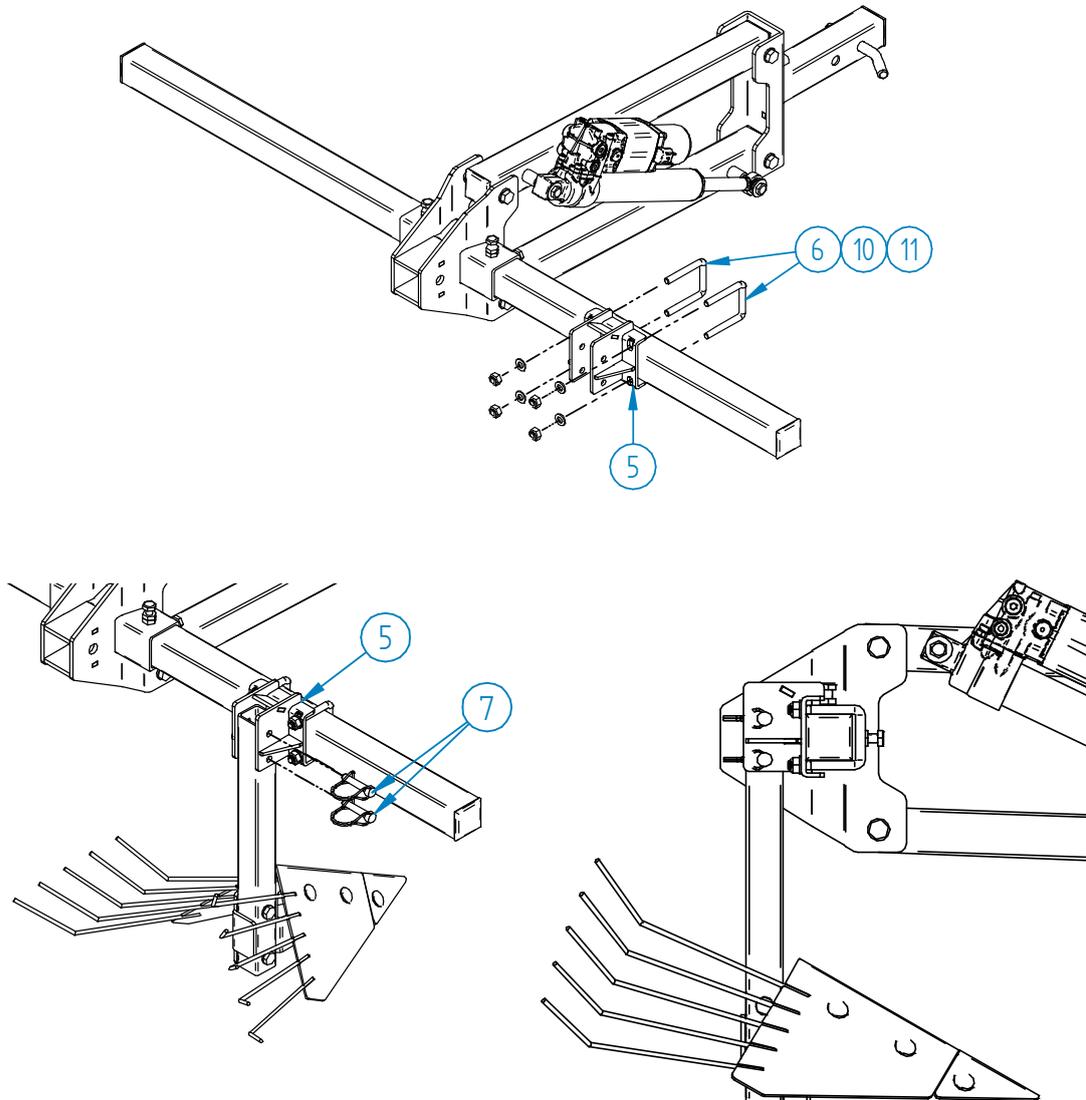

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

