

IRON BALTIC

WATER TANK INSTALLATION MODULE

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/DGkogXcm

IB-1200 / FD-1200

Code 86.5300

Version 09012024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Carrier holder	86.5301	4
2	Log carrier	86.5302	2
3	Log post	86.5303	4
4	IBC container holder	86.5310	2
5	Distance bush	05.5406	8
6	Linch pin 9,5x40x70 mm	OT.10.11.012	12
7	Tube cap 40x40	OT.10.07.010	4
8	Bolt M8x65 DIN931	OT.02.01.013	4
9	Washer Ø8/20 SFS3738	OT.04.03.030	8
10	Nyloc nut M8 DIN985	OT.03.02.040	4

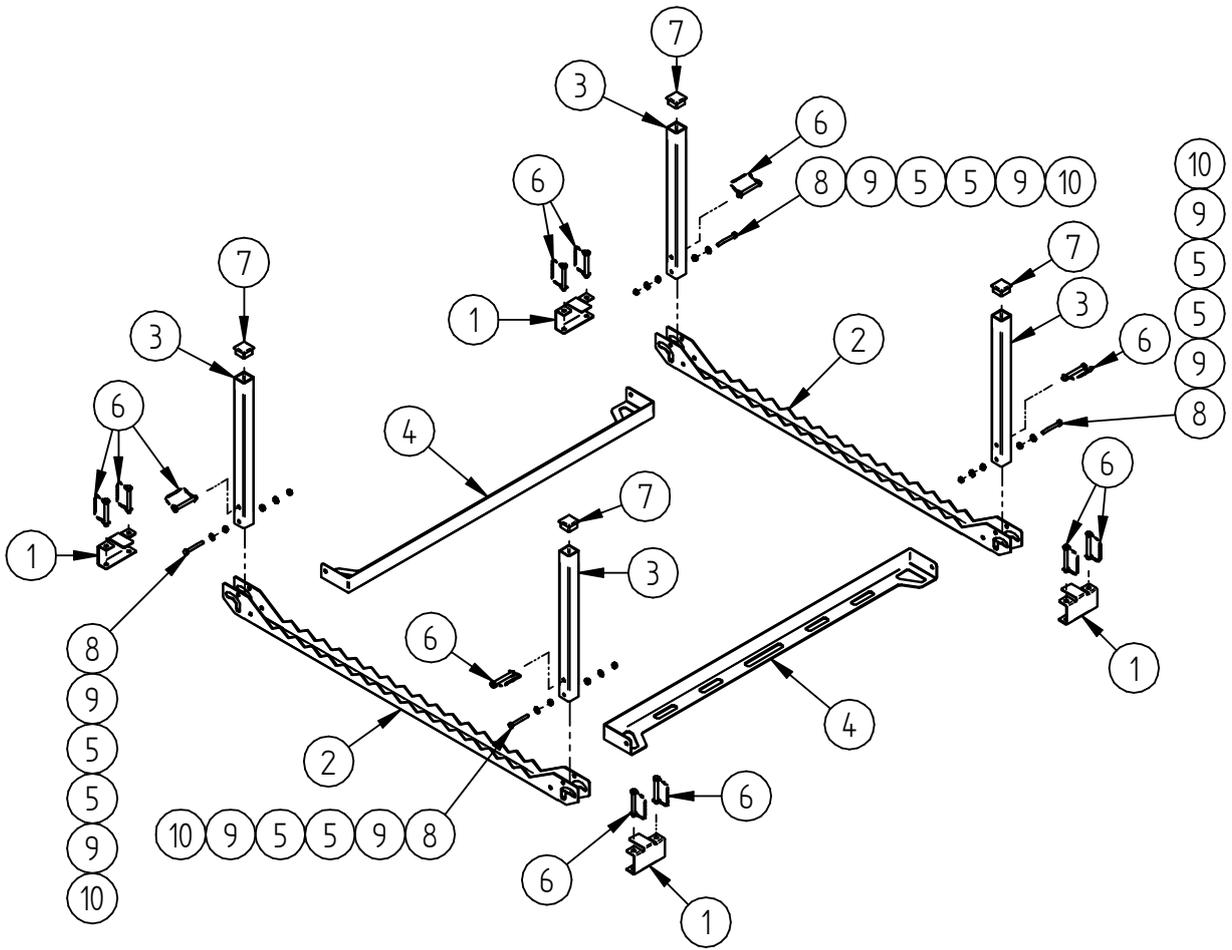

FITTING INSTRUCTIONS


Step 1

Install log posts (Pos.3) to the log carriers (Pos.2) and distance bushes (Pos.5) to the log posts. For fastening use M8x65 bolts (Pos.8), Ø8 mm washers (Pos.9) and M8 nyloc nuts (Pos.10).

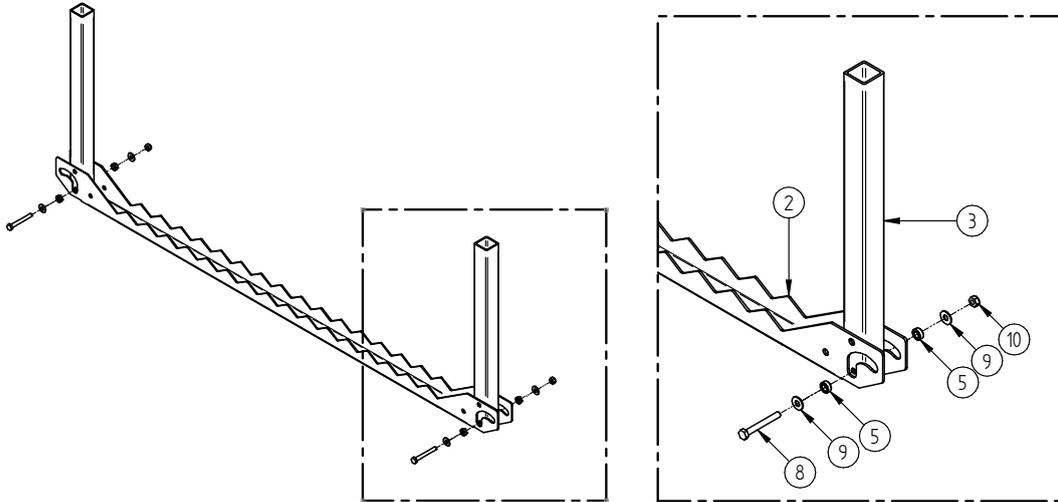


Step 2

Place the log carriers (Pos.2) to flatbed and fasten these with the carrier holders (Pos.1). Fix carrier holders with pins (Pos.6).

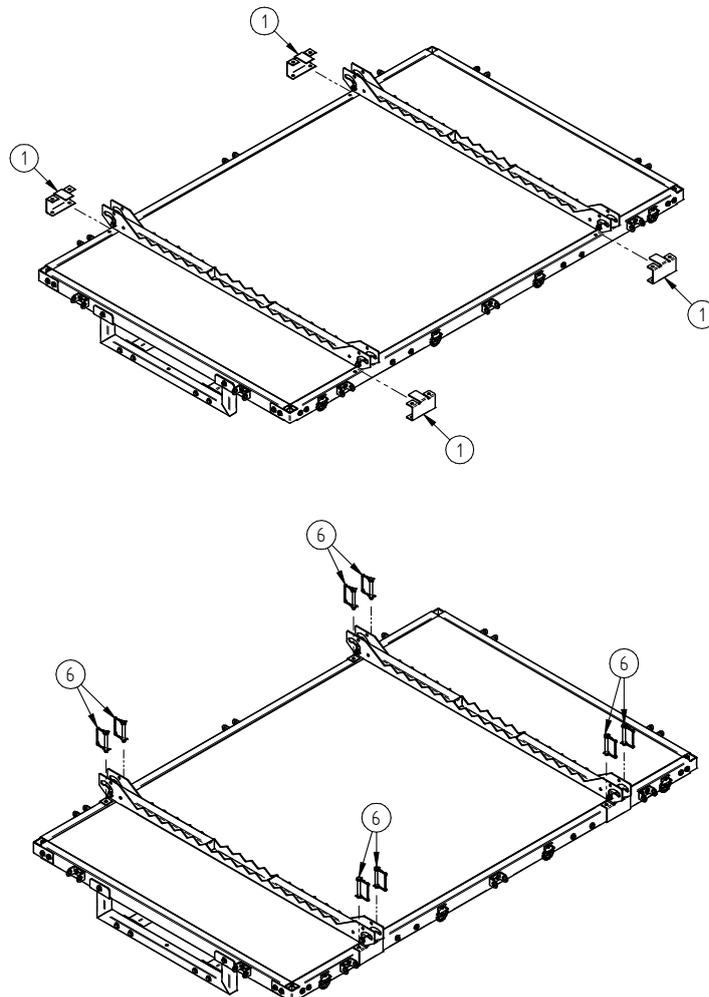

Step 3

Fix the log posts in the open or closed position using the pins (Pos.6). If you are using the kit to transport the IBC container then install the container holders (Pos.4) between the log carriers, place the log posts in the closed position and fix the position of the post and container holder with the pin (Pos.6).

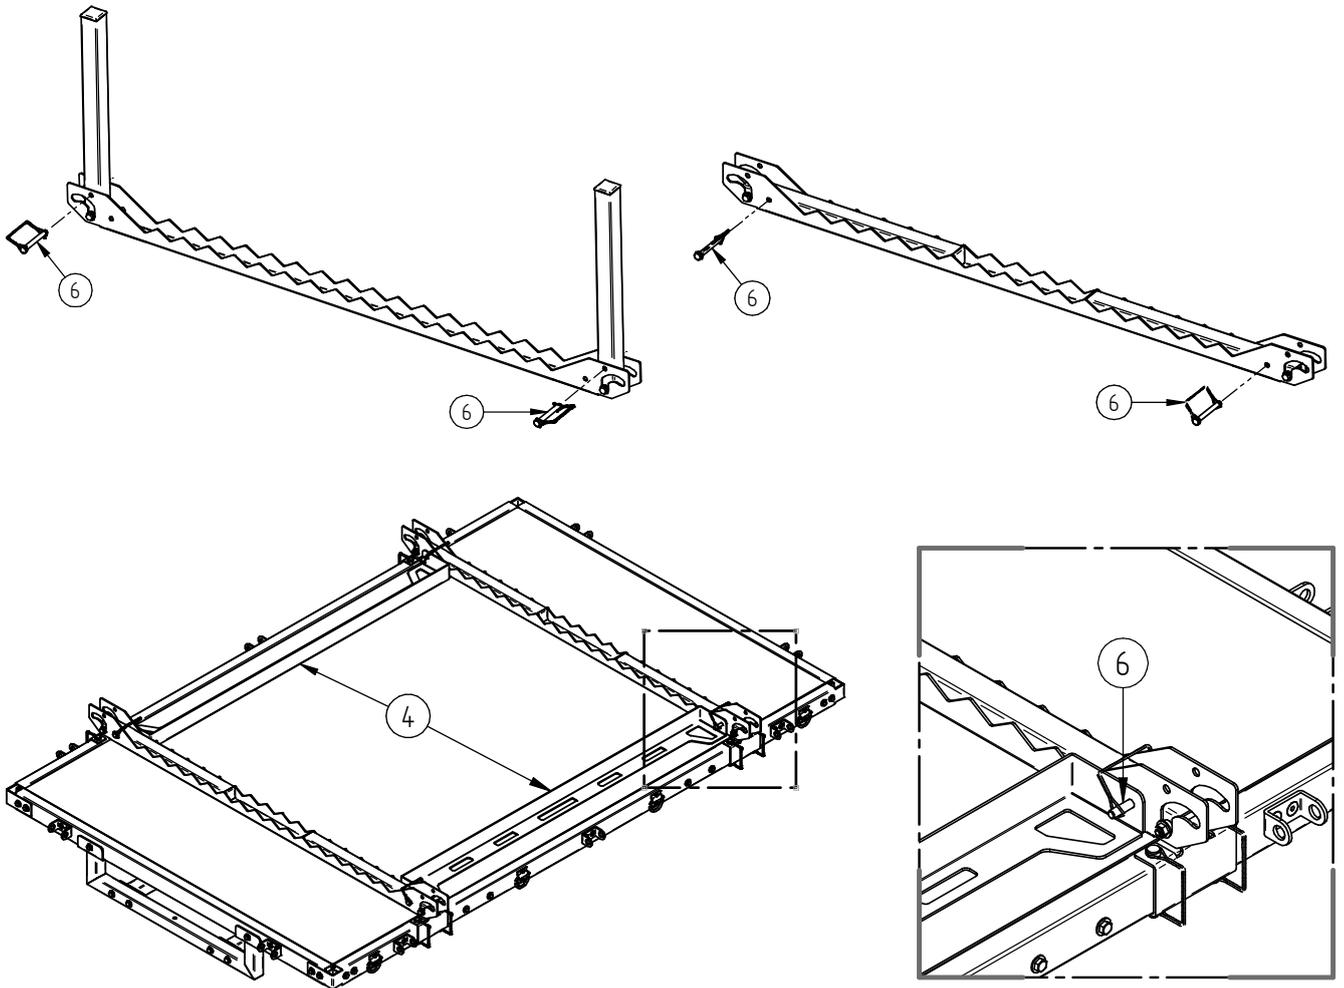

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

