

IRON BALTIC

STUMP GRINDER SG-8 CUTTING TEETH SET

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/OMXftty9

Code 95.1050

Version 13092024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Blade	95.1051ML	2
2	Blade spacer		2
3	Lock nut		2



TOOLS REQUIRED FOR INSTALLATION:

- Spanner 18 mm


CUTTING TEETH REPLACEMENT

Step 1

Ensure stump grinder engine has stopped, and the cutting wheel have stopped rotating. Switch off the fuel tap and let the machine cool down. Disconnect the spark plug to ensure the engine cannot be started while changing teeth.

Step 2

Rotate the cutting wheel using a long wooden stick. Check the condition of the holders and teeth. Replace or rotate the tooth by one-third of a turn (note the direction of rotation). Install a new spacer and nut, then tighten the tooth securely to the holder.

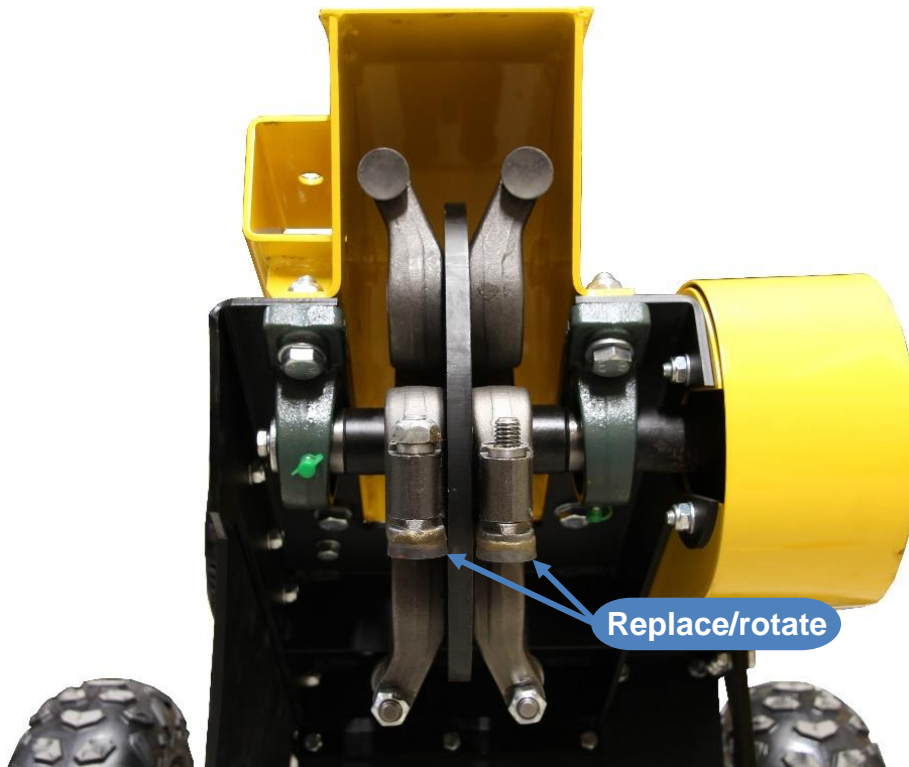

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

