

IRON BALTIC

STUMP GRINDER SG-8 STRAIGHT TEETH HOLDER

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/SU8ISZqO

Code 95.1060

Version 13092024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Teeth holder (straight)	95.1061ML	2

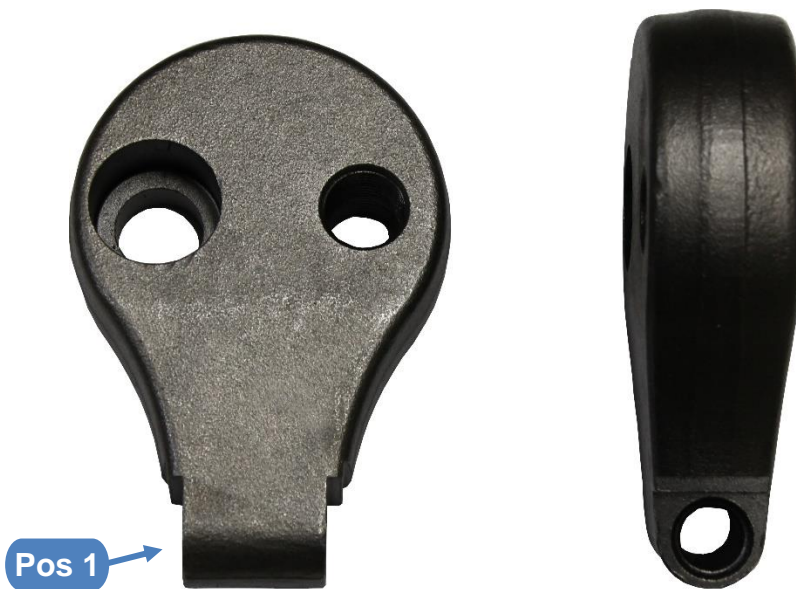

TOOLS REQUIRED FOR INSTALLATION:

- Hex key 14

TEETH HOLDER REPLACEMENT

Step 1

Ensure stump grinder engine has stopped, and the cutting wheel have stopped rotating. Switch off the fuel tap and let the machine cool down. Disconnect the spark plug to ensure the engine cannot be started while changing teeth.


Step 2

Lower the accessory by removing the towbar.



Step 3

Remove the bolts on both sides of the cutting wheel and replace the holder (note the shape of the holder). Insert the bolts through the cutter wheel into the holder as shown, then tighten them securely.

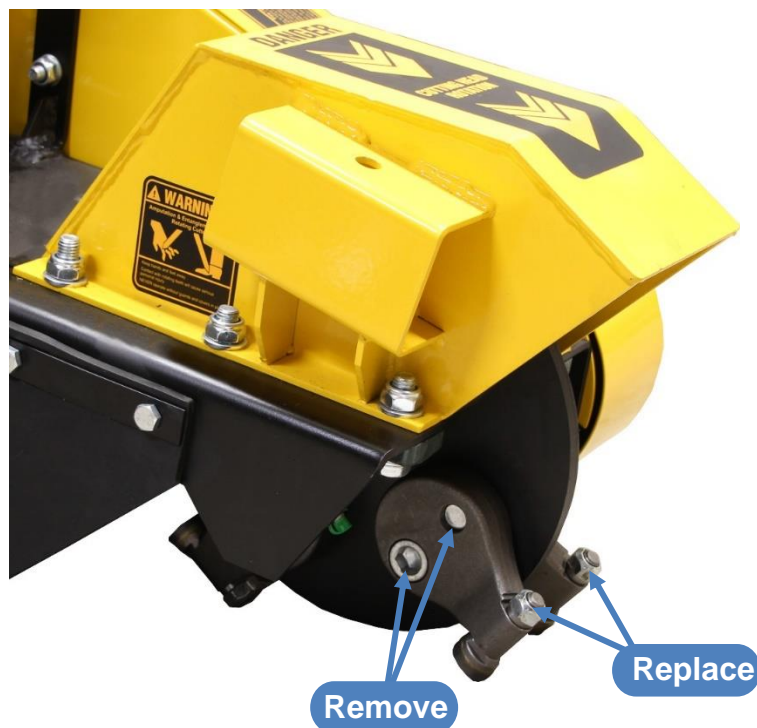

Step 4

Reinstall the towbar.

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

