

# IRON BALTIC

## STUMP GRINDER SG-8 ANGLED TEETH HOLDER

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/Uu2d4f0s](https://code.ironbaltic.com/u/Uu2d4f0s)

Code 95.1070

Version 13092024



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Teeth holder (angled)	95.1071ML	2



## TOOLS REQUIRED FOR INSTALLATION:

- Hex key 14

# TEETH HOLDER REPLACEMENT

## Step 1

Ensure stump grinder engine has stopped, and the cutting wheel have stopped rotating. Switch off the fuel tap and let the machine cool down. Disconnect the spark plug to ensure the engine cannot be started while changing teeth.

## Step 2

Lower the accessory by removing the towbar.



## Step 3

Remove the bolts on both sides of the cutting wheel and replace the holder (note the shape of the holder). Insert the bolts through the cutter wheel into the holder as shown, then tighten them securely.



## Step 4

Reinstall the towbar.

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

