

IRON BALTIC

STUMP GRINDER SG-8 DRIVE BELT SET

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/bgbFPw5a

Code 95.1080

Version 16092024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Drive belt	95.1081ML	2

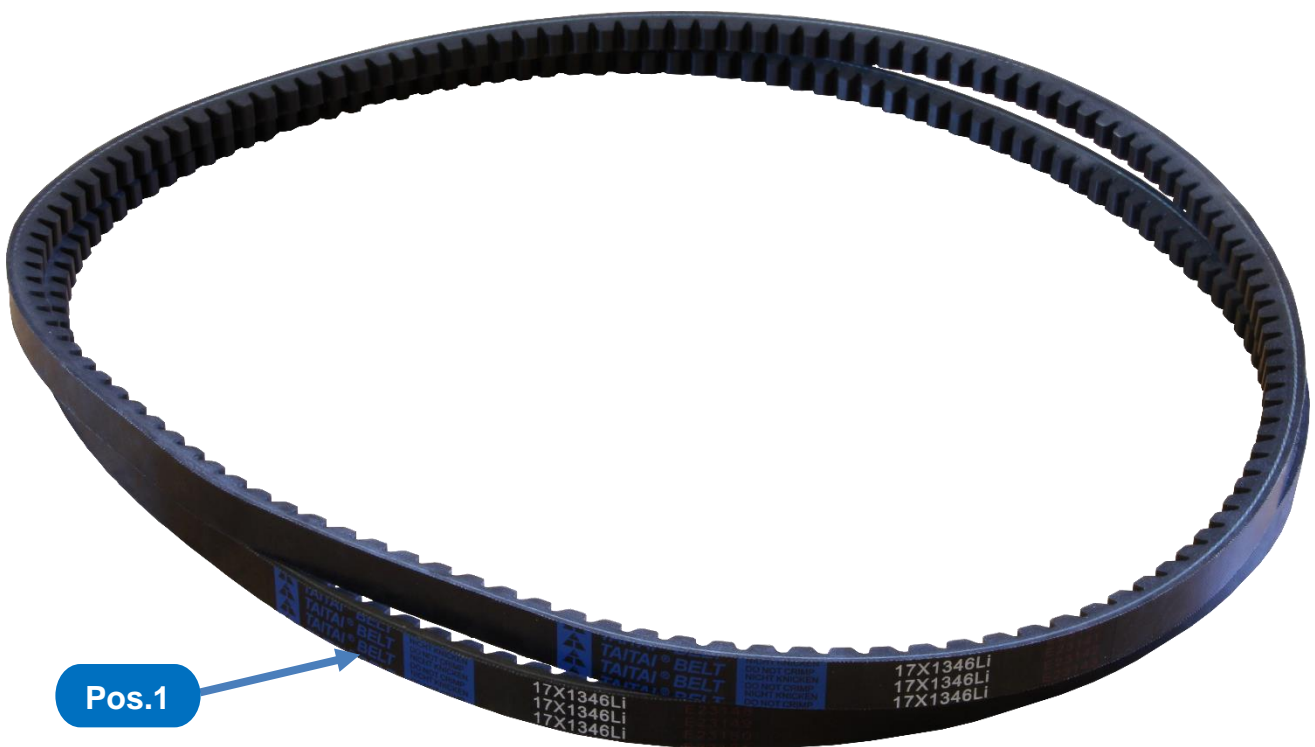


DRIVE BELTS REPLACEMENT



Before performing any maintenance procedure or inspection, stop the engine, wait at least five minutes to allow all parts to cool. Disconnect the spark plug wire, keeping it away from the spark plug.

Step 1

Remove the drive belt guard bolts (4 pcs).

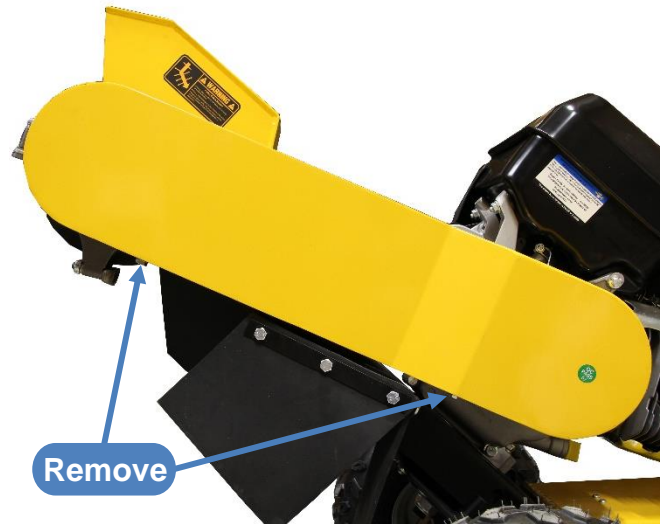


Step 2

Release the engine mounting bolts on both sides (4 pcs.), but do not remove them.



Step 3

Release the locknut. To loosen the belts tension, turn tensioner counterclockwise.

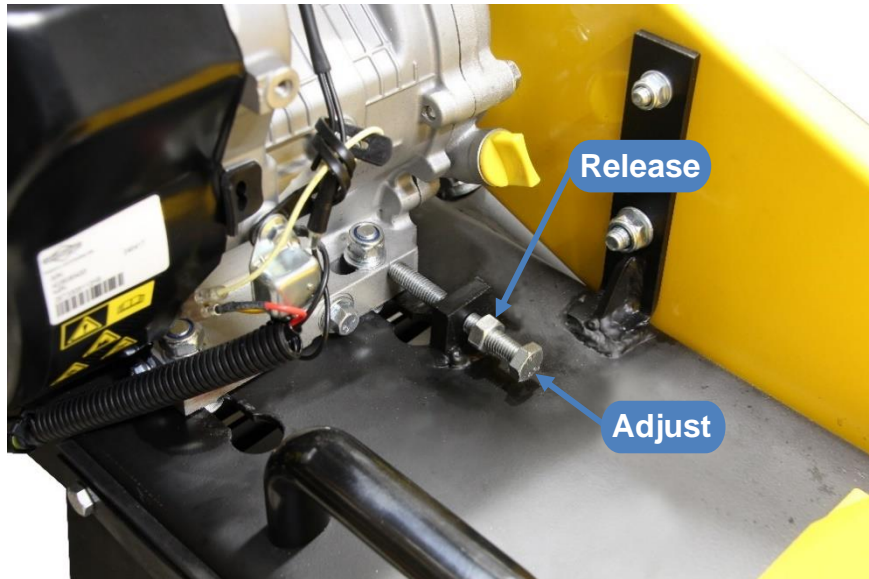


Step 4

Replace belts with new ones by turning the belts one by one onto the pulleys. NB! The drive belts must always be replaced in pair!




Step 5

Check the belt tension. Belt tension is proper when a 2.27kg to 3.18kg force will deflect the belt 2/5" (10 mm) at the midpoint.

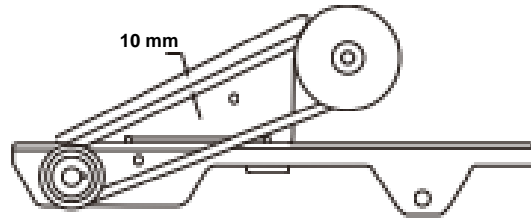

To increase the belts tension, turn tensioner clockwise.

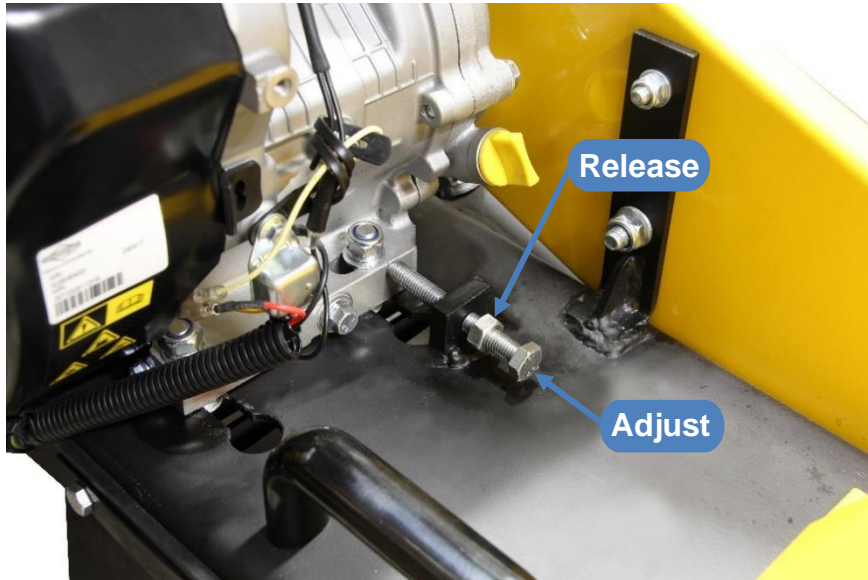

Step 6

Tighten the tensioner bolt locknut.

Step 7

Tighten the engine mounting bolts (4 pcs.).

Step 8

Re-install the drive belt guard.

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

