 


# 2016 **ROGUE**

## QUICK REFERENCE GUIDE



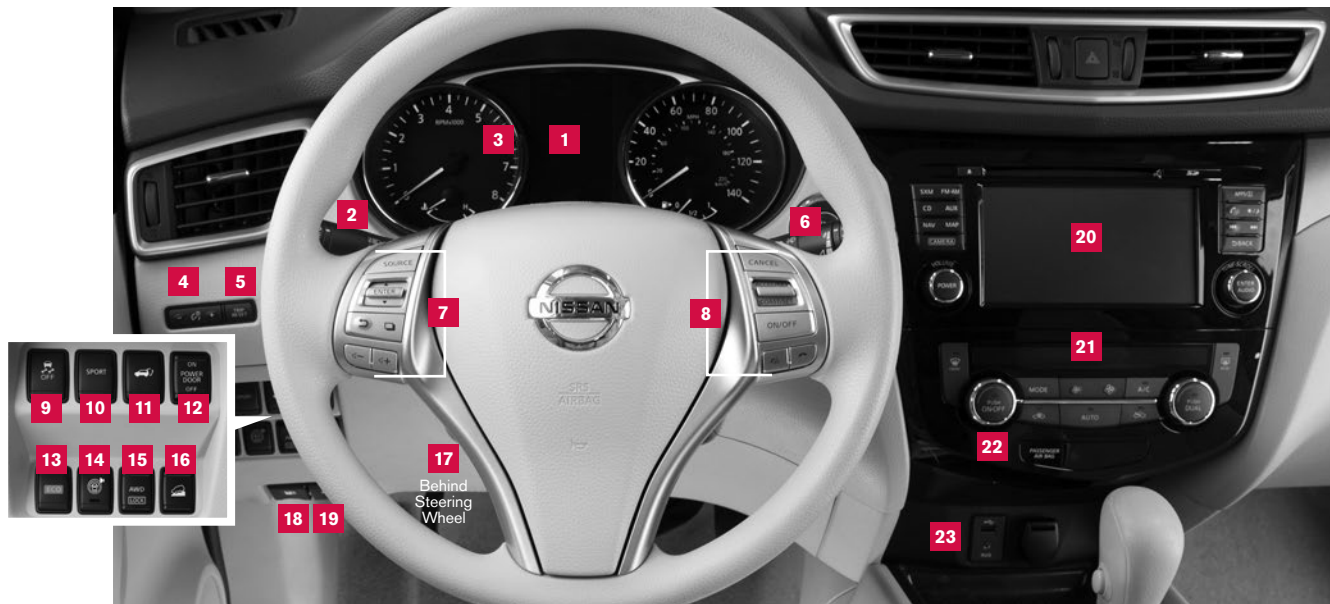

- |  |  |   |  |
|--|--|---|--|
| <b>1</b> Vehicle Information Display*          | <b>7</b> Steering Wheel Switches for Audio Control* / Navigation / Vehicle Information Display | <b>11</b> Power Liftgate Switch             | <b>18</b> Fuel-filler Door Release               |
| <b>2</b> Headlight and Turn Signal Switch      | <b>8</b> Cruise Control / Bluetooth® Switches  | <b>12</b> Power Liftgate Main Switch        | <b>19</b> Hood Release*                          |
| <b>3</b> Low Tire Pressure Warning Light       | <b>9</b> Vehicle Dynamic Control (VDC) OFF Switch*   | <b>13</b> ECO Mode Switch                   | <b>20</b> Audio and Navigation System            |
| <b>4</b> Instrument Brightness Control Button* | <b>10</b> Sport Mode Switch  | <b>14</b> Safety Shield Button              | <b>21</b> Heater and Air Conditioner (automatic) |
| <b>5</b> Twin Trip Odometer Reset Button       |  | <b>15</b> AWD Lock Switch*                  | <b>22</b> Front Passenger Air Bag Status Light*  |
| <b>6</b> Wiper and Washer Switch               |  | <b>16</b> Hill Descent Control (HDC) Switch | <b>23</b> USB Port / Aux Jack / Power Outlet     |
|  |  | <b>17</b> Steering Wheel Tilt Adjustment    |  |

\*See your Owner's Manual for information.

# TABLE OF CONTENTS

## NEW SYSTEM FEATURES

NissanConnect <sup>SM</sup> Services (if so equipped)	2
Around View <sup>®</sup> Monitor with Moving Object Detection (MOD) (if so equipped)	4
Drive Mode	6
Blind Spot Warning (BSW) (if so equipped)	6
Forward Emergency Braking (FEB) (if so equipped)	7
Hill Start Assist (HSA)	7
Hill Descent Control (HDC) (if so equipped)	7
Siri <sup>®</sup> Eyes Free (if so equipped)	8
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	8

## ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert	9
Loose Fuel Cap and Fuel-filler Door	10
Towing Your Vehicle	10
Outside Temperature Display	11
Divide-N-Hide <sup>®</sup> Floor	11
Clock Set/Adjustment	12

## FIRST DRIVE FEATURES

NISSAN Intelligent Key <sup>®</sup> System (if so equipped)	13
Power Liftgate (if so equipped)	14
Outside Mirror Control Switch	15
Front Power Seat Adjustments (if so equipped)	15
2 <sup>ND</sup> Row Seats	15
3 <sup>RD</sup> Row Seats (if so equipped)	16
Starting/Stopping the Engine	16
Headlight Control Switch	17
Wiper and Washer Switch	18
Heater and Air Conditioner (automatic) (if so equipped)	19
FM/AM/SiriusXM <sup>®</sup> Satellite Radio with CD Player (if so equipped)	20
Cruise Control	21
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod <sup>®</sup> Interface	22
Power Panoramic Moonroof (if so equipped)	22
Center Console Storage Box	22
Tilt and Telescopic Steering Wheel Adjustments	23

## SYSTEM GUIDE

Vehicle Information Display	24
NissanConnect <sup>SM</sup> Mobile Apps (if so equipped)	25
Hands-free Text Messaging Assistant (if so equipped)	25
Bluetooth <sup>®</sup> Hands-free Phone System	26
▪ System Operating Tips	26
Bluetooth <sup>®</sup> System without Navigation (if so equipped)	27
Bluetooth <sup>®</sup> System with Navigation (if so equipped)	28
Navigation System (if so equipped)	30
HomeLink <sup>®</sup> Universal Transceiver	31



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at [www.NissanUSA.com](http://www.NissanUSA.com).



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.


For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

# NEW SYSTEM FEATURES

## NISSANCONNECT<sup>SM</sup> SERVICES<sup>1</sup> (if so equipped)

- NissanConnect Services combines personalized convenience and personal security features adding innovation to your daily drive. Your vehicle will connect to the NissanConnect Services Data Center and NissanConnect Services Response Center using the TCU (Telematics Control Unit) installed in your vehicle. For more details on NissanConnect Services or to enroll your vehicle, please visit [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect) or call 855-426-6628.

Available services include:

- Automatic Collision Notification – In the event of an air bag deployment, vehicle information is sent to the emergency response center. The Emergency Response Agent attempts to contact the vehicle's occupant and sends appropriate emergency services.
- Emergency Call – This service provides emergency assistance by connecting the subscriber to a NissanConnect Services Specialist.
  - In case of an emergency, press the in-vehicle telematics **SOS** button **1**.
  - A Response Specialist will provide assistance based on the situation described by the vehicle's occupant.
- Roadside Assistance – Roadside Assistance can be accessed by:
  1. In-vehicle menu (headset  button **2** on the map screen)
  2. NissanConnect Services companion app
  3. Calling the Roadside Assistance Provider directly
    - This service allows subscribers to receive assistance for a non-emergency incident, such as towing, or a third party response.
- In-vehicle Messaging – Enables NISSAN to send service reminders, marketing, renewal and other messages to subscribers directly into the vehicle.
- Vehicle Health Report – Get a monthly overview on your vehicle's overall health delivered to your email.
- Dealer Service Scheduling – Provides the subscriber with information and a mechanism to allow him or her to contact a NISSAN dealer to schedule service for the vehicle.
- Stolen Vehicle Locator – A Response Specialist will attempt to obtain location information from a reported stolen vehicle and provide that information to local law enforcement agencies to assist in the recovery of your stolen vehicle.



- Remote Door Lock/Unlock – Remotely access your vehicle via a NissanConnect Services Response Specialist, the NissanConnect Services companion app or the website to remotely lock or unlock your vehicle.
- Remote Sound Horn and Flash Lights – Sound the horn and flash the lights remotely using the NissanConnect Services companion app or website.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert – Receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle's Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle's location.
- Assisted Search – Allows the subscriber to verbally request POI destination data from a live operator.
- Destination Download – Use the NissanConnect Services companion app or website to search for and send destinations directly to the vehicle.
- Journey Planner – Send a route with up to five waypoints and a destination directly to the vehicle.
- Boundary Alert – Monitor the movement of your vehicle within a specified region. Set up boundaries in the Monitoring section of the NissanConnect Services web portal.
- Speed Alert – Set up a maximum speed on the NissanConnect Services web portal. You will receive notifications if your vehicle exceeds the maximum speed setting.
- Valet Alert – Use Valet Alert to set up a 0.2-mile radius around your vehicle.
  - Activate alerts via the NissanConnect Services companion app or website.
- Curfew Alert – Specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.

<sup>1</sup> Only use NissanConnect<sup>SM</sup> Services powered by SiriusXM<sup>®</sup> and NissanConnect<sup>SM</sup> Mobile Apps when safe to do so. NissanConnect<sup>SM</sup> Services and Mobile Apps availability is dependent on vehicle model, trim level, packaging, and/or options. See [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect) for complete product and service availability details. Late availability for some features. Compatible smartphone required to operate NissanConnect<sup>SM</sup> Mobile Apps. Services require an operating vehicle device and cellular and GPS coverage. Cellular network and GPS signals are not available in all areas and/or at all times. Neither NISSAN nor SiriusXM are responsible for associated costs, if any, for continued operation due to cellular network termination/changes. Cellular provider may terminate/restrict service without notice. Certain services require a PIN for activation. Applicable Subscription Agreement required. See [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect) for details and service limitations. Enrollment is required to receive the full suite of services. Text rates and/or data usage may apply.

For more information, refer to the “**Information (section 5)**” of your Navigation System Owner's Manual.

# NEW SYSTEM FEATURES

## AROUND VIEW® MONITOR WITH MOVING OBJECT DETECTION (MOD) (if so equipped)

- With the ignition switch in the ON position, the Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:



Start from any Control Panel screen



Front view & bird's-eye view



Front view & front-side view



- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

Rear view & bird's-eye view



Press



Rear view & front-side view



 
Press




- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
  - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

- There are some areas where the system will not detect objects.

- When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.



 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.

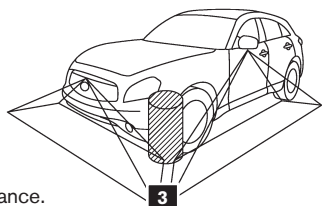

- The distance between objects viewed on the Around View® Monitor differs from the actual distance.

- Objects in the bird's-eye view will appear further than the actual distance.

#### MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects.

- The system will operate when the shift lever is in the **P (PARK)**, **R (REVERSE)**, **N (NEUTRAL)** or **D (DRIVE)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.



- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.

- When the following is displayed:

- Blue **MOD** icon **4**; the system is active.
- Gray **MOD** icon; the system is not active.
- No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.

- The MOD system will not operate if the liftgate is open.

 
For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

# NEW SYSTEM FEATURES

## DRIVE MODE

### NORMAL

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.



### ECO (if so equipped)

- ECO drive mode is recommended to help maximize fuel economy. Performance may be reduced.
  - Press the **ECO** button **1** on the instrument panel to activate.
  - The **ECO** drive mode indicator light illuminates on the instrument panel.



### SPORT

- SPORT drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
  - Press the **SPORT** button **2** on the instrument panel to activate.
  - The **SPORT** drive mode indicator light illuminates on the instrument panel.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## BLIND SPOT WARNING (BSW) (if so equipped)

- The BSW system alerts the driver when another vehicle moves into the vehicle’s detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- Push the warning systems switch **2** to temporarily turn the system off. When the system is off, the indicator light **3** on the switch is off.
- The indicator light **3** will also be off if all of the warning systems are deactivated using the Settings menu.
- The indicator light **3** will illuminate after the ignition switch is on and the BSW system is enabled.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.



## FORWARD EMERGENCY BRAKING (FEB) (if so equipped)

- The FEB system can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The FEB system operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light **1** will illuminate. If the driver applies the brakes after the warning and the FEB system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the FEB system will issue a second visual warning **2**, an audible warning and also apply partial braking.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## HILL START ASSIST (HSA)

The HSA system allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- The HSA system will operate automatically under these conditions:
  - The shift lever is shifted into a forward or a reverse gear.
  - The vehicle is stopped completely on a hill by applying the brake.
- The HSA system will not operate when the shift lever is in the **N (NEUTRAL)** or **P (PARK)** position or on a flat and level road.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## HILL DESCENT CONTROL (HDC) (if so equipped)

The HDC system is designed to apply the brakes to help control the speed of the vehicle and reduce the workload of the driver while descending steep hills. To activate the system:

- The **AWD LOCK** switch **1** must be on.
- The HDC switch **2** must be on. To deactivate the HDC system, push the HDC switch **2** to the OFF position.
- The shift lever must be in a forward or a reverse gear.
- The HDC system operates at speeds of 15 mph (25 km/h) and below.




For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

# NEW SYSTEM FEATURES

## SIRI® EYES FREE<sup>1</sup> (if so equipped)

If you have a compatible iPhone®<sup>2</sup> with Siri®, you can link your iPhone® to the Siri® Eyes Free function in your vehicle's Bluetooth®<sup>3</sup> system.

If you have a compatible iPhone® connected to the system, press and hold the  button **1** on the steering wheel for a few seconds and Siri will be activated in Eyes Free mode.

<sup>1</sup> Siri® is a trademark of Apple Inc., registered in the U.S. and other countries.

<sup>2</sup> iPhone is registered trademark of Apple, Inc. All rights reserved. iPhone not included.

<sup>3</sup> Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone Owner's Manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for details.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).



## SiriusXM TRAVEL LINK\* AND SiriusXM TRAFFIC\* (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



\*These features, SiriusXM® Satellite Radio, Travel Link and Traffic, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the "**Navigation (section 4)**" and the "**General system information (section 6)**" of your Navigation System Owner's Manual.

# ESSENTIAL INFORMATION

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT

- A **Tire Pressure Low - Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
  - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals outside the vehicle to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy Fill Tire Alert system:
  1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
  2. Place the ignition switch in the ON position. Do not start the engine.
  3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
  5. Repeat this procedure for any additional under-inflated tires.
- After the tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low - Add Air** warning message and low tire pressure warning light **2** will extinguish.
- In addition to the **Tire Pressure Low - Add Air** warning message, you can view the individual tire's pressure in the vehicle information display as well as the recommended pressure, denoted by blue lettering, for each tire.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a NISSAN dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
  - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" of your Owner's Manual for the location of the Tire and Loading Information label.





For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

 
To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# ESSENTIAL INFORMATION

## LOOSE FUEL CAP AND FUEL-FILLER DOOR

### LOOSE FUEL CAP

- A **Loose Fuel Cap** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the  button, located on the steering wheel, is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

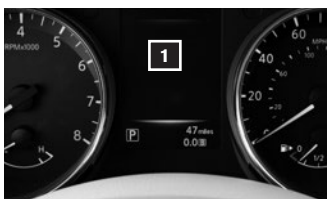

### FUEL-FILLER DOOR

- The fuel-filler door is located on the passenger's side of the vehicle.
- To open the fuel-filler door, pull the release lever **2**, located on the instrument panel to the left of the steering wheel.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.






## TOWING YOUR VEHICLE

### ALL-WHEEL DRIVE (AWD) VEHICLE (if so equipped)

- An all-wheel drive vehicle must be towed with all wheels off the ground.
- For proper towing and to avoid accidental damage to your vehicle, NISSAN recommends that a service operator tow your vehicle after carefully reading the Owner’s Manual precautions.

For more information, refer to the “**In case of emergency (section 6)**” and the “**Technical and consumer information (section 9)**” of your Owner’s Manual.

## OUTSIDE TEMPERATURE DISPLAY

- When the ignition switch is in the ON position, the outside air temperature will appear in the vehicle information display **1**.
- If the outside air temperature is below 25°F (-4°C), the outside temperature display will blink for 20 seconds then remain on with the ignition switch in the ON position.
- If the outside air temperature is between 27°F and 37°F (-3°C and +3°C), the outside temperature display will blink continuously with the ignition switch in the ON position.
- To stop the outside temperature display from blinking, stop the vehicle in a safe place and move the shift lever to the **P (PARK)** position. Perform the following procedure:
  1. Press the  button on the steering wheel until the “Settings” mode is displayed.
  2. Move the  button on the steering wheel until it reaches the “Alerts” mode then press **ENTER** on the steering wheel to select.
  3. Move the  button until it reaches the “Outside temp” mode then press **ENTER** on the steering wheel to select.
  4. Move the  button until it reaches the “Off” mode then press **ENTER** on the steering wheel to select.
  5. To exit, press the  button on the steering wheel again.



## LOW OUTSIDE TEMPERATURE WARNING

- The **Low Outside Temperature** warning message **2** will appear in the vehicle information display **1** when the outside temperature drops below 37°F (+3°C) with the ignition switch in the ON position.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## DIVIDE-N-HIDE® FLOOR

- Do not place more than 30 lbs (13.6 kg) on the adjustable floor when it is in the upper position **1**. Do not place more than 165 lbs (75 kg) on the adjustable floor when it is in the middle position.
- There are multiple positions for the adjustable floor. The upper position **1** allows for additional storage below the adjustable floor.

To move the adjustable floor from the lower position **2** to the upper position **1**:

1. Use the handle to lift the adjustable floor.
2. Move the adjustable floor to the upper guide track and make sure it is securely in place.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

 
To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# ESSENTIAL INFORMATION

## CLOCK SET/ADJUSTMENT

WITHOUT NAVIGATION (if so equipped)

- Press the **ENTER/SETTING** button **1** to show the “Settings” screen on the display.
- Turn the **TUNE/FOLDER** knob **2** to navigate the options.
- Press the **ENTER/SETTING** button **1** to select “Clock adjust”.
- Press the **ENTER/SETTING** button **1** to highlight the hours and minutes.
- Turn the **TUNE/FOLDER** knob **2** to adjust the value.
- Press the **ENTER/SETTING** button **1** again to set the value.

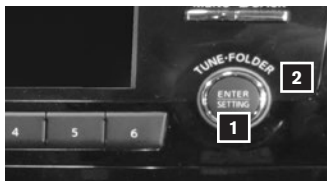

WITH NAVIGATION (if so equipped)

 
- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **3**.
2. Select the “Settings” key.
3. Select the “System” key.
4. Select the “Clock” key.



- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.
- **Clock Mode:** From here, the clock mode options are:
  - **Manual:** Allows for the option “Set Clock Manually”. Select this to begin setting the clock manually using the “+” or “-” to adjust the hours, minutes, day and month up or down.
  - **Time Zone:** Select the “Time Zone” key **4** to choose from the applicable time zone list and/or select “Daylight Savings Time” to switch between ON and OFF.
  - **Auto:** Automatically sets the clock to the vehicle’s current location.

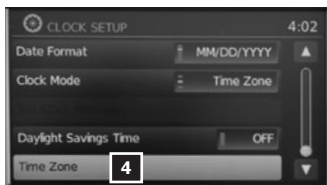

- Press the **BACK** button **5** to return to the previous screen.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES




## NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® System allows you to lock or unlock the vehicle and open your liftgate. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1**, push the liftgate request switch **2** or press the **i** button **3** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **1** once and the corresponding door will unlock. Push the request switch **1** again within 5 seconds; all other doors will unlock, or
  - Press the **i** button **4** on the key fob to unlock the driver's side door. Press the **i** button **4** again; all other doors will unlock.



### LIFTGATE RELEASE

- To open the liftgate, press the  button **5** for longer than 1 second.
- To close the liftgate, press the  button **5** again for longer than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.


### INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
  1. Move the shift lever to the **P (PARK)** position.
  2. Firmly apply the foot brake.
  3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
  4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal, and the engine will start.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

# FIRST DRIVE FEATURES

## POWER LIFTGATE (if so equipped)

- When the liftgate is closed and locked, the liftgate will open automatically by:
  - Pushing the power liftgate switch **1** on the instrument panel.
  - Pushing the liftgate opener switch **2**. The liftgate must be unlocked, or you must have the Intelligent Key with you (that is, in your pocket or purse).
  - Pressing the  button **3** on the NISSAN Intelligent Key® for more than 1 second.
- The power liftgate operation can be turned on or off by the power liftgate on/off switch **4** on the instrument panel.
  - When the power liftgate on/off switch **4** is pushed to the **OFF** position, power operation is not available using the power liftgate switch **5** on the liftgate or the liftgate opener switch **2**.



## LIFTGATE POSITION SETTING (if so equipped)

 
- The liftgate can be set to open to a specific height (Garage Mode) by performing the following:
  1. Open the liftgate using the request switch or the Intelligent Key.
  2. Pull the liftgate down and move it to the desired height position (the liftgate will have some resistance when being manually adjusted).
  3. Push and hold the power liftgate switch **5** located on the liftgate for more than 3 seconds or until two beeps are heard.
- The liftgate will open to the selected position setting. To change the position of the liftgate, repeat steps 1-3 for setting the position of the liftgate.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## OUTSIDE MIRROR CONTROL SWITCH

- Move the small switch **1** to select the right or left side mirror.
- Adjust each mirror to the desired position using the large switch **2**.
- To prevent accidentally moving the mirror, move the small switch **1** to the center (neutral) position.

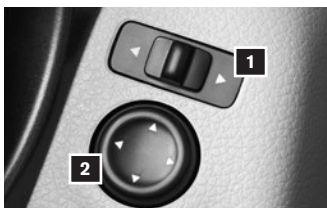


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## FRONT POWER SEAT ADJUSTMENTS (if so equipped)

 - To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.

### SEAT LIFTER (if so equipped for driver’s seat)

- To raise or lower the front portion or height of the seat, push the front or back end of the switch **1** up or down.

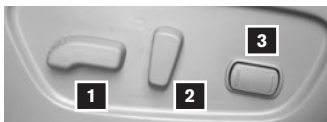



### LUMBAR SUPPORT (if so equipped for driver’s seat)

- To adjust the seat lumbar support, push the front or back end of the switch **3**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

## 2<sup>ND</sup> ROW SEATS

  - To access the 3<sup>RD</sup> row seats (if so equipped):
  - Lift the seatback release lever **1** to fold the seatback forward.
  - Pull the release strap **2** to fold the seatback all the way down.
  - Pull the bar **3** and hold it while sliding the seat forward or backward to the desired position. Release the bar **3** to lock the seat in place.
- Pull the release strap **4** to fold down the armrest and access the cup holders.

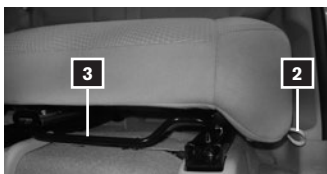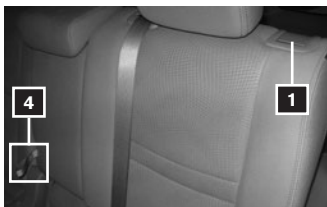


For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES

 
## 3<sup>RD</sup> ROW SEATS (if so equipped)

- To fold the seatback forward, pull the release strap **1** and push the seatback forward.
- To return the seatback to the upright position, pull the release strap **1** and the seatback up at the same time.

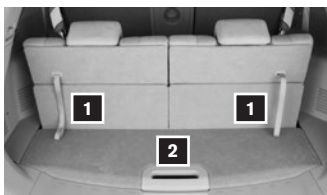

The 3<sup>RD</sup> row seats can fold forward for additional storage.

 - Pull the handle **2** and lift the floor.
- Pull the straps **3** on both sides simultaneously to unlatch the 3<sup>RD</sup> row seat.

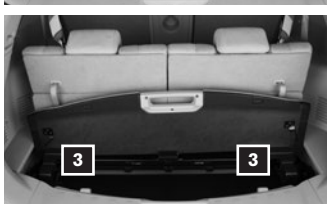

- Lift the 3<sup>RD</sup> row seat to access the storage area **4** beneath the 3<sup>RD</sup> row seat.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

## STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch to the **ON** position.



### TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch to the **ON** position.

 
 
### AUTO ACCESSORY

- With the vehicle in the **P (PARK)** position, the Intelligent key with you (that is, in your pocket or purse) and the ignition placed from on to off, the radio can still be used for a period of time or until the driver’s door is opened.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.


## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL



- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.


### AUTOLIGHT SYSTEM (if so equipped)

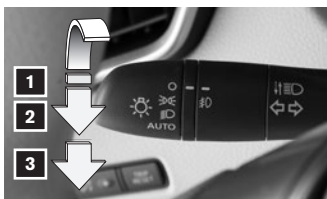 - The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then turn the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the OFF,  position **1** or  position **2**.




### HIGH BEAM SELECT

 - With the headlights on (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

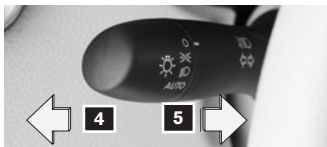

### FOG LIGHT SWITCH (if so equipped)

 - The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the OFF position to turn the fog lights off.



### LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.






Choose the appropriate method to signal a lane change based on the road and traffic conditions.

 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES




## WIPER AND WASHER SWITCH


- Move the lever to one of the following positions to operate the windshield wipers:

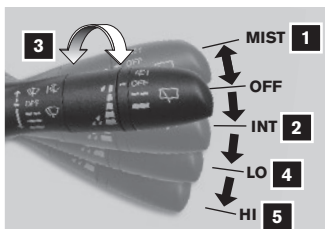- 1** Mist  — One sweep operation of the front wipers.
- 2** Intermittent  — Front wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 4** Low  — Front wipers operate at a continuous low-speed.
- 5** High  — Front wipers operate at a continuous high-speed.
- 6** Front Washer  — Pull the lever toward you to activate the front washer. The front wipers will operate several times.



## REAR WIPER AND WASHER

 - 7** Intermittent  — Rear wiper operates intermittently.
- 8** Low  — Rear wiper operates at a continuous low-speed.
- 9** Rear Washer  — Push the lever forward to activate the rear washer. The rear wiper will operate several times.

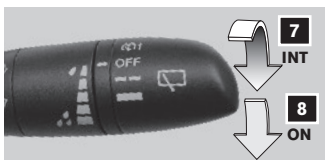


## DRIP WIPER

- Once the wiper spray cycle is finished, there will be a short delay. Then the wipers will sweep one more time to clear off any remaining drips from the windshield.

## WIPER BLADE REPLACEMENT PROCEDURE

 
The windshield wipers must be in the service position in order to replace the wiper blades. To move the wiper blades to the service position, follow this procedure:

- When the ignition switch is in the ON position or within 60 seconds of placing the ignition switch to the OFF position, lift the windshield wiper and washer lever up to the Mist  position **1** two times in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:



- Lift the windshield wiper and washer lever up for more than 1 second or lower the lever down to operate at any wiper speed.

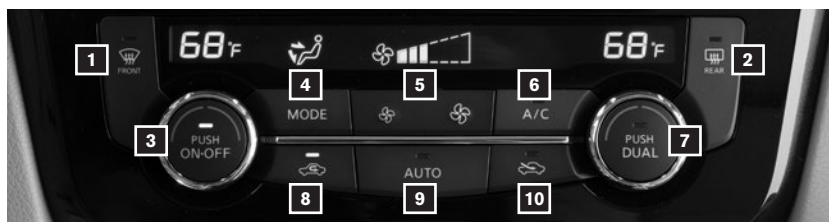For more information, refer to the “**Instruments and controls (section 2)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.



## HEATER AND AIR CONDITIONER (automatic) (if so equipped)

### 1 DEFROSTING FRONT AND SIDE WINDOWS

- Press the front window defroster  **FRONT** button. If it is difficult to defrost the windows, press the **A/C** button **6**. This feature removes humidity from the air.
- Turn the temperature control dial left or right to set the desired temperature.
- To set the front defroster on high, press the fan speed  button **5** all the way up and the driver's side temperature control dial **3** all the way to the right.





### 2 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Push the rear window defroster  switch **2**. Push the switch again to manually turn the rear defroster off. This function automatically turns off after approximately 15 minutes.



### 3 ON-OFF BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **ON/OFF** button to turn the climate controls on or off. Turn the temperature control dial to the left for cooler air or right for warmer air.

### 4 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
  -  Air flows from the center and side vents.
  -  Air flows from the center, side and foot vents.
  -  Air flows mainly from the foot vents.
  -  Air flows from the front defroster and foot vents.

### 5 FAN SPEED CONTROL BUTTONS

- Press the fan speed control button  for low fan speeds or  for high fan speeds.

### 6 A/C ON-OFF BUTTON




- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

### 7 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

# FIRST DRIVE FEATURES


## 8 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  once to turn on and press again to turn off.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  **FRONT** or the front defroster and foot vent mode .

## 9 AUTO BUTTON

- Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

## 10 FRESH AIR INTAKE BUTTON

- Press the fresh air intake  button to draw outside air into the passenger compartment. The fresh air intake indicator light on the button will illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



## FM/AM/SiriusXM®\* SATELLITE RADIO WITH CD PLAYER (if so equipped)



### 1 POWER BUTTON/VOLUME CONTROL KNOB

- Press the **POWER** button to turn the system on or off.
- Turn the **VOLUME** control knob to the right or left to increase or decrease the volume.

### 2 ENTER|AUDIO BUTTON/TUNE-SCROLL KNOB

- Press the **ENTER|AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

### 3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons  or .

\*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

To view detailed instructional videos regarding these and other features,  
please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

#### 4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Next touch and hold the desired station select button (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select button (**1-6**).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

## CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. A green circle indicator light in the instrument panel will illuminate, and the set speed will display next to the indicator light. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.



# FIRST DRIVE FEATURES

- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. Both the **CRUISE** indicator light and green circle indicator light in the instrument panel will extinguish.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

---

## USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB port/Aux jack **1** is located beneath the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/ Aux jack, compatible audio files stored on the device can be played through the vehicle’s audio system.

 


For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

---

## POWER PANORAMIC MOONROOF (if so equipped)

- To fully open or close the moonroof, push the switch to the open position **1** or the close position **2** and release it. The roof will automatically open or close. To stop the roof, push the switch once more while it is opening or closing.
- To tilt the moonroof open, press the tilt button **3**. To close the moonroof, push the switch to the close position **2**.

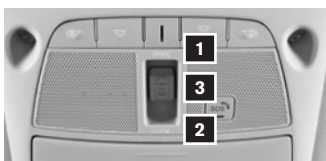

### AUTO-REVERSE

When the auto-reverse function is activated, the moonroof will automatically open or tilt up when the control unit detects something caught in the moonroof when the moonroof is closing or tilting down.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

---

## CENTER CONSOLE STORAGE BOX

- To access the top storage tray, pull up on the passenger’s side lever **1**.
- To access the bottom storage bin, pull up on the driver’s side lever **2**.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## TILT AND TELESCOPIC STEERING WHEEL ADJUSTMENTS

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

 


# SYSTEM GUIDE



## VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

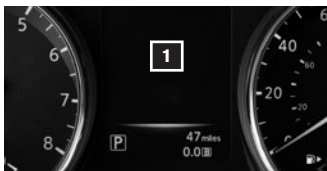


- Vehicle settings
- Trip computer information
- Drive system warnings and settings (if so equipped)
- Audio information
- NISSAN Intelligent Key® operation information (if so equipped)
- Navigation turn-by-turn (if so equipped)
- Cruise control system information
- Indicators and warnings
- Tire pressure information



### USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the  button **2** and the  buttons **3** located on the steering wheel.





- Press the  button **2** on the steering wheel to change the display mode.
- Press the  buttons **3** on the steering wheel up or down to navigate through the vehicle information display menu.
- Press the **ENTER** button **4** on the steering wheel to change or select an item.
- Press the  button **5** on the steering wheel to go back to the previous menu.

### START-UP DISPLAY

When the ignition is in the ON position, the vehicle information display will support four of the following modes:

- Active system status (if so equipped)
- Trip computer
- Fuel economy
- Warnings (if there are any)
- Tire pressure information

### RESETTING THE TRIP COMPUTER

1. Press the  button **2** on the steering wheel until you reach the trip computer mode.
2. Press the  button **2** on the steering wheel for more than 1.5 seconds to reset fuel consumption, average speed, distance to empty and journey time.
3. Pushing the **TRIP RESET** switch **6** for more than 1 second resets the currently displayed trip odometer to zero.



### SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- Driver Assistance
- Tire Pressures
- Meter Settings
- Unit
- Vehicle Settings
- Language
- Maintenance
- Factory Reset
- Alerts

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## NISSANCONNECT<sup>SM</sup> MOBILE APPS<sup>1</sup> (if so equipped)

- Integrates popular smartphone apps and services into your vehicle.
- The NissanConnect Mobile Apps companion app must be downloaded to your smartphone, and you must be enrolled in a NissanConnect account.

### FOR SYSTEM WITH NAVIGATION

- iPhone<sup>®2</sup>: Please connect via USB when using an iPhone<sup>®</sup> with NissanConnect Mobile Apps.
- Android<sup>®3</sup>: Please connect via Bluetooth<sup>®4</sup> when using an Android<sup>®</sup> device with NissanConnect Mobile Apps.

### FOR SYSTEM WITHOUT NAVIGATION

- iPhone<sup>®</sup>: Please connect via Bluetooth<sup>®4</sup> when using an iPhone<sup>®</sup> with NissanConnect Mobile Apps.
- Android<sup>®</sup>: Please connect via Bluetooth<sup>®4</sup> when using an Android<sup>®</sup> device with NissanConnect Mobile Apps.
- For more information on how to pair your cellular phone and set up NissanConnect Mobile Apps, visit: **[www.NissanUSA.com/connect/support](http://www.NissanUSA.com/connect/support)**.

<sup>1</sup> Only use NissanConnect<sup>SM</sup> Services powered by SiriusXM<sup>®</sup> and NissanConnect<sup>SM</sup> Mobile Apps when safe to do so. NissanConnect<sup>SM</sup> Services and Mobile Apps availability is dependent on vehicle model, trim level, packaging, and/or options. See **[www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)** for complete product and service availability details. Late availability for some features. Compatible smartphone required to operate NissanConnect<sup>SM</sup> Mobile Apps. Services require an operating vehicle device and cellular and GPS coverage. Cellular network and GPS signals are not available in all areas and/or at all times. Neither NISSAN nor SiriusXM are responsible for associated costs, if any, for continued operation due to cellular network termination/changes. Cellular provider may terminate/restrict service without notice. Certain services require a PIN for activation. Applicable Subscription Agreement required. See **[www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)** for details and service limitations. Enrollment is required to receive the full suite of services. Text rates and/or data usage may apply.

<sup>2</sup> iPhone is registered trademark of Apple, Inc. All rights reserved. iPhone not included.

<sup>3</sup> Android<sup>®</sup> is a registered trademark of Google, Inc.

<sup>4</sup> Availability of specific features is dependent upon the phone's Bluetooth<sup>®</sup> support. Please refer to your phone Owner's Manual for details. Bluetooth<sup>®</sup> word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See **[www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)** for details.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

## HANDS-FREE TEXT MESSAGING ASSISTANT<sup>1,2</sup> (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth<sup>®</sup> Hands-free Phone System<sup>3</sup>.



# SYSTEM GUIDE

- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth®<sup>1,3</sup> pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth®<sup>1,3</sup> menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.

<sup>1</sup> Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

<sup>2</sup> Compatible smartphone required. Text rates and/or data usage may apply.


 
<sup>3</sup> Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone Owner's Manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for details.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.


## BLUETOOTH® HANDS-FREE PHONE SYSTEM<sup>1</sup>

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation<sup>2</sup>.

### SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Michael Smith".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.




- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a Nissan Voice Recognition session, say "Exit" or press and hold the  button on the steering wheel.
- To decrease or increase the volume of the voice prompts, push the volume control switches **—** or **+** on the steering wheel or turn the **VOLUME** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth<sup>®</sup>,<sup>1</sup> system features using the NISSAN Voice Recognition system. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit **www.NissanUSA.com/bluetooth**.

<sup>1</sup> Availability of specific features is dependent upon the phone's Bluetooth<sup>®</sup> support. Please refer to your phone Owner's Manual for details. Bluetooth<sup>®</sup> word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See **www.NissanUSA.com/bluetooth** for details.

<sup>2</sup> Some jurisdictions prohibit the use of cellular telephones while driving.

## BLUETOOTH<sup>®</sup> SYSTEM WITHOUT NAVIGATION<sup>1,2</sup> (if so equipped)

### PAIRING PROCEDURE<sup>3</sup>


1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
  - A cellular phone can also be added at any time by selecting "Settings" > "Bluetooth" > "Add Phone".
3. Initiate pairing from the cellular phone.
  - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit **www.NissanUSA.com/bluetooth**.
  - When prompted, compare the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

### PHONEBOOK REGISTRATION




- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 entries per registered cellular phone can be stored in the phonebook.

# SYSTEM GUIDE

## MAKING A CALL

1. Press the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: "Yes". The system acknowledges the command and makes the call.

## RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up, press the  button on the steering wheel.

<sup>1</sup> Some jurisdictions prohibit the use of cellular telephones while driving.

<sup>2</sup> Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone Owner's Manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for details.

<sup>3</sup> Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some applications and features such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.


Compatible smartphone required. Text rates and/or data usage may apply.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## BLUETOOTH® SYSTEM WITH NAVIGATION<sup>1,2</sup> (if so equipped)

- Send predefined or custom text messages<sup>3</sup> through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Once your compatible device is connected to the vehicle's audio system, the audio files will play through the vehicle's speakers.

## CONNECTING PROCEDURE

1. Press the **APPS**  button on the control panel.
2. Select the "Settings" key **1**.
3. Select the "Phone & Bluetooth" key **2**.
4. Select the "Connect New Device" key **3**.
5. Initiate the connecting process from the handset.



The system will display the message:  
"Is PIN XXXXXX displayed on your Bluetooth device?"

 
If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.






## VEHICLE PHONEBOOK


To access the vehicle phonebook:

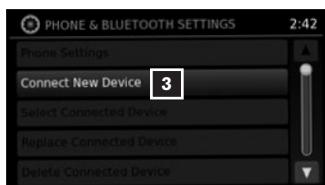 1. Press the  button on the control panel.
2. Select the “Phonebook” key .
3. Choose the desired entry from the displayed list.







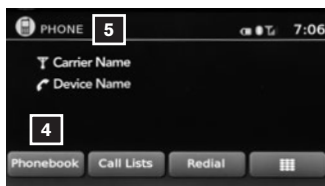


## MAKING A CALL

1. Press the  button on the control panel. The “PHONE” screen  will appear on the display.
2. Select one of the following options to make a call:
  - “Phonebook”: Select the name from an entry stored in the vehicle phonebook.
  - “Call Lists”: Select the name from the incoming, outgoing or missed call history.
  - “Redial”: Dial the last outgoing call from the vehicle.
  - : Input the phone number manually using the keypad displayed on the screen.



## RECEIVING/ENDING A CALL

 - To accept the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.
- To reject the incoming call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.
- To end a call, either:
  - Press the  button on the steering wheel, or
  - Select the  icon on the screen.

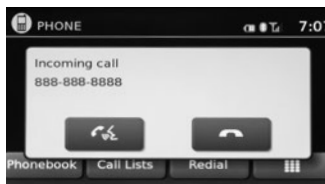

<sup>1</sup> Some jurisdictions prohibit the use of cellular telephones while driving.

<sup>2</sup> Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone Owner's Manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for details.


<sup>3</sup> Laws in some jurisdictions may restrict the use of “Text-to-Speech”. Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Compatible smartphone required. Text rates and/or data usage may apply.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

# SYSTEM GUIDE

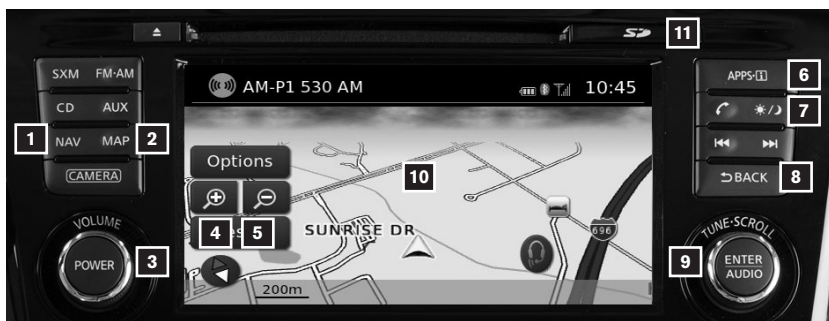 

## NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 NAV** button – Press to access the functions of the Navigation System.
- 2 MAP** button – Press to display the current location map screen.
- 3 VOLUME** control knob – Turn right to increase the volume or left to decrease the volume.
- 4** key – Touch to zoom the map in.
- 5** key – Touch to zoom the map out.
- 6 APPS** button – Press to access SiriusXM Traffic, MyApps, SiriusXM Travel Link, Voice Commands and Settings.
- 7** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8** **BACK** button – Press to return to the previous screen.
- 9 TUNE/SCROLL** knob – Turn to scroll through the items in a list. Press to select a menu item.
- 10** Touch-screen display
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your Navigation System Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).





## HOMELINK® UNIVERSAL TRANSCEIVER

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
  - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
  - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
  - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
  - A solid, continuous light indicates the programing is complete and the HomeLink button will activate your device.
  - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
  - At the receiver of the device that you are programing to the HomeLink button, press and release the “learn” or “smart” button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
  - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programing process. HomeLink should now activate your device.

For more information, refer to the **“Instruments and controls (section 2)”** of your Owner's Manual, the HomeLink website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.

# MEMO

# MEMO



## Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)
- [www.youtube.com/user/NissanUSA](http://www.youtube.com/user/NissanUSA)
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide  
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,  
go to [www.nissanownersinfo.mobi/2016/rogue](http://www.nissanownersinfo.mobi/2016/rogue)  
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2015 Nissan North America, Inc.  
QR16EA 0T32U1

Printing: November 2015 (09)

