

IRON BALTIC

TURNING HARDWARE KIT


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/8yjew55t

Code 71.2600

Version 03012024

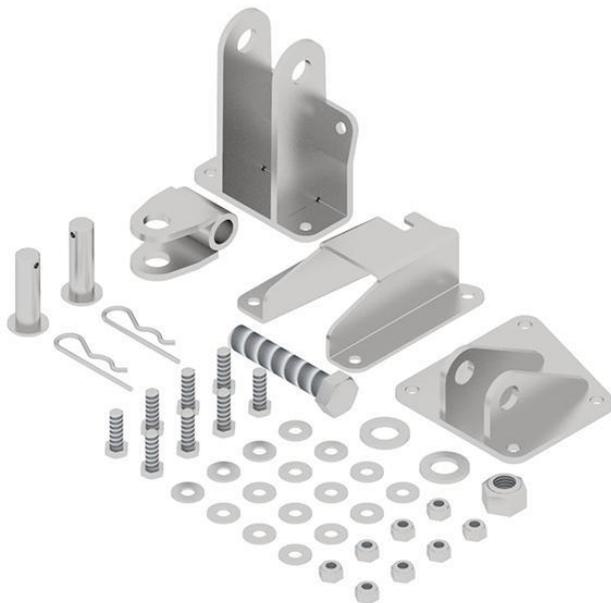


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Push tube clamp	71.2601	1
2	Push tube bracket	71.2602K	1
3	Blade bracket	71.2020	1
4	Swivel joint	71.2010	1
5	Limiter for turning lock pin	71.2003	1
6	Pin	71.3005	2
7	Cotter pin 3 DIN11024	OT.07.01.020	2
8	Bolt M8x25 DIN933	OT.02.02.190	8
9	Bolt M16x80 DIN931	OT.02.01.146	1
10	Washer Ø8/20 SFS3738	OT.04.03.030	16
11	Washer M16 DIN125	OT.04.01.060	2
12	Nyloc nut M8 DIN985	OT.03.02.040	8
13	Nyloc nut M16 DIN985	OT.03.02.070	1

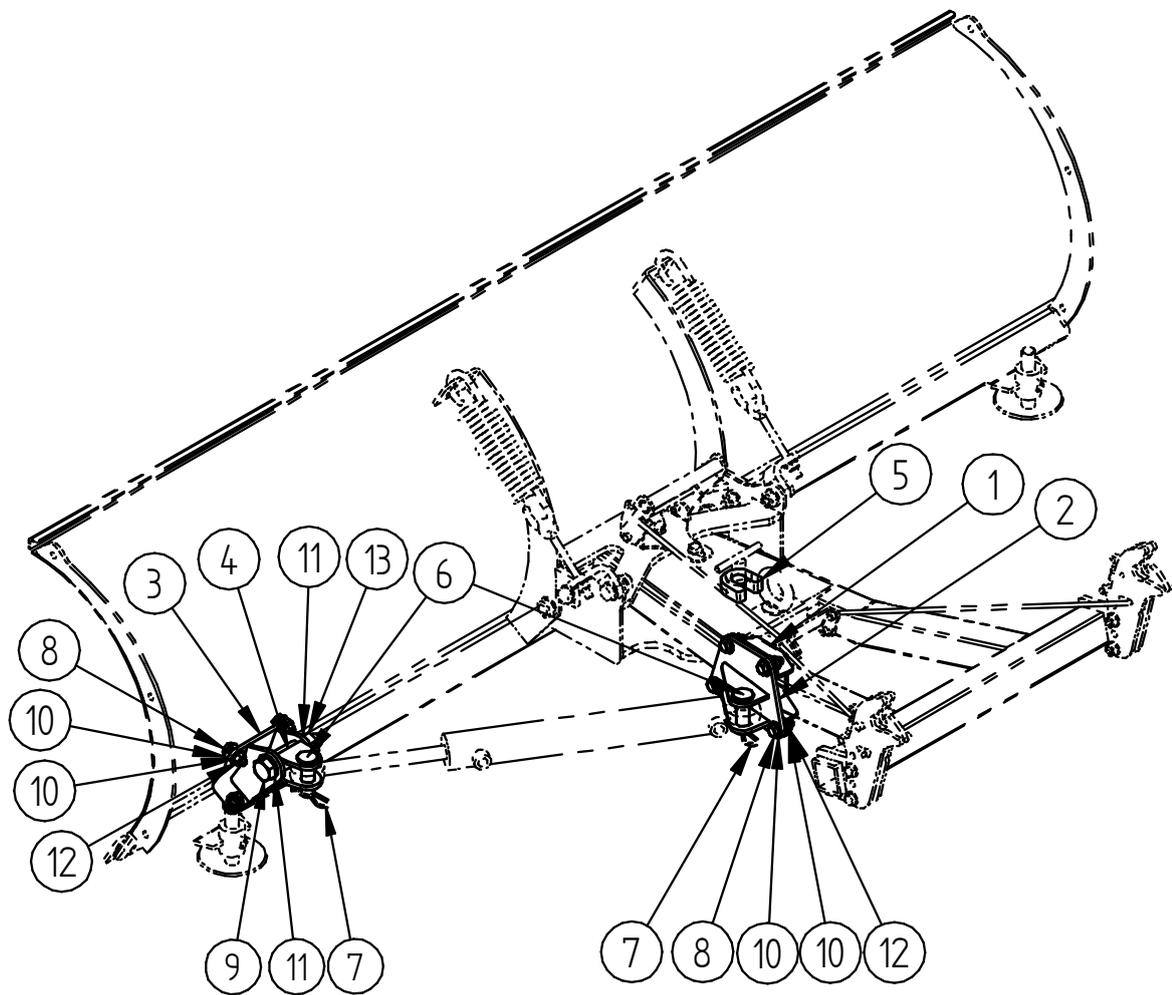

FITTING INSTRUCTIONS


Step 1

Install push tube clamp 71.2601 and push tube bracket 71.2602K.

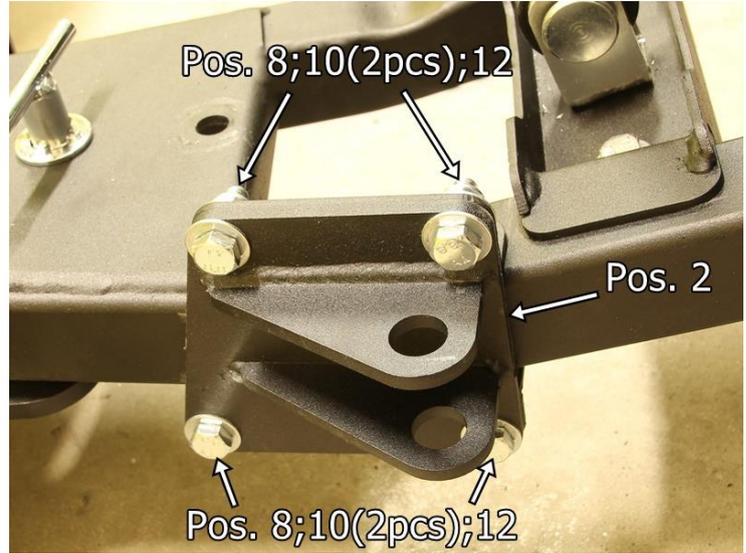


Step 2

Install limiter for turning lock pin 71.2003.

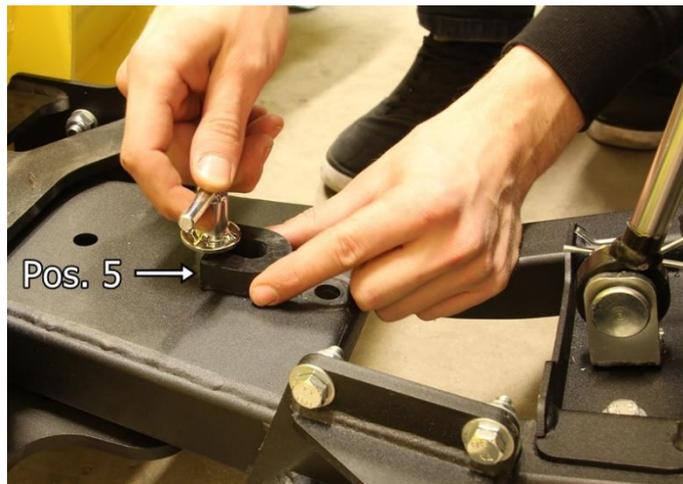

Step 3

Connect blade bracket 71.2020 and swivel joint 71.2010.

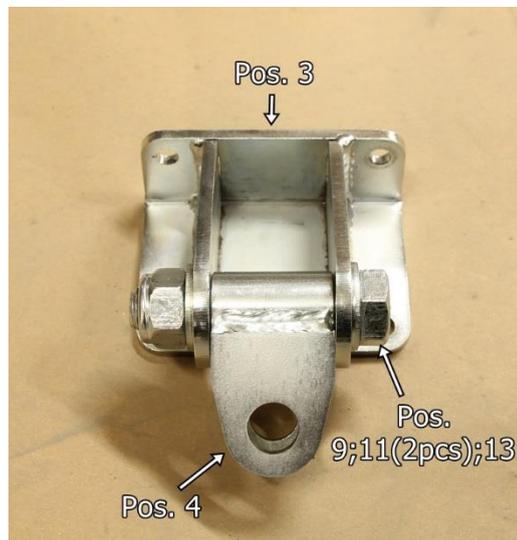

Step 4

Connect cylinder blade bracket and push tube bracket. Use pins 71.3005. Turn push tube frame so that the blade bracket is in full contact with blade when cylinder is in closed position.




Step 5

Mark the holes on the blade and drill holes. Use 8,5 mm drill.




Step 6

Install blade bracket.

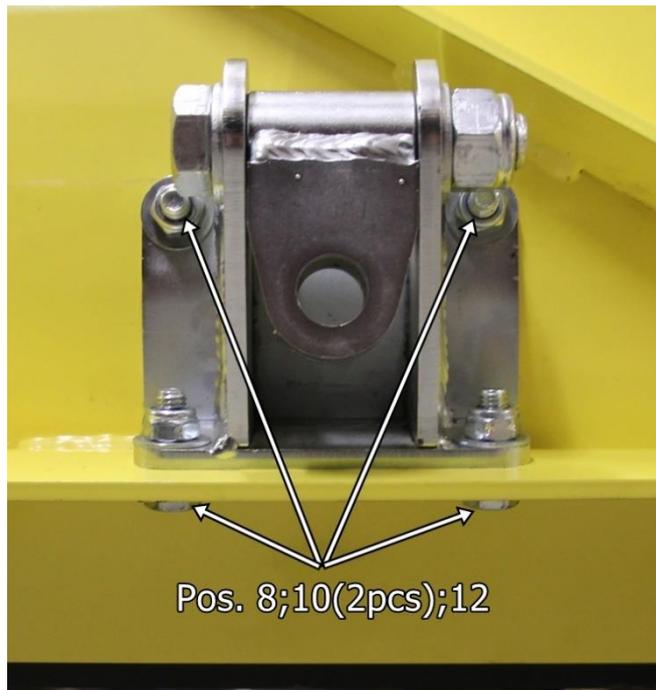

Step 7

Install cylinder. Use pins 71.3005 and cotter pins.

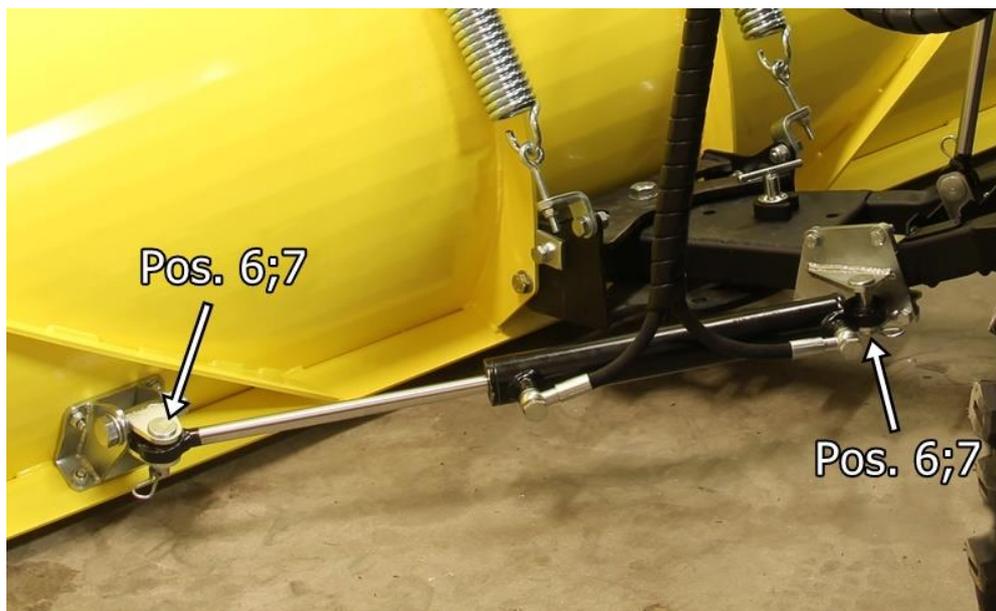

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

