




ALUMINIUM SKID PLATE

CAN AM

Outlander (G2) 500 MAX / 600 MAX /
800 MAX / 1000 MAX / 1000 XMR

Code 02.10000

Version 22082023


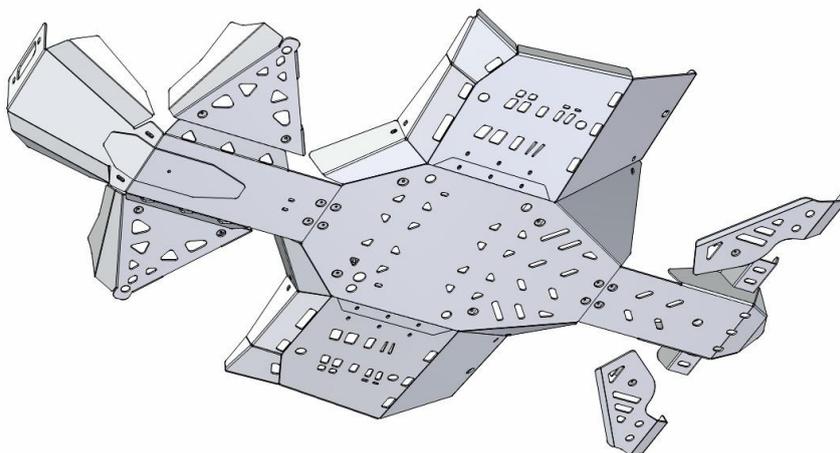


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Middle part	02.10001	1
2	Right side part	02.10002	1
3	Left side part	02.10003	1
4	Front part	02.8402K	1
5	Rear part	02.8203K	1
6	Front right arm protection	02.8204	1
7	Front left arm protection	02.8205	1
8	Rear right arm protection	02.8206	1
9	Rear left arm protection	02.8207	1
10	Plate for front part	02.10004	1
11	Bush for front part	02.10005	2
12	Connecting plate (40)	02.10006	2
13	Connecting plate (30)	02.10007	2
14	Bracket	03.3502	4
15	Plate	02.5006	10
16	Bracket	03.1502	2
17	Plate	02.2305	1
18	Clamp for front arm protection	02.8210	4
19	Clamp for rear arm protection	02.5709	2
20	Bolt M6x12 DIN 933	OT.02.02.180	8
21	Bolt M6x16 DIN 933	OT.02.02.050	8
22	Bolt M6x25 DIN 933	OT.02.02.070	2
23	Bolt M6x35 DIN 933	OT.02.02.090	2
24	Bolt M6x50 DIN 933	OT.02.02.120	4
25	Bolt M8x16 DIN 933	OT.02.02.170	6
26	Bolt M8x30 DIN 933	OT.02.02.200	1
27	Bolt M6x16 DIN 7991	OT.02.04.020	20
28	Bolt M6x25 DIN 7991	OT.02.04.040	3
29	Bolt M8x50 DIN 7991	OT.02.04.200	2
30	Carriage bolt M8x25	OT.02.05.060	8
31	Washer Ø6/15 SFS 3738	OT.04.03.020	42
32	Washer Ø8/20 SFS 3738	OT.04.03.030	12
33	Dished washer	14.503	29
34	Conical washer Ø6	14.502	23
35	Conical washer Ø8	14.501	2
36	Nyloc nut M6 DIN 985	OT.03.02.030	13
37	Nyloc nut M8 DIN 985	OT.03.02.040	10

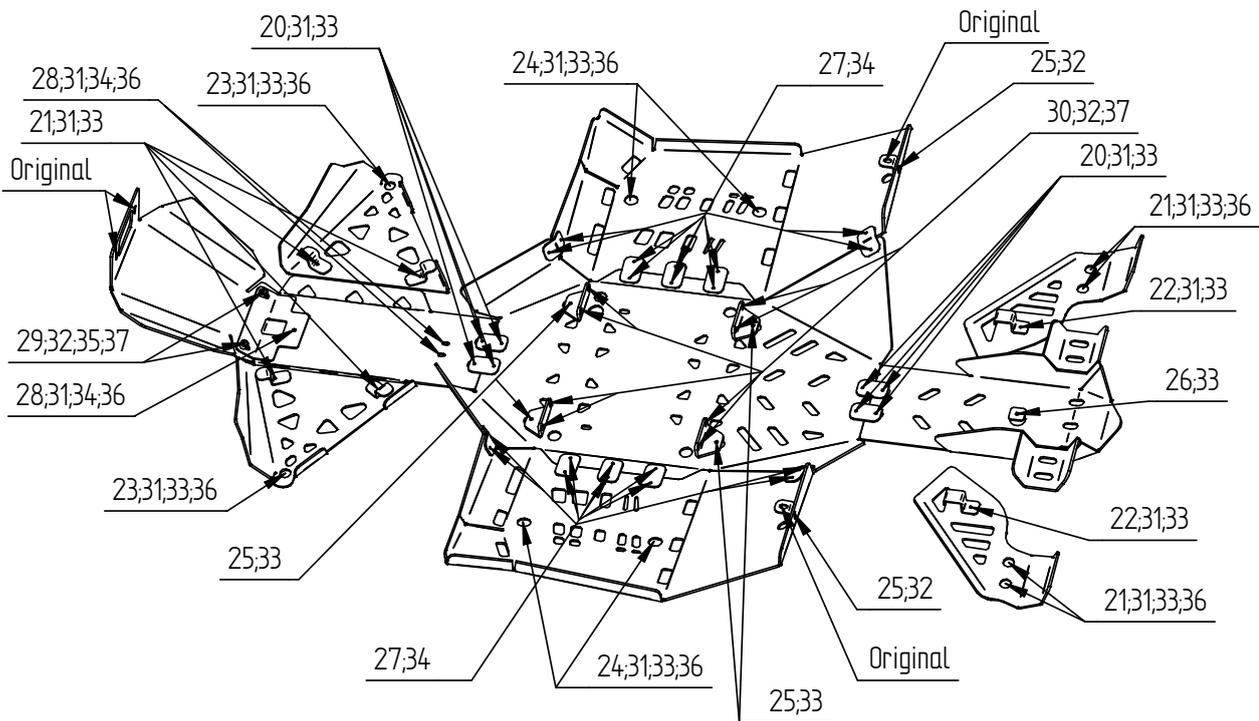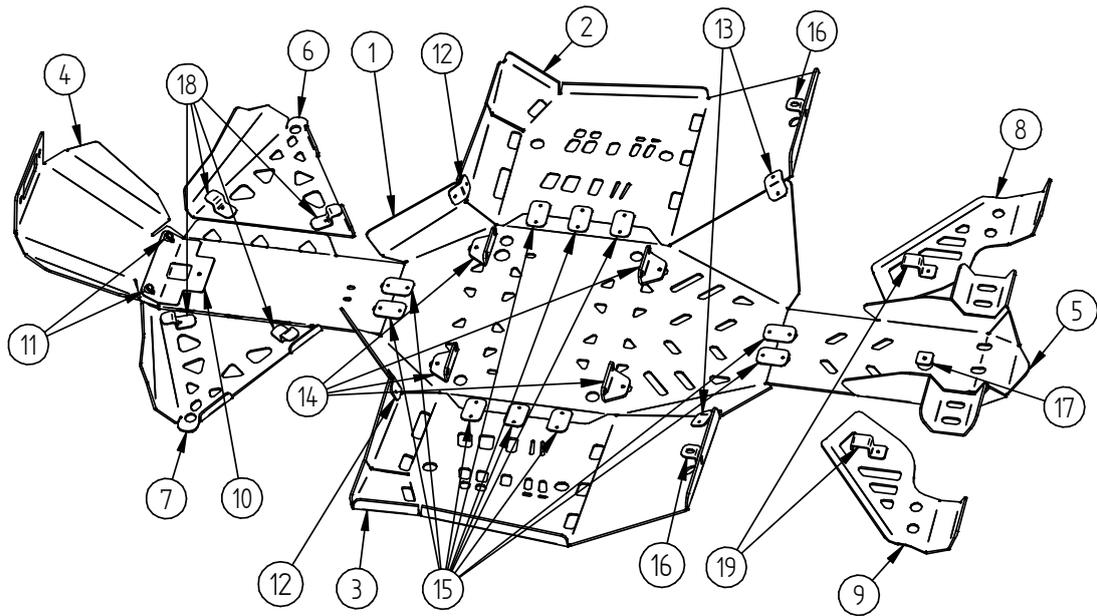

FITTING INSTRUCTIONS


Step 1

Remove all standard plastic covers.

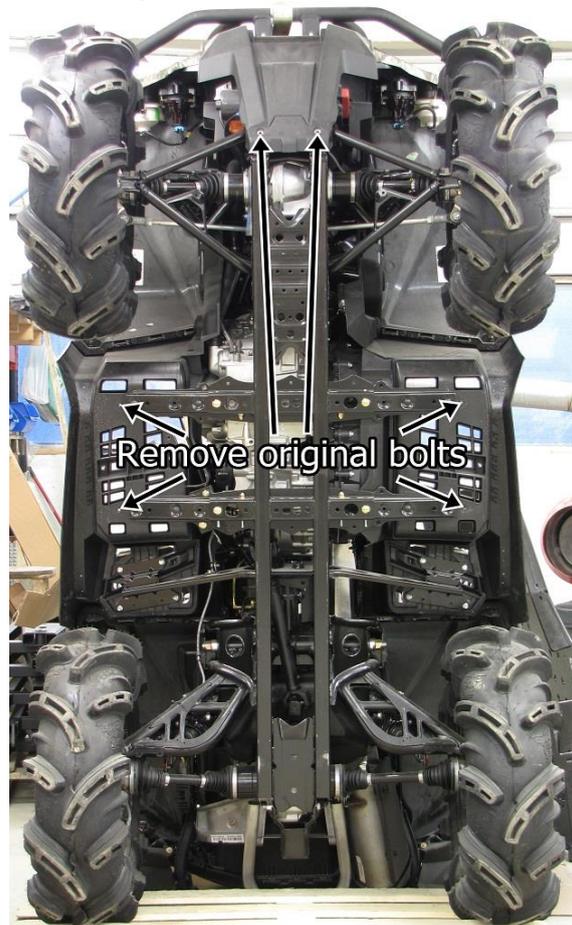


Step 2

Install brackets 03.3502. Place brackets same plane as frame.

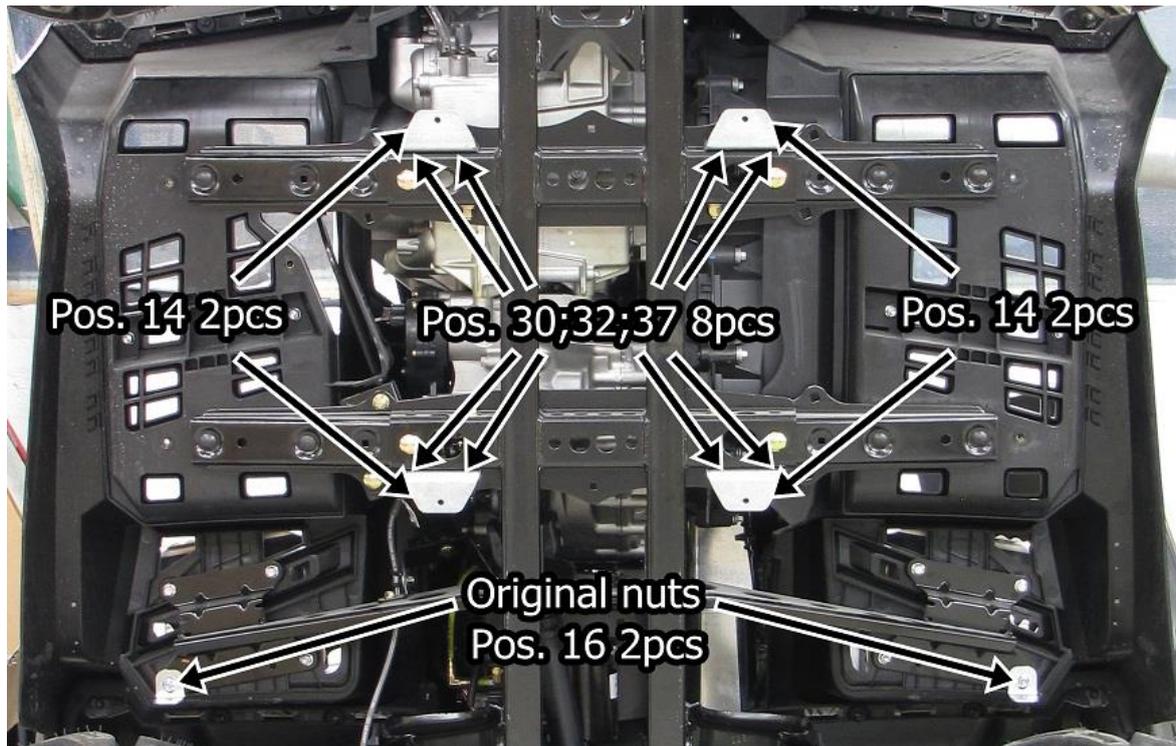


Step 3


Install middle part 02.10001.

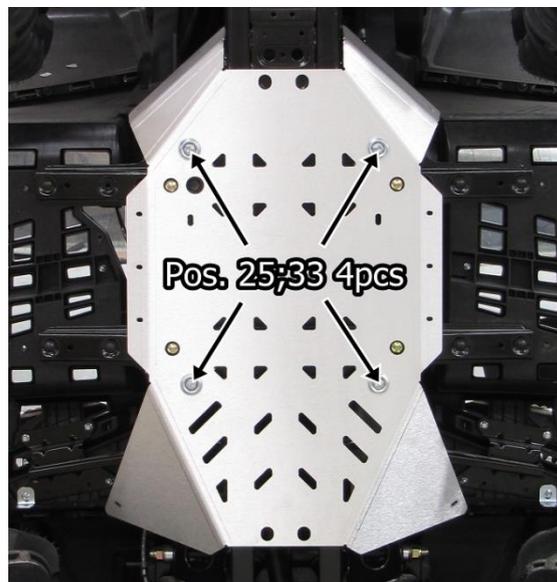



Step 4 Install plates 02.5006, 02.10006, 02.10007.

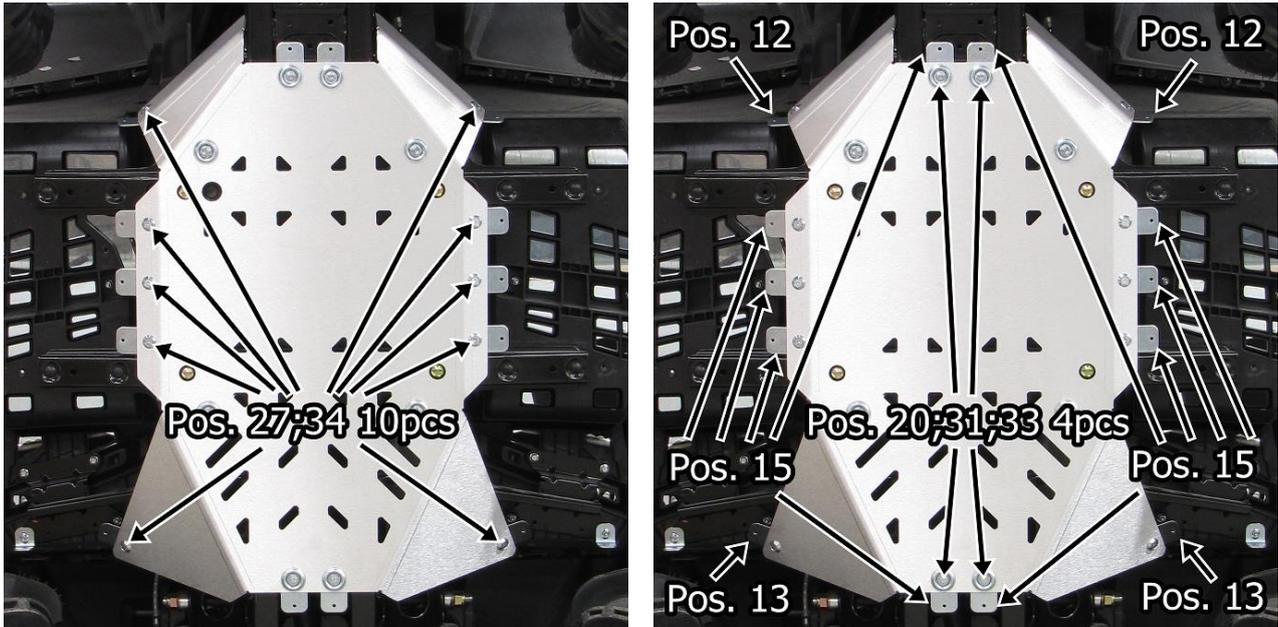


Step 5 Install right side part 02.10002 and left side part 02.10003.

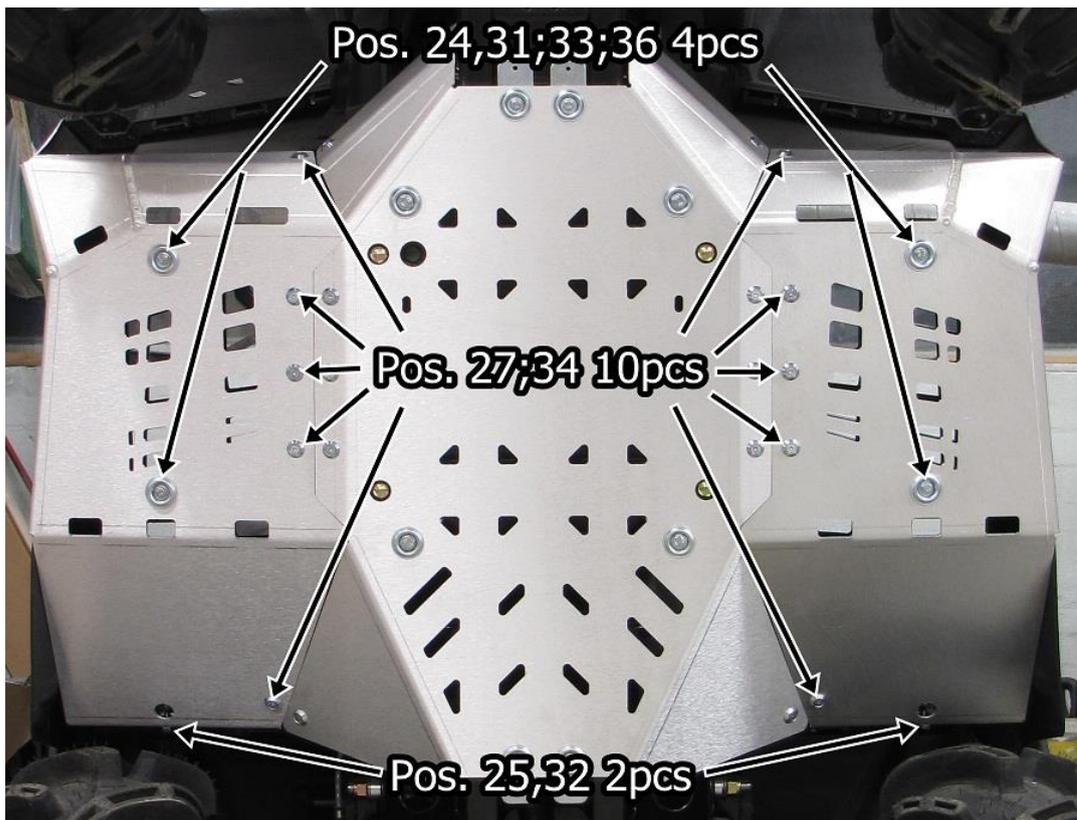


Step 6 Install front part 02.8402K.

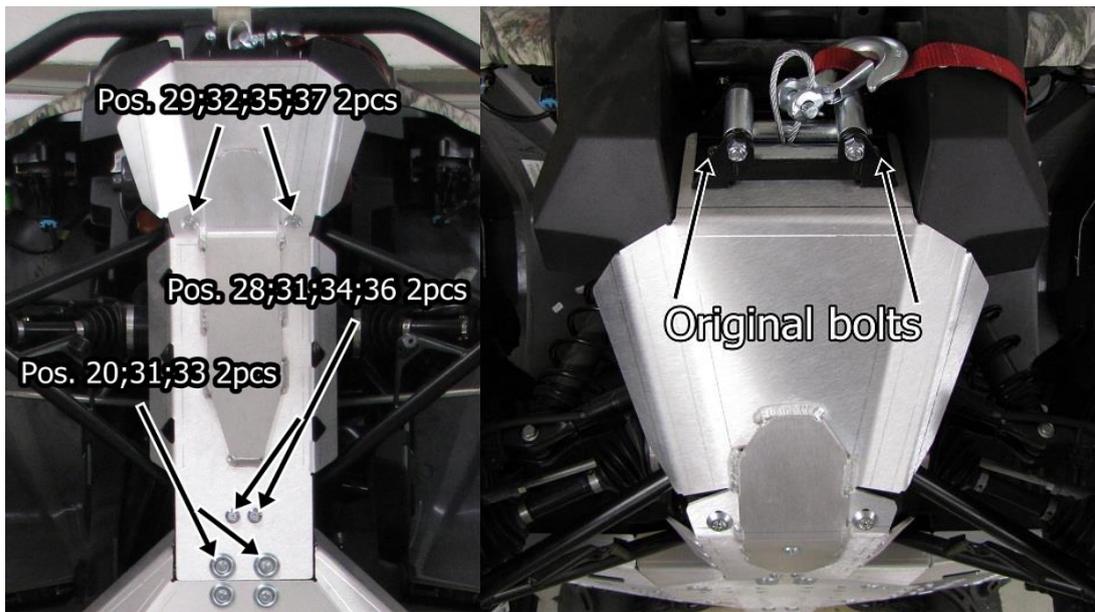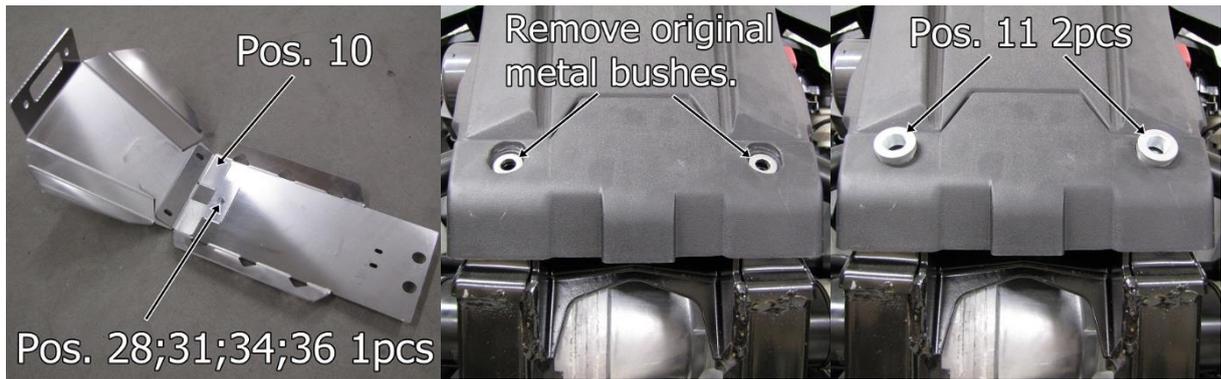


Step 7 Install rear part 02.8203K.

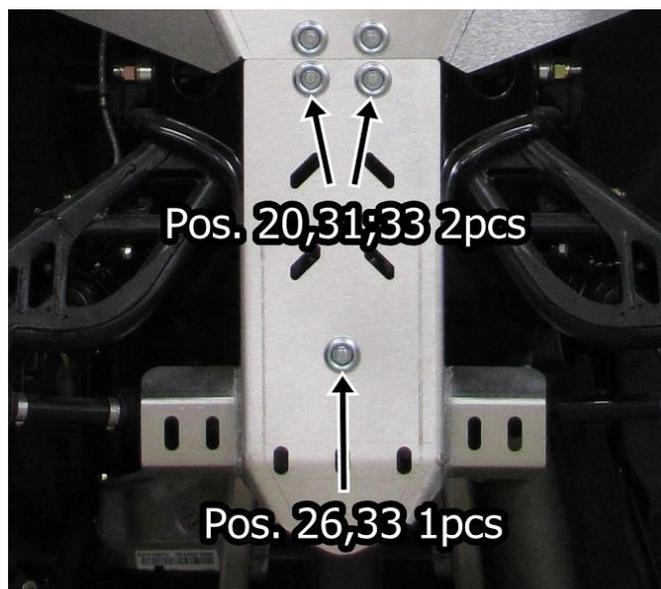

Step 8 Install front arms protections 02.8204, 02.8205 and clamps 02.8210.

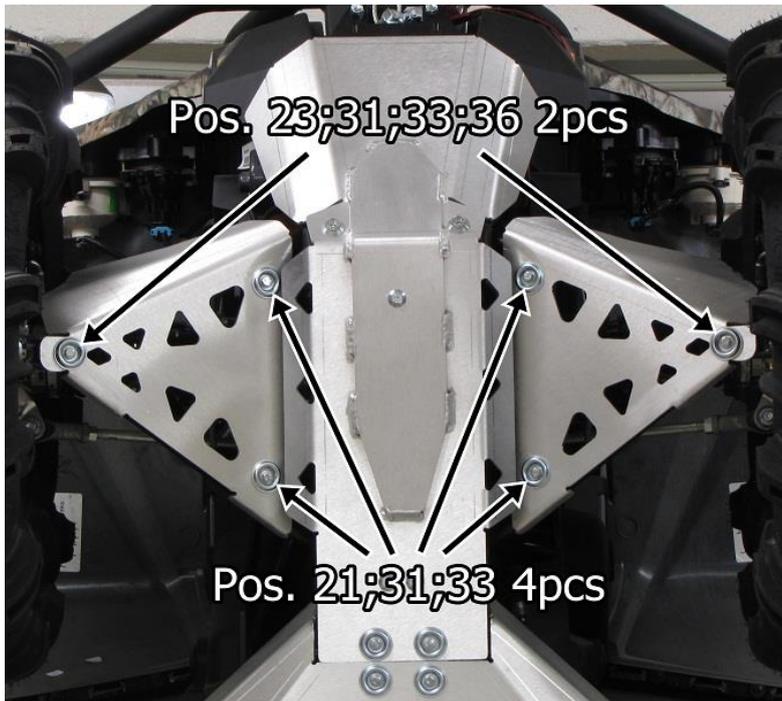

Step 9 Install rear arms protections 02.8206, 02.8207 and clamps 02.5709.

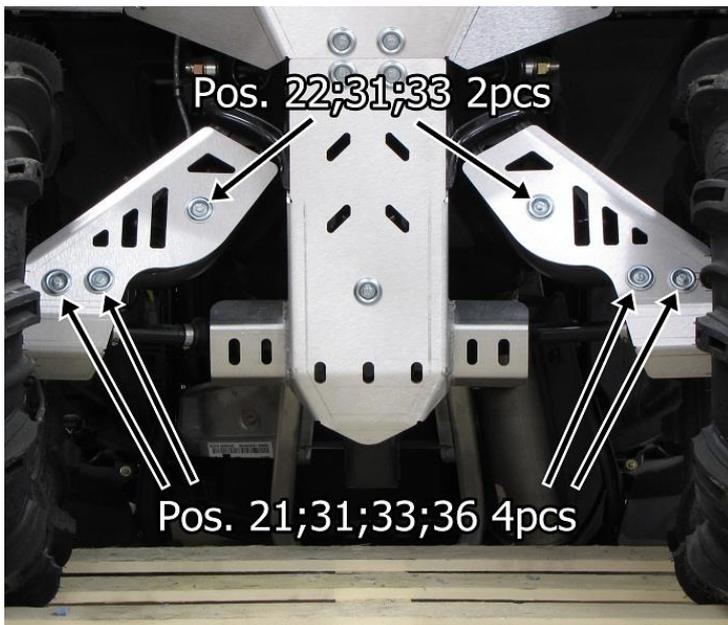

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld