



[code.ironbaltic.com/u/0bAfbqVc](https://code.ironbaltic.com/u/0bAfbqVc)

## PLASTIC SKID PLATE

# CAN AM

## Outlander MAX G2 (2013-2016)

## XMR 1000 G2 (2013-2016)

Code 02.10100

Version 22082023





**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.10101	1
2	Right side part	02.10102	1
3	Left side part	02.10103	1
4	Front part	02.8502K	1
5	Rear part	02.8303K	1
6	Front right arm protection	02.8304	1
7	Front left arm protection	02.8305	1
8	Rear right arm protection	02.8306	1
9	Rear left arm protection	02.8307	1
10	Plate for front part	02.10004	1
11	Bush for front part	02.10005	2
12	Connecting plate (40)	02.10006	2
13	Connecting plate (45)	02.10104	2
14	Bracket	03.3502	4
15	Plate	02.5006	11
16	Bracket	03.1502	2
17	Plate	02.2305	1
18	Clamp for front arm protection	02.8210	4
19	Clamp for rear arm protection	02.5709	2
20	Front part bracket	02.8506	1
21	Bolt M6x16 DIN 933	OT.02.02.050	10
22	Bolt M6x20 DIN 933	OT.02.02.060	8
23	Bolt M6x30 DIN 933	OT.02.02.080	2
24	Bolt M6x40 DIN 933	OT.02.02.100	2
25	Bolt M6x60 DIN 933	OT.02.02.140	4
26	Bolt M8x20 DIN 933	OT.02.02.180	9
27	Bolt M8x35 DIN 933	OT.02.02.210	1
28	Bolt M6x20 DIN 7991	OT.02.04.030	20
29	Bolt M6x30 DIN 7991	OT.02.04.050	3
30	Bolt M8x60 DIN 7991	OT.02.04.210	2
31	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
32	Washer Ø6/15 SFS 3738	OT.04.03.020	39
33	Washer Ø8/20 SFS 3738	OT.04.03.030	12
34	Dished washer	14.503	34
35	Conical washer Ø6	14.502	22
36	Conical washer Ø8	14.501	2
37	Nyloc nut M6 DIN 985	OT.03.02.030	13
38	Nyloc nut M8 DIN 985	OT.03.02.040	10

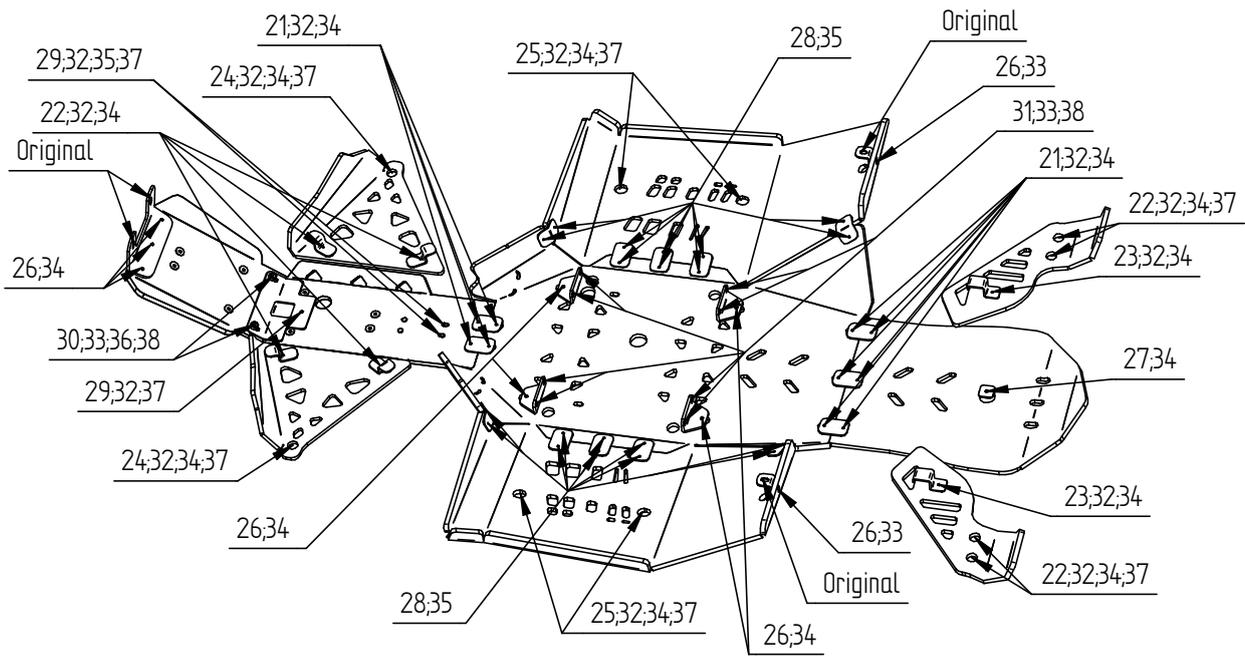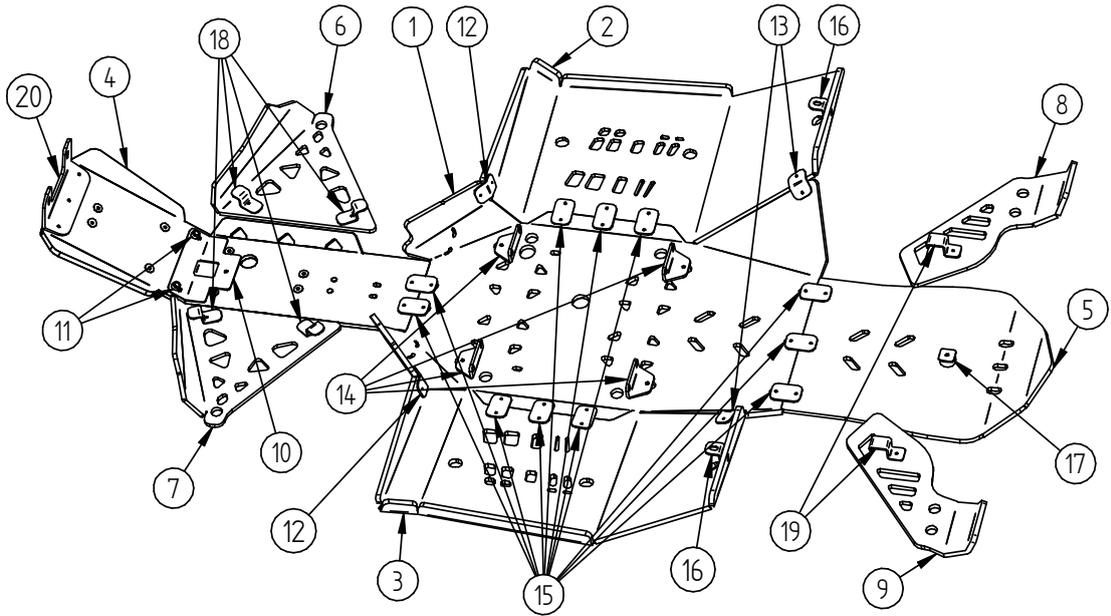

# FITTING INSTRUCTIONS




**NB!**

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**


## Step 1

Remove all standard plastic covers.

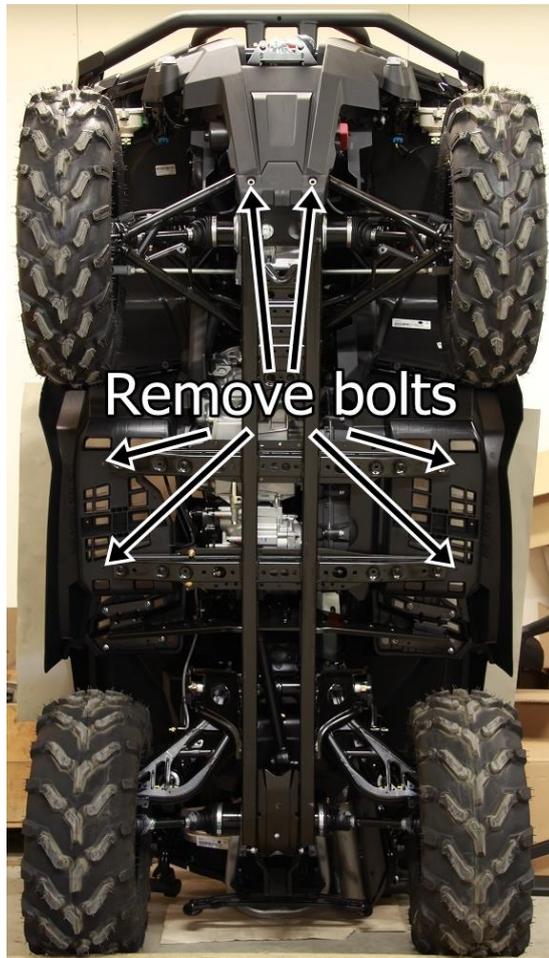


## Step 2

Install brackets 02.3502. Place brackets same plane as frame.

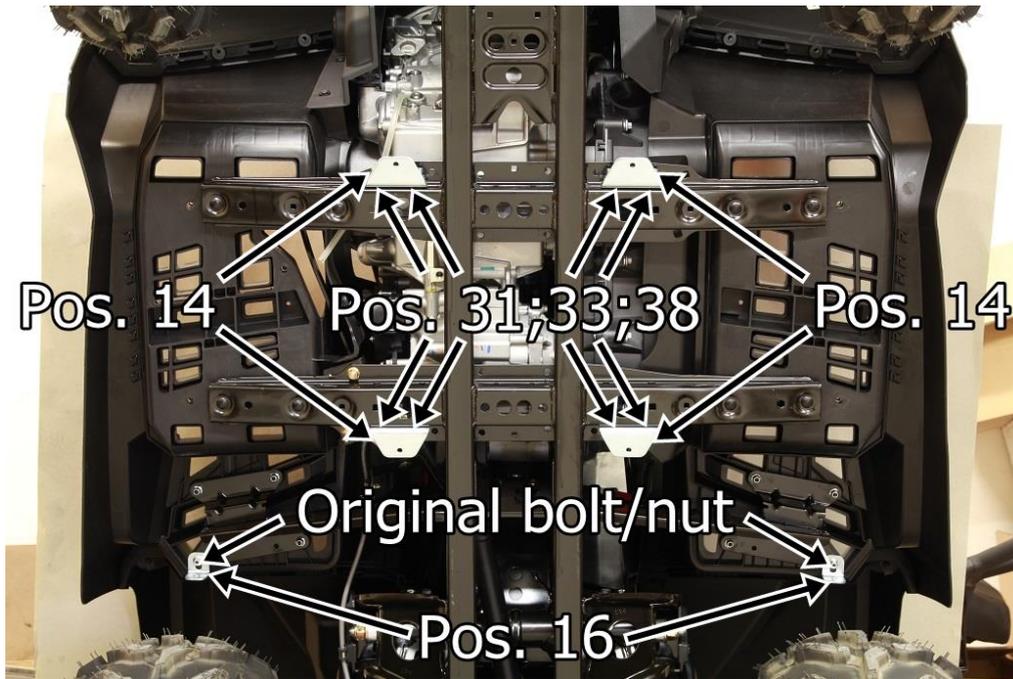


## Step 3


Install middle part 02.10101.

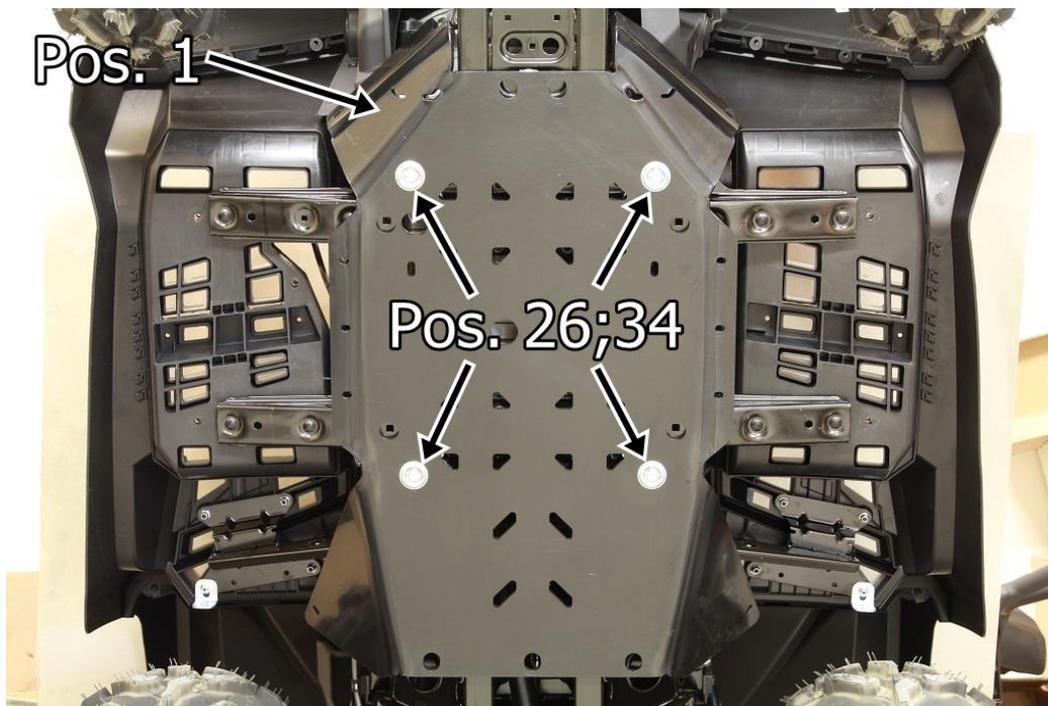

**Step 4** Install plates 02.5006, 02.10006, 02.10104.




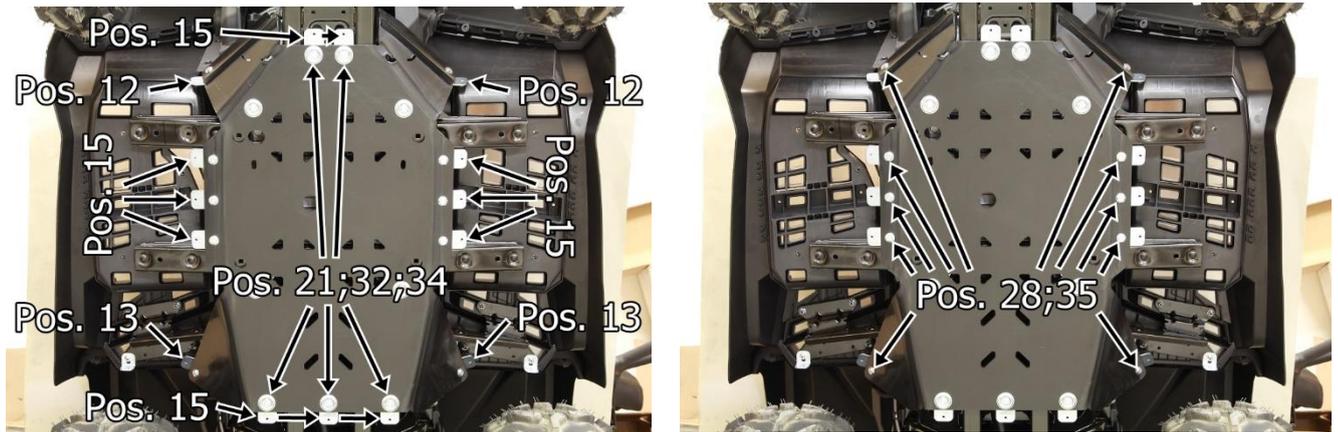


**Step 5** Install right side part 02.10102 and left side part 02.10103.

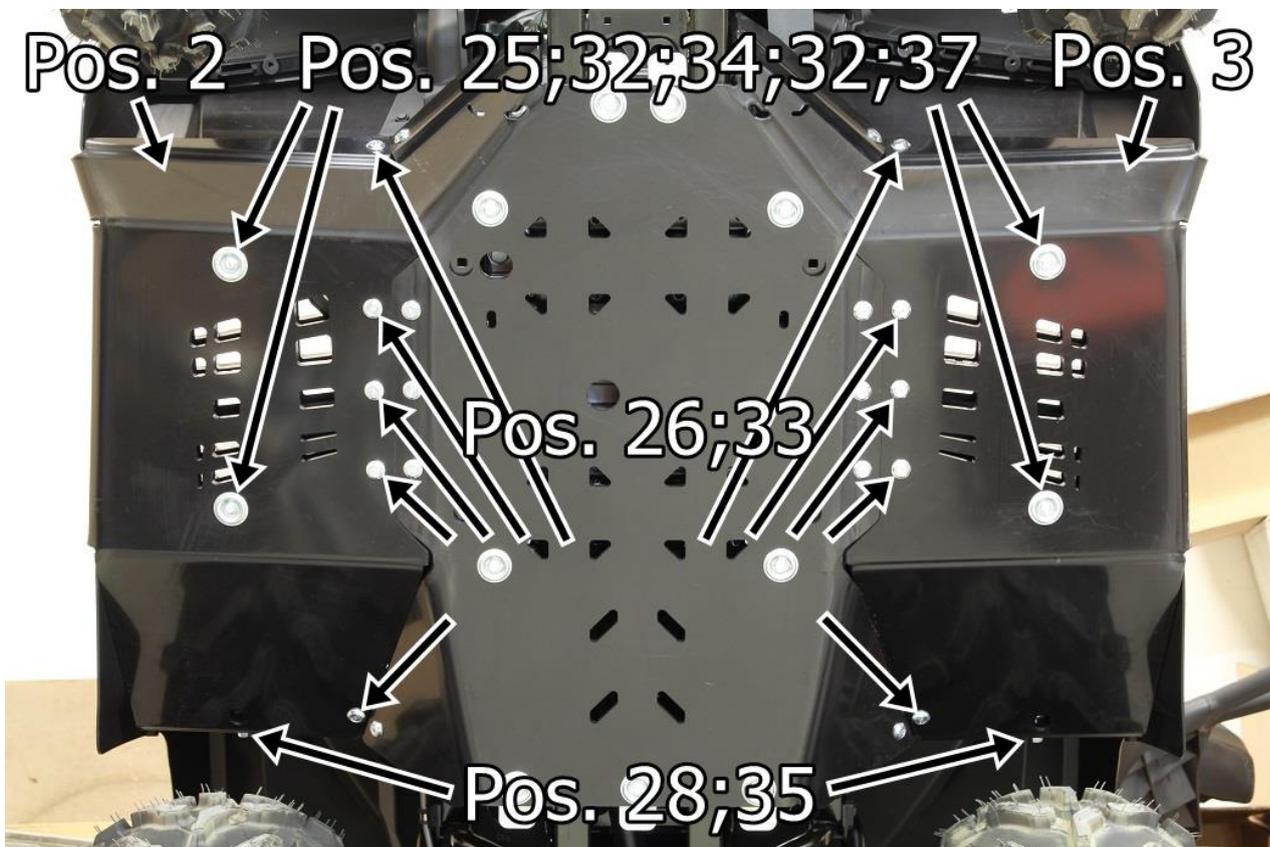


## Step 6

Install front part 02.8502K.

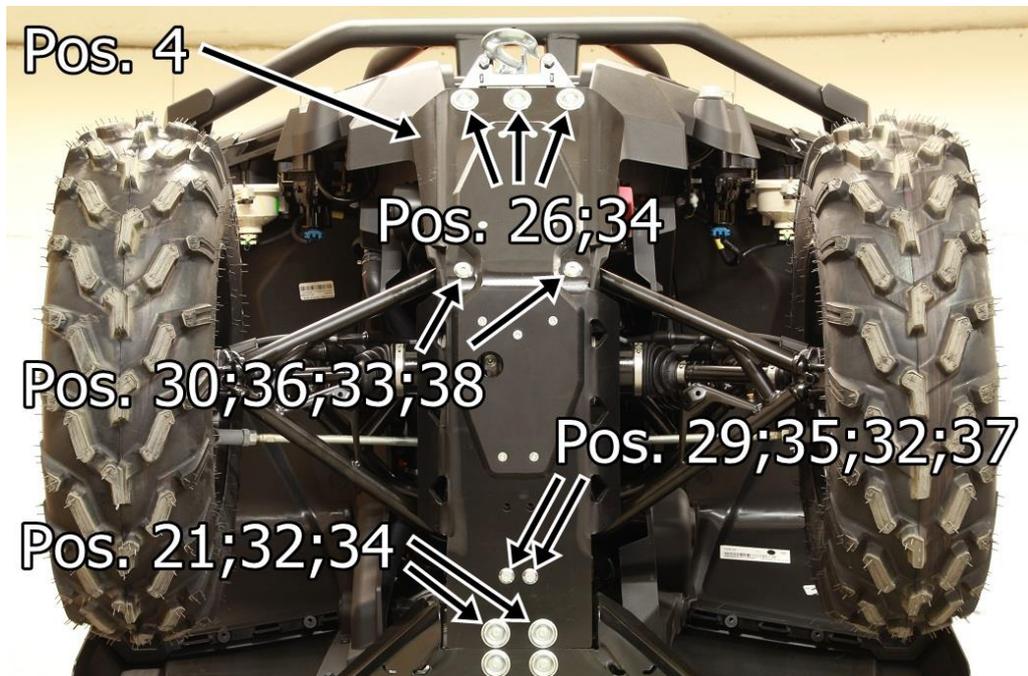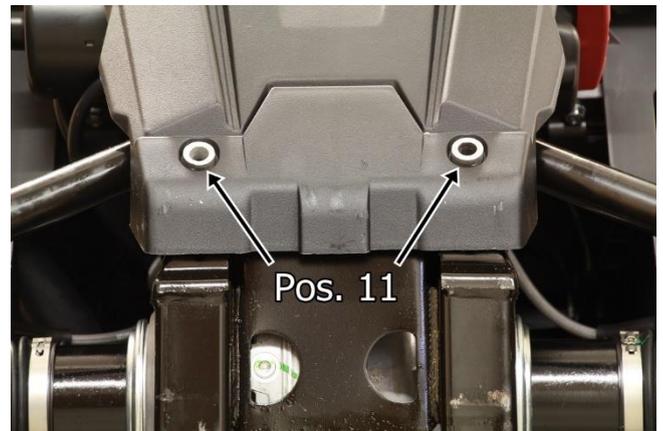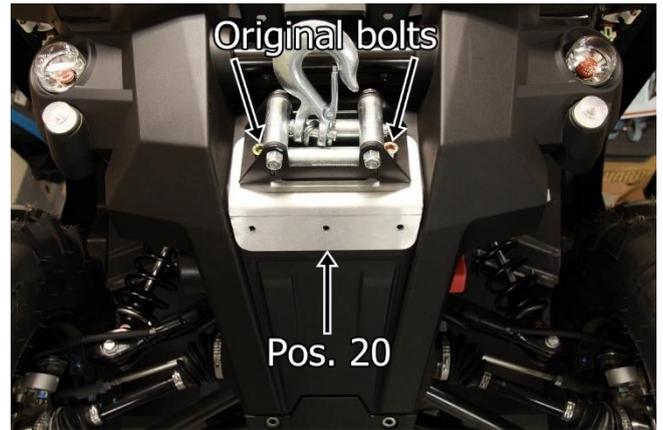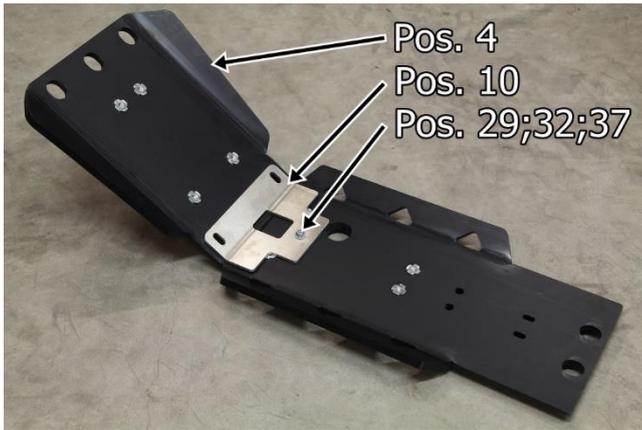


**Step 7**

Install rear part 02.8303K.

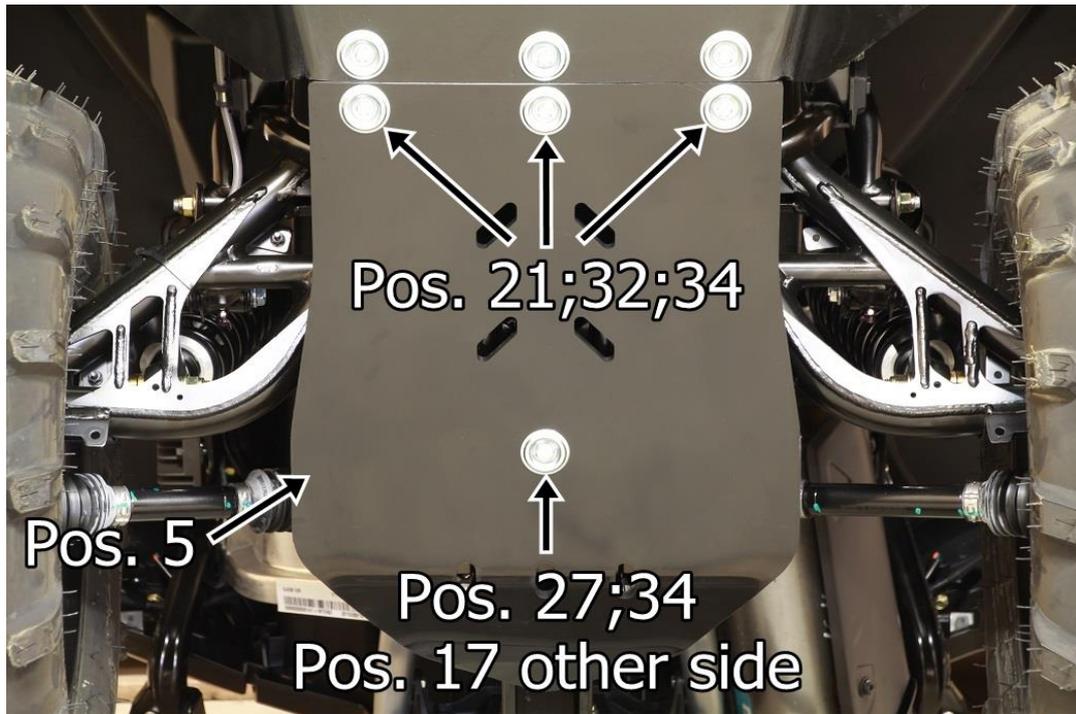


**Step 8**

Install front arms protections 02.8304, 02.8305 and clamps 02.8210.

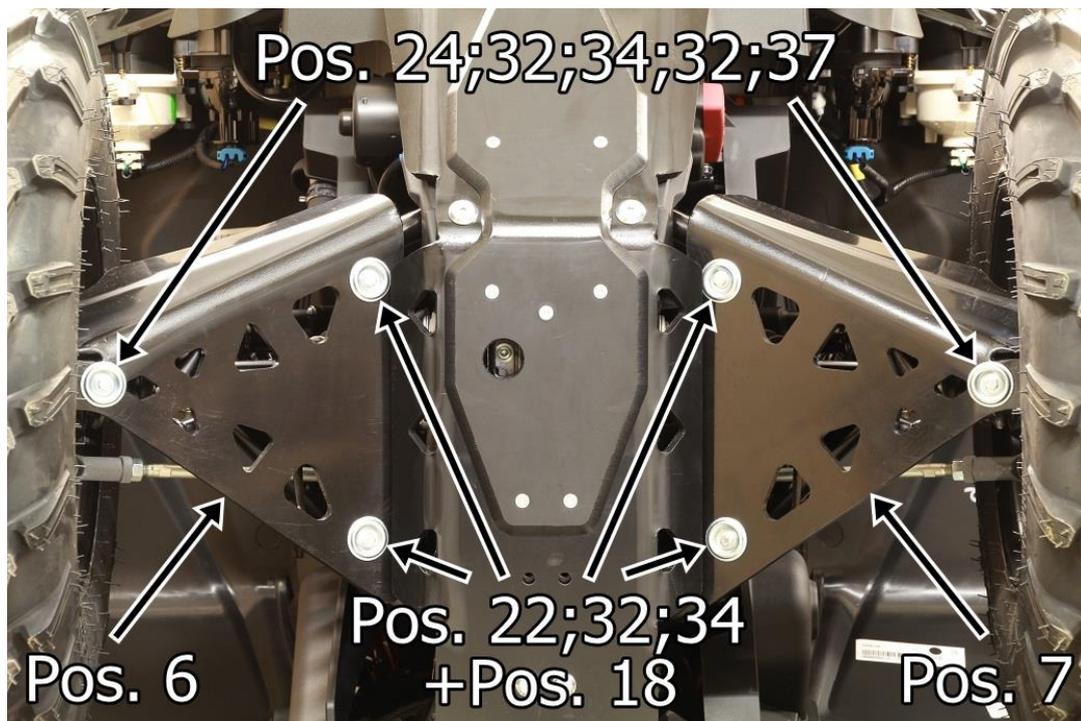

**Step 9** Install rear arms protections 02.8306, 02.8307 and clamps 02.5709.

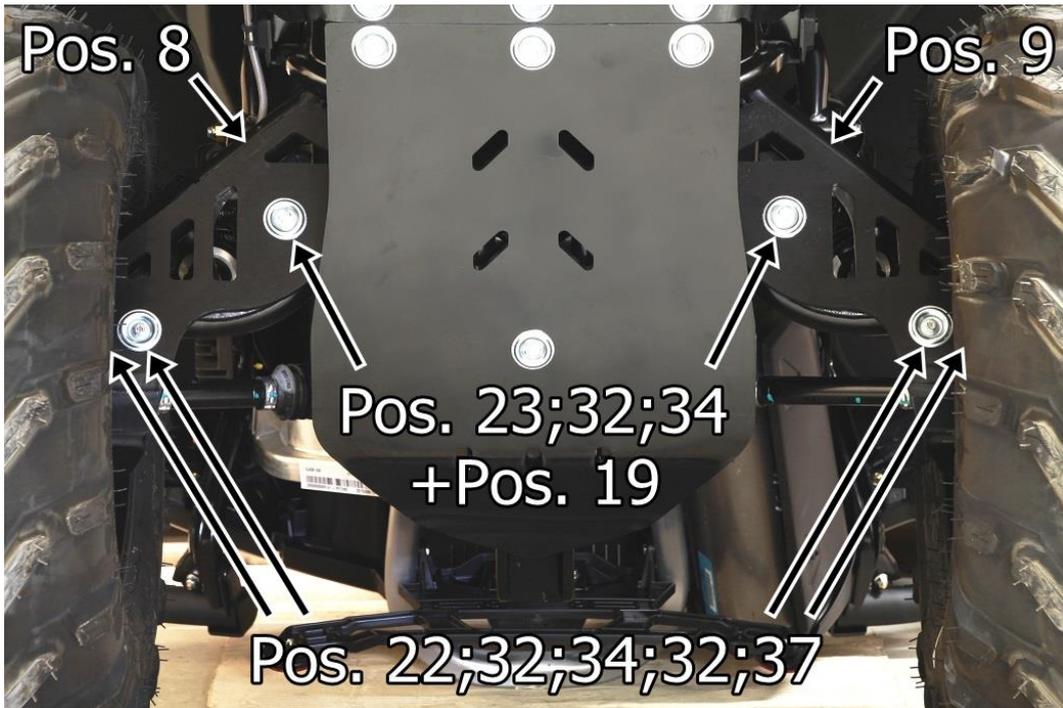





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticld](https://www.youtube.com/user/ironbalticld)