


## REAR A-ARM GUARDS (ALUMINIUM)

DOWNLOAD MULTILINGUAL  
USER MANUAL

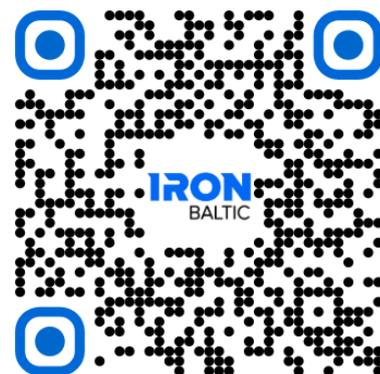


[code.ironbaltic.com/u/0yiQOF3X](https://code.ironbaltic.com/u/0yiQOF3X)

## CFORCE

500 / 550 / 600 / 800

Code 02.1076VP

Version 23082023

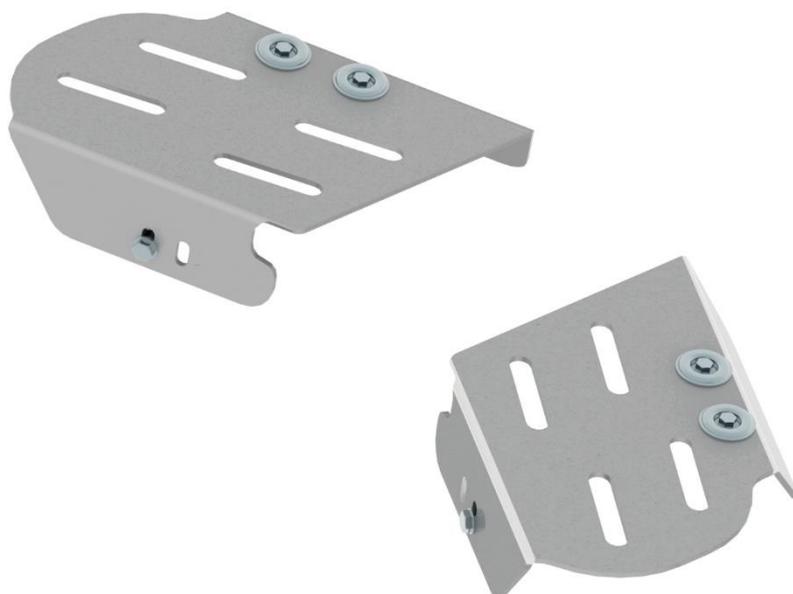

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION



Pos.	Description	Code	Amount
1	Front right arm guard	02.1076P	1
2	Front left arm guard	02.1076V	1
3	Angle	03.1502	2
4	Dished washer	14.503	4
5	Bolt M6x12 DIN 933	OT.02.02.030	4
6	Bolt M8x20 DIN 933	OT.02.02.180	2
7	Washer Ø6/15 DIN 125	OT.04.03.020	4
8	Washer Ø8 DIN 125	OT.04.03.030	2

# FITTING INSTRUCTIONS



**NB!**

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**

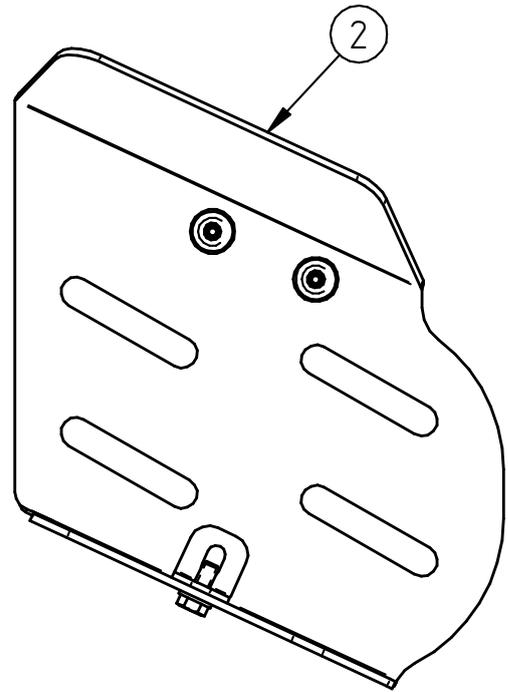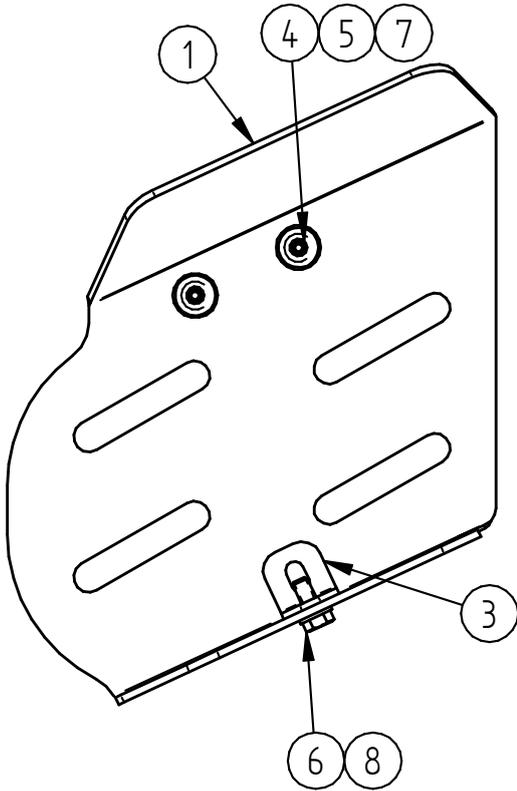

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

