



code.ironbaltic.com/u/Cc81sV4T


ALUMINIUM SKID PLATE

CF MOTO

500

Code 02.1080

Version 23082023


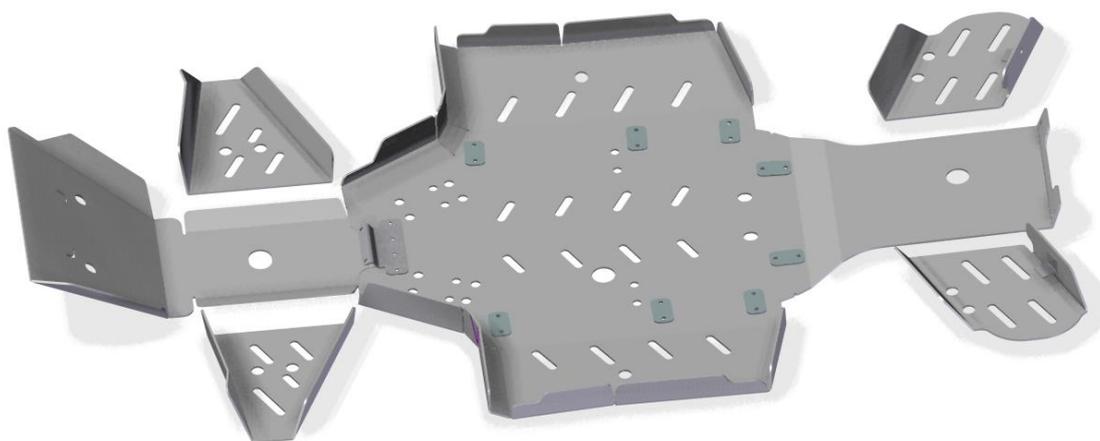


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Nimetus	Kood	Kogus
1	Middle part	02.7901	1
2	Front part	02.1074	1
3	Rear part	02.7903	1
4	Front left arm protection	02.1075V+	1
5	Front right arm protection	02.1075P+	1
6	Rear left arm protection	02.1076V+	1
7	Rear right arm protection	02.1076P+	1
8	Right protection	02.7904k	1
9	Left protection	02.7905k	1
10	Bracket	02.1072+	1
11	Rear arm clamp	03.1502	2
12	Plate	02.5006	8
13	Bolt M6x12 DIN 933	OT.02.02.030	4
14	Bolt M6x16 DIN 7991	OT.02.04.020	16
15	Bolt M6x20 DIN 933	OT.02.02.060	12
16	Bolt M6x80 DIN 933	OT.02.02.160	2
17	Bolt M8x20 DIN 933	OT.02.02.180	6
18	Conical washer Ø6	14.502	16
19	Dished washer	14.503	18
20	Washer Ø6/15 SFS 3738	OT.04.03.020	22
21	Washer Ø8/20 SFS 3738	OT.04.03.030	2
22	Nut M6 Nyloc DIN 985	OT.03.02.030	4

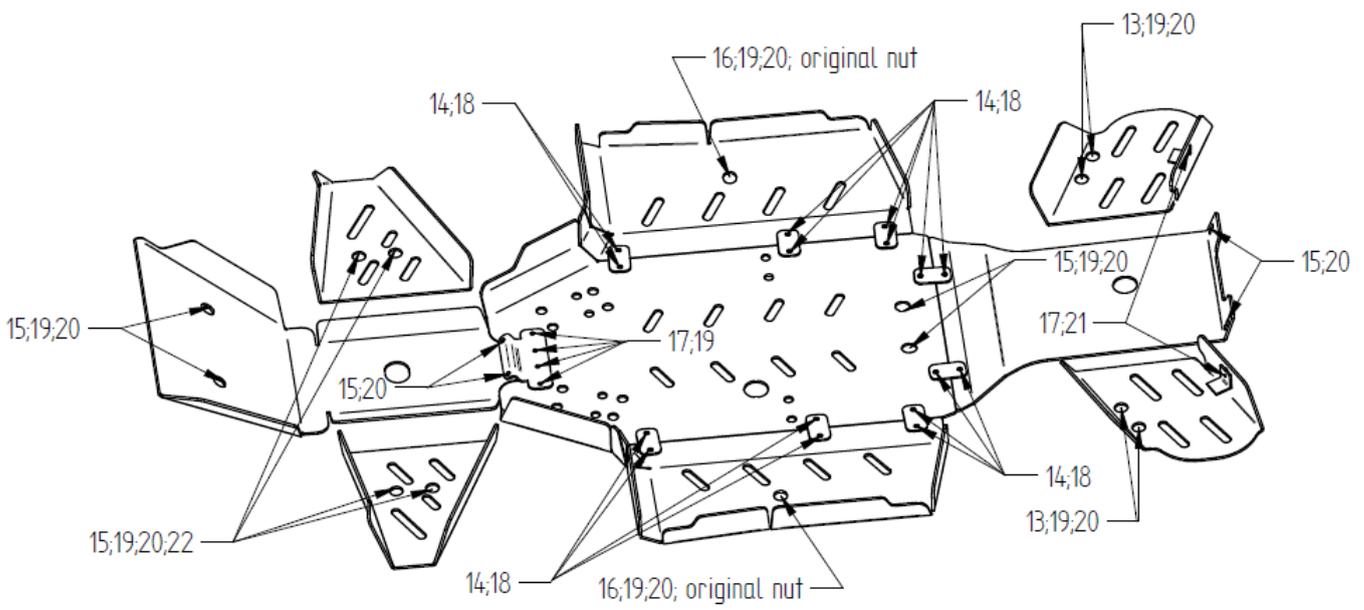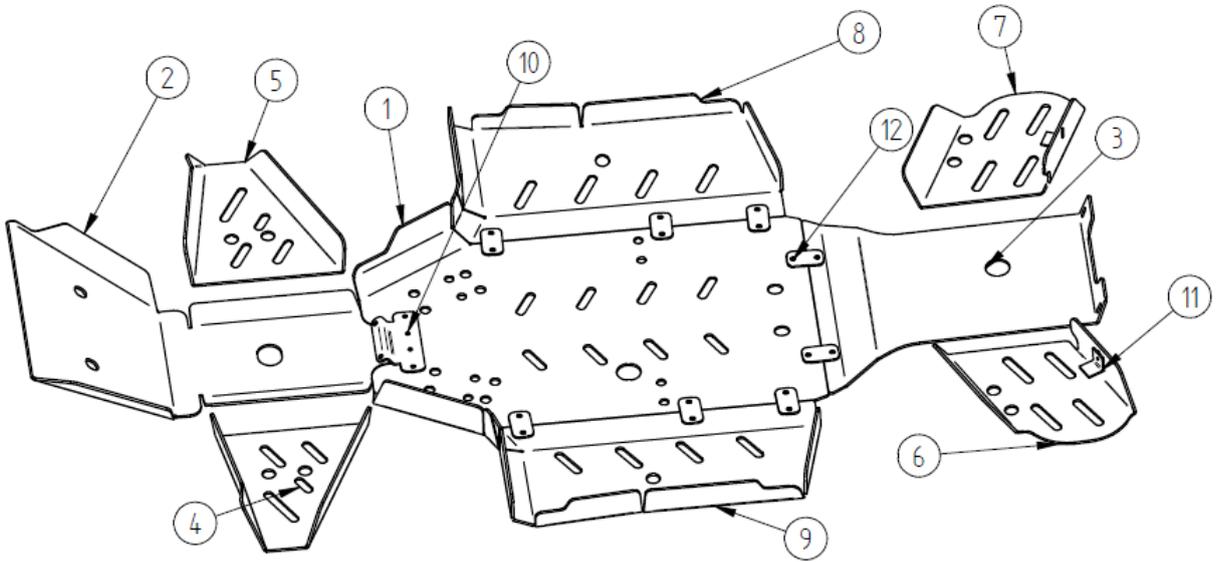


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers.




Step 2 Install bracket 02.1072+.

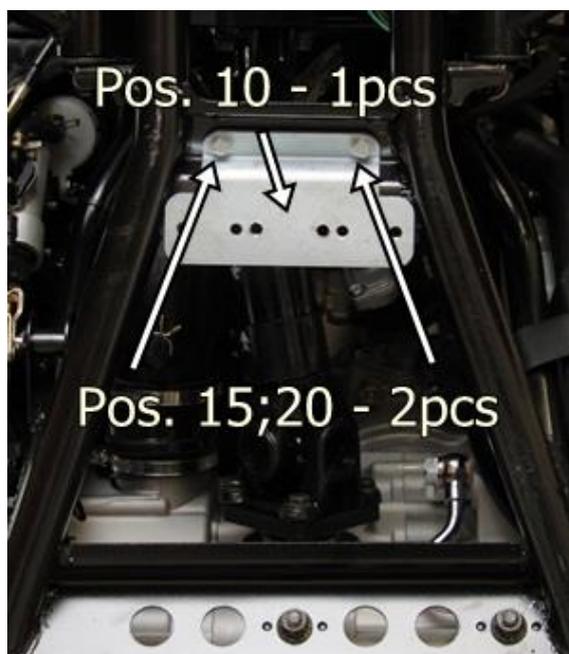


Step 3 Install middle part 02.7901.

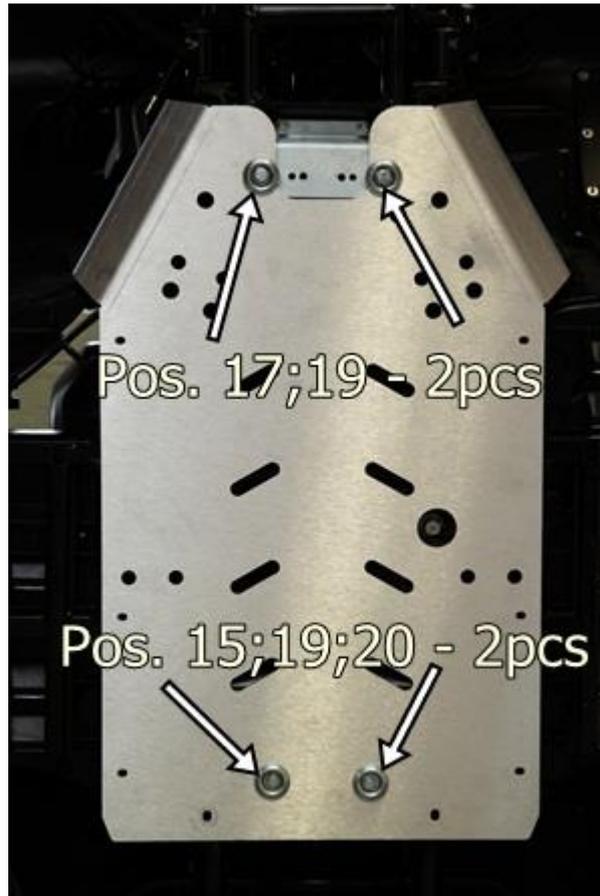


Step 4 Install plates 02.5006 to middle part.

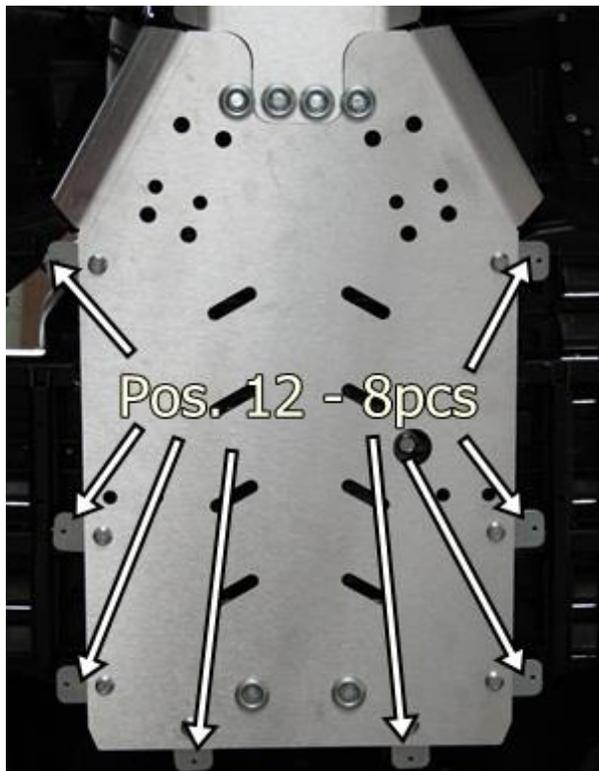


Step 5 Install rear part 02.7903.

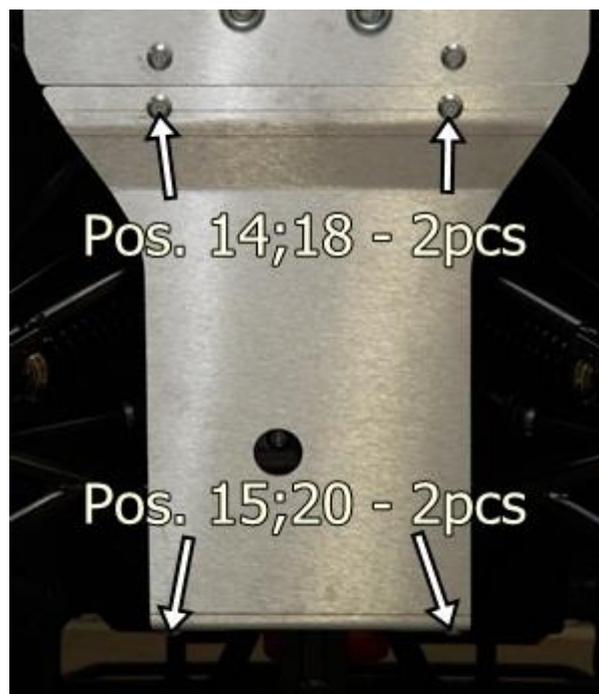


Step 6 Install front part 02.1074.

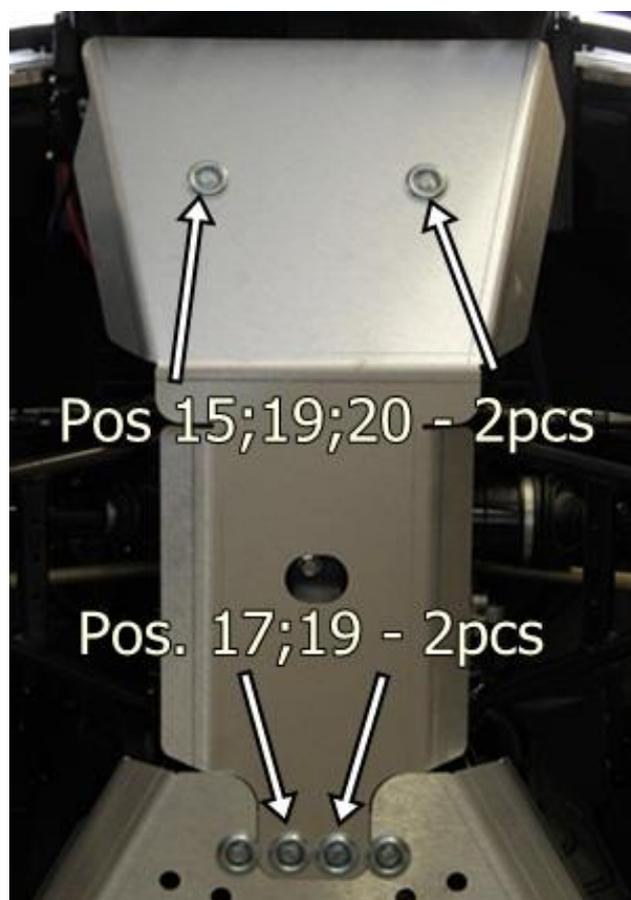

Step 7 Install side protections 02.7904K, 02.7905K, use bolts M6x16, M6x80 and original nuts. M6x80 tip goes into original thread under it (remove that original bolt and nut).

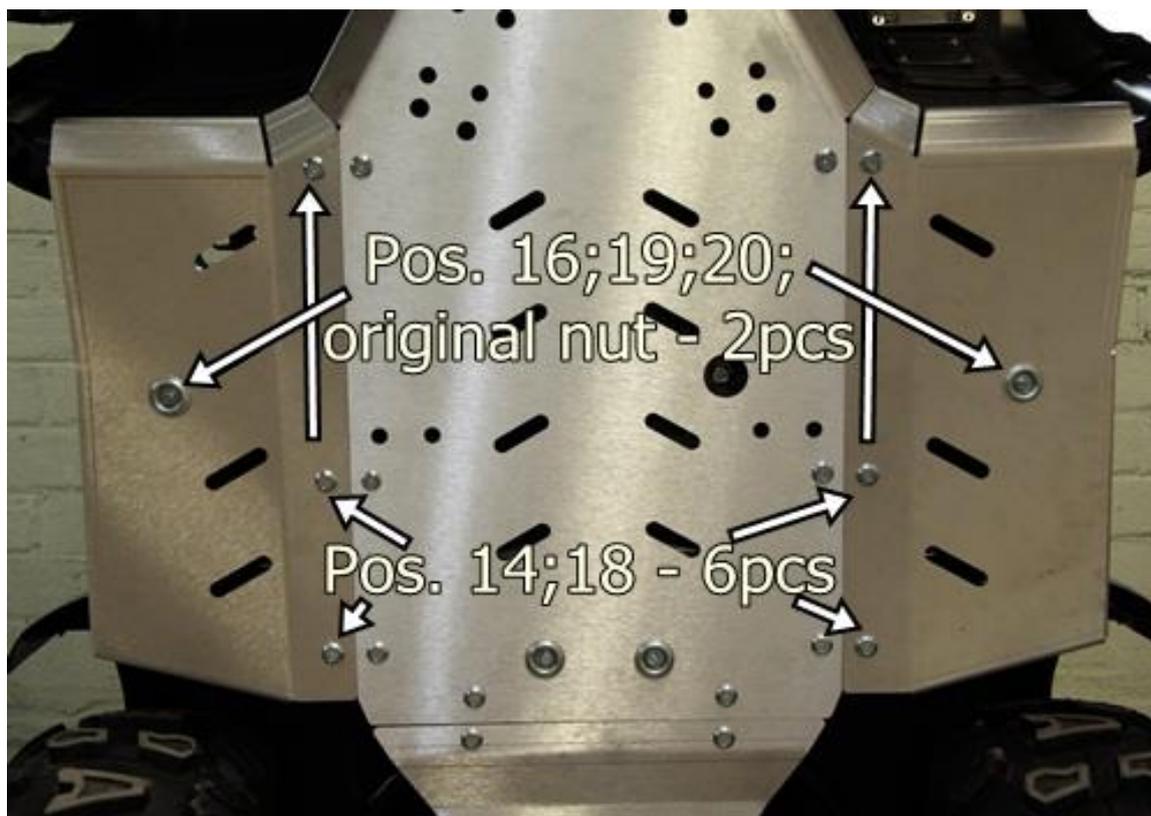



Step 8 Install front arms protections 02.1075P+, 02.1075V+.

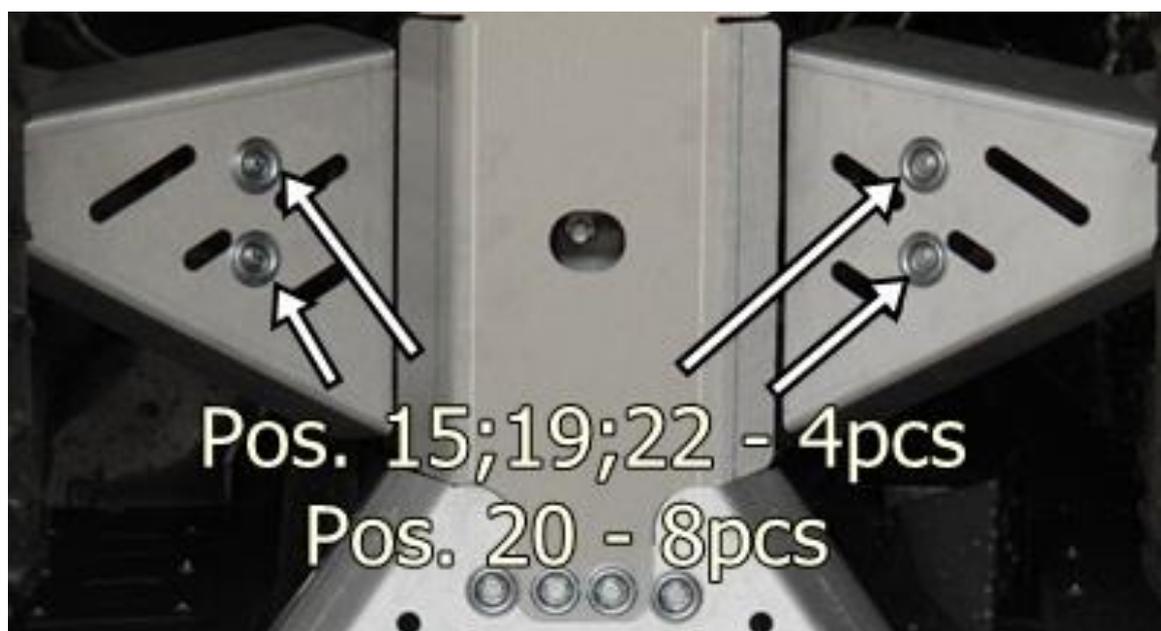

Step 9

Install rear arms protections 02.1076P+, 02.1076V+.

First install the bracket 03.1502 (Pos.11) to the arm protection (do not tighten the bolt). Then place the protection on to the ATV's A-arm. Press the guard against the A-arm tube and tighten the bracket bolt so that the side of the bracket is against the A-arm tube. Finally, attach the other side of the A-arm protection.

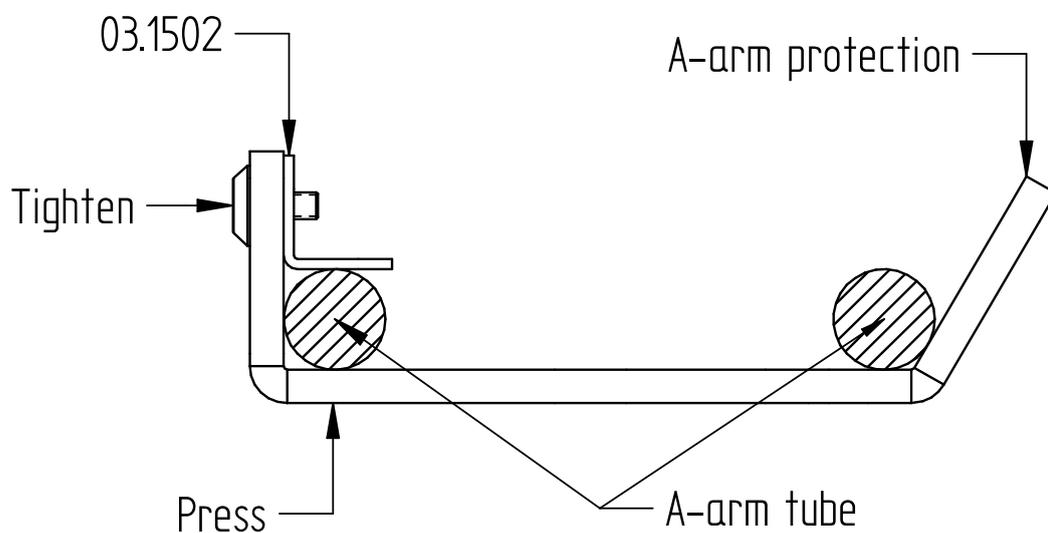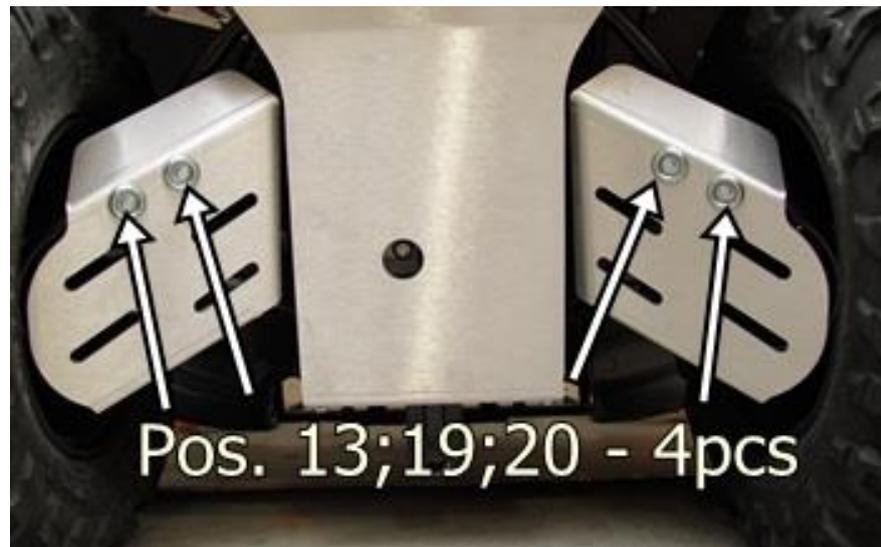

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

