



PLASTIC SKID PLATE

HONDA

TRX 650 / 680

Code 02.1110

Version 23082023





Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Skid plate	02.1111K	1
2	Front protection	02.1112	1
3	Front left arm protection	02.1115	1
4	Front right arm protection	02.1116	1
5	Rear left arm protection	02.1113	1
6	Rear right arm protection	02.1114	1
7	Clamp	02.906	1
8	Bracket	02.1018	2
9	Bolt M6x30 DIN 7991	OT.02.04.050	4
10	Bolt M6x35 DIN 933	OT.02.02.090	10
11	Bolt M6x50 DIN 933	OT.02.02.120	2
12	Bolt M8x16 DIN 933	OT.02.02.170	2
13	Bolt M8x25 DIN 933	OT.02.02.190	8
14	Bolt M8x40 DIN 933	OT.02.02.220	4
15	Bolt M8x60 DIN 933	OT.02.02.250	2
16	Bolt M8x80 DIN 933	OT.02.02.270	2
17	Conical washer Ø6	15.502	4
18	Dished washer	14.503	20
19	Washer Ø 6/15 SFS 3738	OT.04.03.020	24
20	Washer Ø 8/20 SFS 3738	OT.04.03.030	12
21	Washer Ø 8/24 DIN 9021	OT.04.02.040	2
22	Nyloc nut M6 DIN 985	OT.03.02.030	12
23	Nyloc nut M8 DIN 985	OT.03.02.040	6

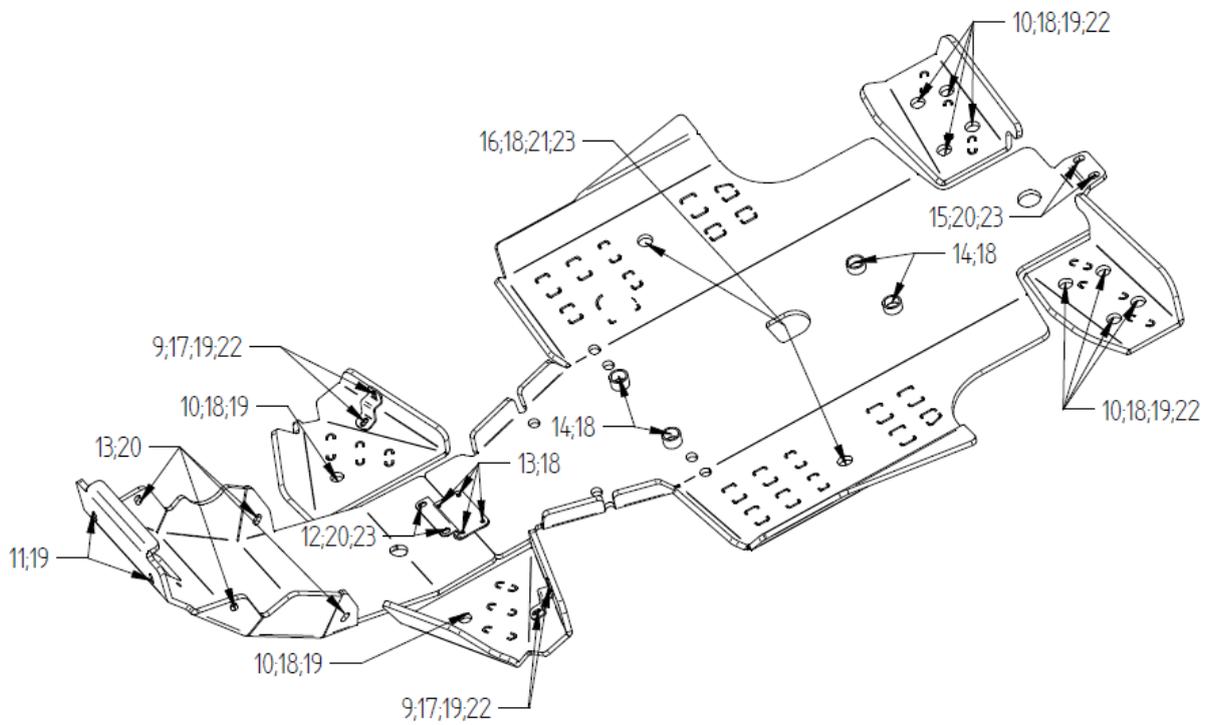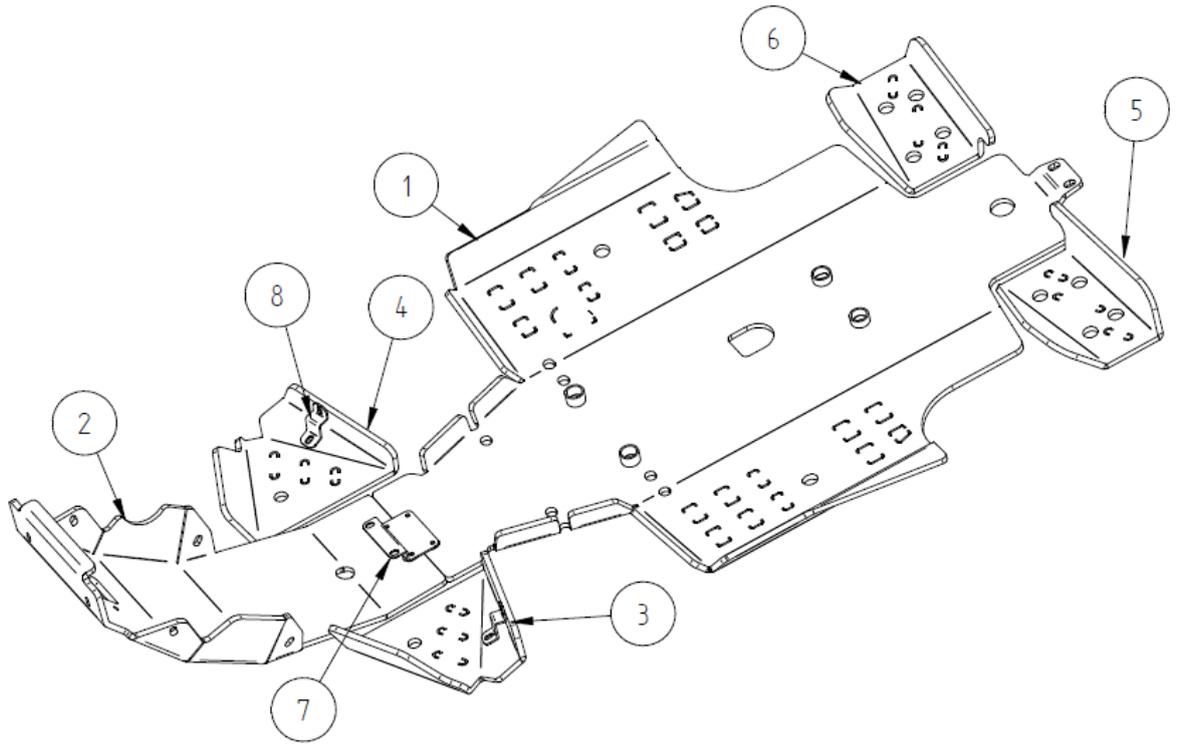


FITTING INSTRUCTIONS

Step 1


Remove all standard covers, roller and hitchball extender.

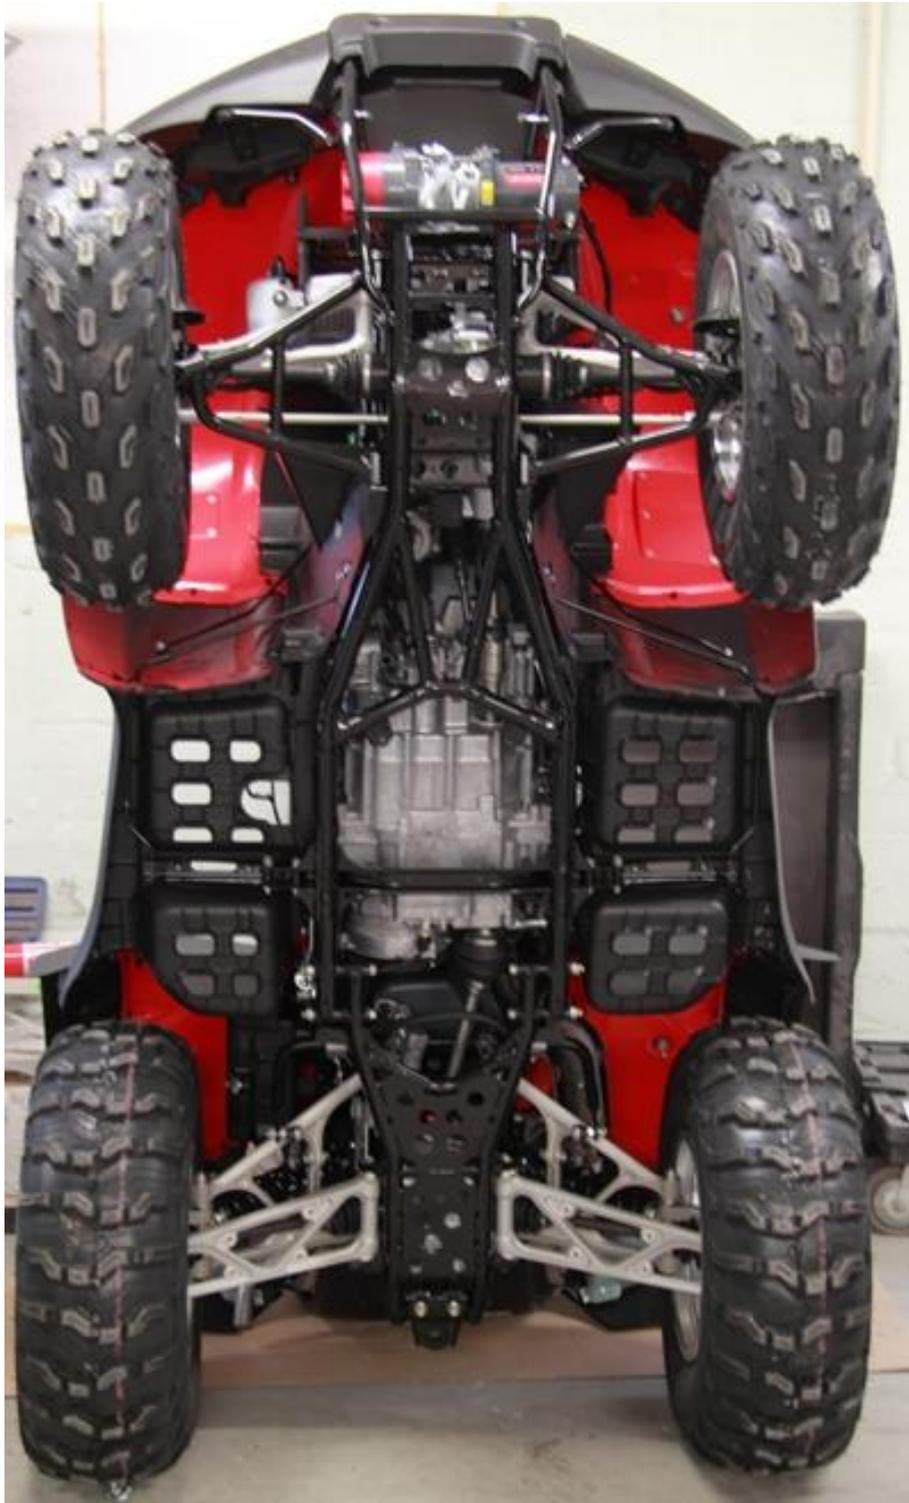



Step 2 Install clamp 02.906.

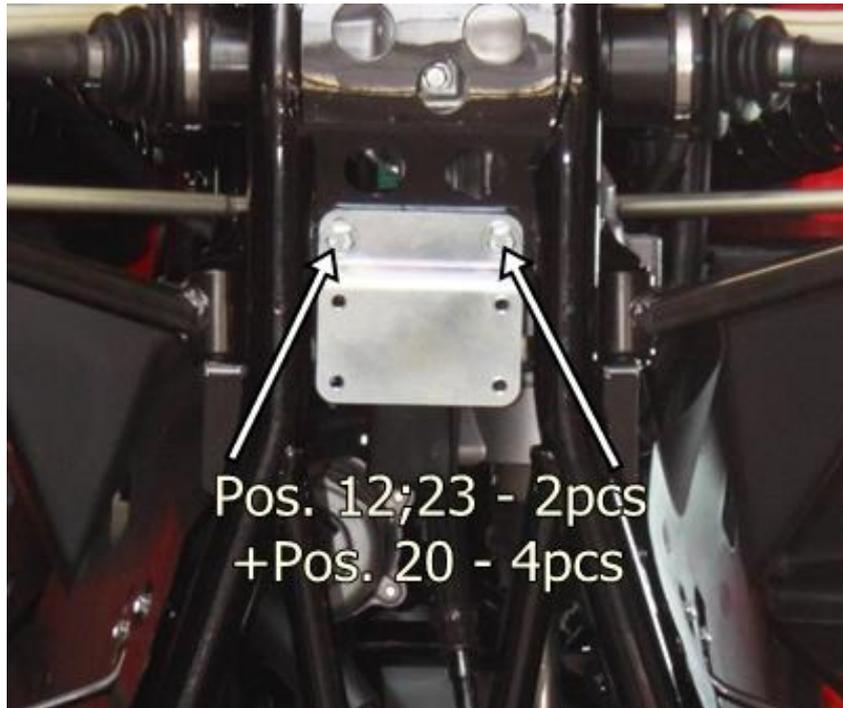


Step 3 Install skid plate, 02.1111K. Reinstall hitchball extender.

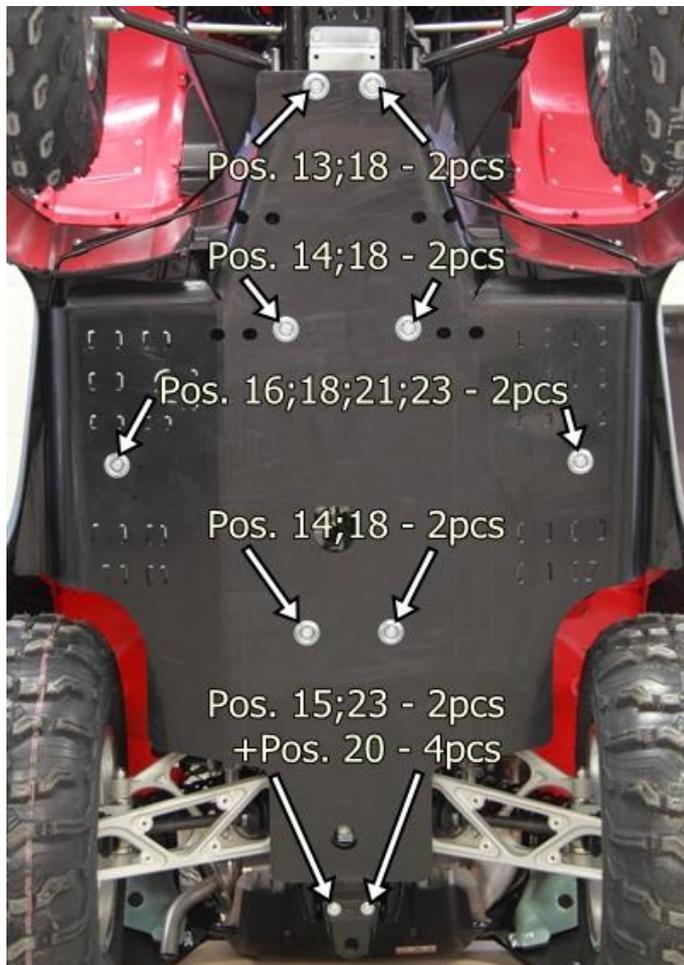

Step 4 Install front part. If you are using Front Mount System, then you do not have to use bottom bolts (pos.13;20).

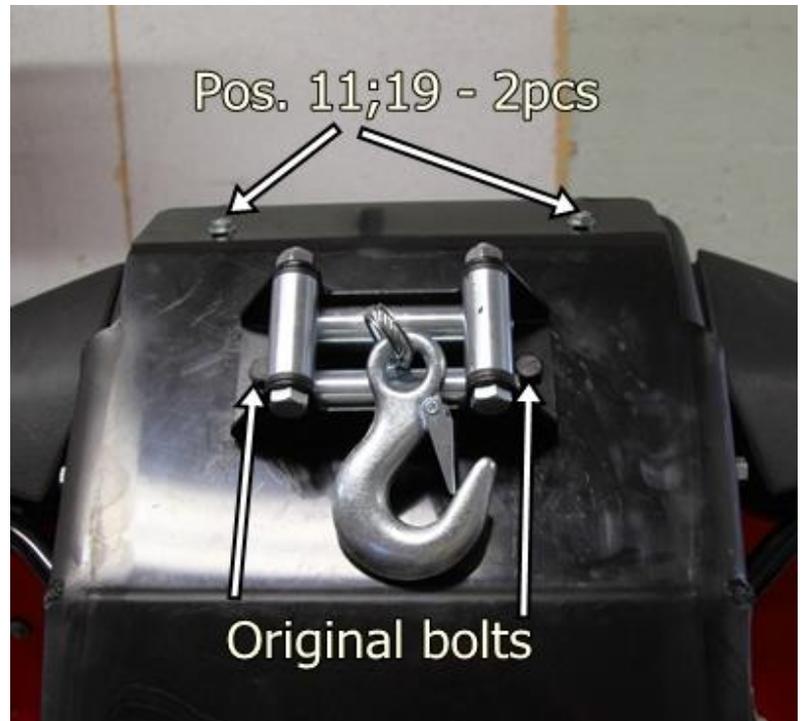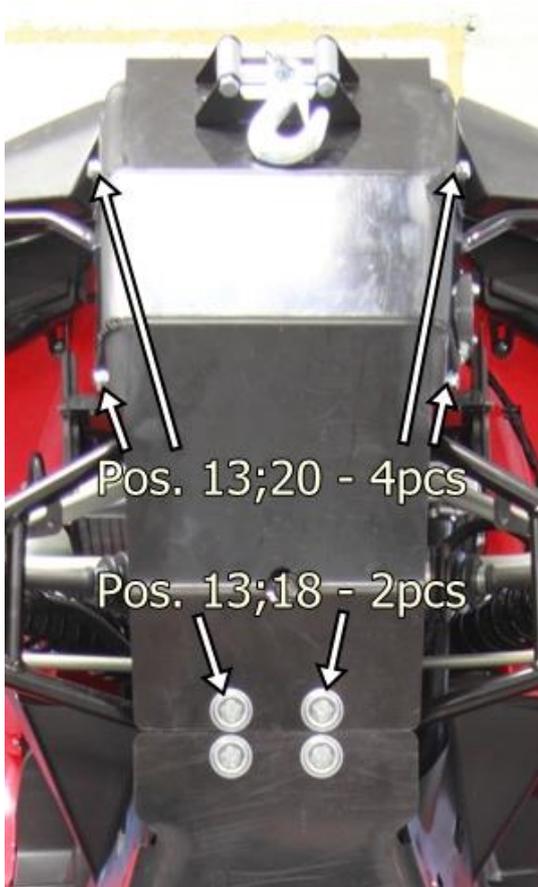


Step 5 Install rear arm protections, 02.1113 and 02.1114.

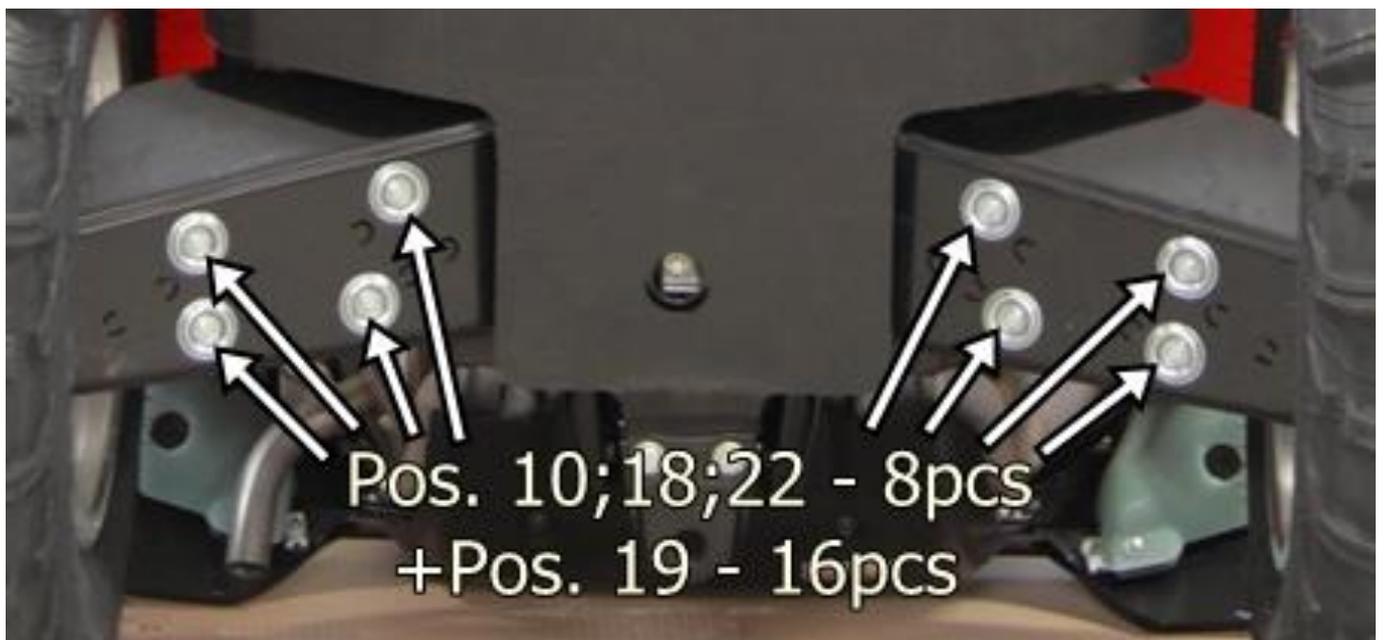

Step 6

Install front arm protections 02.1115 ja 02.1116, use brackets 02.1018.

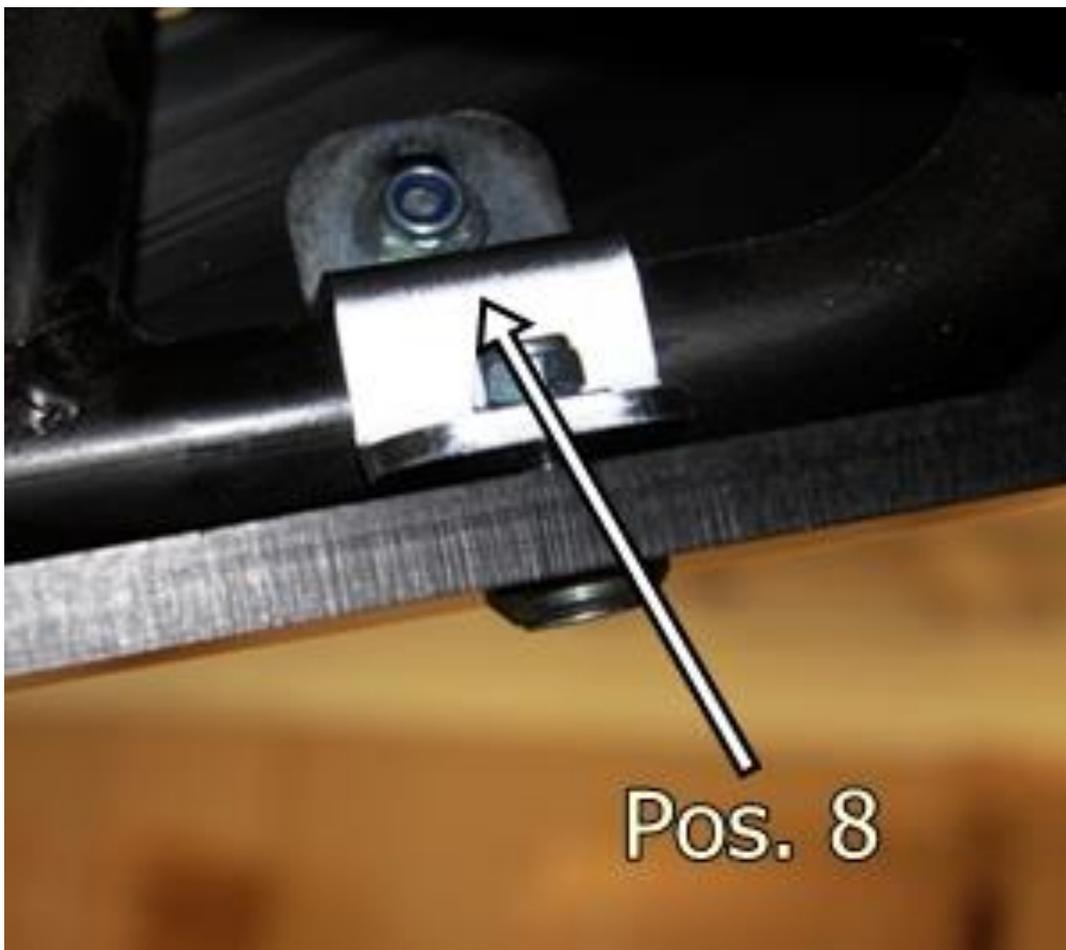

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

